
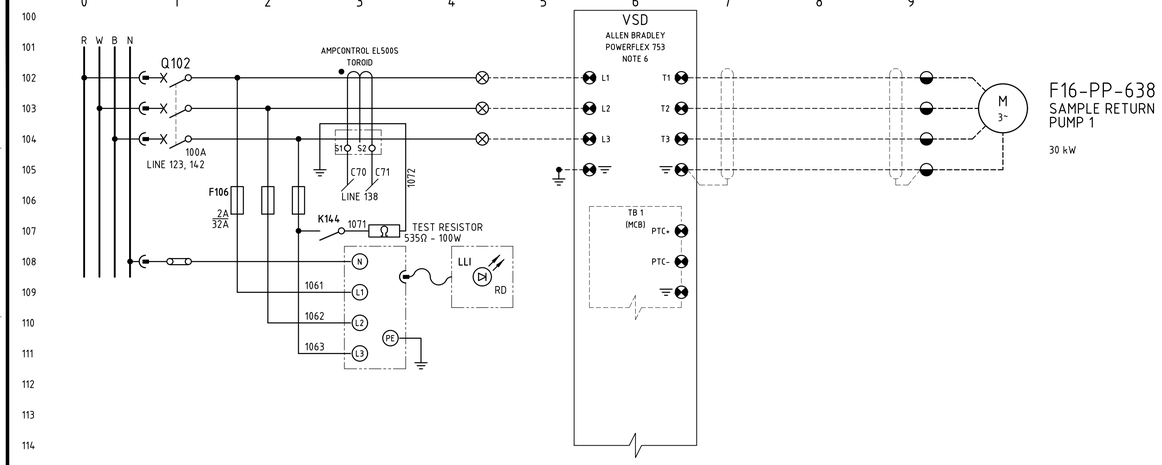
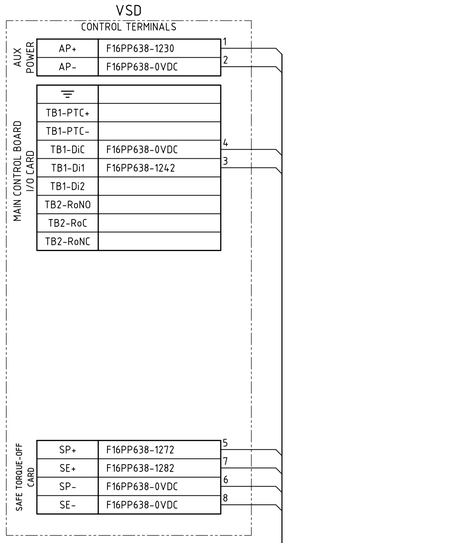



## F16-PP-638
SAMPLE RETURN
PUMP 1

30 kW

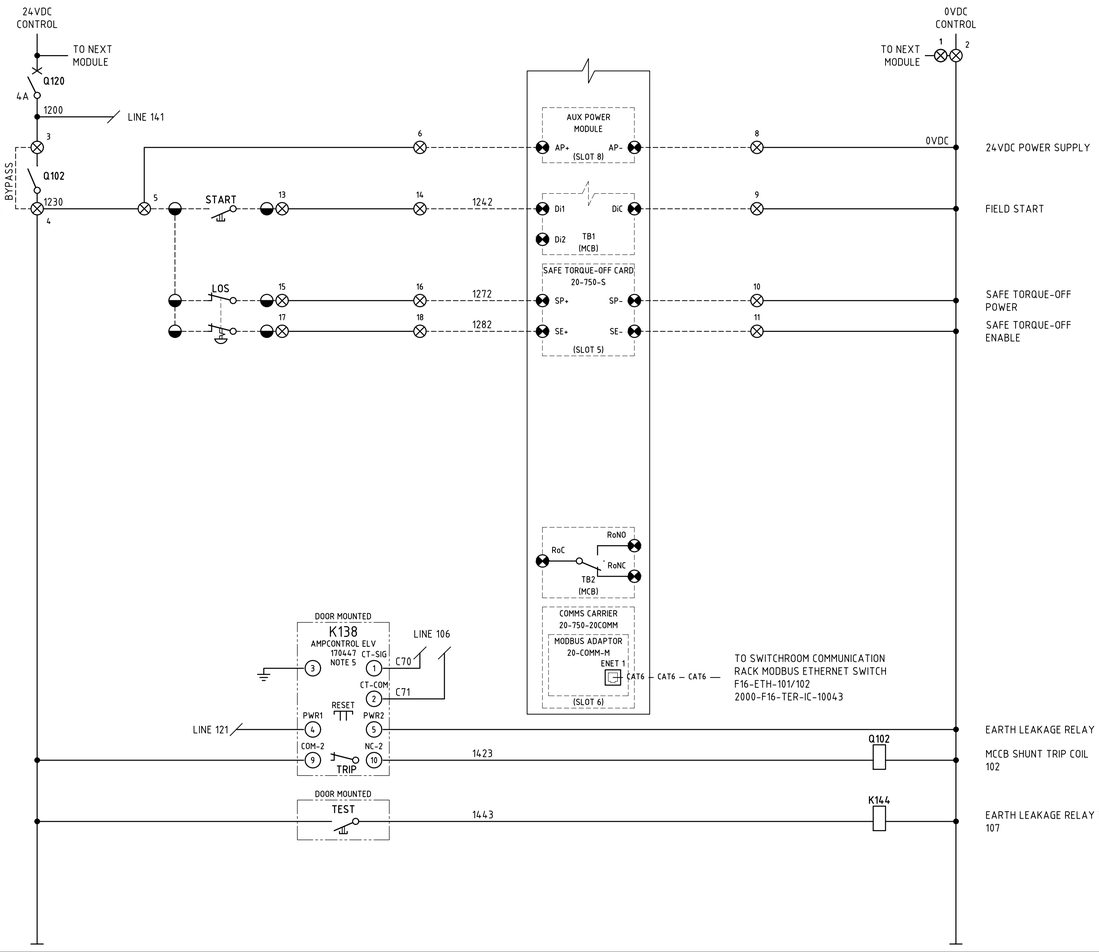


24VDC POWER SUPPLY

FIELD START

SAFE TORQUE-OFF POWER


SAFE TORQUE-OFF ENABLE

TO SWITCHROOM COMMUNICATION RACK MODBUS ETHERNET SWITCH
F16-ETH-101/102
2000-F16-TER-IC-10043

EARTH LEAKAGE RELAY

MCCB SHUNT TRIP COIL
102

EARTH LEAKAGE RELAY TEST
107

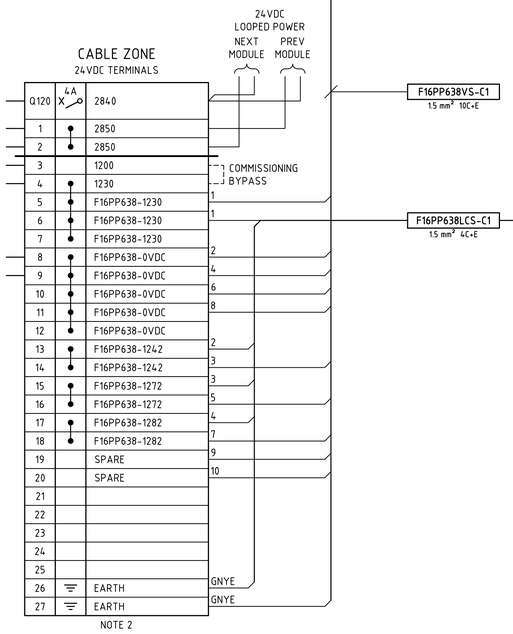



## NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F16PP638-1200, UNLESS OTHERWISE NOTED.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. AMPCONTROL 115437
   100/1A TOROID.
5. EARTH LEAKAGE RELAY (ELV) USER INTERFACE TO BE MOUNTED ON MCC MODULE DOOR. RELAY ENERGISED (NORMALLY CLOSED CONTACT OPEN) IN NORMAL OPERATION.
6. VSD SHALL BE SIZE FRAME 2 AND ABOVE.

## LEGEND

- 00/01/00 — DCS DIGITAL INPUT
- 00/02/00 — DCS DIGITAL OUTPUT
- ⊗ — MCC TERMINAL
- ◓ — VSD TERMINAL
- ◒ — FIELD TERMINAL
- ◑ — DCS OR I/O TERMINAL
- ◧ — MARSHALLING TERMINAL
- (x) — DEVICE TERMINAL
- ⊗cc — INDICATION LAMP, cc = COLOUR

## TERMINATION LEGEND

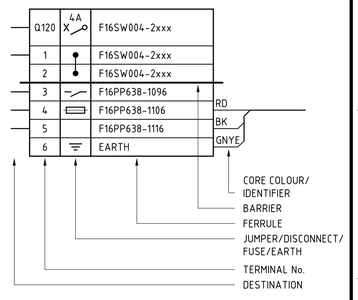


# 2000-F16-SCM-EL-10233_Rev2

F16-SW-004 - F16-PP-638 sample return pump 1 - schematic and termination diagram