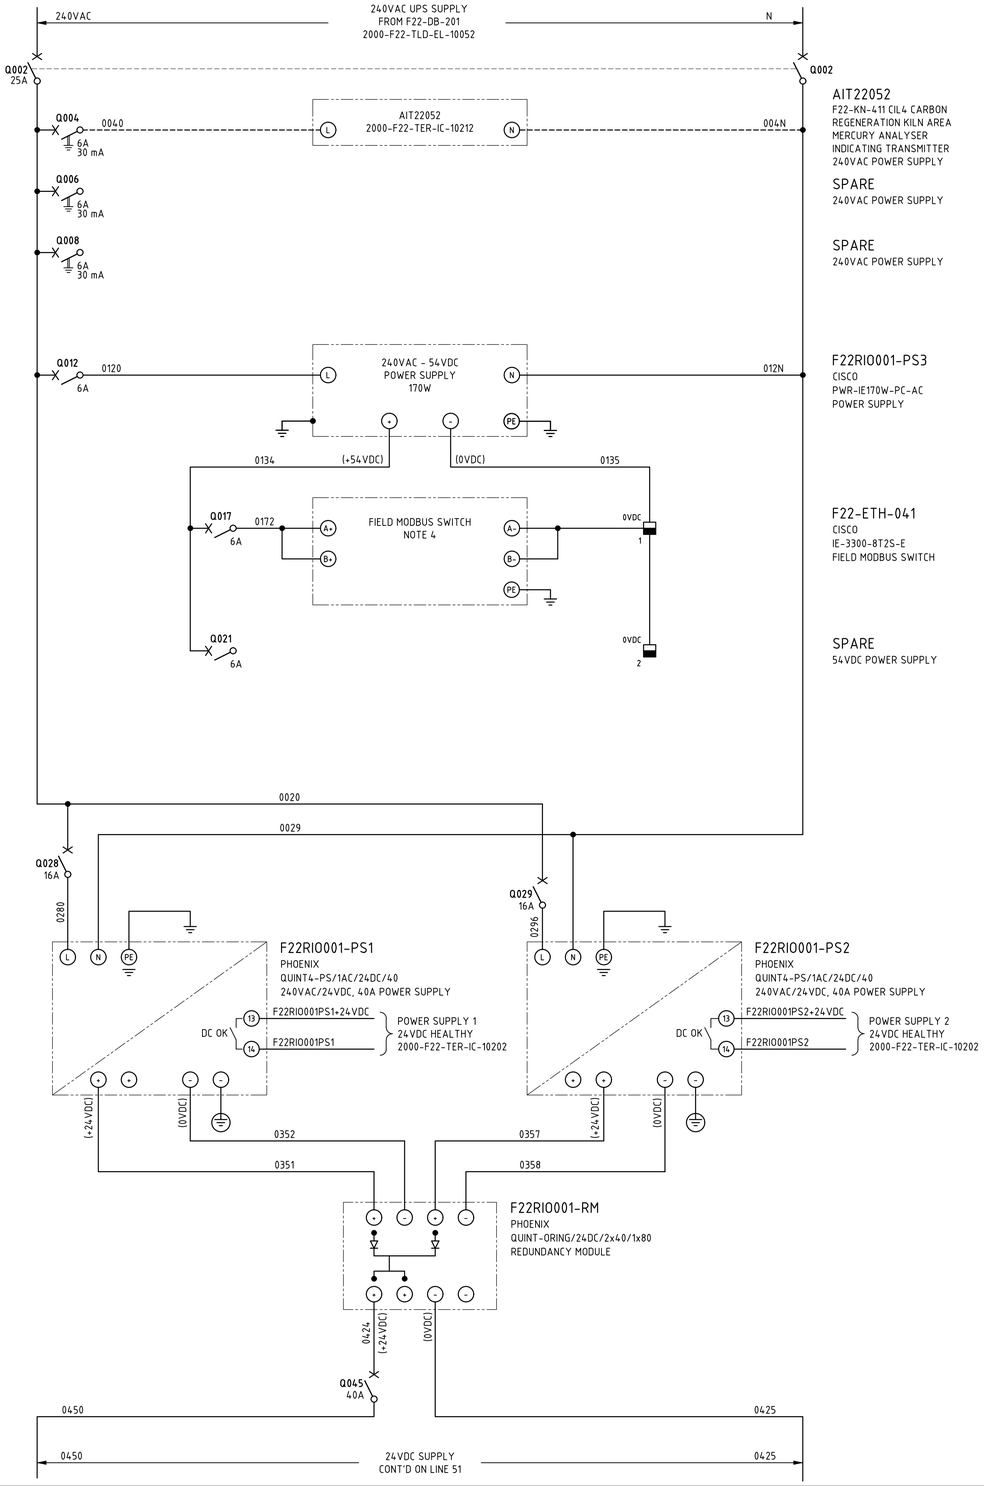


AIT22052
F22-KN-411 CIL4 CARBON REGENERATION KILN AREA MERCURY ANALYSER INDICATING TRANSMITTER 240VAC POWER SUPPLY


SPARE
240VAC POWER SUPPLY

SPARE
240VAC POWER SUPPLY

F22RIO0001-PS3
CISCO
PWR-IE170W-PC-AC
POWER SUPPLY

F22-ETH-041
CISCO
IE-3300-8T2S-E
FIELD MODBUS SWITCH

SPARE
54VDC POWER SUPPLY

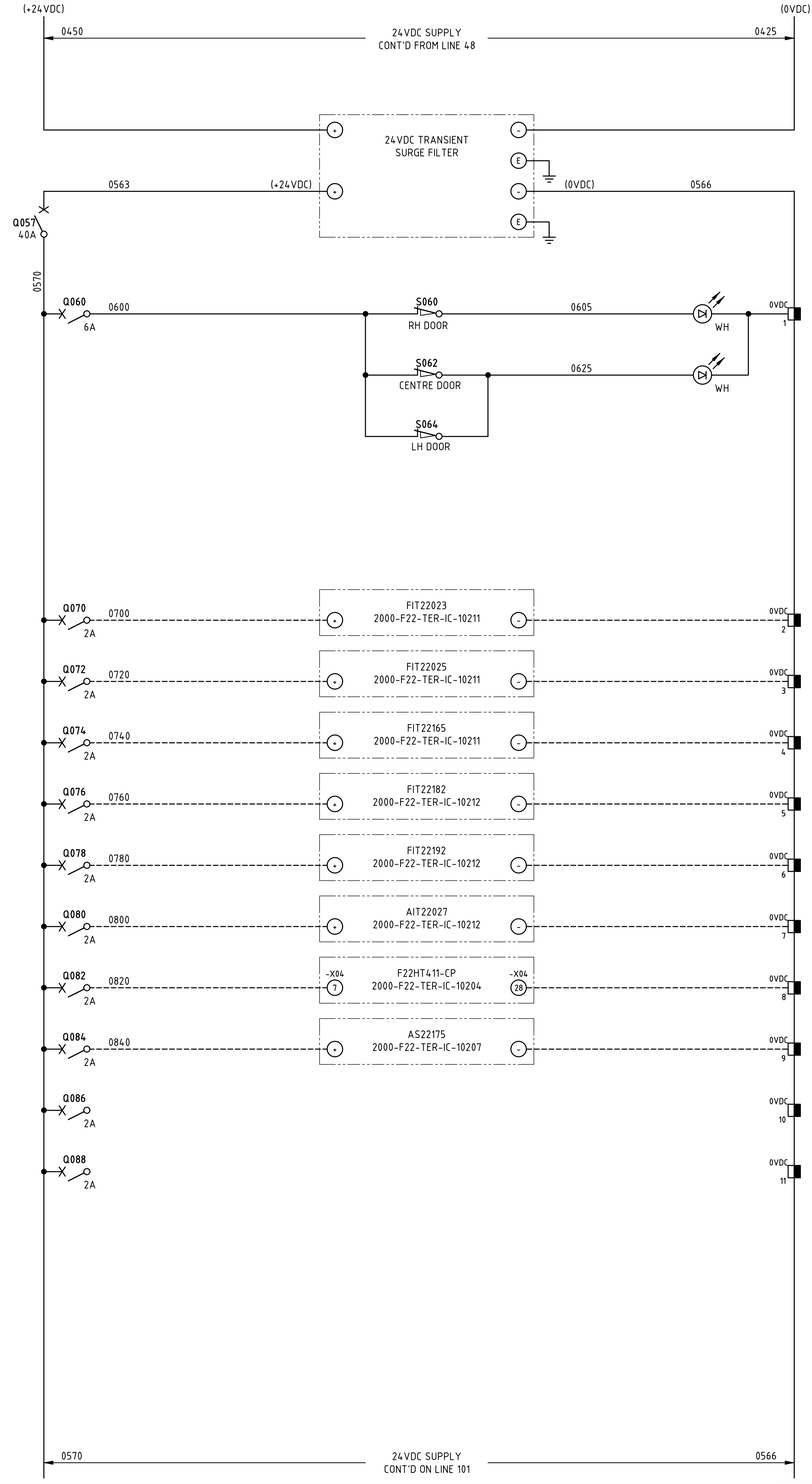

F22RIO0001-SD
TRANSTECH
TLP-SF40-1P-24VDC
SURGE FILTER

PANEL LIGHTS

FIT22023
F22-PR-411 CIL4 ELUTION & ACID WASH COLUMN SCHEME WATER FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

FIT22025
F22-PR-411 CIL4 ELUTION & ACID WASH COLUMN HYDROCHLORIC ACID FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

FIT22165
CIL4 ELUTION WATER PUMPS DISCHARGE FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

FIT22182
ELUTION CYANIDE FEED FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

FIT22192
ELUTION CAUSTIC FEED FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

AIT22027
F22-PR-411 CIL4 ELUTION & ACID WASH COLUMN AREA HCN ANALYSER INDICATING TRANSMITTER 24VDC POWER SUPPLY

F22HT411-CP
ELUTION HEATER CONTROL PANEL 24VDC POWER SUPPLY

AS22175
CIL4 ELUTION AREA OIL TRAP SUMP HYDROCARBON LEAK DETECTOR 24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F22RIO001-XXXX.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. FOR NETWORK CONNECTION & BUS CABLING DETAILS REFER TO RIO PANEL COMMUNICATIONS TERMINATION DIAGRAMS.
5. INSTRUMENT EARTH BAR TO BE BONDED TO MAIN EARTH BAR WITH SOLID COPPER LINK.

LEGEND

- FIELD TERMINAL
- DCS OR I/O TERMINAL
- 0VDC TERMINAL FOR 24VDC
- 0VDC TERMINAL FOR 54VDC
- DEVICE TERMINAL
- INDICATION LAMP (cc = COLOUR)
- EARTH BAR
- INSTRUMENT EARTH BAR

2000-F22-SCM-IC-10201_Rev0

Carbon treatment & elution F22-RIO-001 elution field n-IO panel schematic diagram sheet 1

17APR25 6:40AM SANDRA CULL