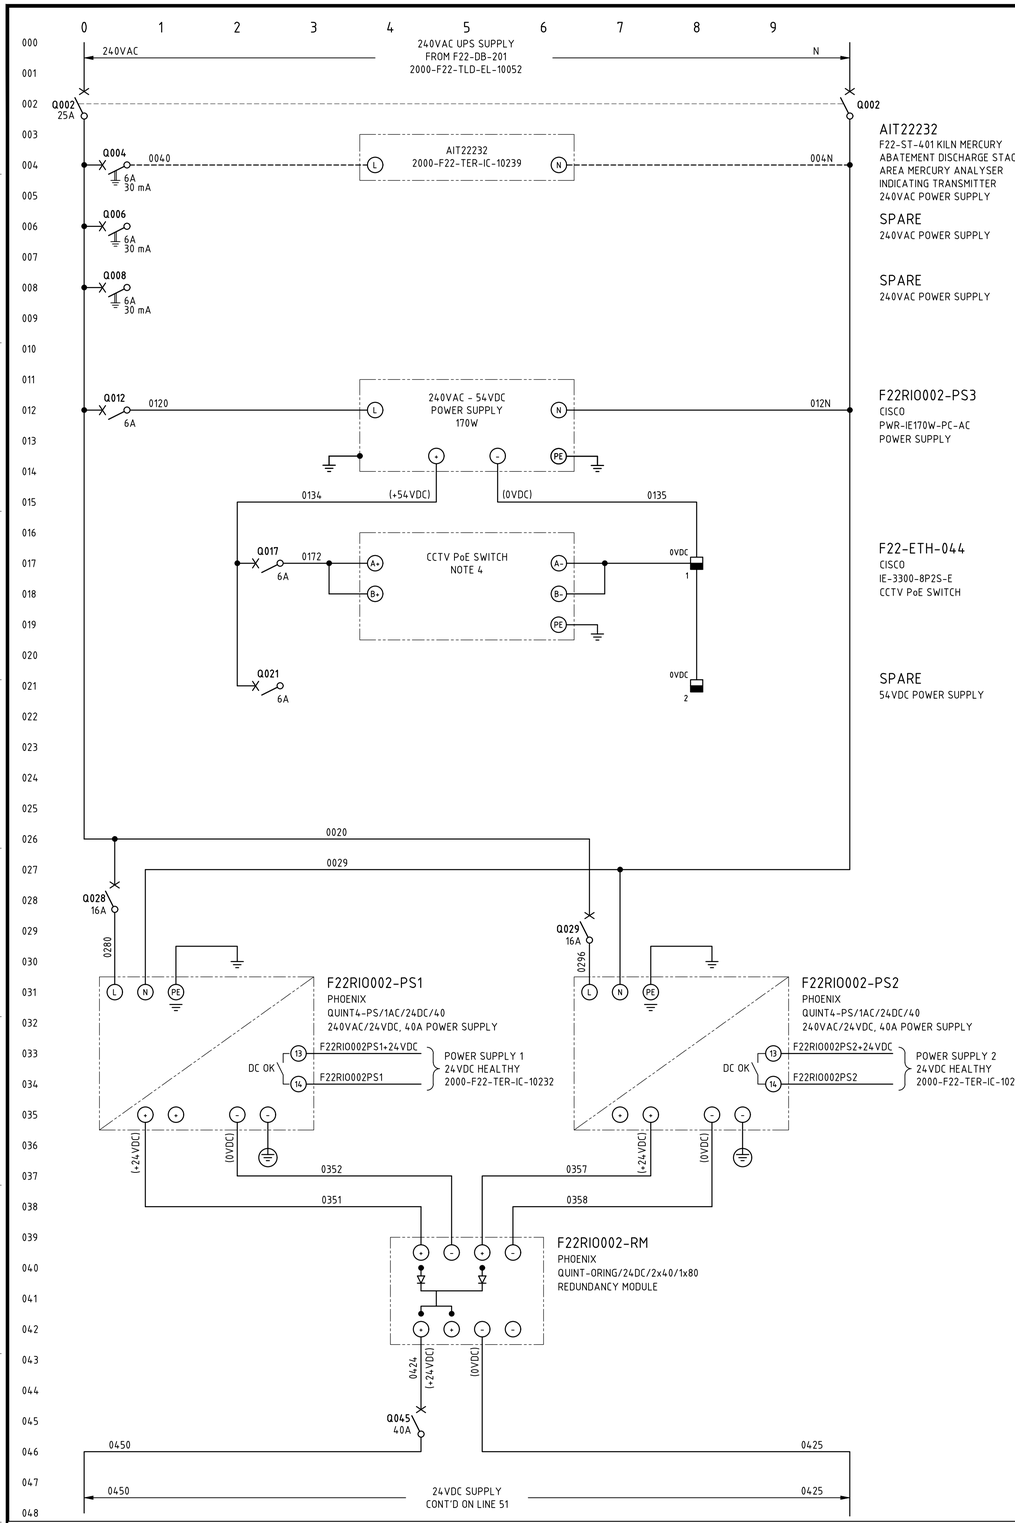


AIT22232
F22-ST-401 KILN MERCURY ABATEMENT DISCHARGE STACK AREA MERCURY ANALYSER INDICATING TRANSMITTER 240VAC POWER SUPPLY


SPARE
240VAC POWER SUPPLY

SPARE
240VAC POWER SUPPLY

F22RIO002-PS3
CISCO
PWR-IE170W-PC-AC
POWER SUPPLY

F22-ETH-044
CISCO
IE-3300-8P2S-E
CCTV PoE SWITCH

SPARE
54VDC POWER SUPPLY

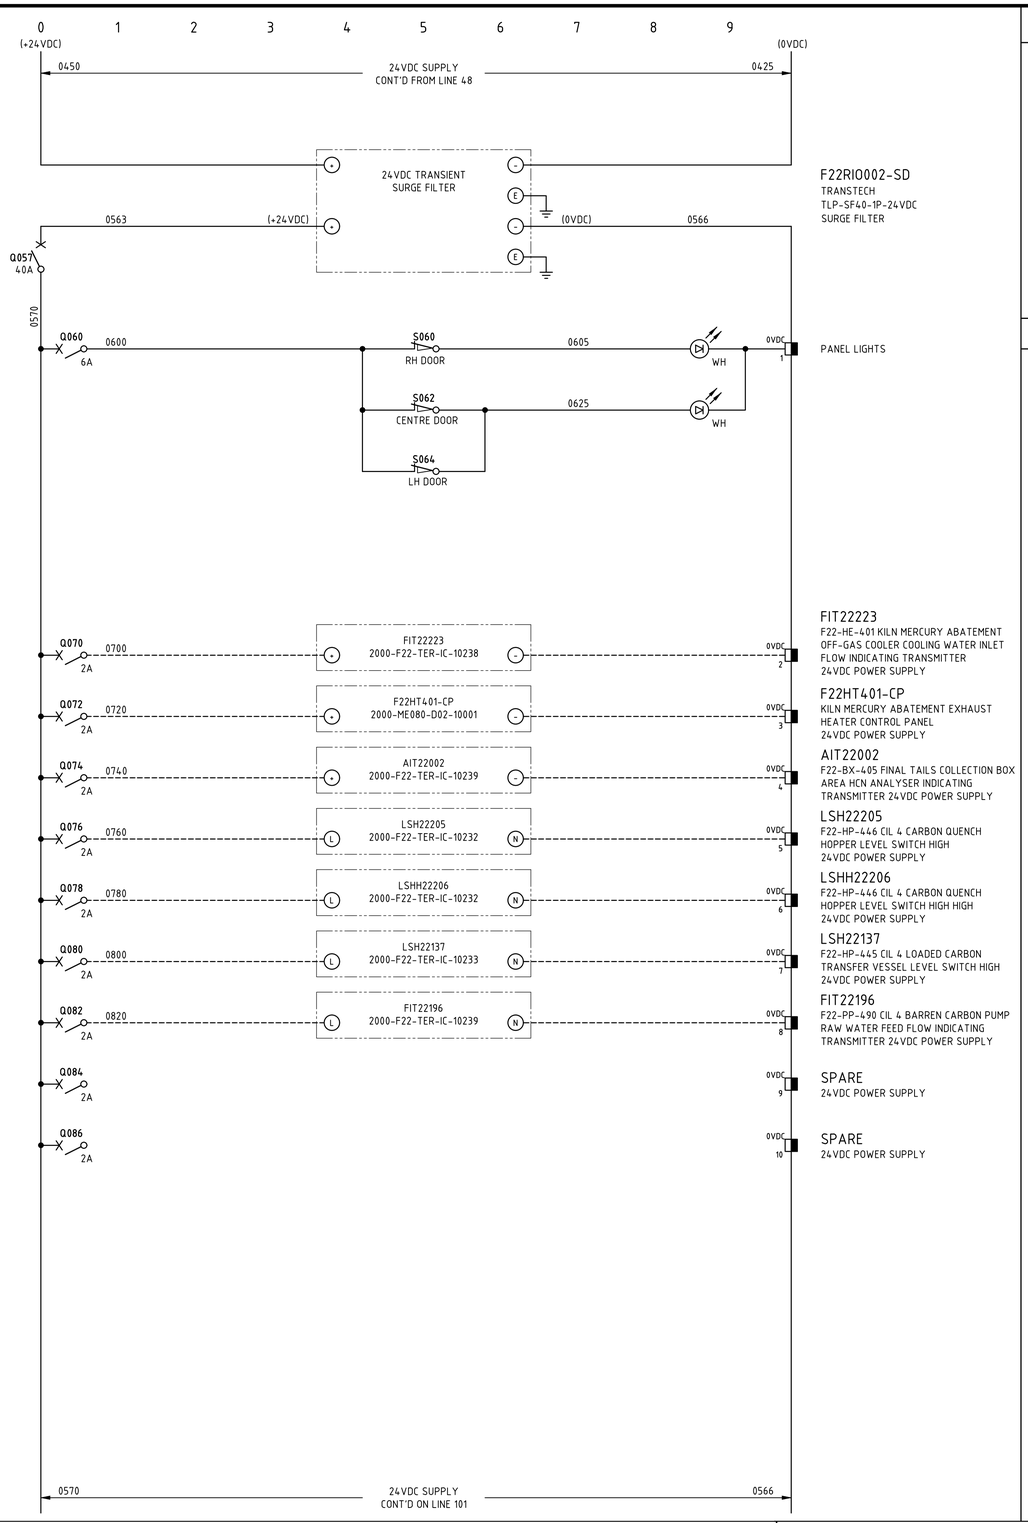

F22RIO002-SD
TRANSTECH
TLP-SF40-1P-24VDC
SURGE FILTER

PANEL LIGHTS

FIT22223
F22-HE-401 KILN MERCURY ABATEMENT OFF-GAS COOLER COOLING WATER INLET FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

F22HT401-CP
KILN MERCURY ABATEMENT EXHAUST HEATER CONTROL PANEL
24VDC POWER SUPPLY

AIT22002
F22-BX-405 FINAL TAILS COLLECTION BOX AREA HCN ANALYSER INDICATING TRANSMITTER 24VDC POWER SUPPLY

LSH22205
F22-HP-446 CIL 4 CARBON QUENCH HOPPER LEVEL SWITCH HIGH
24VDC POWER SUPPLY

LSHH22206
F22-HP-446 CIL 4 CARBON QUENCH HOPPER LEVEL SWITCH HIGH HIGH
24VDC POWER SUPPLY

LSH22137
F22-HP-445 CIL 4 LOADED CARBON TRANSFER VESSEL LEVEL SWITCH HIGH
24VDC POWER SUPPLY

FIT22196
F22-PP-490 CIL 4 BARREN CARBON PUMP RAW WATER FEED FLOW INDICATING TRANSMITTER 24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F22RIO002-XXXX.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. FOR NETWORK CONNECTION & BUS CABLING DETAILS REFER TO RIO PANEL COMMUNICATIONS TERMINATION DIAGRAMS.
5. INSTRUMENT EARTH BAR TO BE BONDED TO MAIN EARTH BAR WITH SOLID COPPER LINK.

LEGEND

- FIELD TERMINAL
- DCS OR I/O TERMINAL
- 0VDC TERMINAL FOR 24VDC
- 0VDC TERMINAL FOR 54VDC
- DEVICE TERMINAL
- INDICATION LAMP (cc = COLOUR)
- EARTH BAR
- INSTRUMENT EARTH BAR

2000-F22-SCM-IC-10231_Rev0

Carbon treatment & elution F22-RIO-002 elution field n-IO panel schematic diagram sheet 1

7:31AM SANDRA.CULL