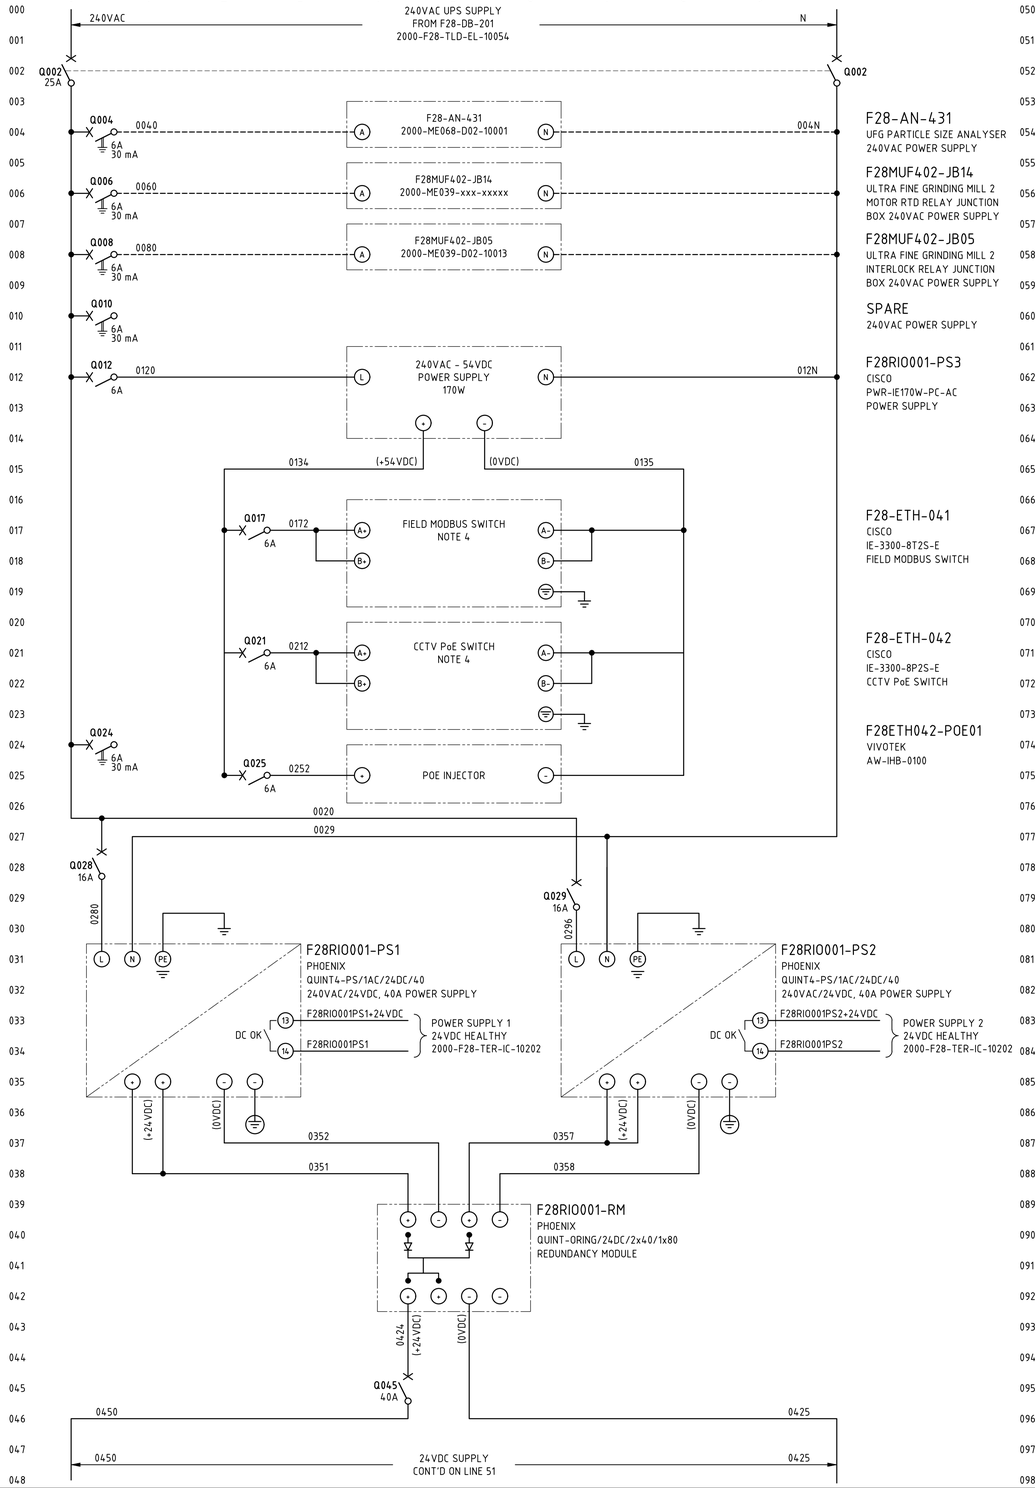


F28-AN-431
UFG PARTICLE SIZE ANALYSER
240VAC POWER SUPPLY

F28MUF402-JB14
ULTRA FINE GRINDING MILL 2
MOTOR RTD RELAY JUNCTION
BOX 240VAC POWER SUPPLY

F28MUF402-JB05
ULTRA FINE GRINDING MILL 2
INTERLOCK RELAY JUNCTION
BOX 240VAC POWER SUPPLY


SPARE
240VAC POWER SUPPLY

F28RIO0001-PS3
CISCO
PWR-IE170W-PC-AC
POWER SUPPLY

F28-ETH-041
CISCO
IE-3300-8T2S-E
FIELD MODBUS SWITCH

F28-ETH-042
CISCO
IE-3300-8P2S-E
CCTV PoE SWITCH

F28ETH042-POE01
VIVOTEK
AW-IHB-0100

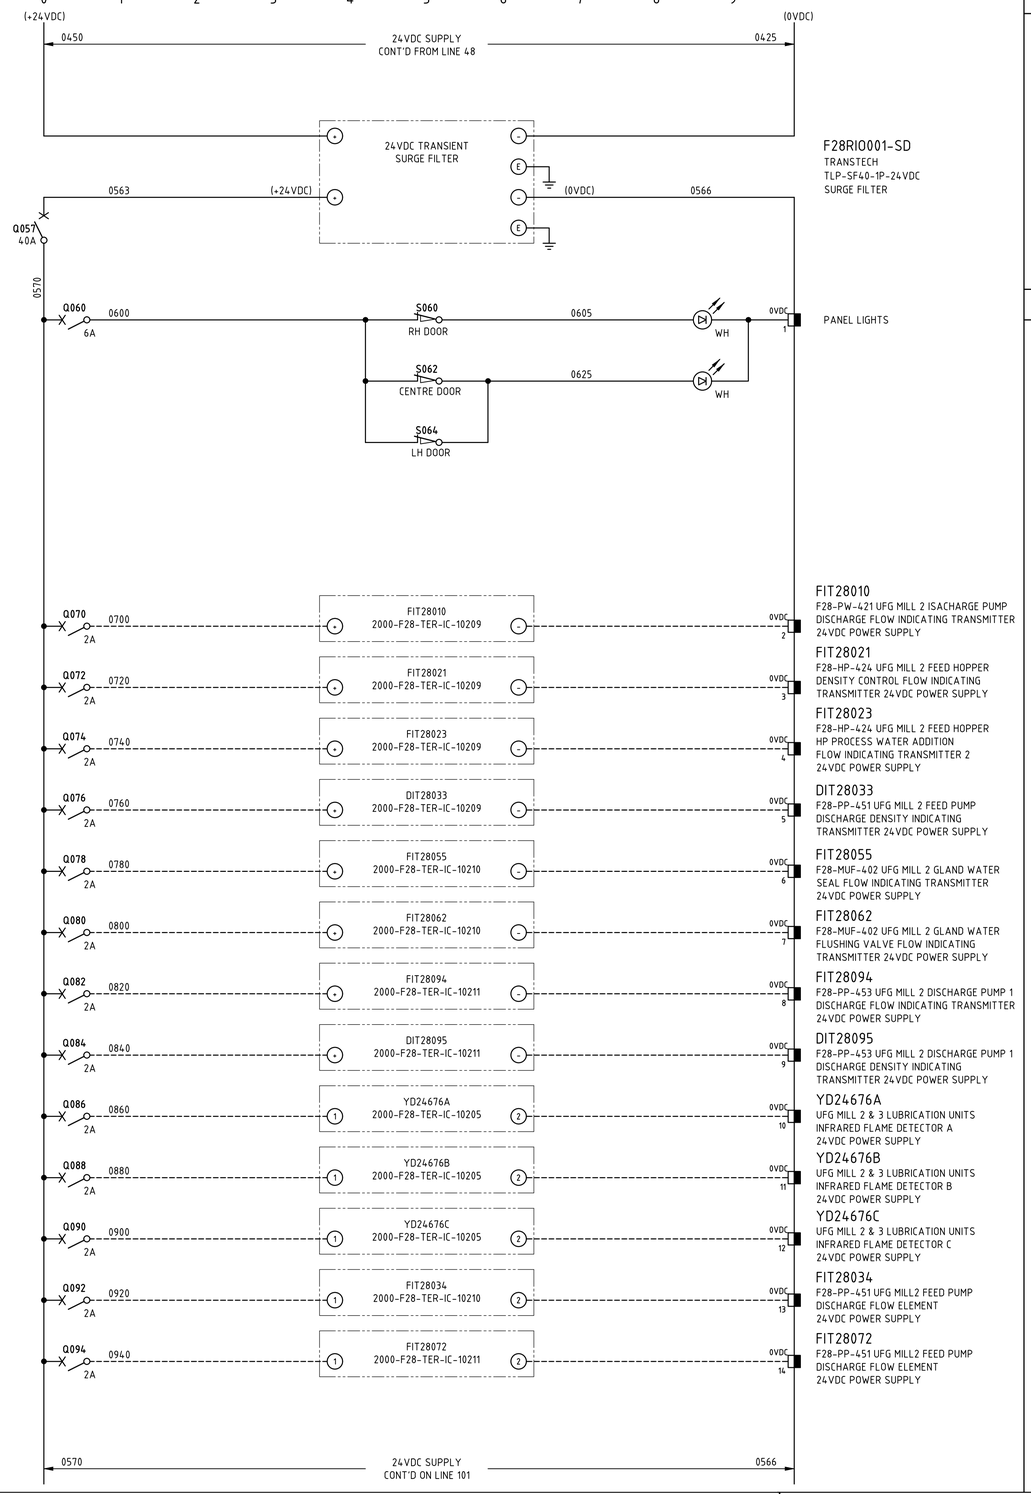

F28RIO001-SD
TRANSTECH
TLP-SF40-1P-24VDC
SURGE FILTER

PANEL LIGHTS

FIT28010
F28-PW-421 UFG MILL 2 ISACHARGE PUMP
DISCHARGE FLOW INDICATING TRANSMITTER
24VDC POWER SUPPLY

FIT28021
F28-HP-424 UFG MILL 2 FEED HOPPER
DENSITY CONTROL FLOW INDICATING
TRANSMITTER 24VDC POWER SUPPLY

FIT28023
F28-HP-424 UFG MILL 2 FEED HOPPER
HP PROCESS WATER ADDITION
FLOW INDICATING TRANSMITTER 2
24VDC POWER SUPPLY

DIT28033
F28-PP-451 UFG MILL 2 FEED PUMP
DISCHARGE DENSITY INDICATING
TRANSMITTER 24VDC POWER SUPPLY

FIT28055
F28-MUF-402 UFG MILL 2 GLAND WATER
SEAL FLOW INDICATING TRANSMITTER
24VDC POWER SUPPLY

FIT28062
F28-MUF-402 UFG MILL 2 GLAND WATER
FLUSHING VALVE FLOW INDICATING
TRANSMITTER 24VDC POWER SUPPLY

FIT28094
F28-PP-453 UFG MILL 2 DISCHARGE PUMP 1
DISCHARGE FLOW INDICATING TRANSMITTER
24VDC POWER SUPPLY

DIT28095
F28-PP-453 UFG MILL 2 DISCHARGE PUMP 1
DISCHARGE DENSITY INDICATING
TRANSMITTER 24VDC POWER SUPPLY

YD24676A
UFG MILL 2 & 3 LUBRICATION UNITS
INFRARED FLAME DETECTOR A
24VDC POWER SUPPLY

YD24676B
UFG MILL 2 & 3 LUBRICATION UNITS
INFRARED FLAME DETECTOR B
24VDC POWER SUPPLY

YD24676C
UFG MILL 2 & 3 LUBRICATION UNITS
INFRARED FLAME DETECTOR C
24VDC POWER SUPPLY

FIT28034
F28-PP-451 UFG MILL2 FEED PUMP
DISCHARGE FLOW ELEMENT
24VDC POWER SUPPLY

FIT28072
F28-PP-451 UFG MILL2 FEED PUMP
DISCHARGE FLOW ELEMENT
24VDC POWER SUPPLY

NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F28RIO001-xxxx.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. FOR NETWORK CONNECTION & BUS CABLING DETAILS REFER TO RIO PANEL COMMUNICATIONS TERMINATION DIAGRAMS.
5. INSTRUMENT EARTH BAR TO BE BONDED TO MAIN EARTH BAR WITH SOLID COPPER LINK.

LEGEND

- FIELD TERMINAL
- DCS OR I/O TERMINAL
- MARSHALLING TERMINAL
- DEVICE TERMINAL
- INDICATION LAMP, cc = COLOUR
- EARTH BAR
- INSTRUMENT EARTH BAR

2000-F28-SCM-IC-10201_Rev1

F28-RIO-001 ultra fine grinding field n-IO panel - schematic diagram sheet 1