
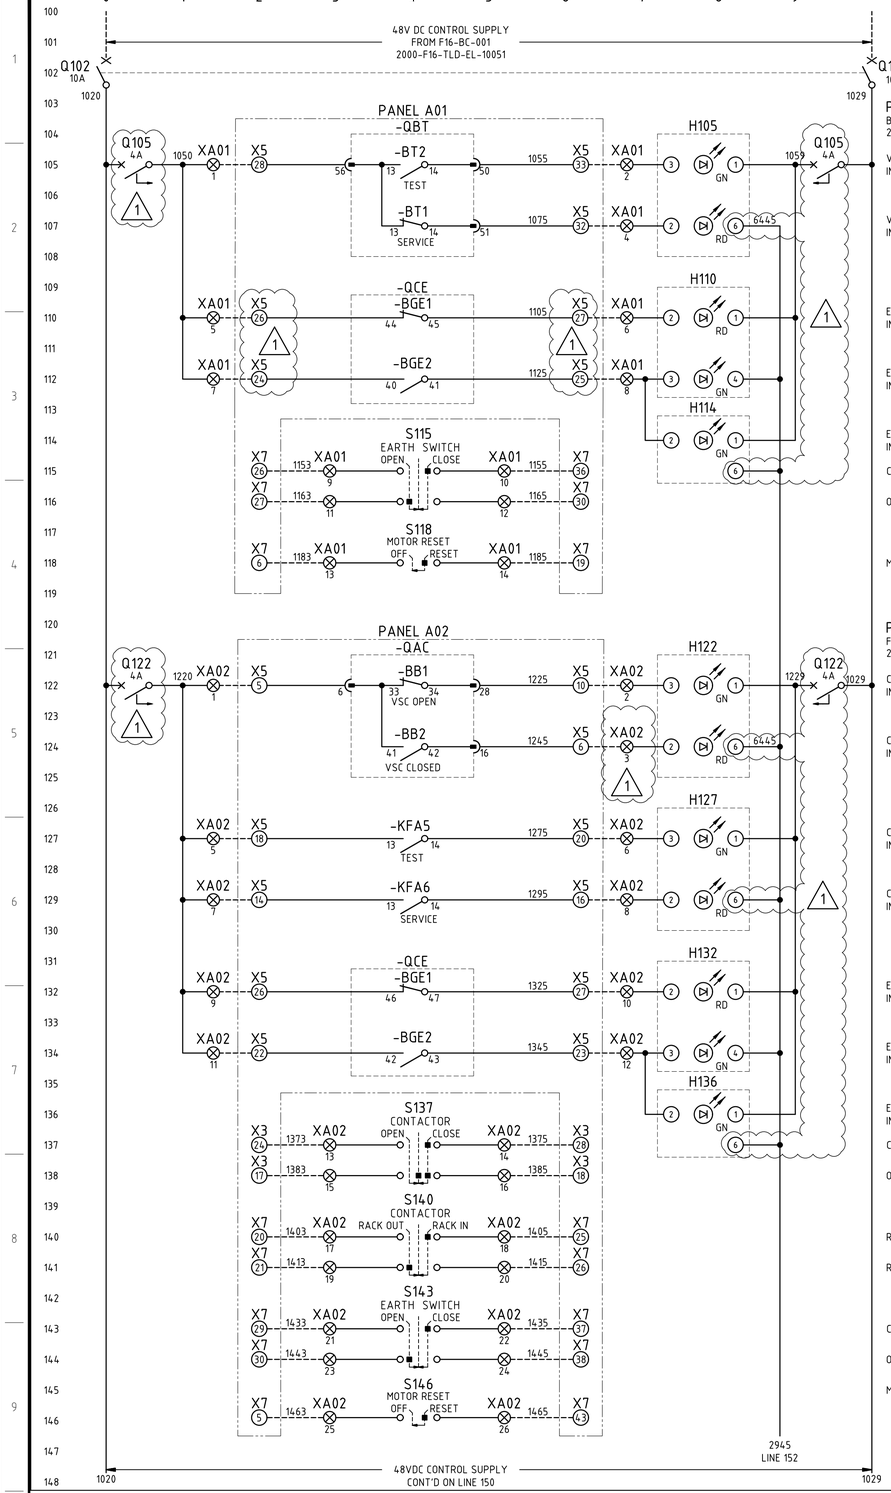


PANEL A01
BUS 1 VT & EARTH SWITCH
2000-EL003-F16-10006

- VT RACKED OUT INDICATION
- VT RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

PANEL A02
F16AG421-VS FEEDER
2000-EL003-F16-10016

- CONTACTOR OPEN INDICATION
- CONTACTOR CLOSED INDICATION
- CONTACTOR RACKED OUT INDICATION
- CONTACTOR RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE CONTACTOR COMMAND
- OPEN CONTACTOR COMMAND
- RACK IN CONTACTOR COMMAND
- RACK OUT CONTACTOR COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

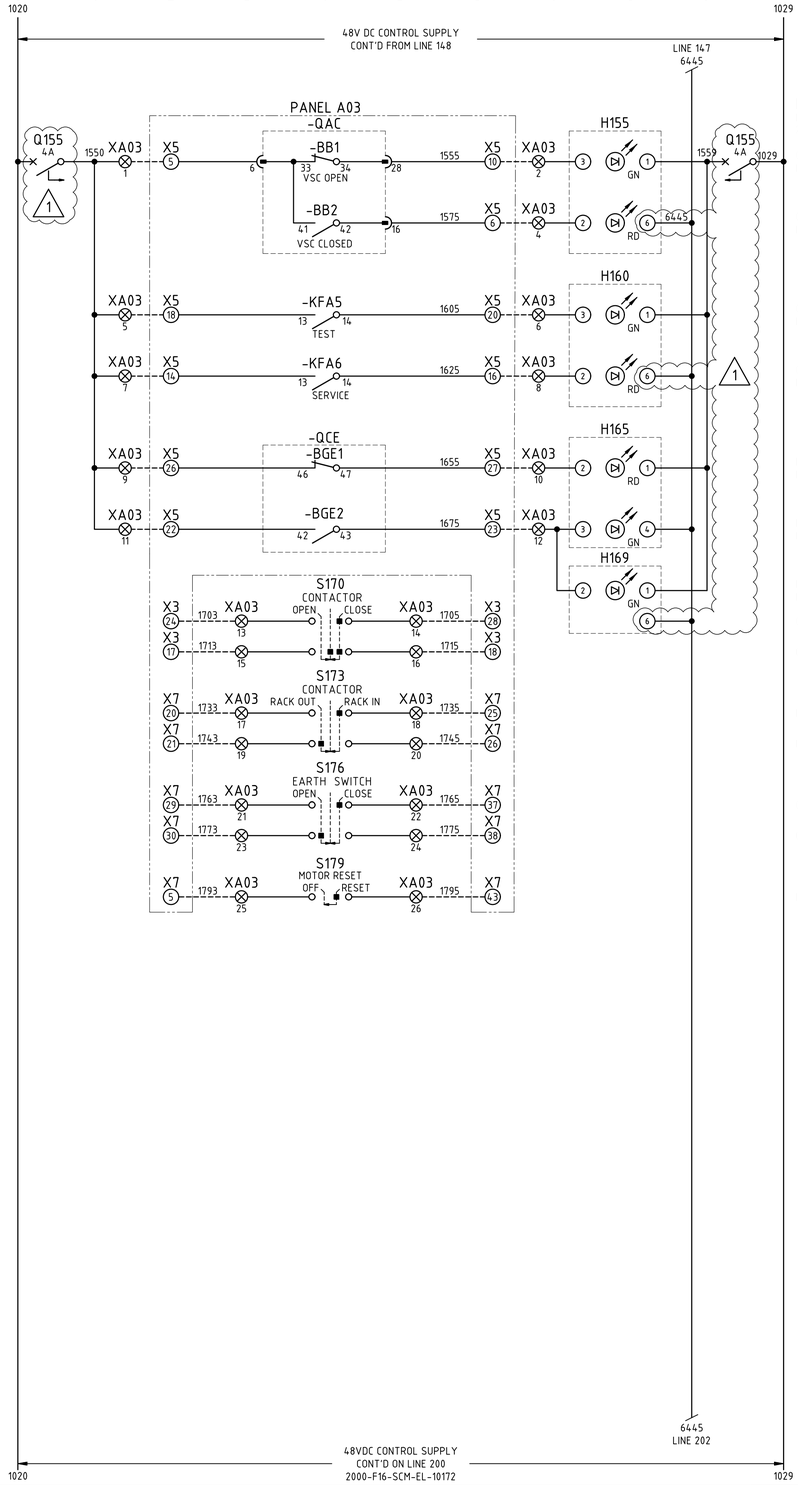

PANEL A03
F16AG422-VS
2000-EL003-F16-10016

- CONTACTOR OPEN INDICATION
- CONTACTOR CLOSED INDICATION
- CONTACTOR RACKED OUT INDICATION
- CONTACTOR RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE CONTACTOR COMMAND
- OPEN CONTACTOR COMMAND
- RACK IN CONTACTOR COMMAND
- RACK OUT CONTACTOR COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- EARTH SWITCH MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F16-SCM-EL-10171_Rev1

F16sw011-lcs 11kV switchboard remote switching panel schematic diagram sheet 1

O:\CAD PROJECTS\235 NORTHERN STAR RESOURCES LTD\235I7 KCGM GROWTH PROJECT\03 DELIVERABLES\ELV\F16 - ROUGHER & SCAVENGER FLOTATION\2000-F16-SCM-EL-10171.DWG 09SEP25 6:46AM HOTSEAT04