
NOTES:

1. TRUCK UNLOADING VIA COMPRESSED AIR DISPLACEMENT TRANSFER.
2. TRUCK UNLOADING VIA ONBOARD TANKER PUMP.

LEGEND:

- INTERMITTENT
- SP2 NEW
- SP2 DECOMMISSIONED

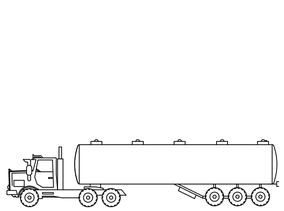

PAX DELIVERY

NOTE 1

TO ATMOSPHERE

F72-FN-491
PAX FAN

AIR

F72-PS-430
PAX AREA SUMP PUMP

F72-TK-431
PAX STORAGE TANK

F72-PP-665
PAX DOSING PUMP 5

F72-PP-664
PAX DOSING PUMP 4

F72-PP-661
PAX DOSING PUMP 1

F72-PP-663
PAX DOSING PUMP 3

F72-PP-662
PAX DOSING PUMP 2


CLEANER-SCAVENGER FLOTATION
2000-F00-PFD-PR-10010
PAX

CLEANER FLOTATION
2000-F00-PFD-PR-10010
PAX

ROUGHER FLOTATION
2000-F00-PFD-PR-10009
PAX

SCAVENGER FLOTATION
2000-F00-PFD-PR-10009
PAX

ROUGHER FLOTATION
2000-F00-PFD-PR-10009
SPILLAGE



COPPER SULPHATE DELIVERY

NOTE 1

F72-TK-433
COPPER SULPHATE STORAGE TANK

F72-PS-420
COPPER SULPHATE AREA SUMP PUMP

F72-PP-671
COPPER SULPHATE DOSING PUMP 1


F72-PP-672
COPPER SULPHATE DOSING PUMP 2

F72-PP-679
COPPER SULPHATE DOSING PUMP 3

CLEANER SCAVENGER FLOTATION
2000-F00-PFD-PR-10010
COPPER SULPHATE

PRIMARY CYCLONE FEED HOPPER
2000-F00-PFD-PR-10005
COPPER SULPHATE

ROUGHER FLOTATION
2000-F00-PFD-PR-10009
SPILLAGE



FROTHER DELIVERY

NOTE 2

F72-TK-432
FROTHER STORAGE TANK

F72-PS-425
FROTHER AREA SUMP PUMP

F72-PP-666
FROTHER DOSING PUMP 1

F72-PP-668
FROTHER DOSING PUMP 3

F72-PP-667
FROTHER DOSING PUMP 2

F72-PP-669
FROTHER DOSING PUMP 4

F72-PP-670
FROTHER DOSING PUMP 5

ROUGHER FLOTATION
2000-F00-PFD-PR-10009
FROTHER

SCAVENGER FLOTATION
2000-F00-PFD-PR-10009
FROTHER

CLEANER-SCAVENGER FLOTATION
2000-F00-PFD-PR-10010
FROTHER

CLEANER FLOTATION
2000-F00-PFD-PR-10010
FROTHER

ROUGHER FLOTATION
2000-F00-PFD-PR-10009
SPILLAGE