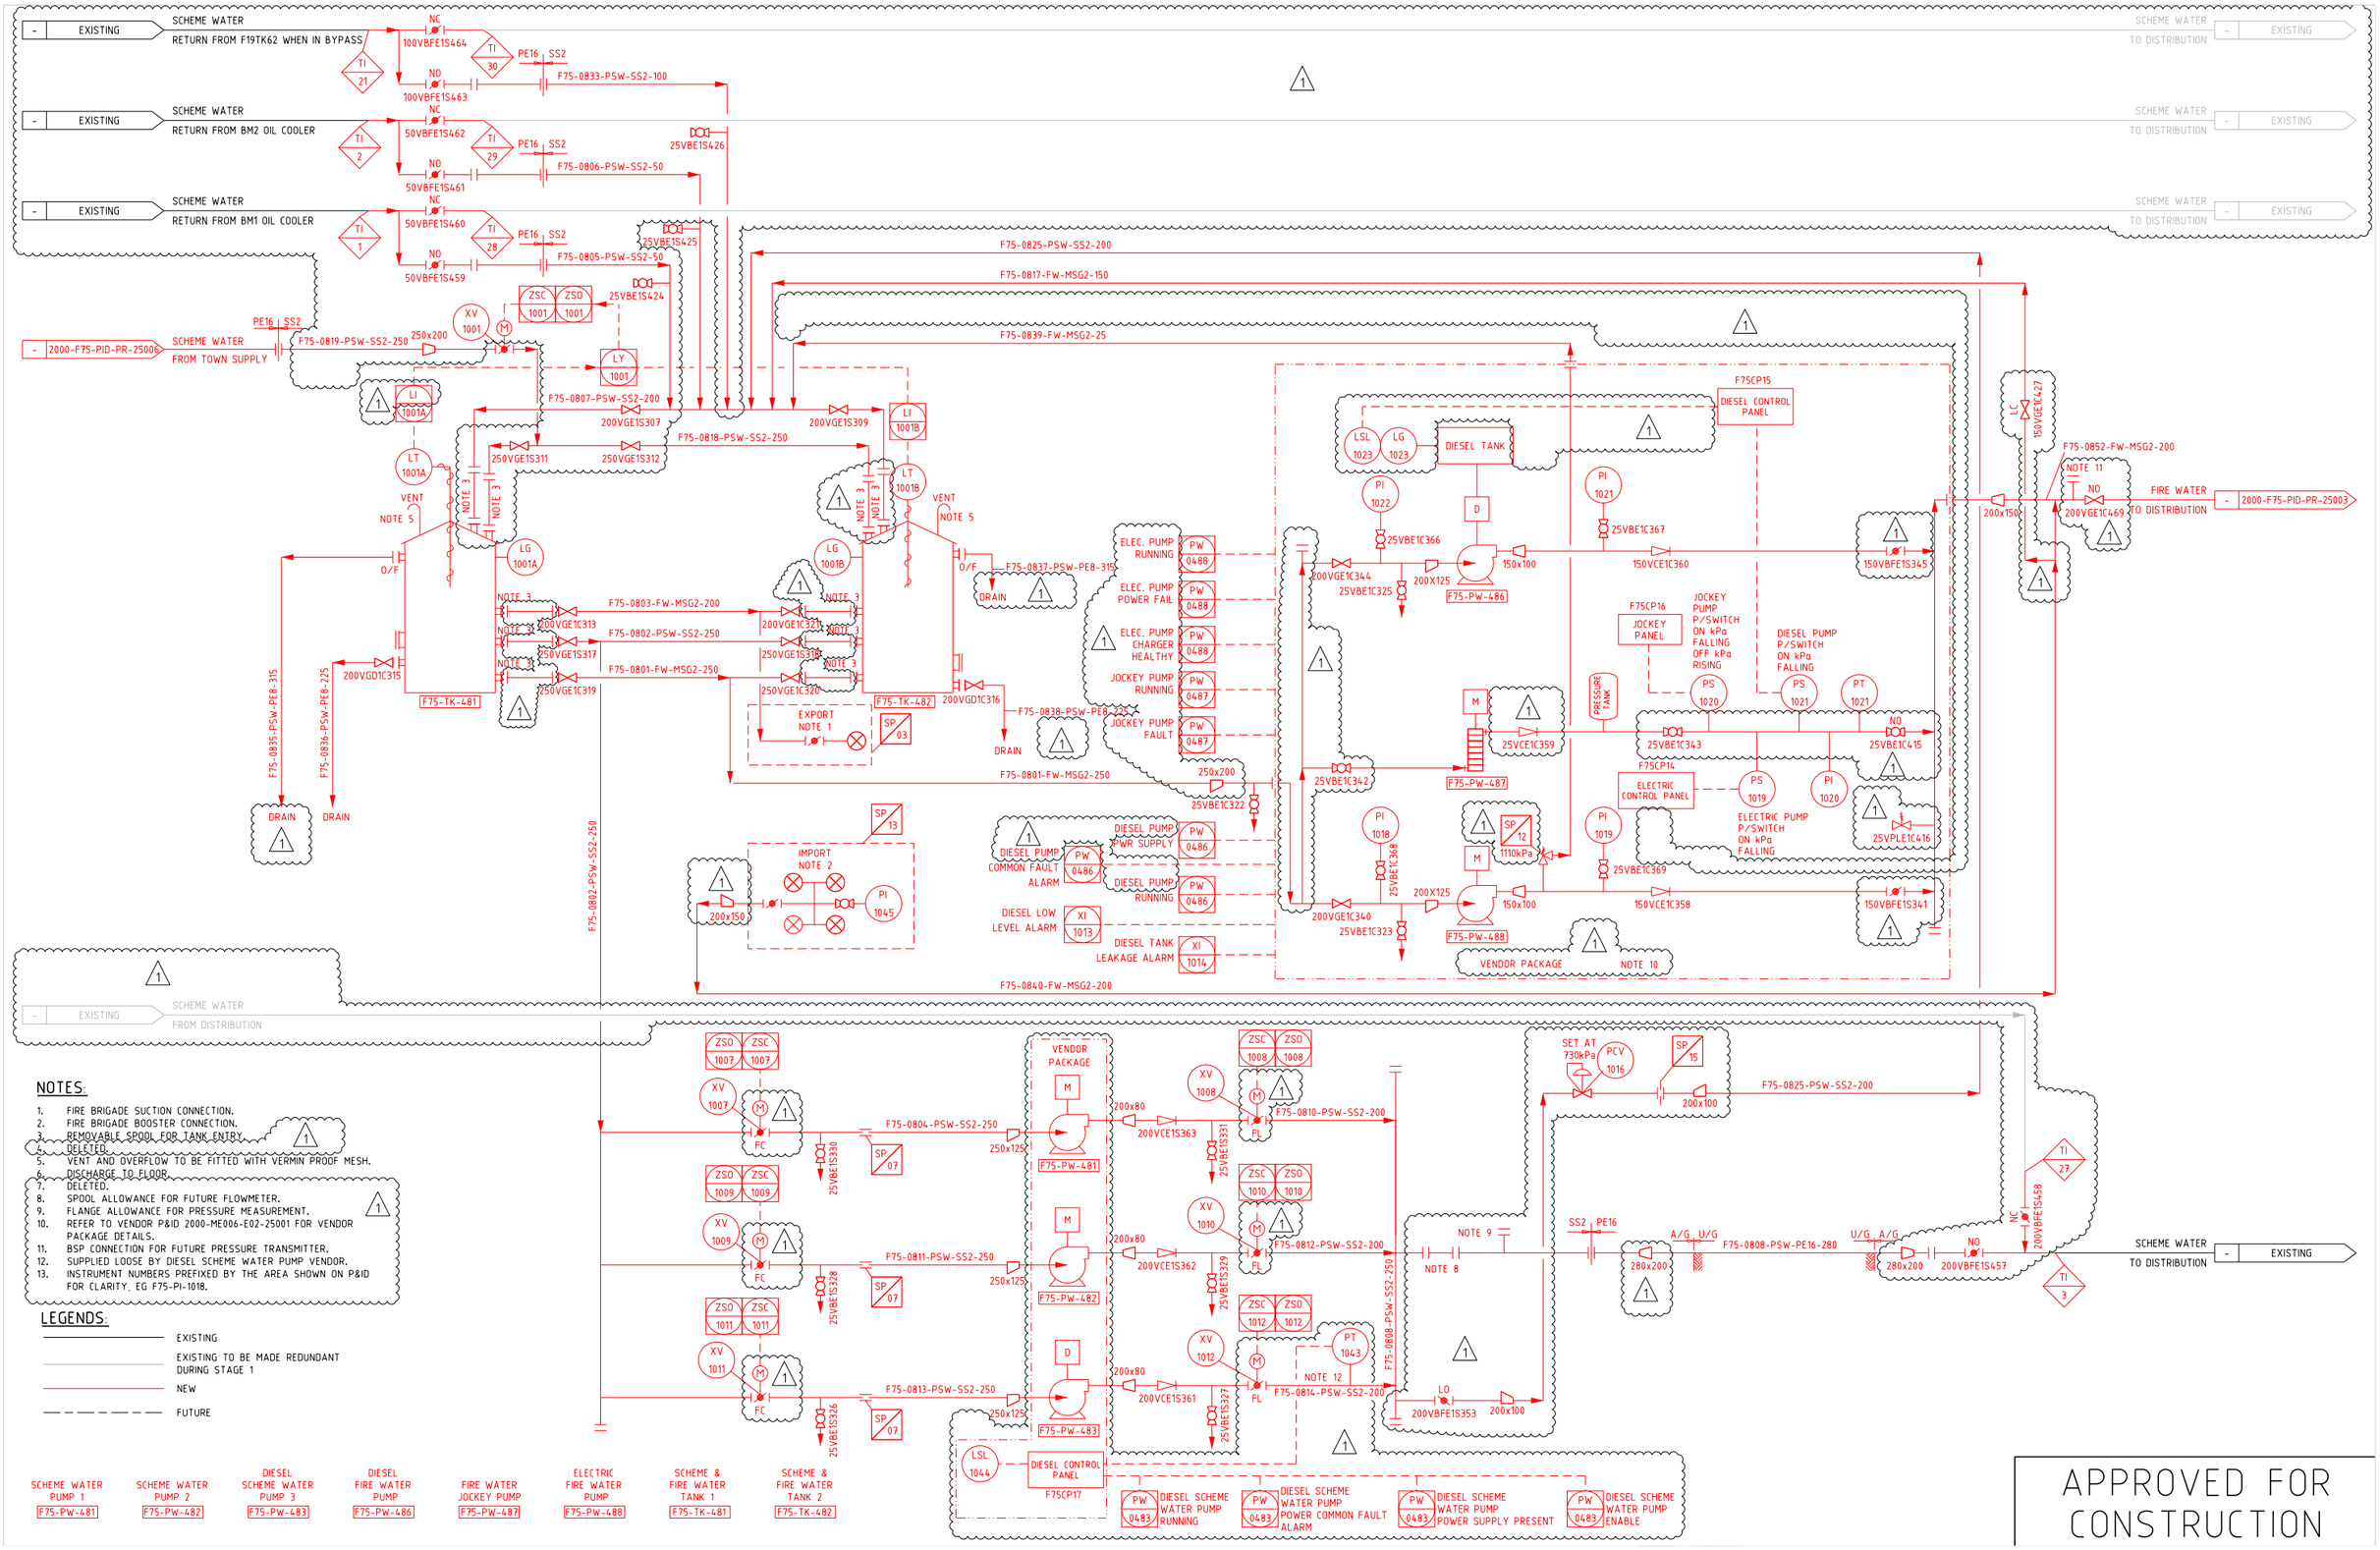

EXISTING
SCHEME WATER
RETURN FROM F19TK62 WHEN IN BYPASS
100VBFE1S464
100VBFE1S463
F75-0833-PSW-SS2-100
SCHEME WATER
TO DISTRIBUTION
EXISTING
SCHEME WATER
RETURN FROM BM2 OIL COOLER
50VBFE1S462
50VBFE1S461
25VBE1S426
F75-0806-PSW-SS2-50
SCHEME WATER
RETURN FROM BM1 OIL COOLER
50VBFE1S460
50VBFE1S459
25VBE1S425
F75-0805-PSW-SS2-50
2000-F75-PID-PR-25006
SCHEME WATER
FROM TOWN SUPPLY
F75-0819-PSW-SS2-250
25VBE1S424
F75-0825-PSW-SS2-200
F75-0817-FW-MSG2-150
F75-0839-FW-MSG2-25
F75-0807-PSW-SS2-200
200VGE1S307
200VGE1S309
F75-0818-PSW-SS2-250
250VGE1S311
250VGE1S312
F75CP15
DIESEL CONTROL PANEL
DIESEL TANK
LSL 1023
LG 1023
PI 1022
PI 1021
25VBE1C366
25VBE1C367
150VCE1C360
150VBFE1S345
150VGE1C427
F75-0852-FW-MSG2-200
NOTE 11
200VGE1C469
FIRE WATER
TO DISTRIBUTION
2000-F75-PID-PR-25003
200x150
200VGE1C344
25VBE1C325
200X125
F75-PW-486
150x100
F75CP16
JOCKEY PANEL
JOCKEY PUMP P/SWITCH ON kPa FALLING OFF kPa RISING
DIESEL PUMP P/SWITCH ON kPa FALLING
PS 1020
PS 1021
PT 1021
PRESSURE TANK
25VBE1C343
NO
25VBE1C415
F75CP14
ELECTRIC CONTROL PANEL
PS 1019
PI 1020
ELECTRIC PUMP P/SWITCH ON kPa FALLING
25VPLE1C416
PI 1019
25VBE1C369
150VCE1C358
150VBFE1S341
M
25VCE1C359
F75-PW-487
SP 12
1110kPa
PI 1018
25VBE1C368
200X125
200VGE1C340
25VBE1C323
150x100
F75-PW-488
VENDOR PACKAGE
NOTE 10
F75-0840-FW-MSG2-200
ELEC. PUMP RUNNING
ELEC. PUMP POWER FAIL
ELEC. PUMP CHARGER HEALTHY
JOCKEY PUMP RUNNING
JOCKEY PUMP FAULT
PW 0488
PW 0487
LI 1001A
LI 1001B
LT 1001A
LT 1001B
LG 1001A
LG 1001B
VENT
NOTE 5
NOTE 3
O/F
DRAIN
F75-0837-PSW-PE8-315
F75-0838-PSW-PE8-225
F75-0803-FW-MSG2-200
F75-0802-PSW-SS2-250
F75-0801-FW-MSG2-250
200VGE1C313
200VGE1C321
250VGE1S317
250VGE1S318
250VGE1C319
250VGE1C320
200VGD1C315
200VGD1C316
F75-TK-481
F75-TK-482
EXPORT
NOTE 1
SP 03
F75-0835-PSW-PE8-315
F75-0836-PSW-PE8-225
250x200
25VBE1C322
SP 13
IMPORT
NOTE 2
PI 1045
200x150
F75-0802-PSW-SS2-250
DIESEL PUMP COMMON FAULT ALARM
DIESEL PUMP PWR SUPPLY
DIESEL PUMP RUNNING
PW 0486
DIESEL LOW LEVEL ALARM
XI 1013
DIESEL TANK LEAKAGE ALARM
XI 1014
EXISTING
SCHEME WATER
FROM DISTRIBUTION
NOTES:
1. FIRE BRIGADE SUCTION CONNECTION.
2. FIRE BRIGADE BOOSTER CONNECTION.
3. REMOVABLE SPOOL FOR TANK ENTRY.
4. DELETED.
5. VENT AND OVERFLOW TO BE FITTED WITH VERMIN PROOF MESH.
6. DISCHARGE TO FLOOR.
7. DELETED.
8. SPOOL ALLOWANCE FOR FUTURE FLOWMETER.
9. FLANGE ALLOWANCE FOR PRESSURE MEASUREMENT.
10. REFER TO VENDOR P&ID 2000-ME006-E02-25001 FOR VENDOR PACKAGE DETAILS.
11. BSP CONNECTION FOR FUTURE PRESSURE TRANSMITTER.
12. SUPPLIED LOOSE BY DIESEL SCHEME WATER PUMP VENDOR.
13. INSTRUMENT NUMBERS PREFIXED BY THE AREA SHOWN ON P&ID FOR CLARITY, EG F75-PI-1018.
LEGENDS:
EXISTING
EXISTING TO BE MADE REDUNDANT DURING STAGE 1
NEW
FUTURE
ZSO 1007
ZSC 1007
XV 1007
FC
F75-0804-PSW-SS2-250
250x125
25VBE1S330
SP 07
ZSO 1009
ZSC 1009
XV 1009
F75-0811-PSW-SS2-250
25VBE1S328
ZSO 1011
ZSC 1011
XV 1011
F75-0813-PSW-SS2-250
25VBE1S326
VENDOR PACKAGE
M
F75-PW-481
F75-PW-482
D
F75-PW-483
200x80
200VCE1S363
200VCE1S362
200VCE1S361
25VBE1S331
25VBE1S329
25VBE1S327
ZSC 1008
ZSO 1008
XV 1008
F75-0810-PSW-SS2-200
ZSC 1010
ZSO 1010
XV 1010
F75-0812-PSW-SS2-200
ZSC 1012
ZSO 1012
XV 1012
PT 1043
F75-0814-PSW-SS2-200
NOTE 12
LSL 1044
DIESEL CONTROL PANEL
F75CP17
PW 0483
DIESEL SCHEME WATER PUMP RUNNING
DIESEL SCHEME WATER PUMP POWER COMMON FAULT ALARM
DIESEL SCHEME WATER PUMP POWER SUPPLY PRESENT
DIESEL SCHEME WATER PUMP ENABLE
SET AT 730kPa
PCV 1016
SP 15
F75-0825-PSW-SS2-200
200x100
F75-0808-PSW-SS2-250
NOTE 9
NOTE 8
LO
200VBFE1S353
SS2 PE16
A/G U/G
F75-0808-PSW-PE16-280
U/G A/G
280x200
200VBFE1S457
NC
200VBFE1S458
TI 27
TI 3
SCHEME WATER
TO DISTRIBUTION
EXISTING
SCHEME WATER PUMP 1
F75-PW-481
SCHEME WATER PUMP 2
F75-PW-482
DIESEL SCHEME WATER PUMP 3
F75-PW-483
DIESEL FIRE WATER PUMP
F75-PW-486
FIRE WATER JOCKEY PUMP
F75-PW-487
ELECTRIC FIRE WATER PUMP
F75-PW-488
SCHEME & FIRE WATER TANK 1
F75-TK-481
SCHEME & FIRE WATER TANK 2
F75-TK-482
APPROVED FOR CONSTRUCTION