


BACK WALL ^ (caps this way)

L00

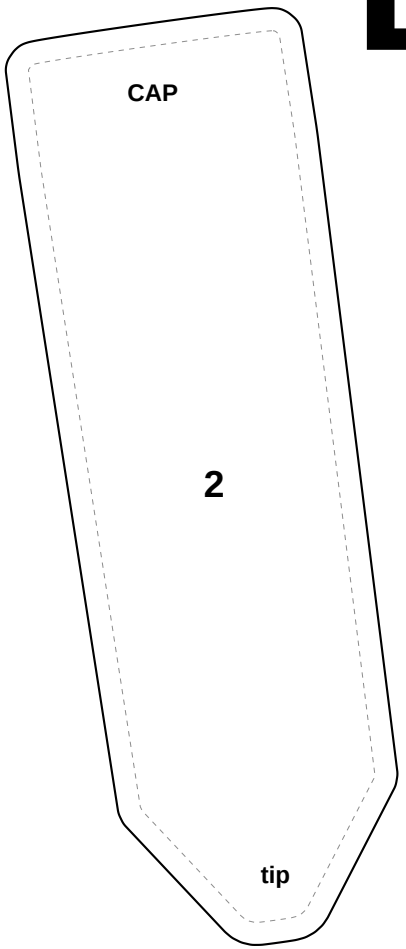

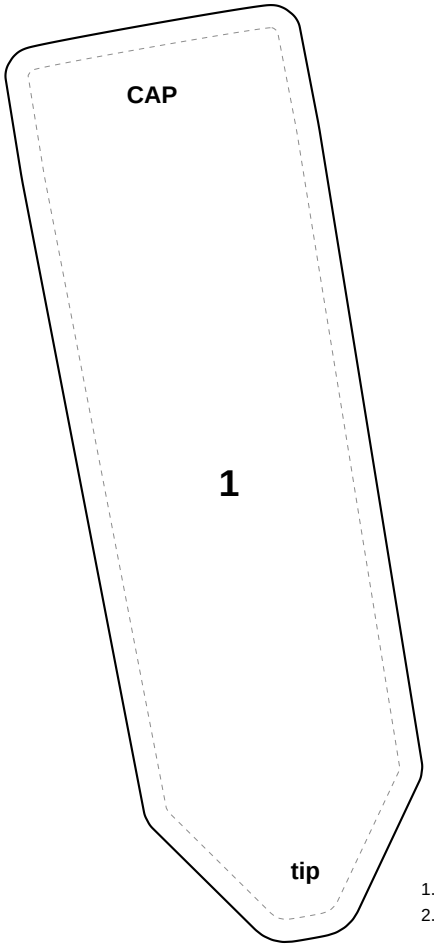

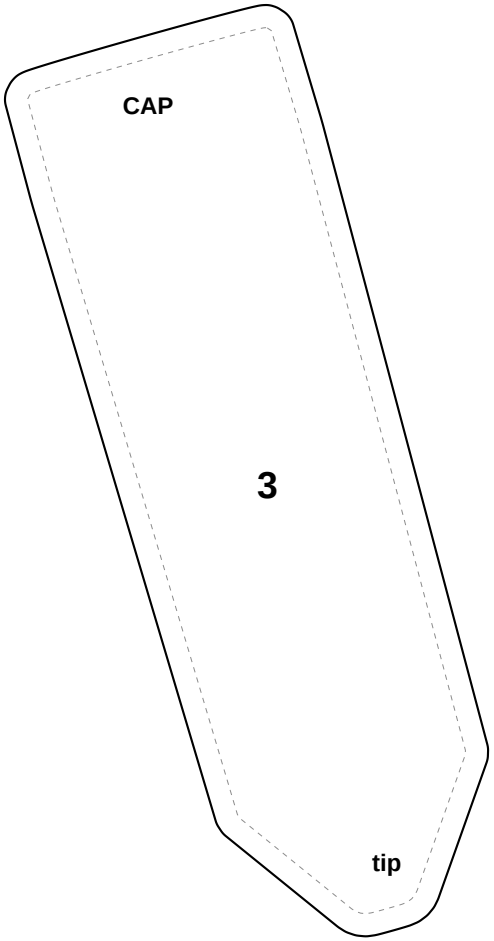

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.

L00 = sim seed 0 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM >

u 300

u 250

u 200

u 150

L01


BACK WALL ^ (caps this way)

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.

L01 = sim seed 1 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

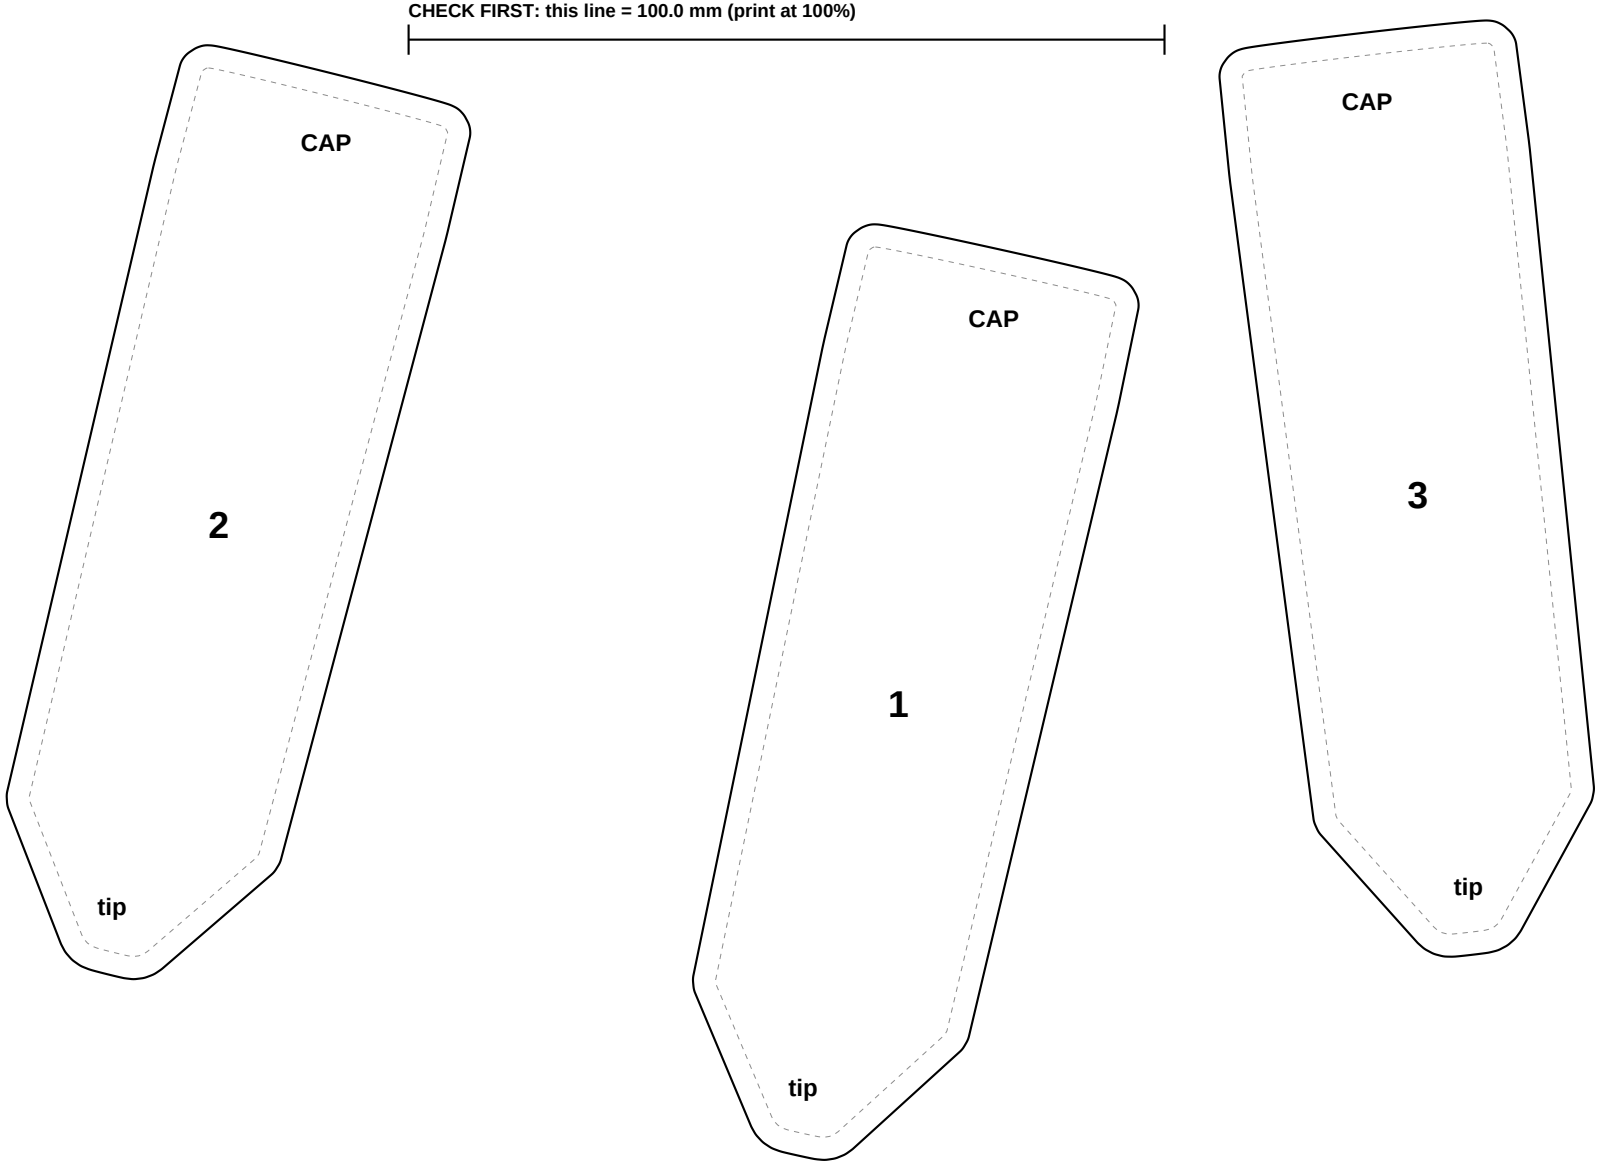

TRIM >

u 300


u 250


u 200


u 150

L02

BACK WALL ^ (caps this way)

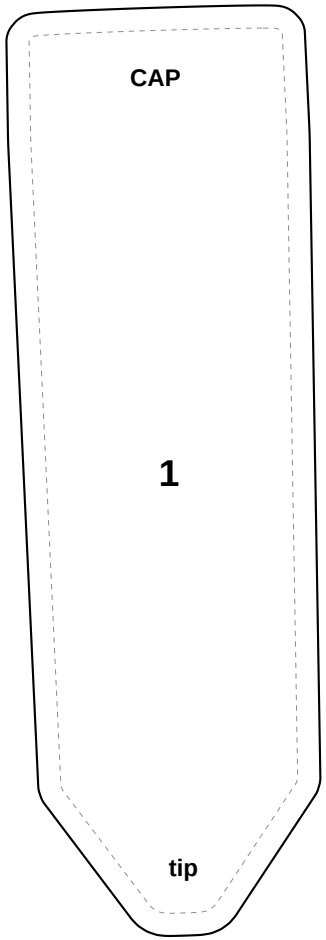

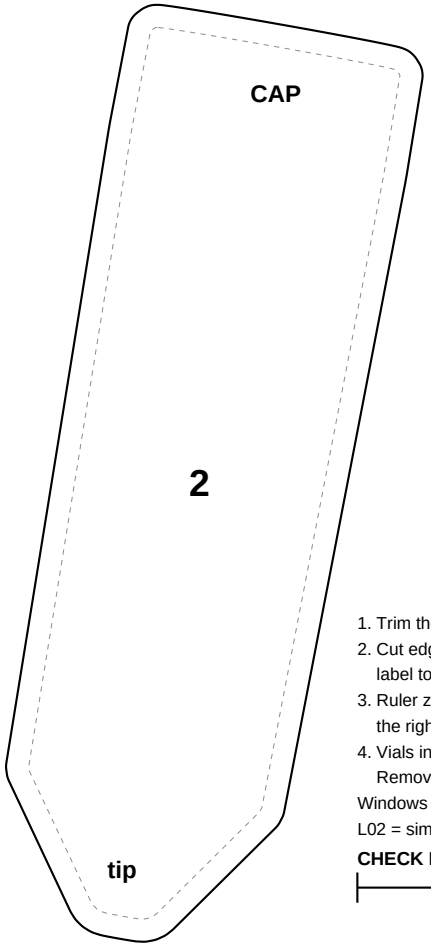

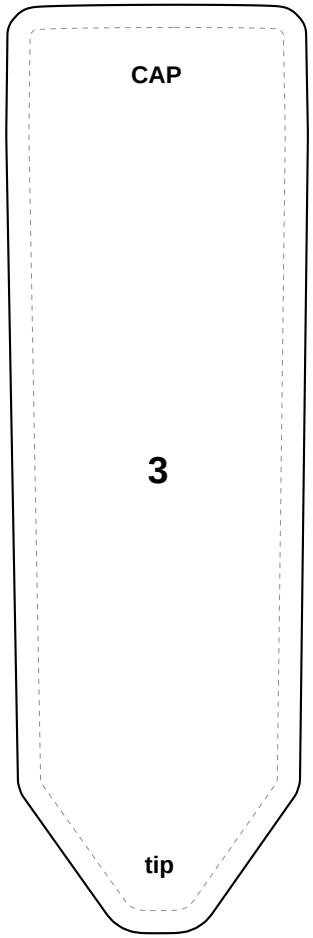



1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.


L02 = sim seed 2 | set A | letter | ff78d3ce0f


CHECK FIRST: this line = 100.0 mm (print at 100%)




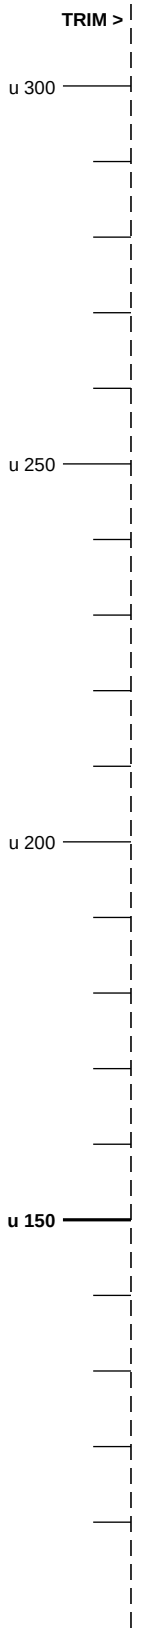

BACK WALL ^ (caps this way)

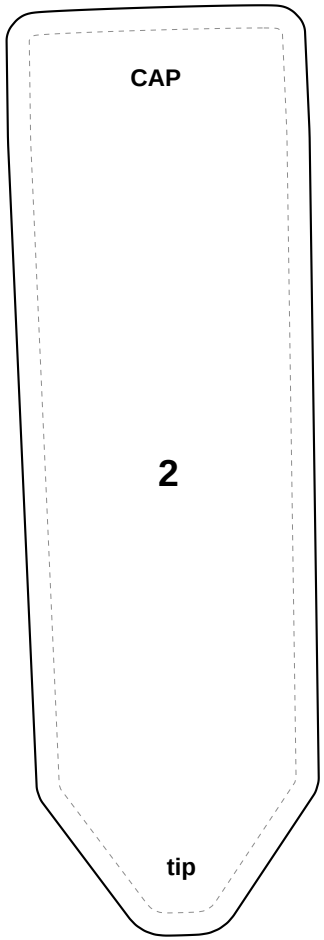

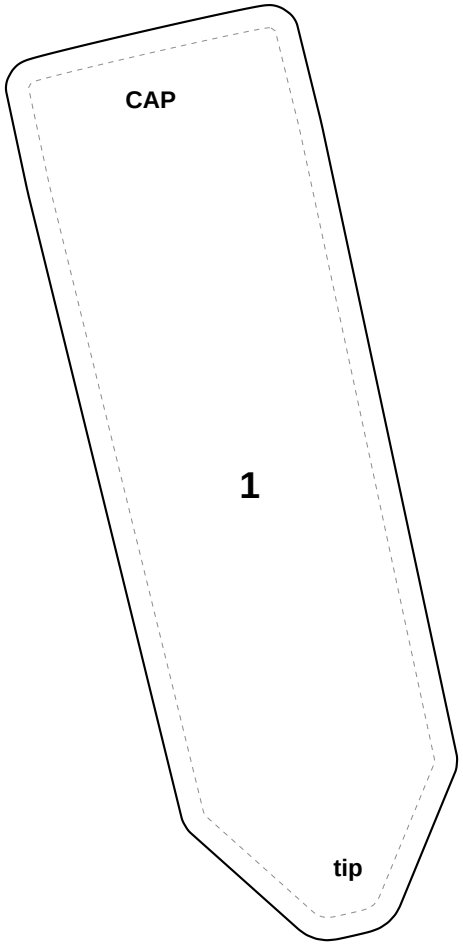

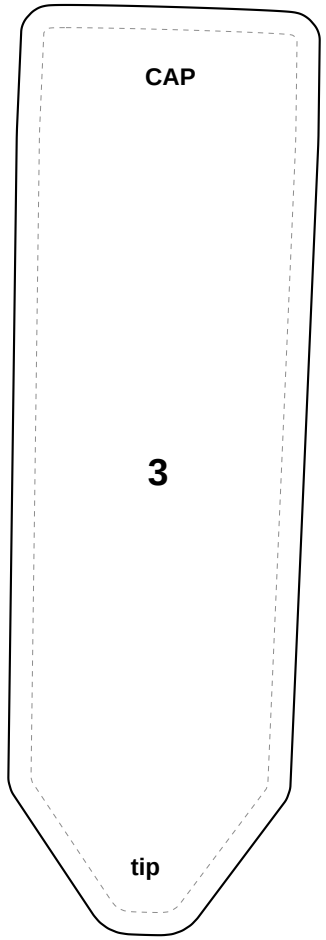



L03

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L03 = sim seed 3 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)



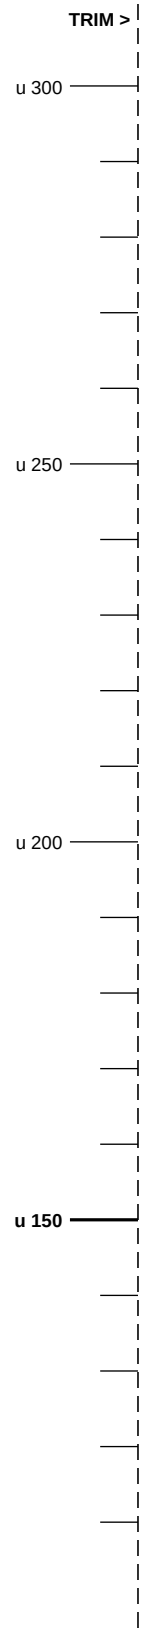


BACK WALL ^ (caps this way)


L04


1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L04 = sim seed 4 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

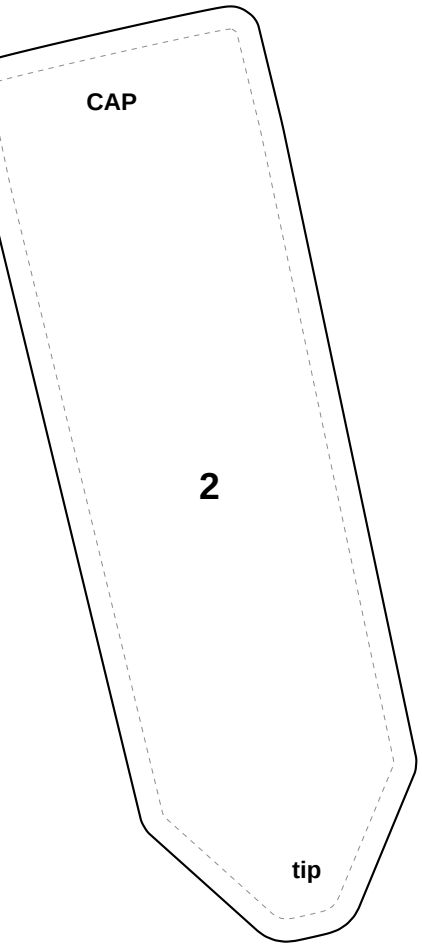

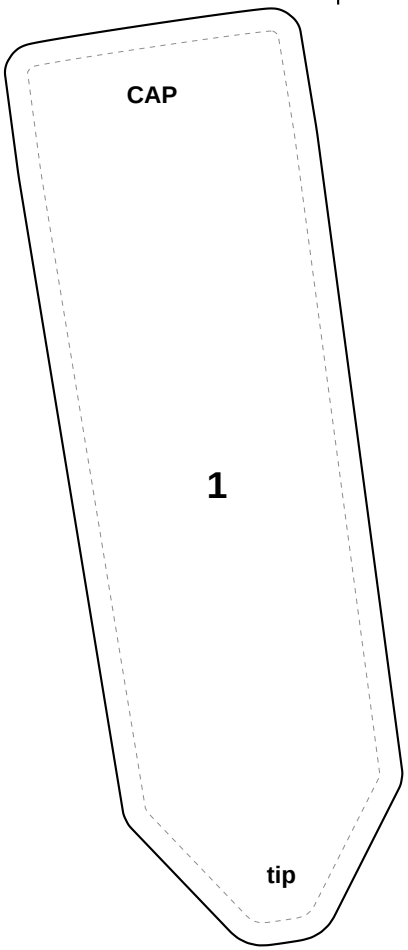

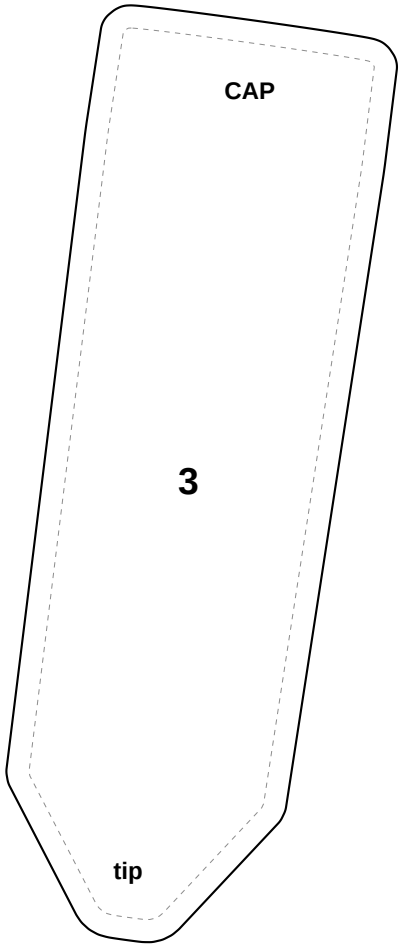

TRIM >
u 300
u 250
u 200
u 150

BACK WALL ^ (caps this way)

TRIM >


u 300


u 250


u 200

u 150

L05

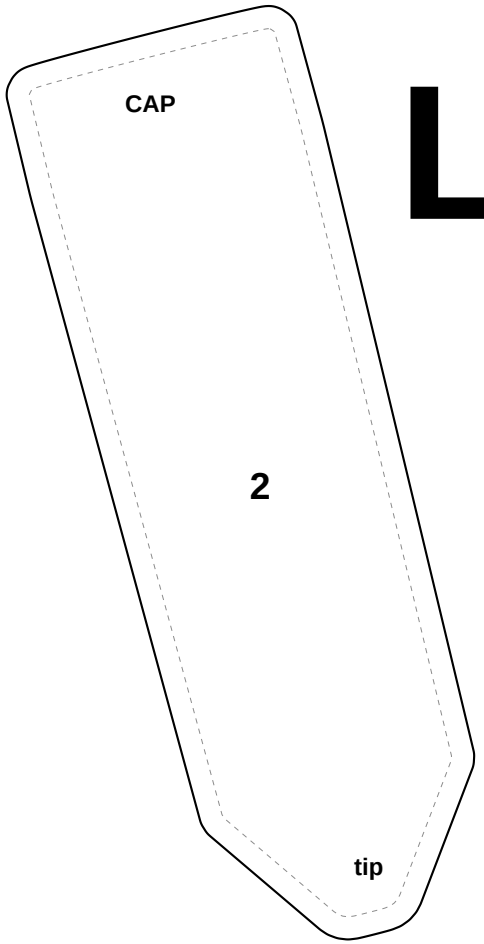

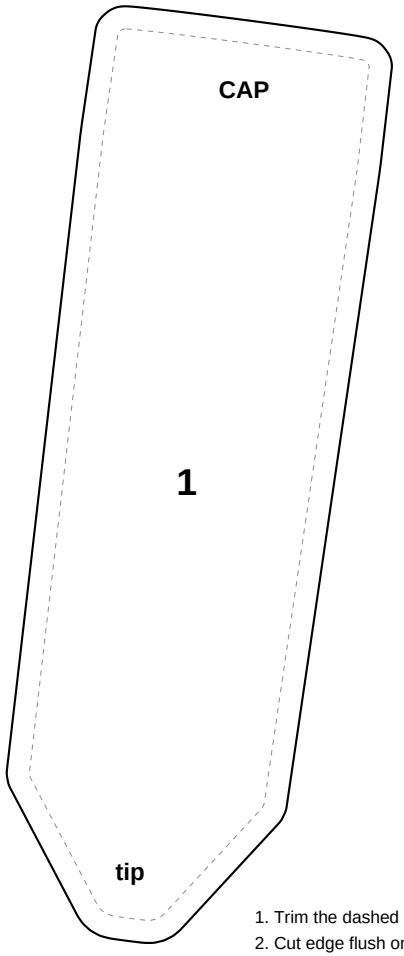

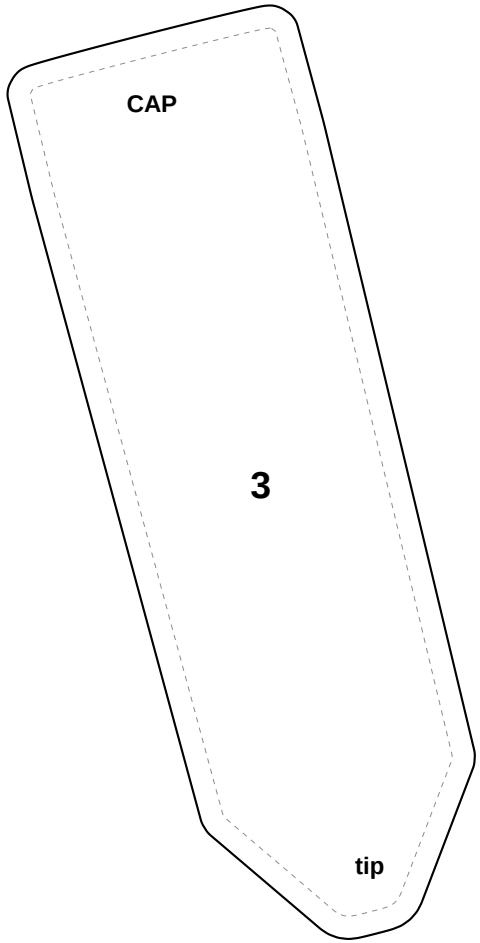

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


Windows = sim vial outline (grey dashes) + 3 mm.


L05 = sim seed 5 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

BACK WALL ^ (caps this way)

L06

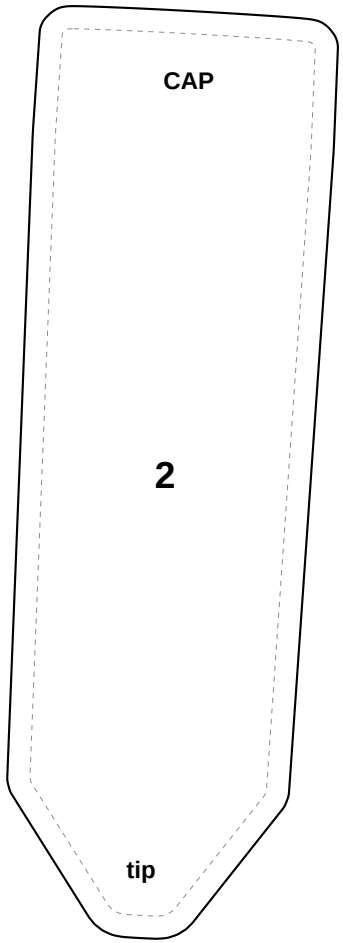

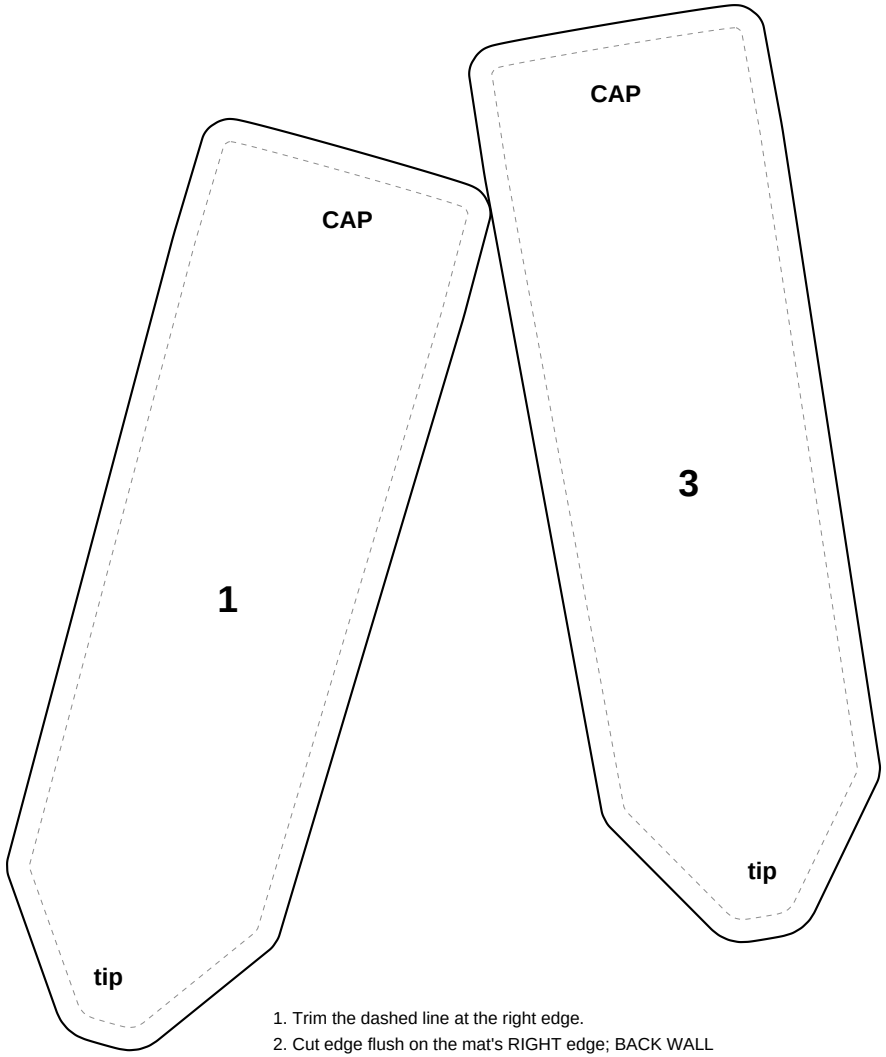

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

NOTE: windows 1 and 3 touch at the caps: cut them as one opening.
Windows = sim vial outline (grey dashes) + 3 mm.
L06 = sim seed 6 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM >
u 300
u 250
u 200
u 150

BACK WALL ^ (caps this way)


L07


1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


Windows = sim vial outline (grey dashes) + 3 mm.


L07 = sim seed 7 | set A | letter | ff78d3ce0f


CHECK FIRST: this line = 100.0 mm (print at 100%)



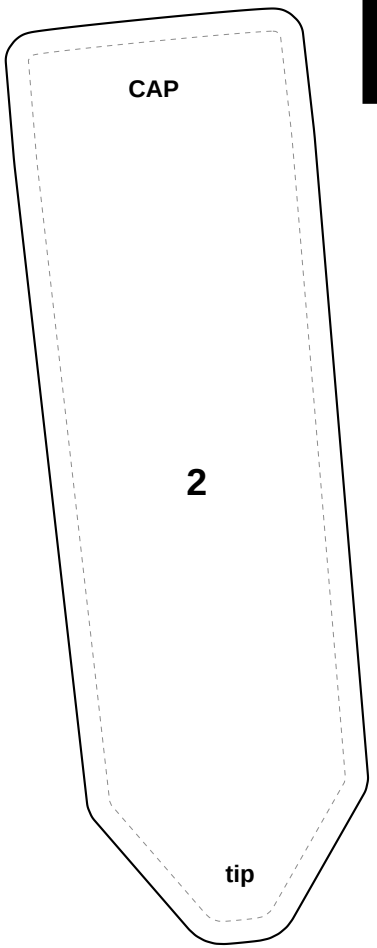

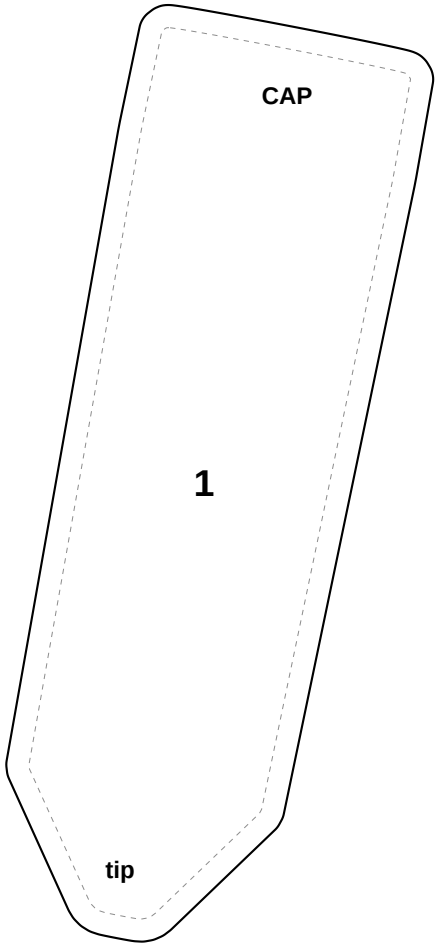


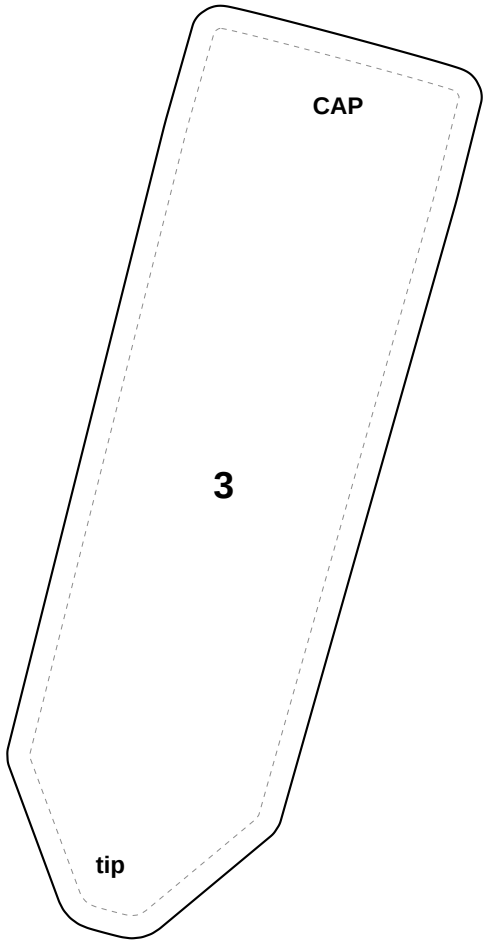


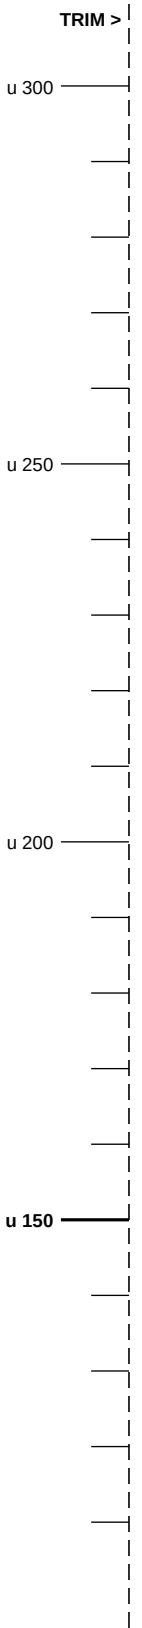


BACK WALL ^ (caps this way)

L08

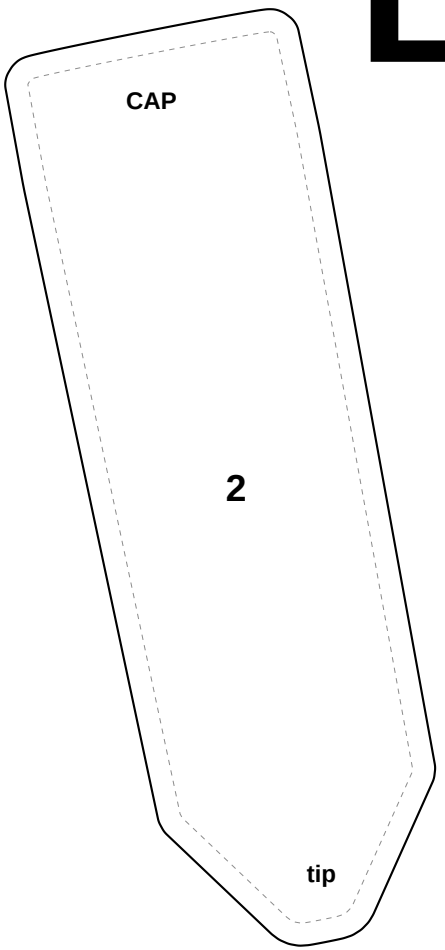

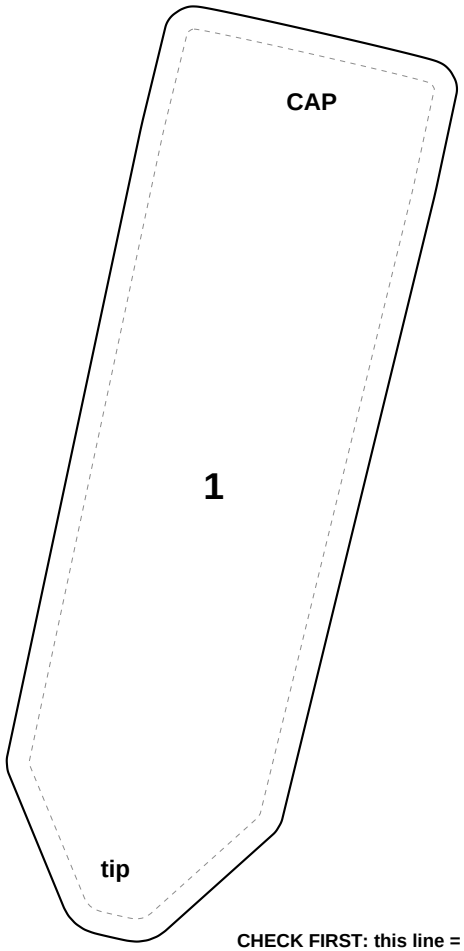

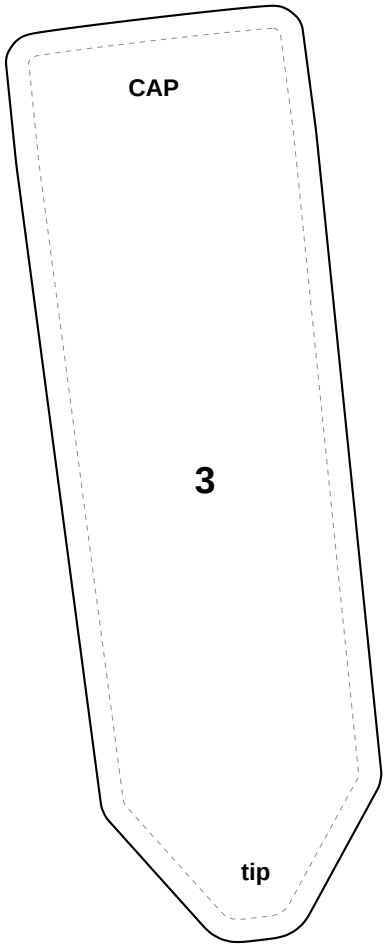

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L08 = sim seed 8 | set A | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM >

u 300


u 250


u 200


u 150

BACK WALL ^ (caps this way)

L09

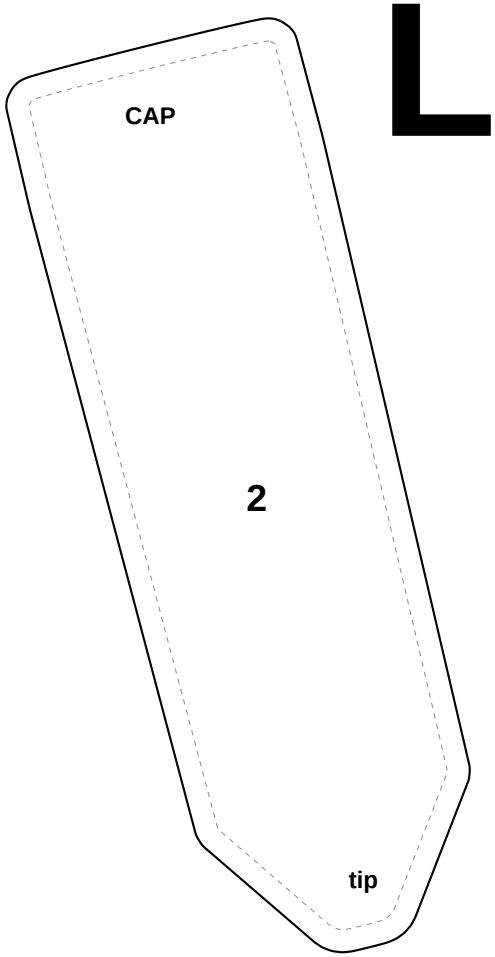

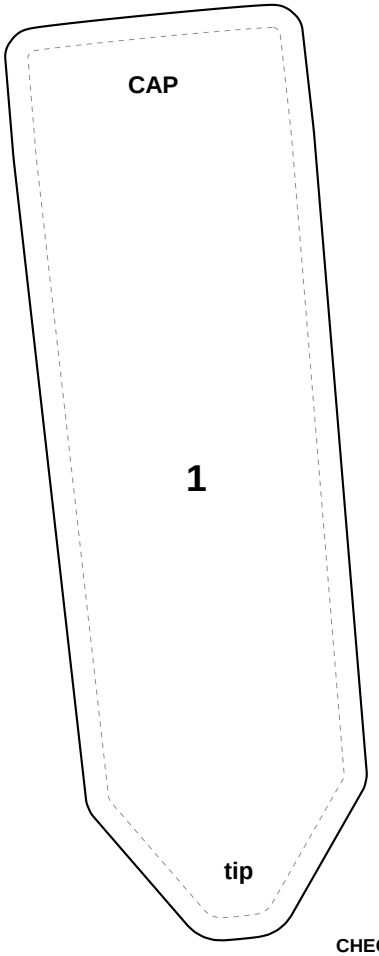

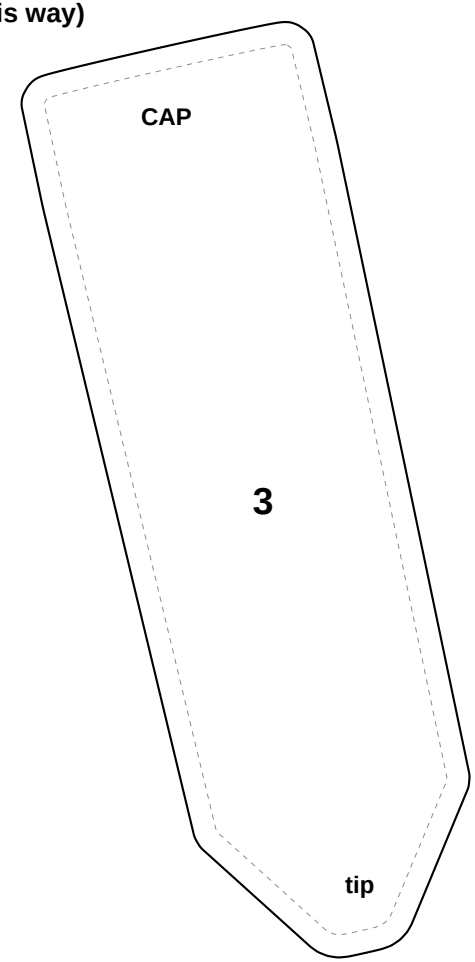

TRIM >

u 300

u 250

u 200

u 150


1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


Windows = sim vial outline (grey dashes) + 3 mm.
L09 = sim seed 9 | set A | letter | ff78d3ce0f


CHECK FIRST: this line = 100.0 mm (print at 100%)

BACK WALL ^ (caps this way)

L00

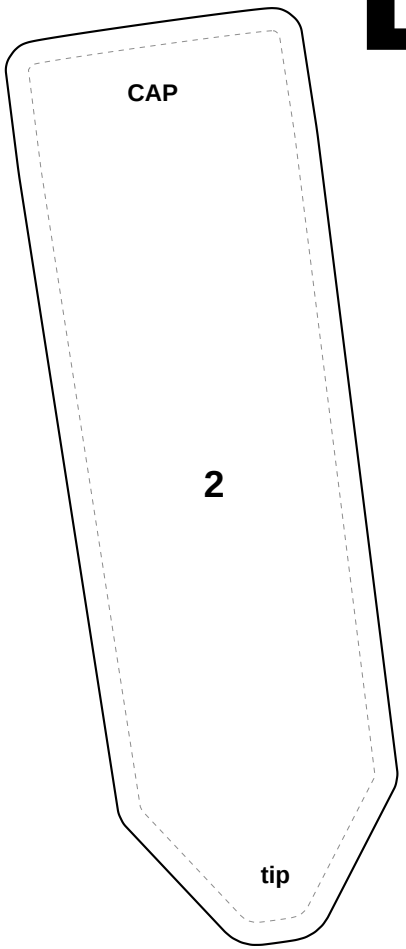

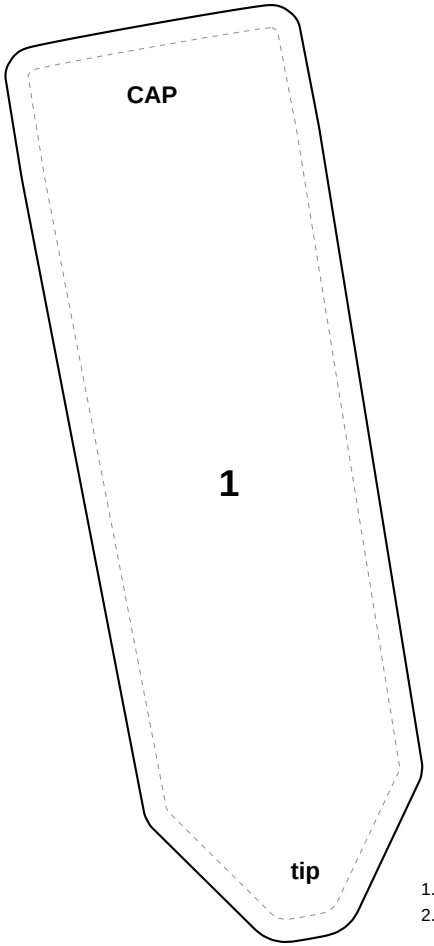

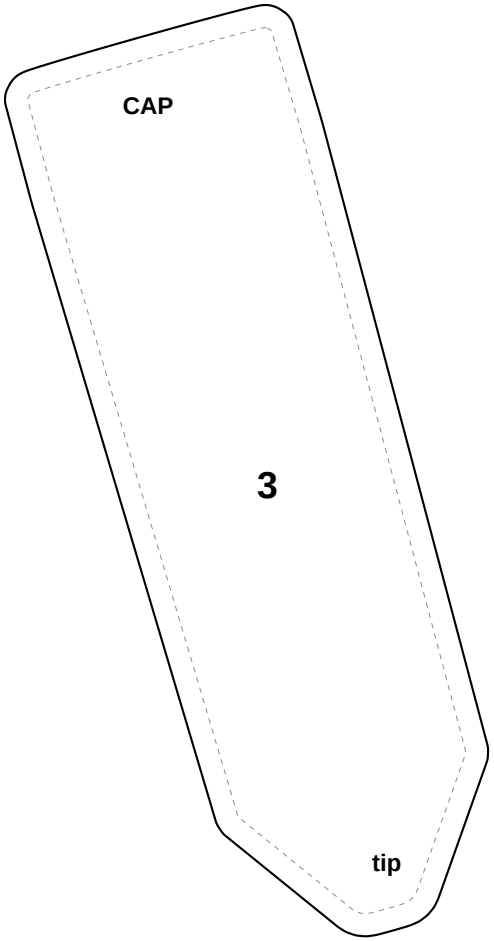

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.

L00 = sim seed 0 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM >

u 300

u 250

u 200

u 150

L01


BACK WALL ^ (caps this way)

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.

L01 = sim seed 1 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

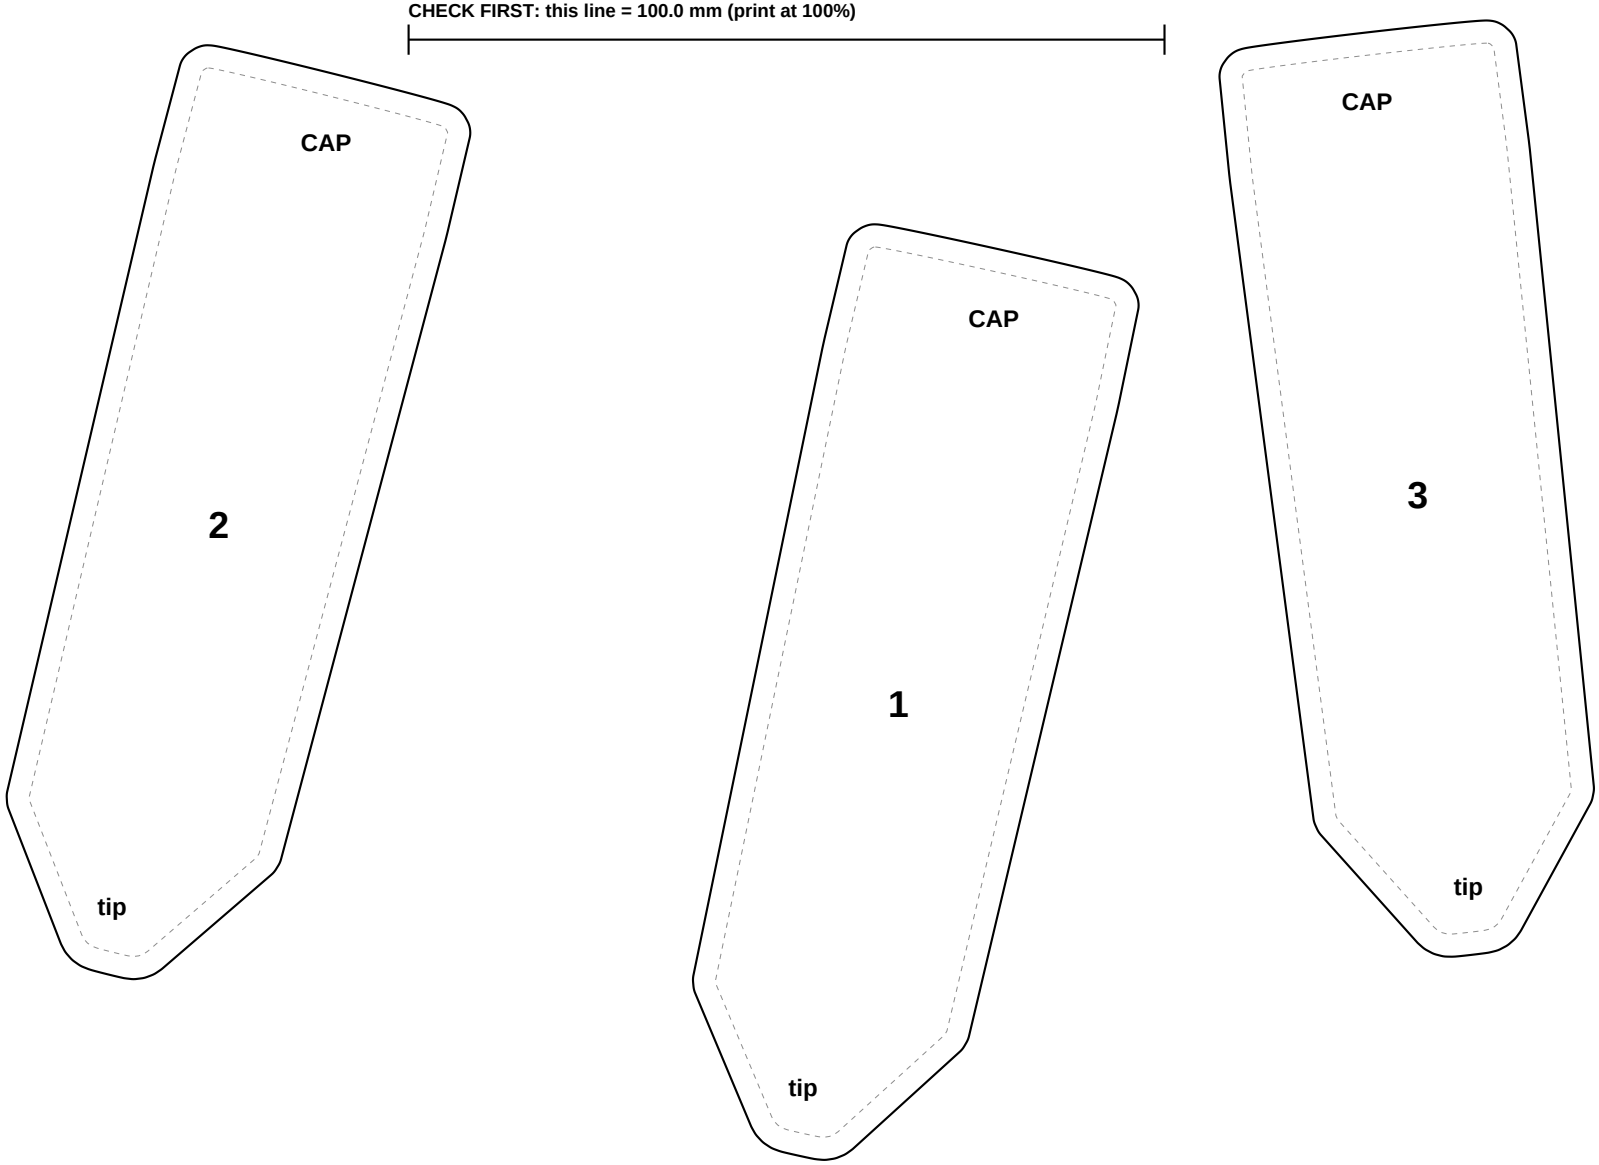

TRIM >

u 300


u 250


u 200


u 150

L02

BACK WALL ^ (caps this way)

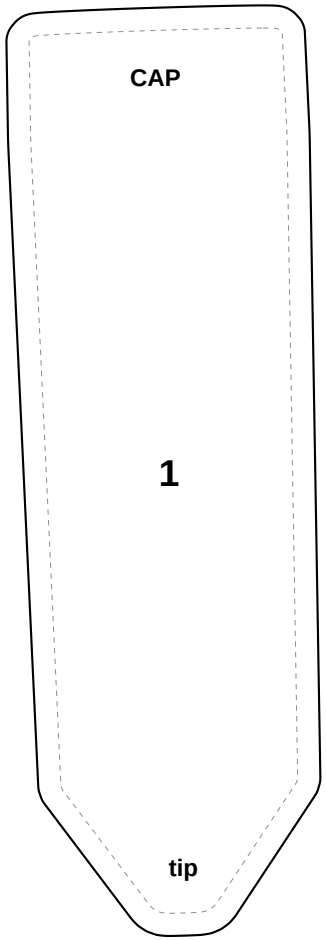

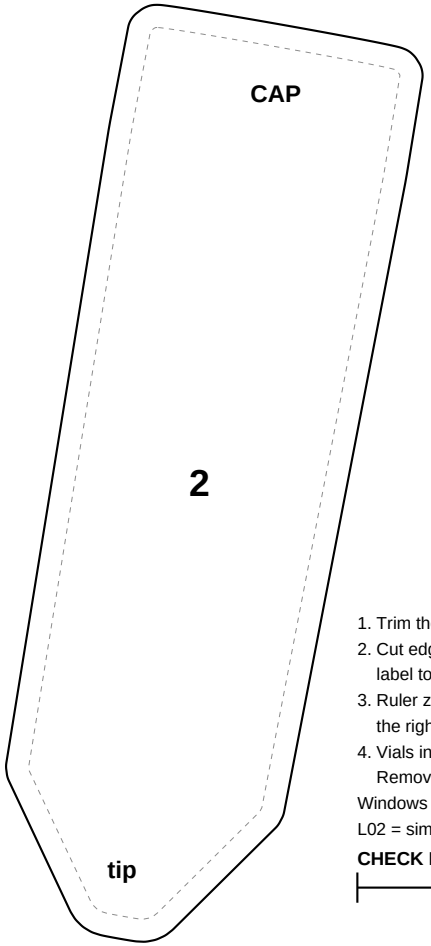

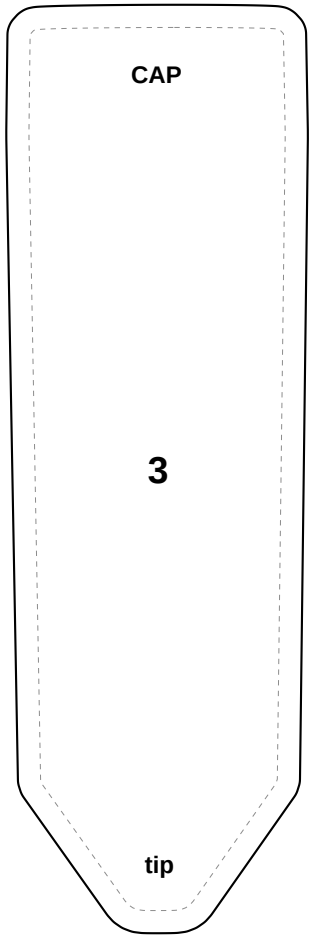



1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.


L02 = sim seed 2 | set B | letter | ff78d3ce0f


CHECK FIRST: this line = 100.0 mm (print at 100%)




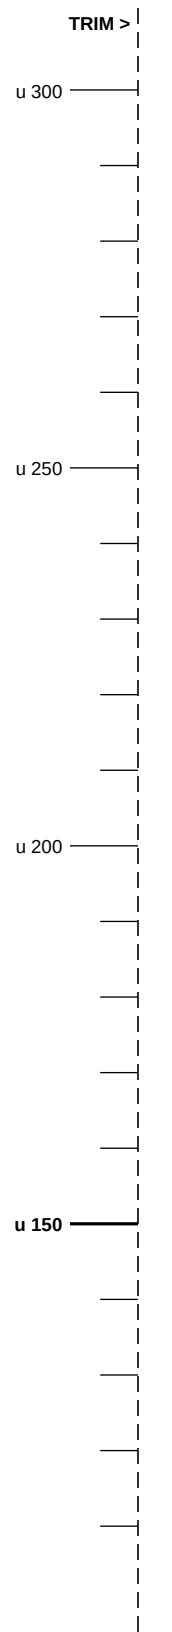

BACK WALL ^ (caps this way)

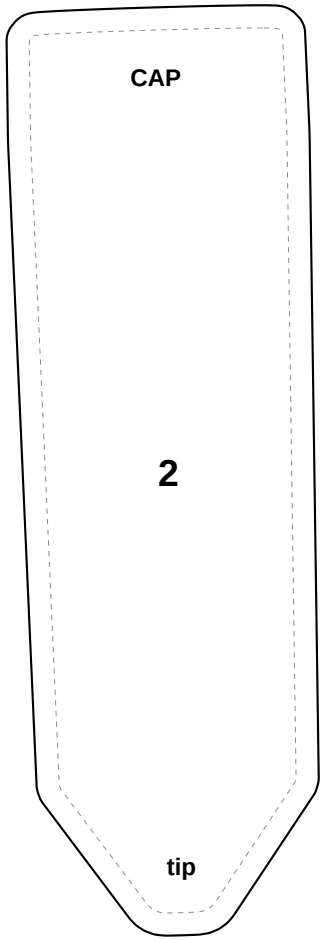

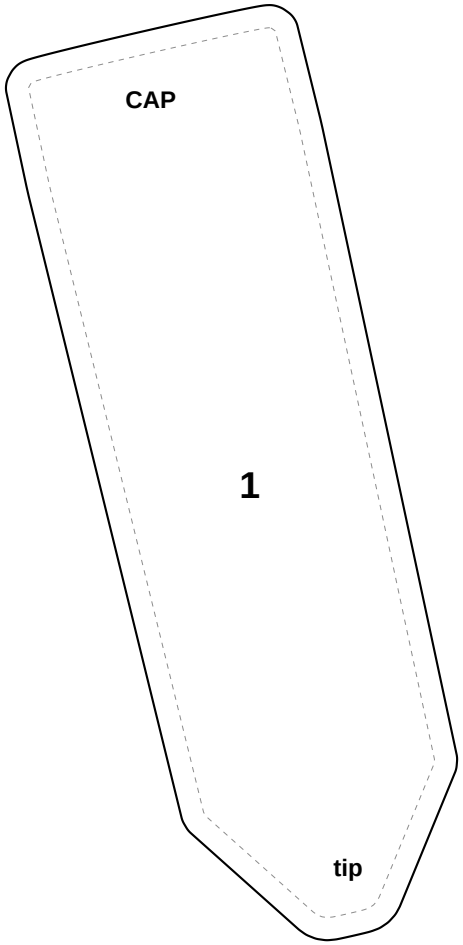

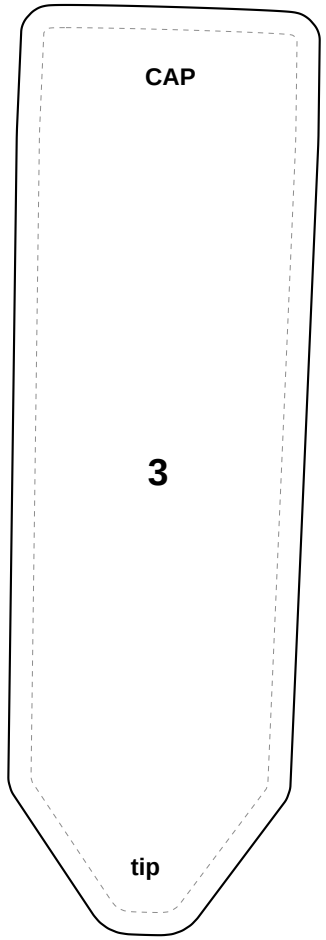



L03

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L03 = sim seed 3 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)



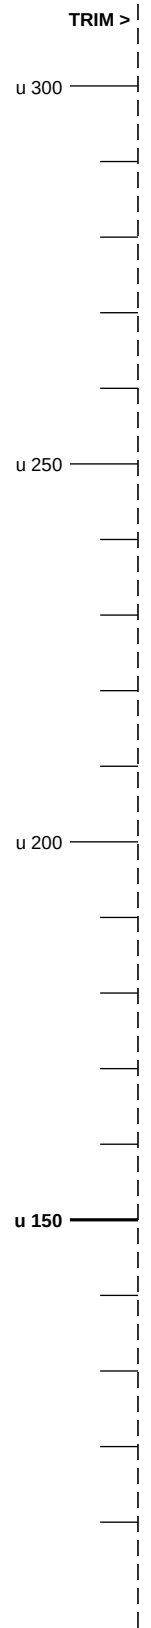


BACK WALL ^ (caps this way)


L04


1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L04 = sim seed 4 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

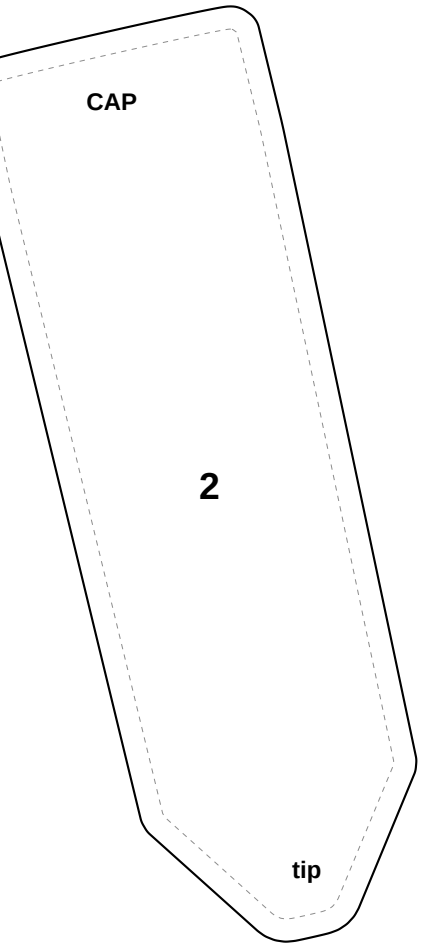

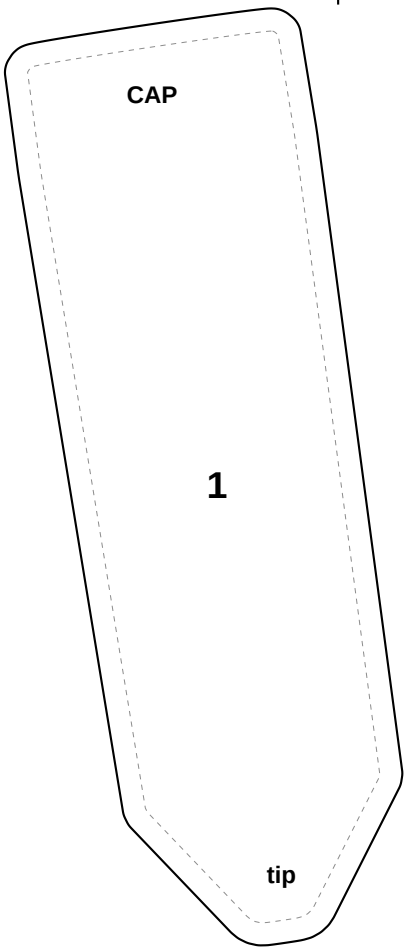

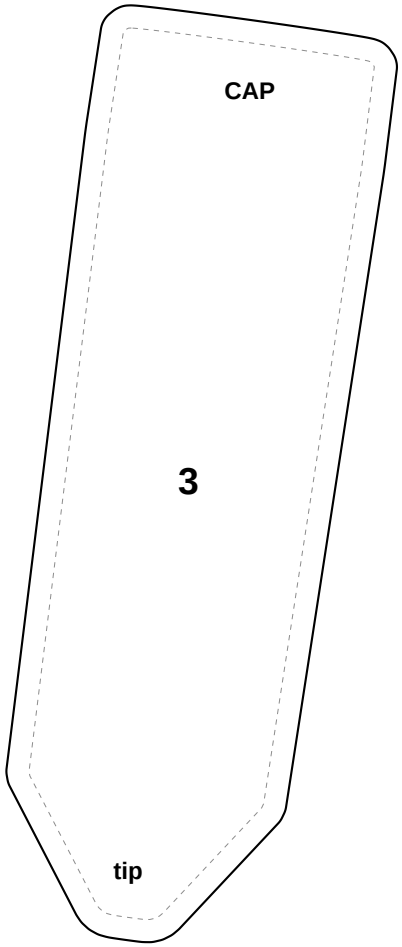

TRIM >
u 300
u 250
u 200
u 150

BACK WALL ^ (caps this way)

TRIM >


u 300


u 250


u 200

u 150

L05

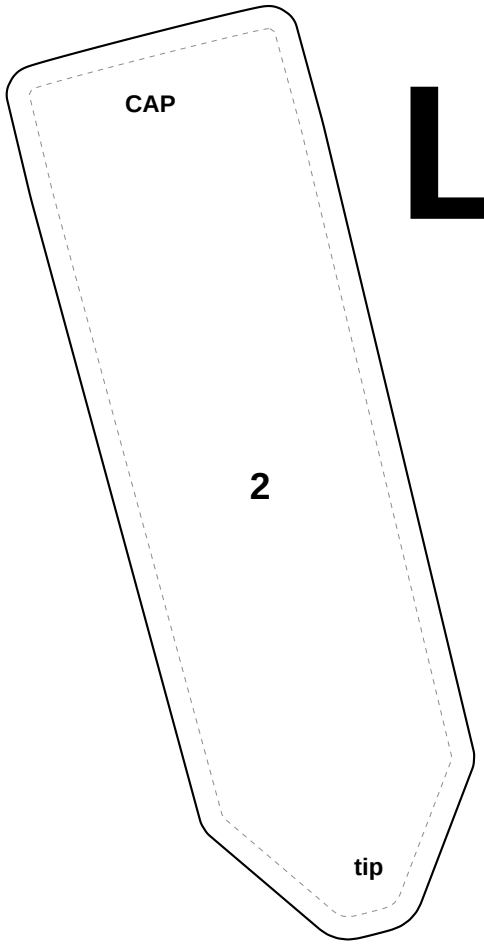

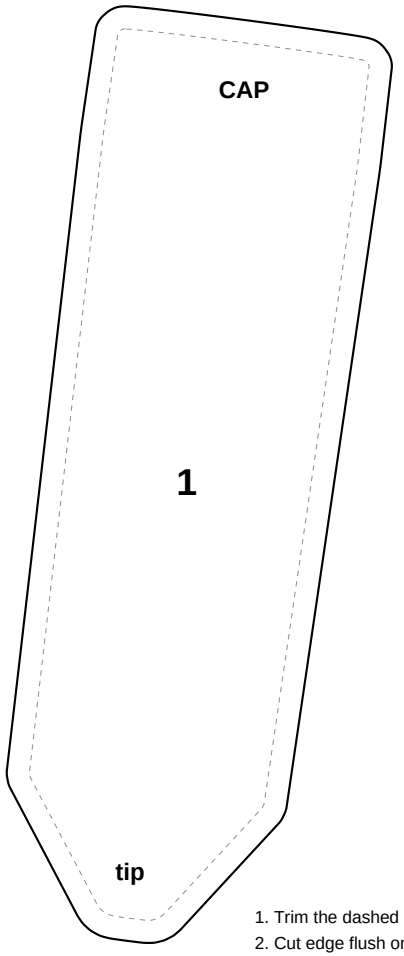

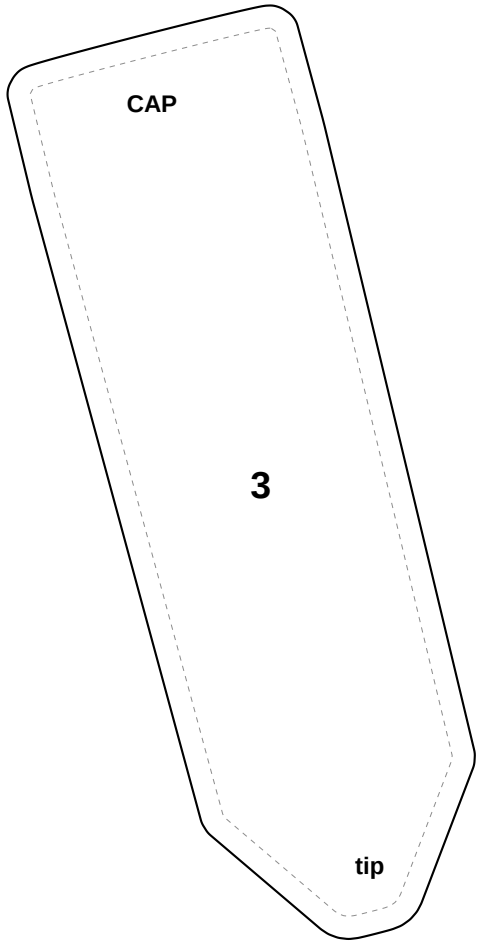

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


Windows = sim vial outline (grey dashes) + 3 mm.


L05 = sim seed 5 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

BACK WALL ^ (caps this way)

L06

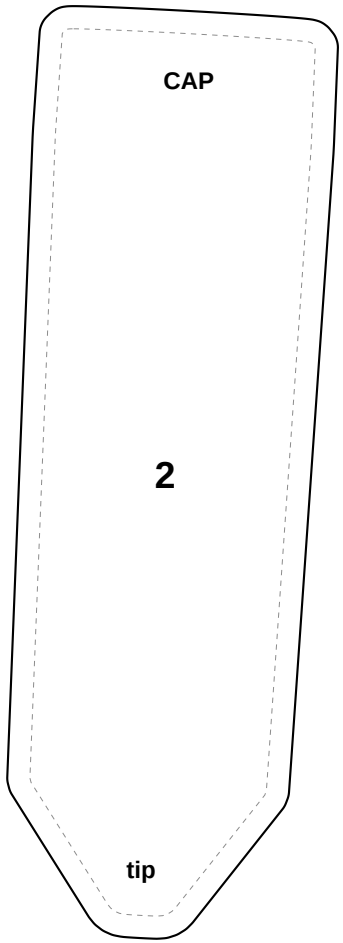

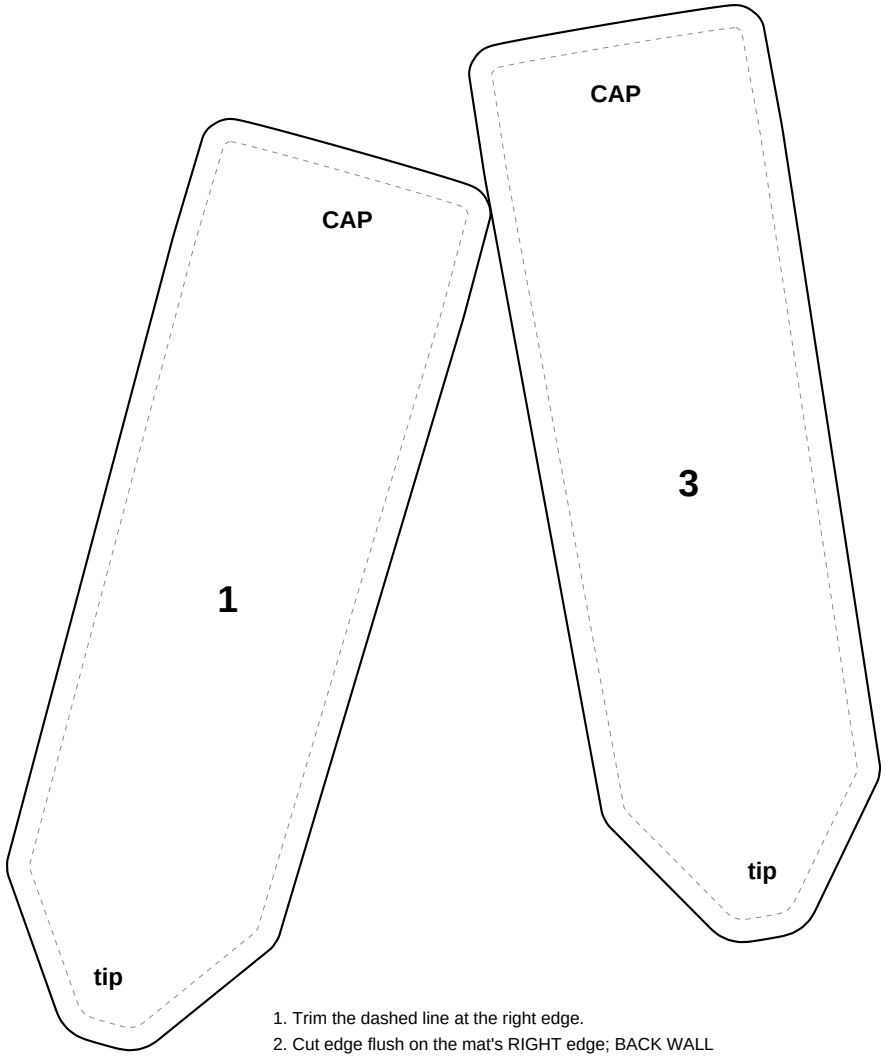

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

NOTE: windows 1 and 3 touch at the caps: cut them as one opening.
Windows = sim vial outline (grey dashes) + 3 mm.
L06 = sim seed 6 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM >
u 300
u 250
u 200
u 150

BACK WALL ^ (caps this way)


L07


1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


Windows = sim vial outline (grey dashes) + 3 mm.

L07 = sim seed 7 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

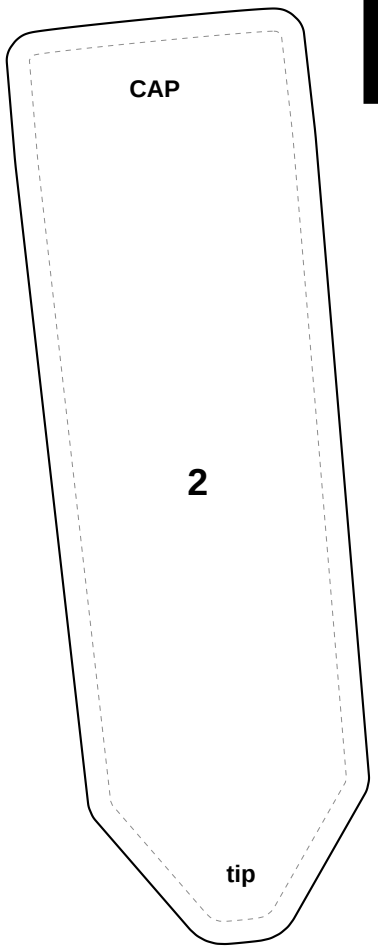

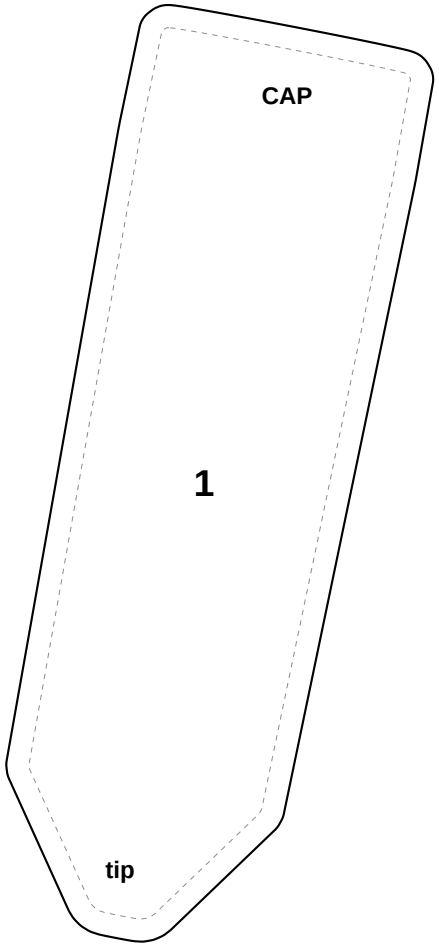

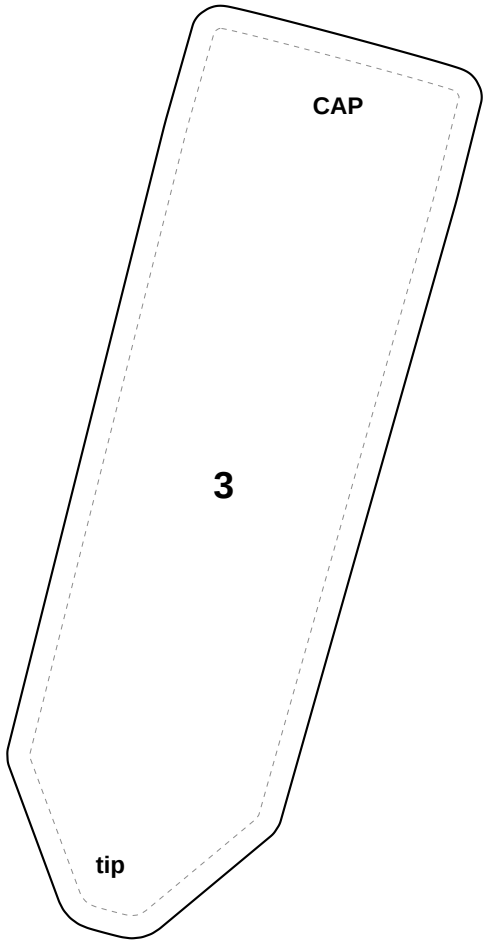

TRIM >

u 300


u 250


u 200


u 150

BACK WALL ^ (caps this way)

L08

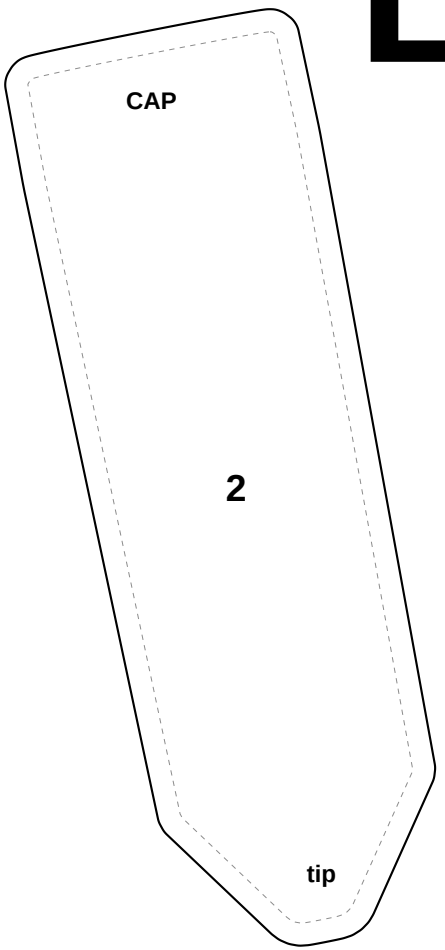

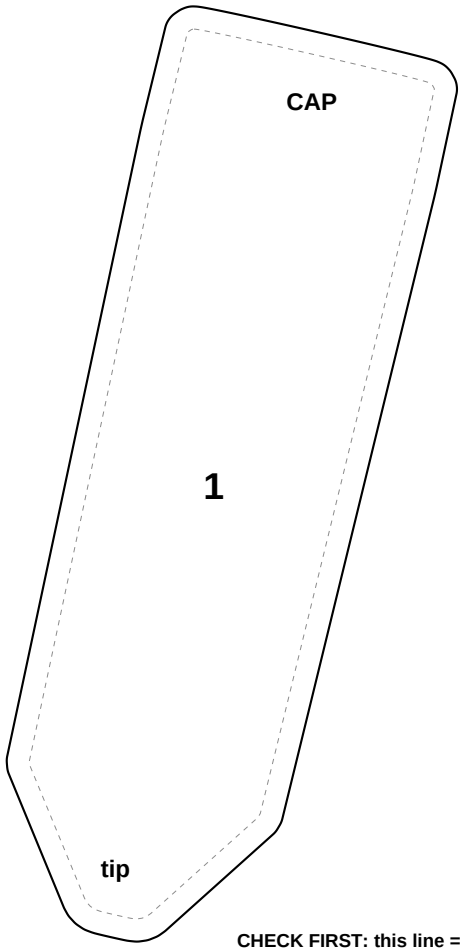

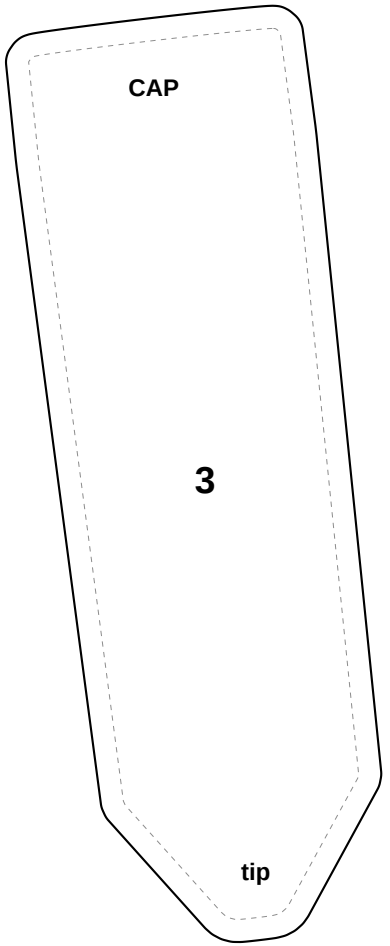

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.


NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L08 = sim seed 8 | set B | letter | ff78d3ce0f


CHECK FIRST: this line = 100.0 mm (print at 100%)


TRIM >
u 300
u 250
u 200
u 150

BACK WALL ^ (caps this way)

L09

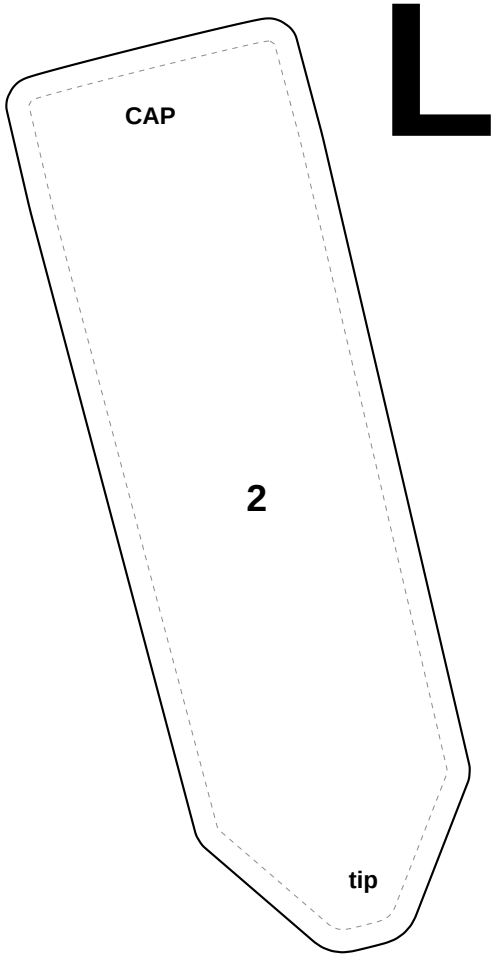

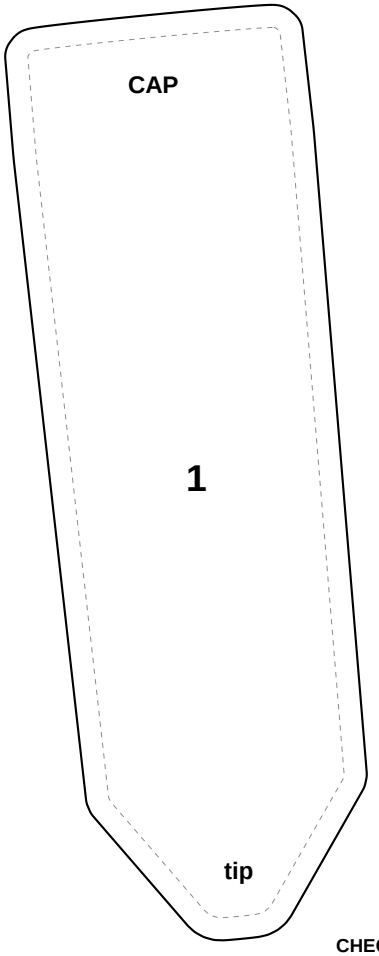

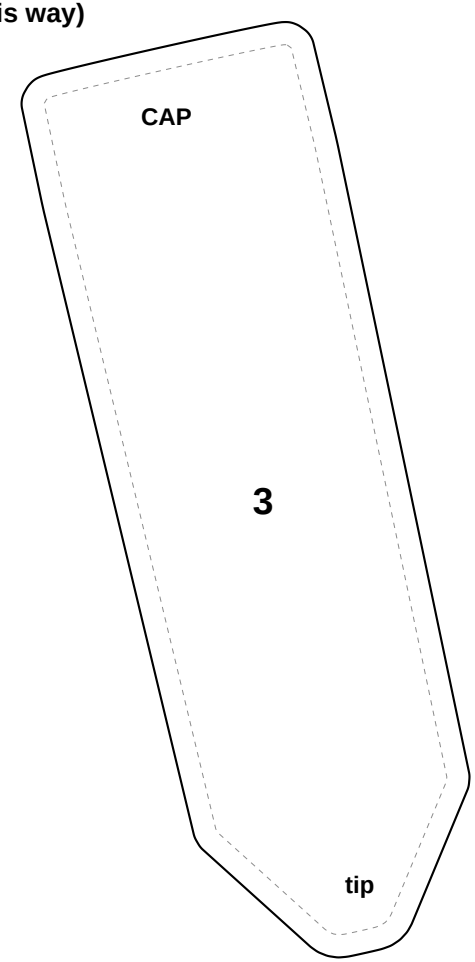

TRIM >

u 300

u 250

u 200

u 150

1. Trim the dashed line at the right edge.
2. Cut edge flush on the mat's RIGHT edge; BACK WALL label toward the back wall.
3. Ruler zero on the mat's FRONT-RIGHT corner, along the right edge: slide until bold 'u 150' reads 150.0 mm.
4. Vials in windows, cap at CAP. Lift the sheet straight up. Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L09 = sim seed 9 | set B | letter | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)