

TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L00

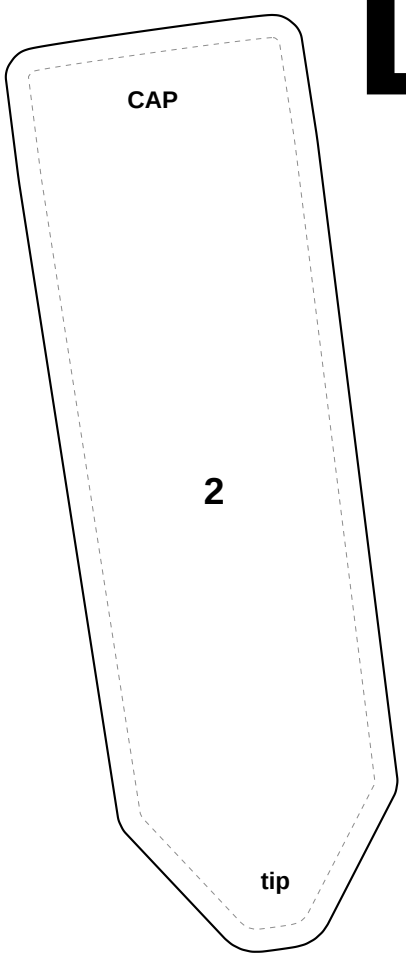

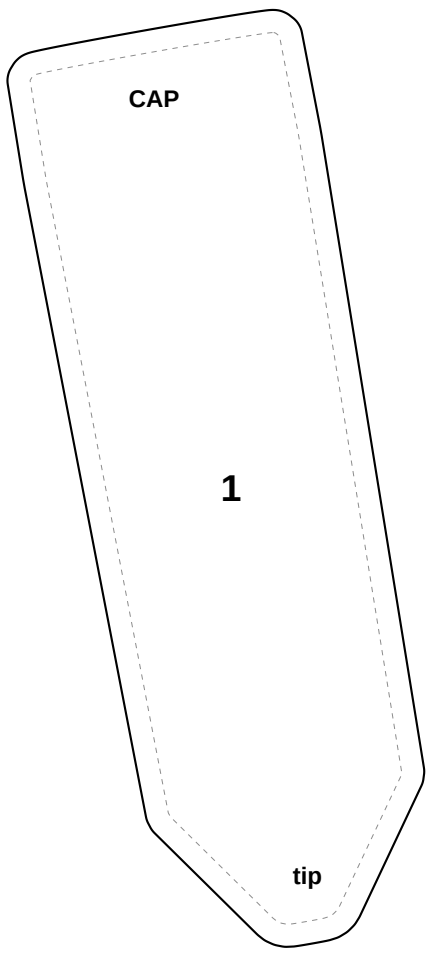

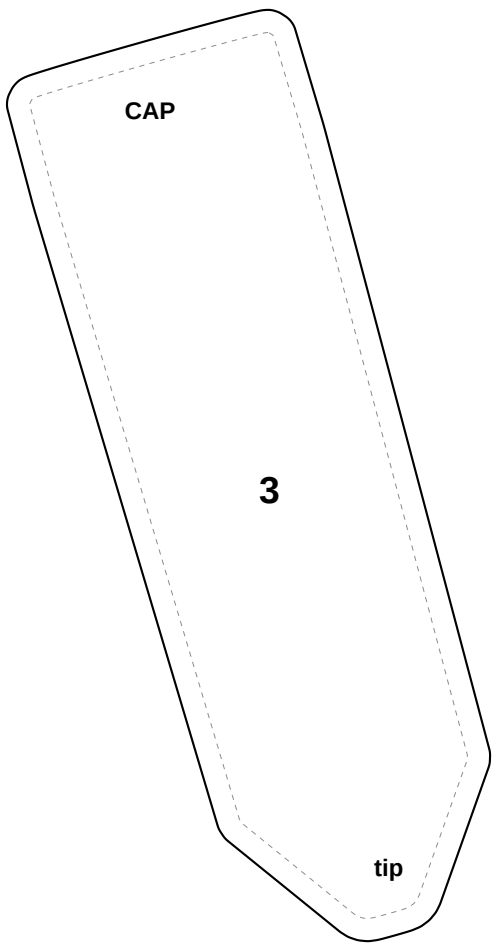

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L00 = sim seed 0 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

MAT FRONT-RIGHT CORNER


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.

BACK WALL ^ (caps this way)

TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L01

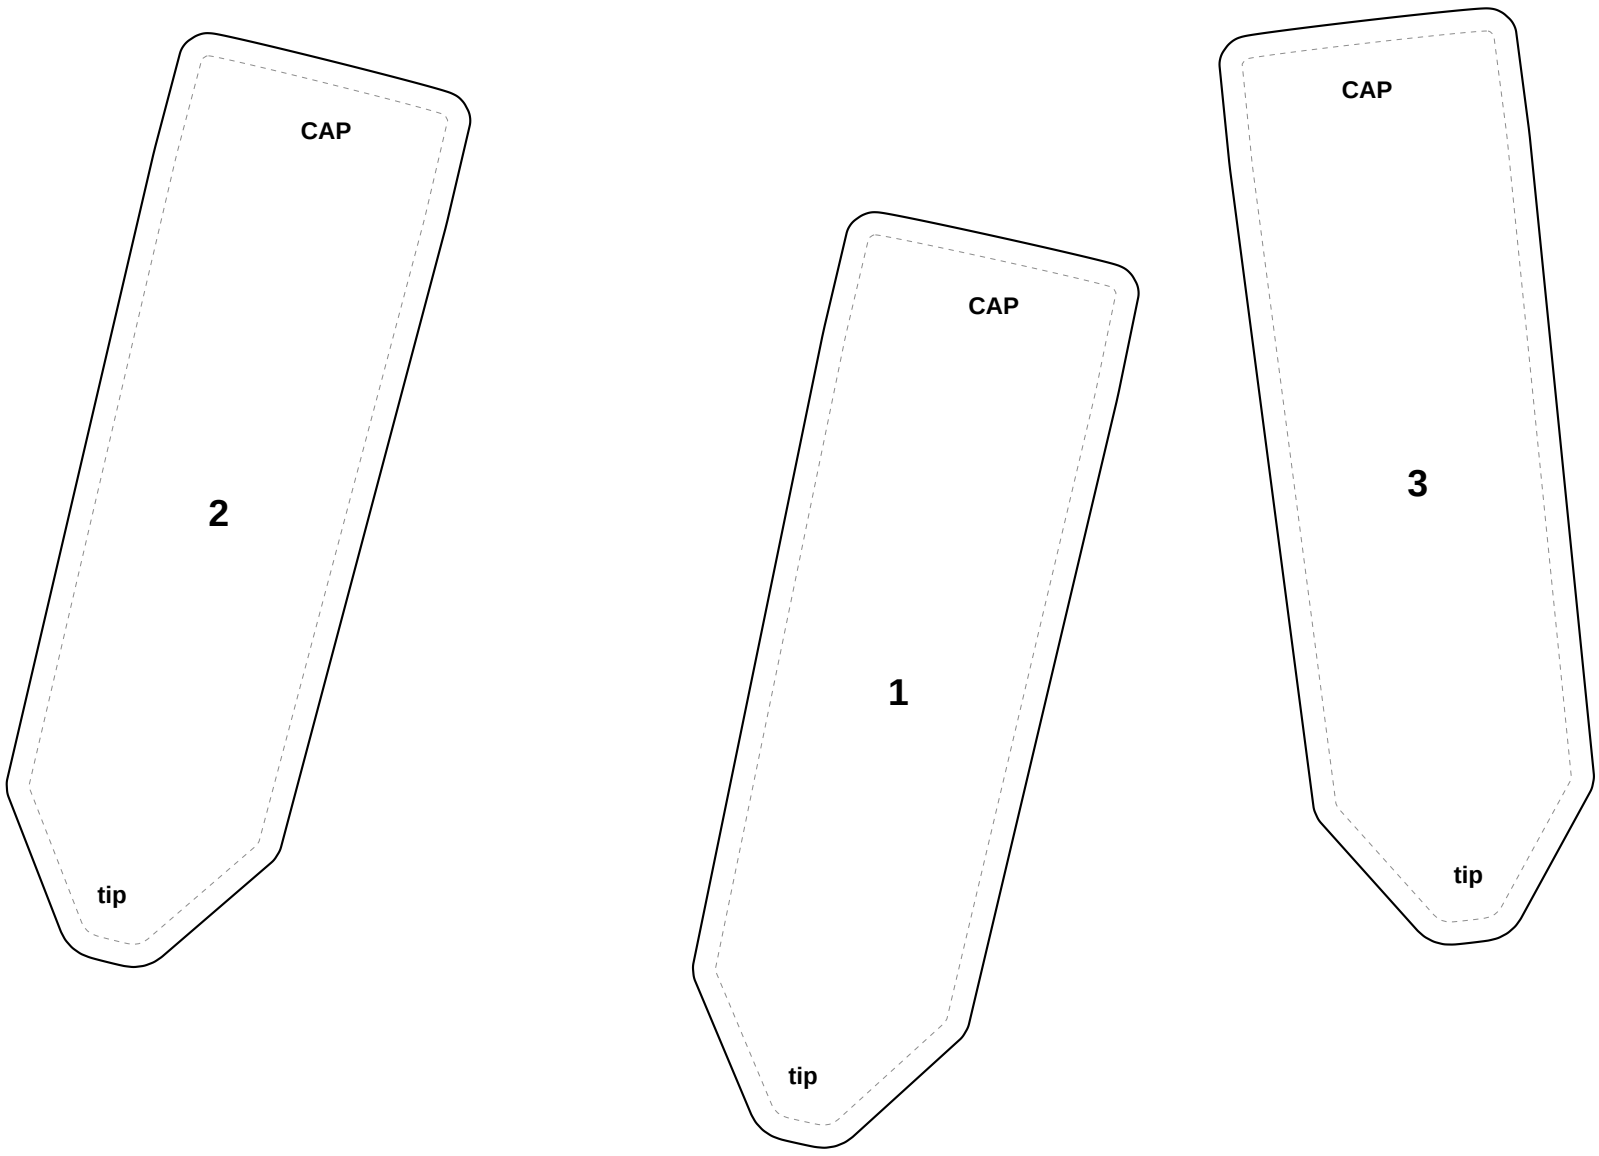

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L01 = sim seed 1 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L02

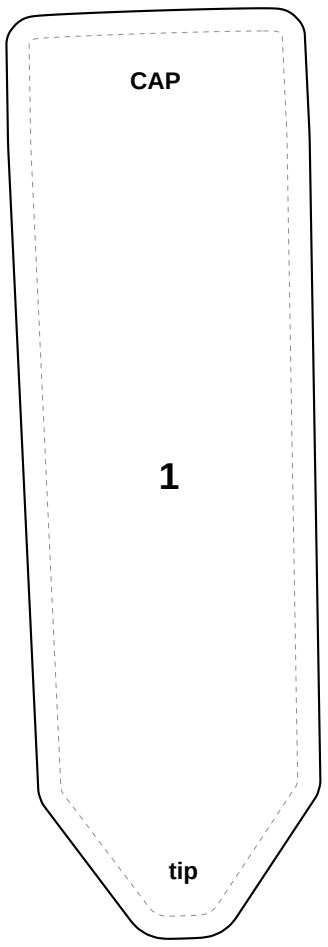

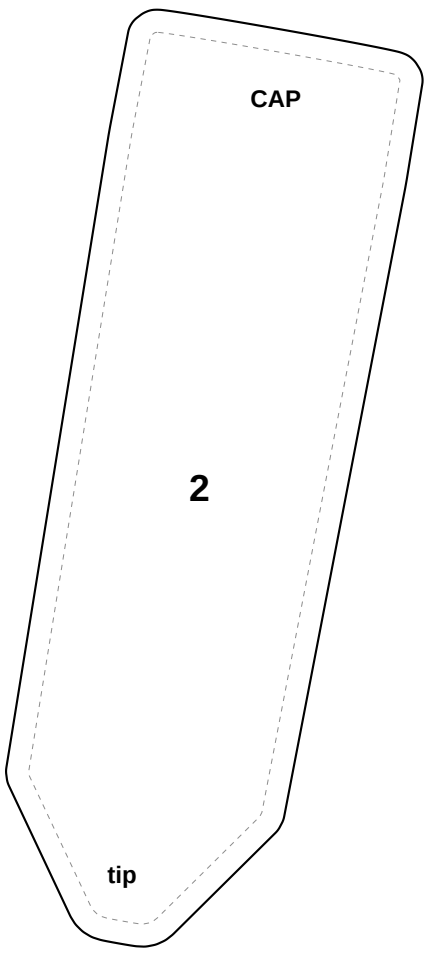

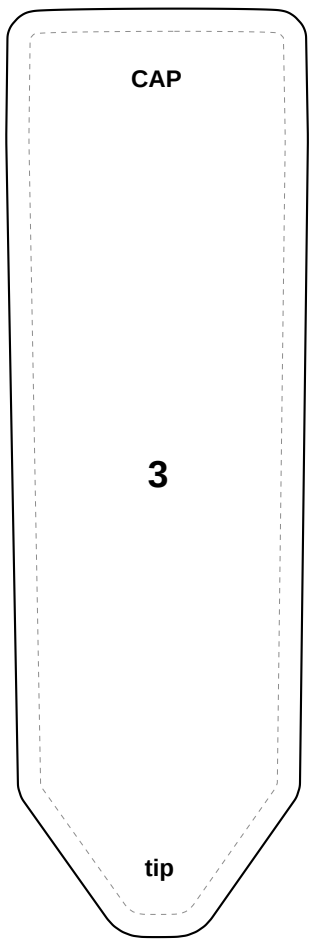

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L02 = sim seed 2 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.

MAT FRONT-RIGHT CORNER

TRIM >

BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

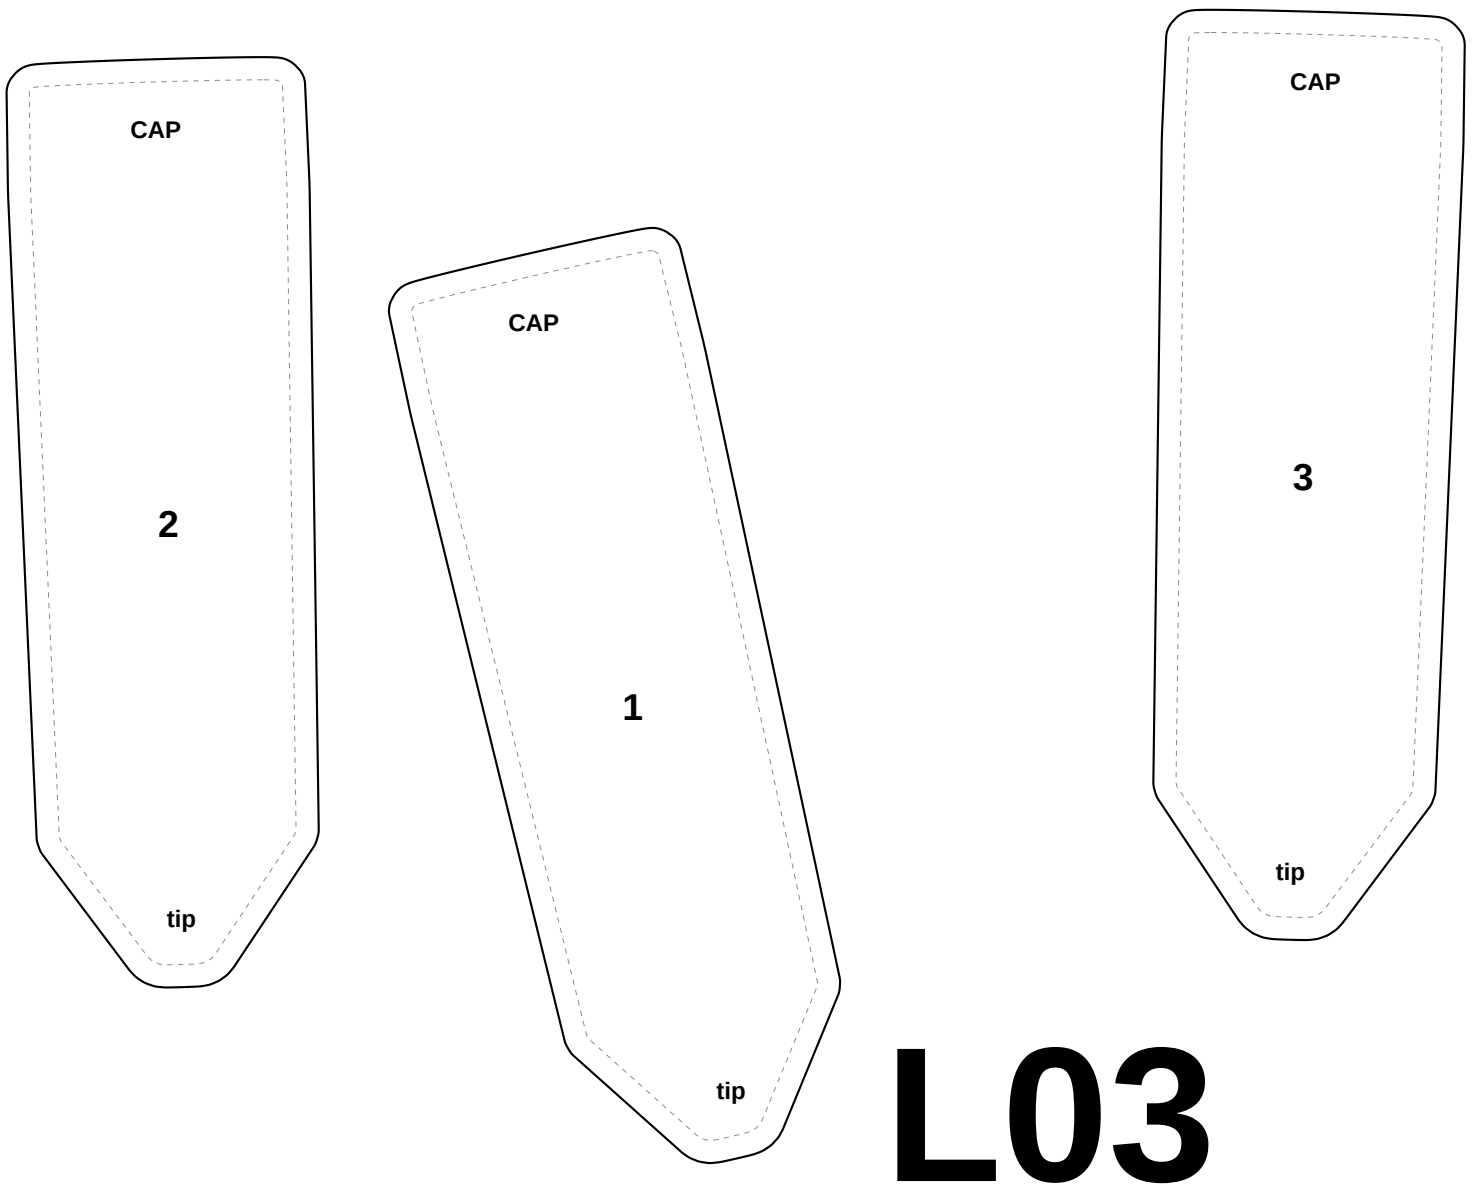

L03

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L03 = sim seed 3 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


BACK WALL ^ (caps this way)


TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L04

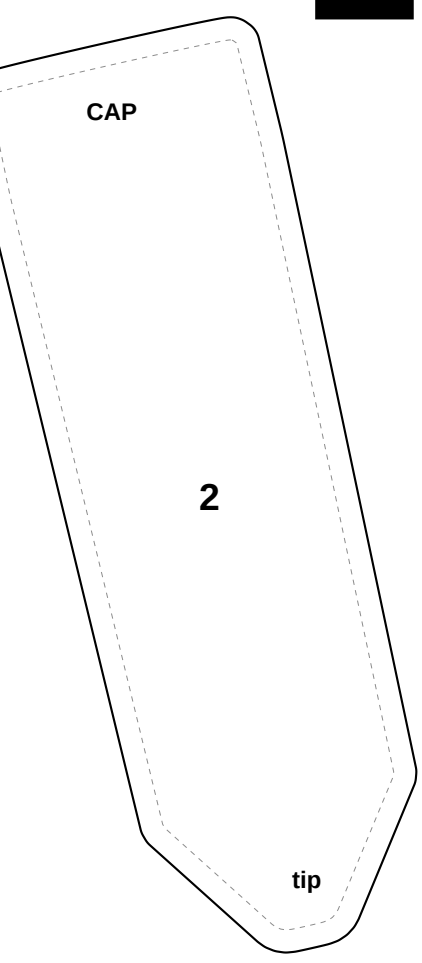

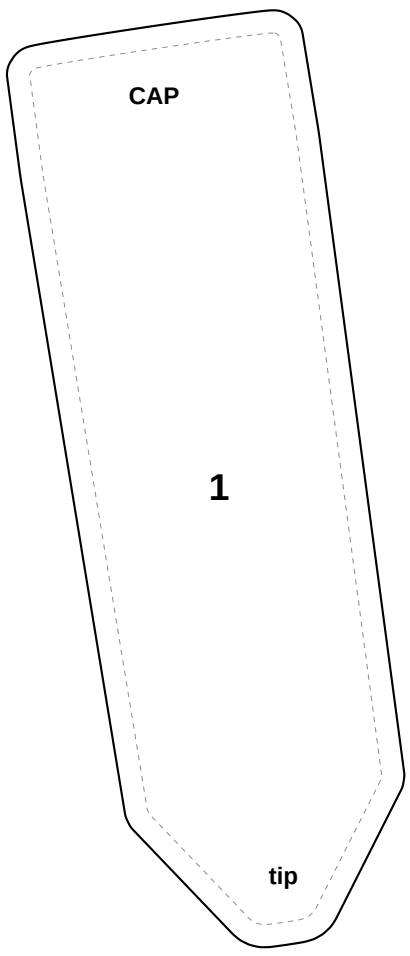

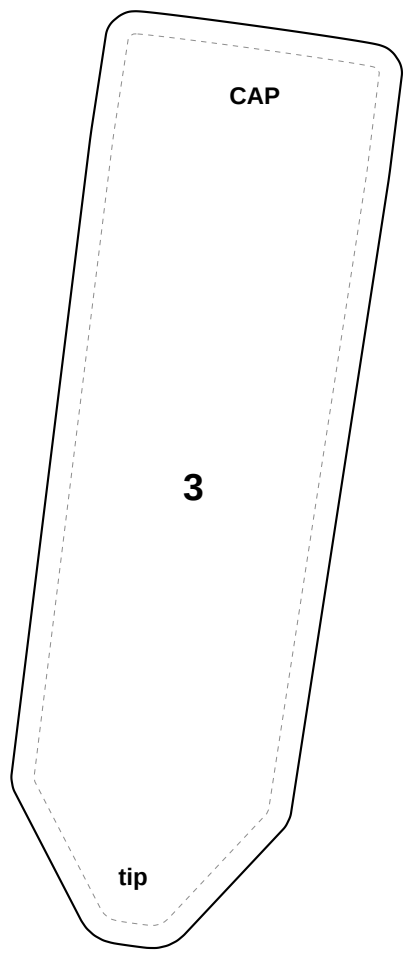

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L04 = sim seed 4 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


BACK WALL ^ (caps this way)

TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

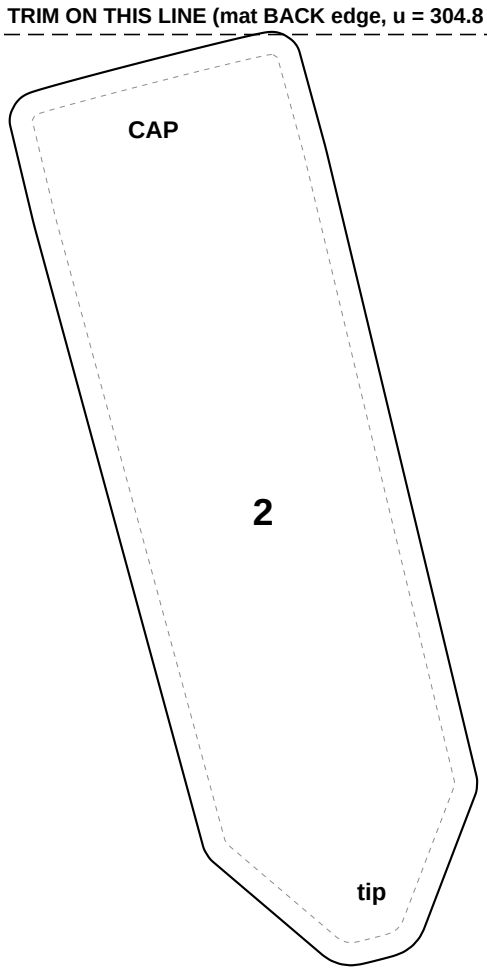

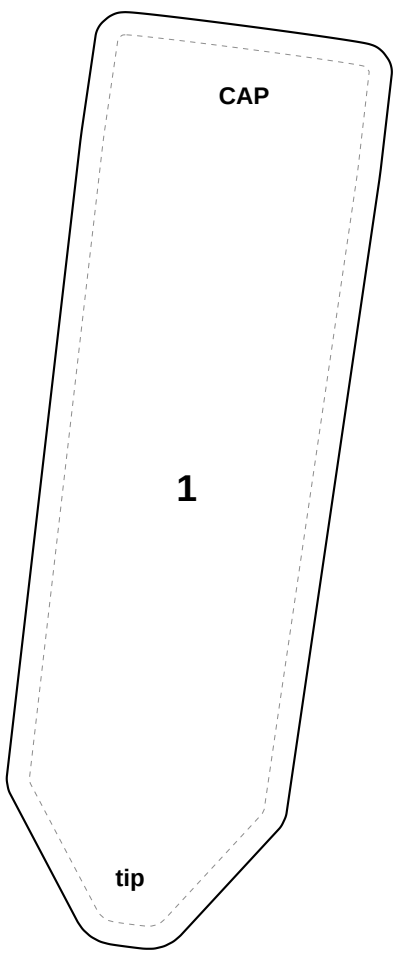

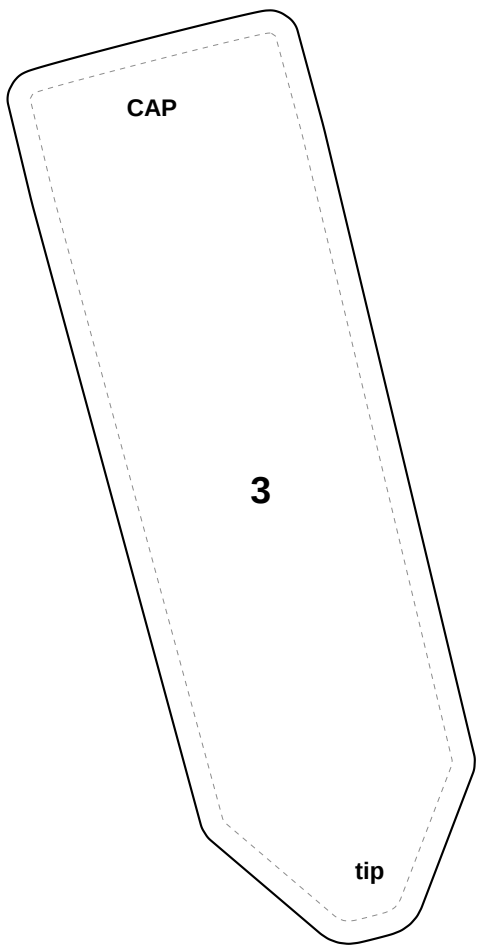

L05

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the back trim line: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L05 = sim seed 5 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


BACK WALL ^ (caps this way)

TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L06

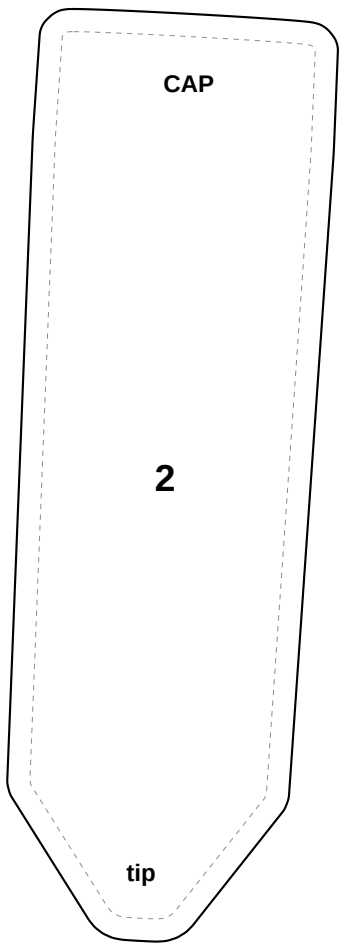

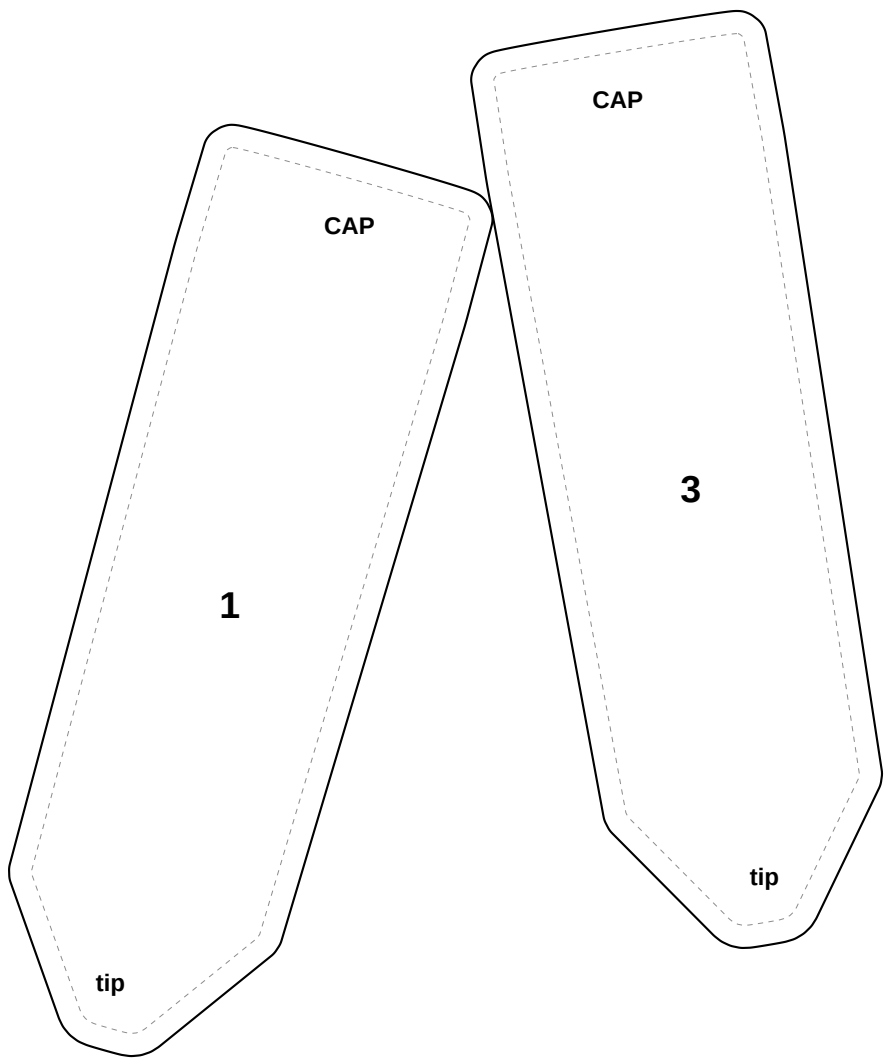

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: windows 1 and 3 touch at the caps: cut them as one opening.
Windows = sim vial outline (grey dashes) + 3 mm.
L06 = sim seed 6 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L07

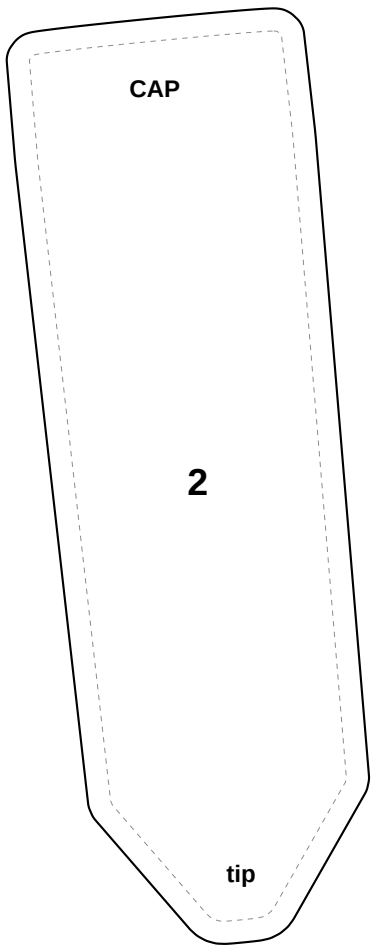

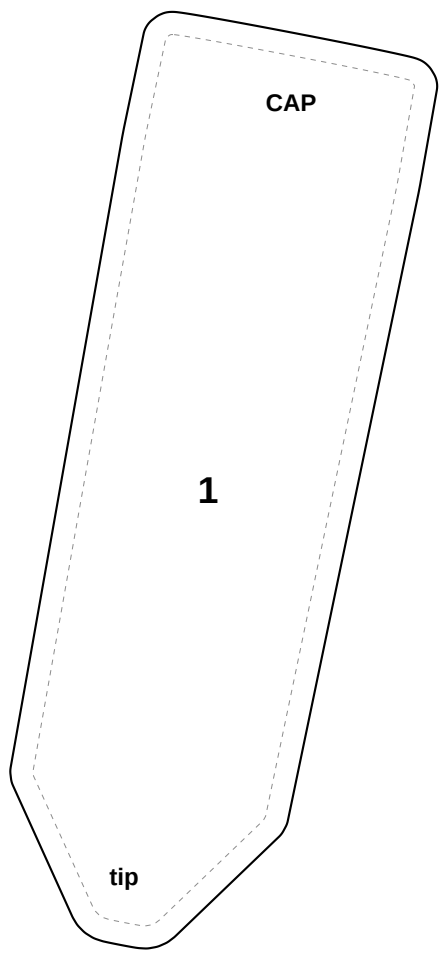

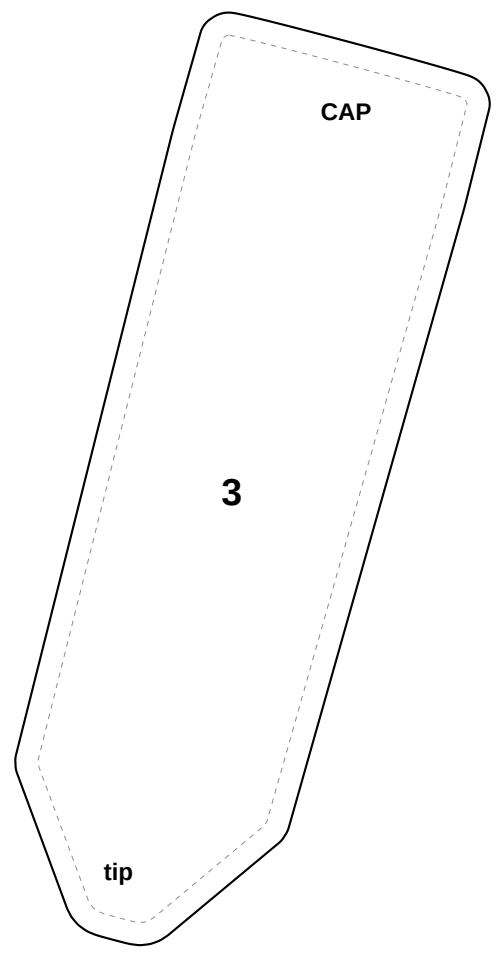

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L07 = sim seed 7 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L08

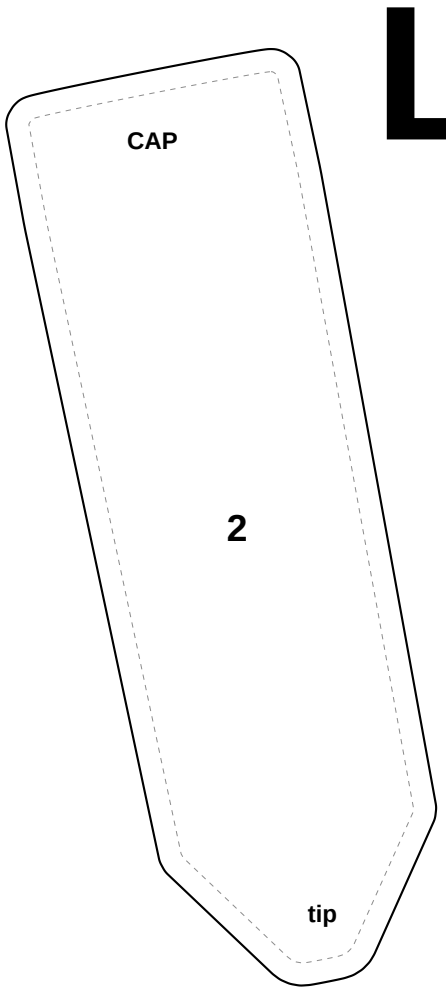

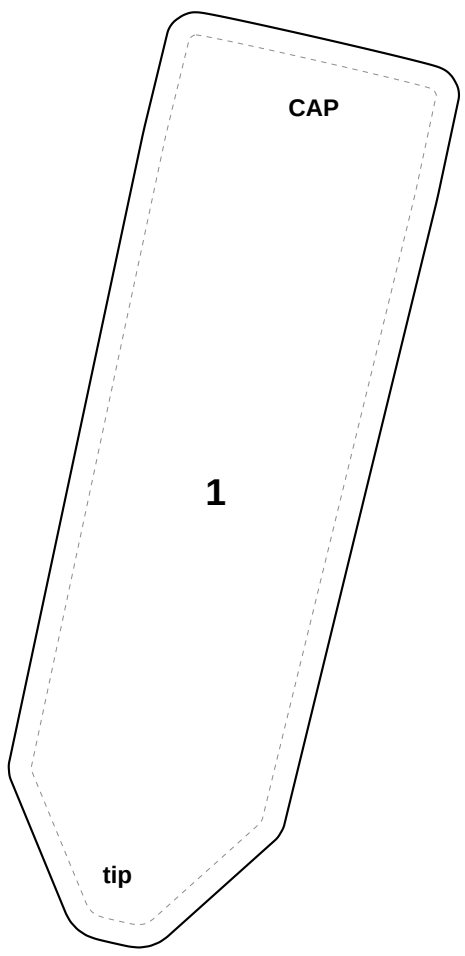

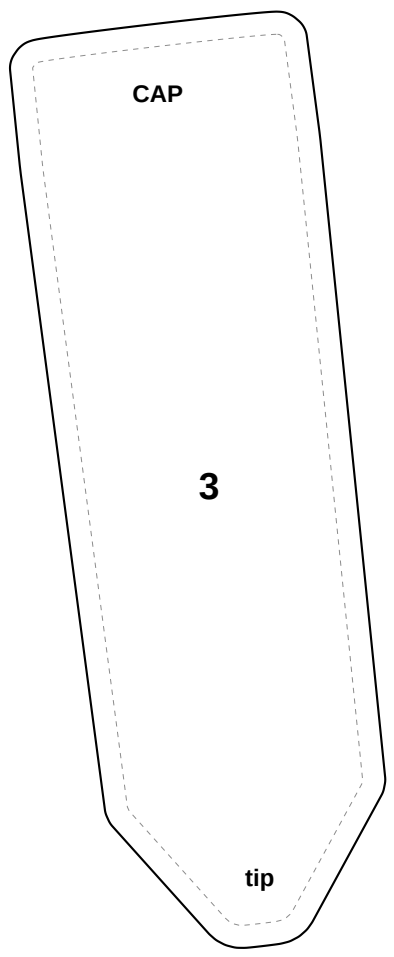

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L08 = sim seed 8 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L09

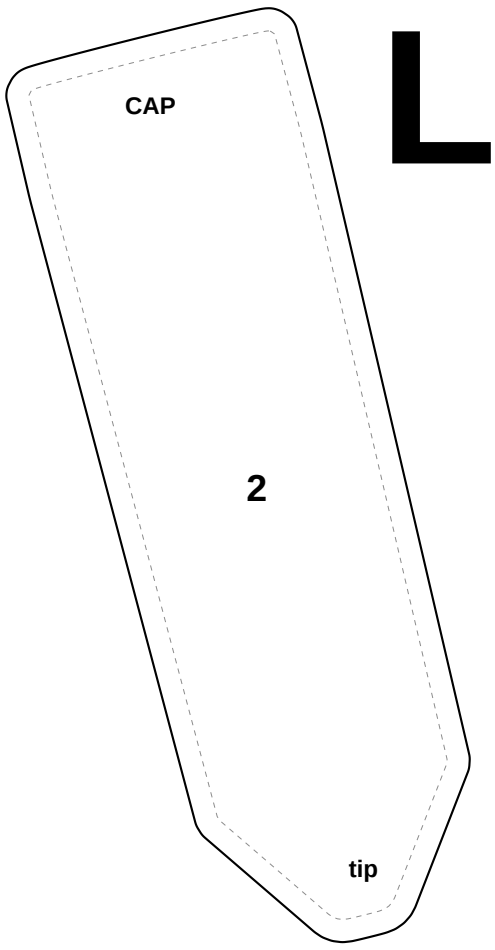

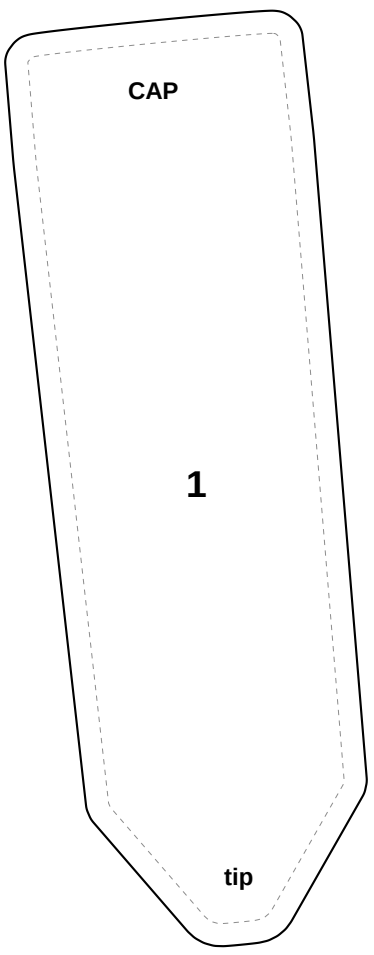

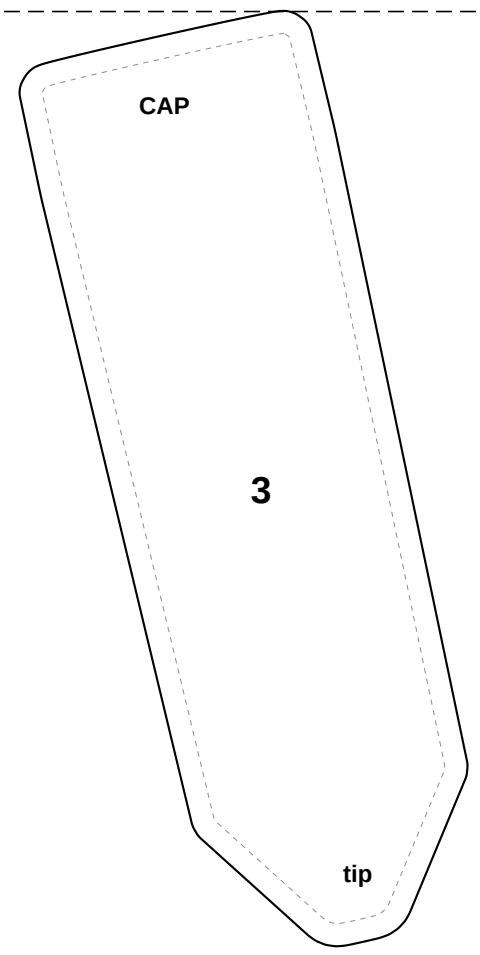

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 3 reaches the back trim line: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L09 = sim seed 9 | set A | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L00

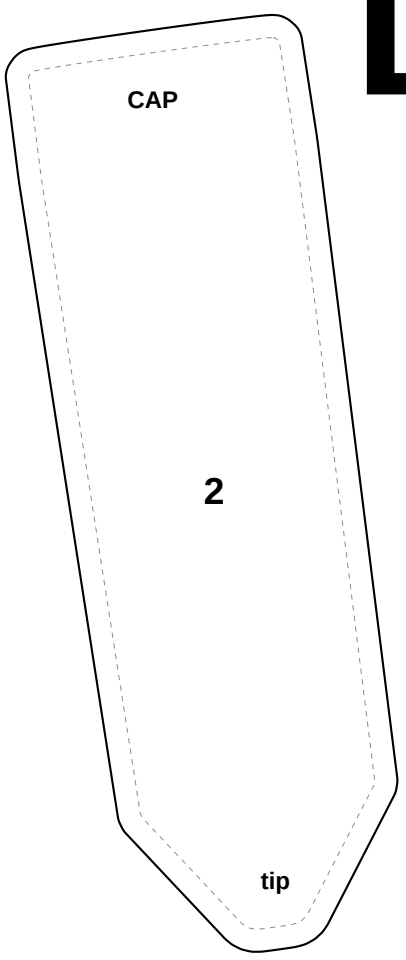

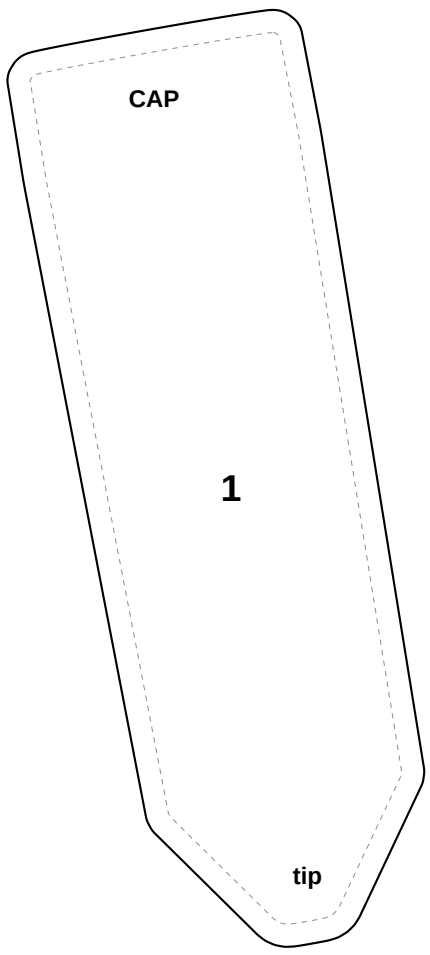

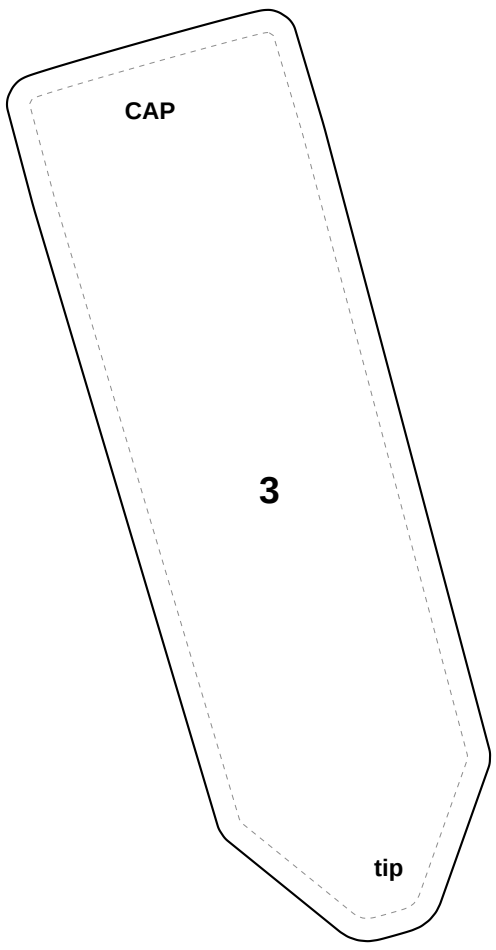

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L00 = sim seed 0 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

MAT FRONT-RIGHT CORNER


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.

BACK WALL ^ (caps this way)

TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L01

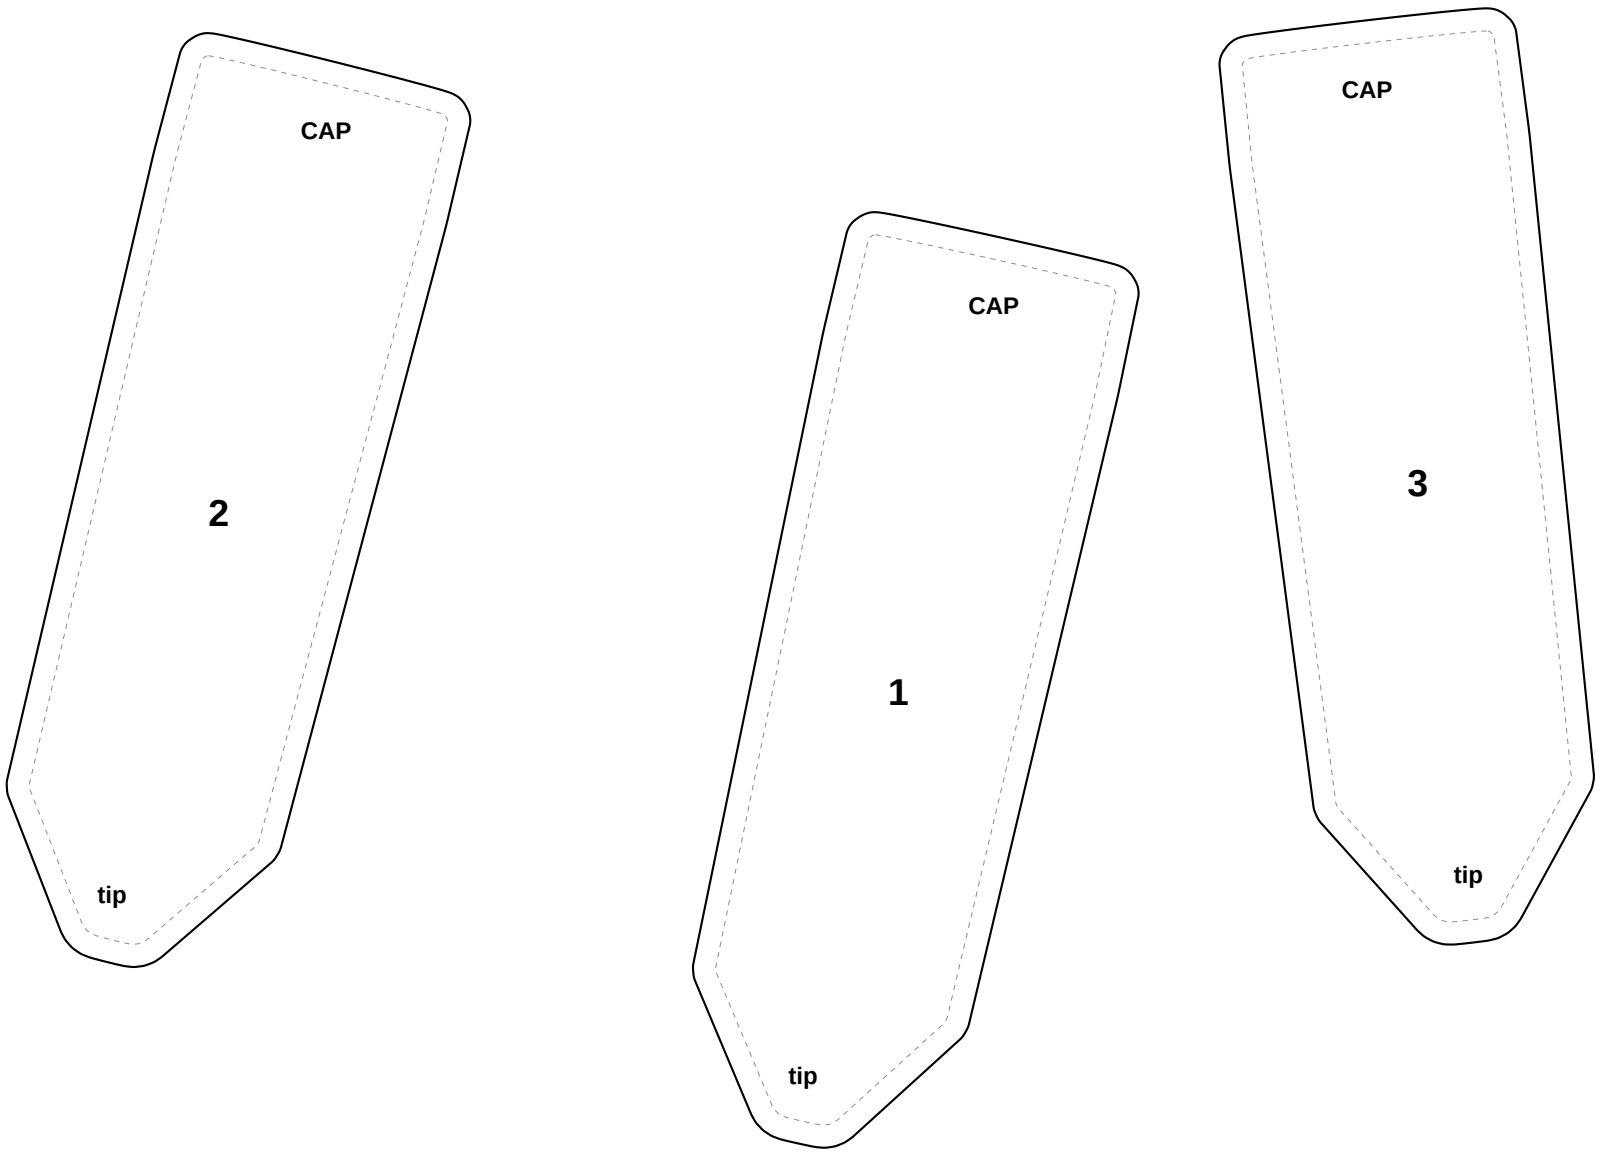

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L01 = sim seed 1 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


BACK WALL ^ (caps this way)


TRIM >

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L02

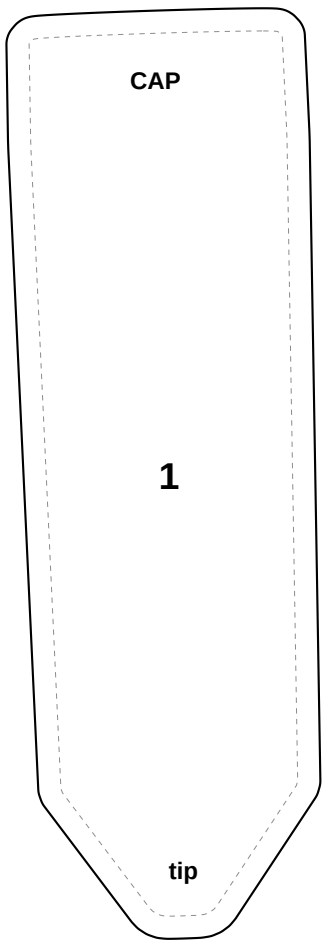

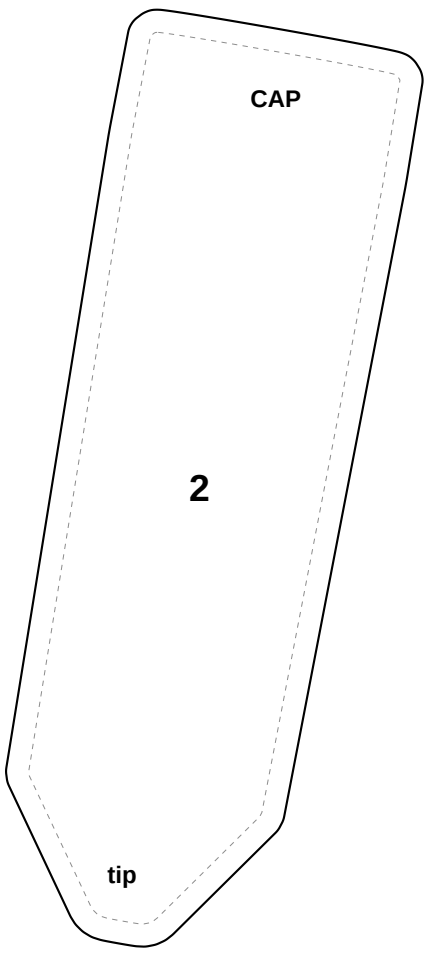

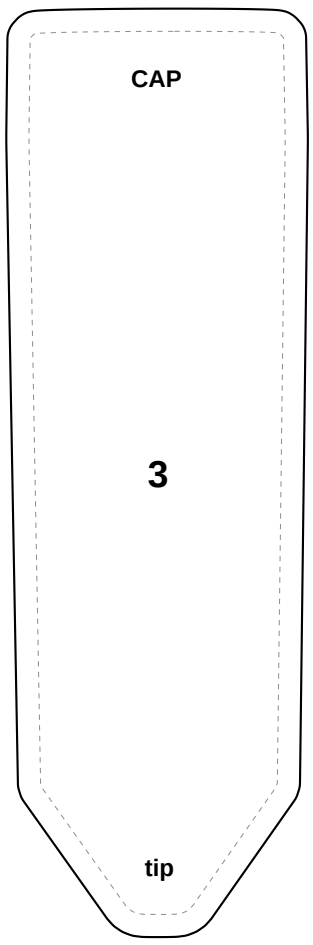

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L02 = sim seed 2 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.

MAT FRONT-RIGHT CORNER

TRIM >

BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

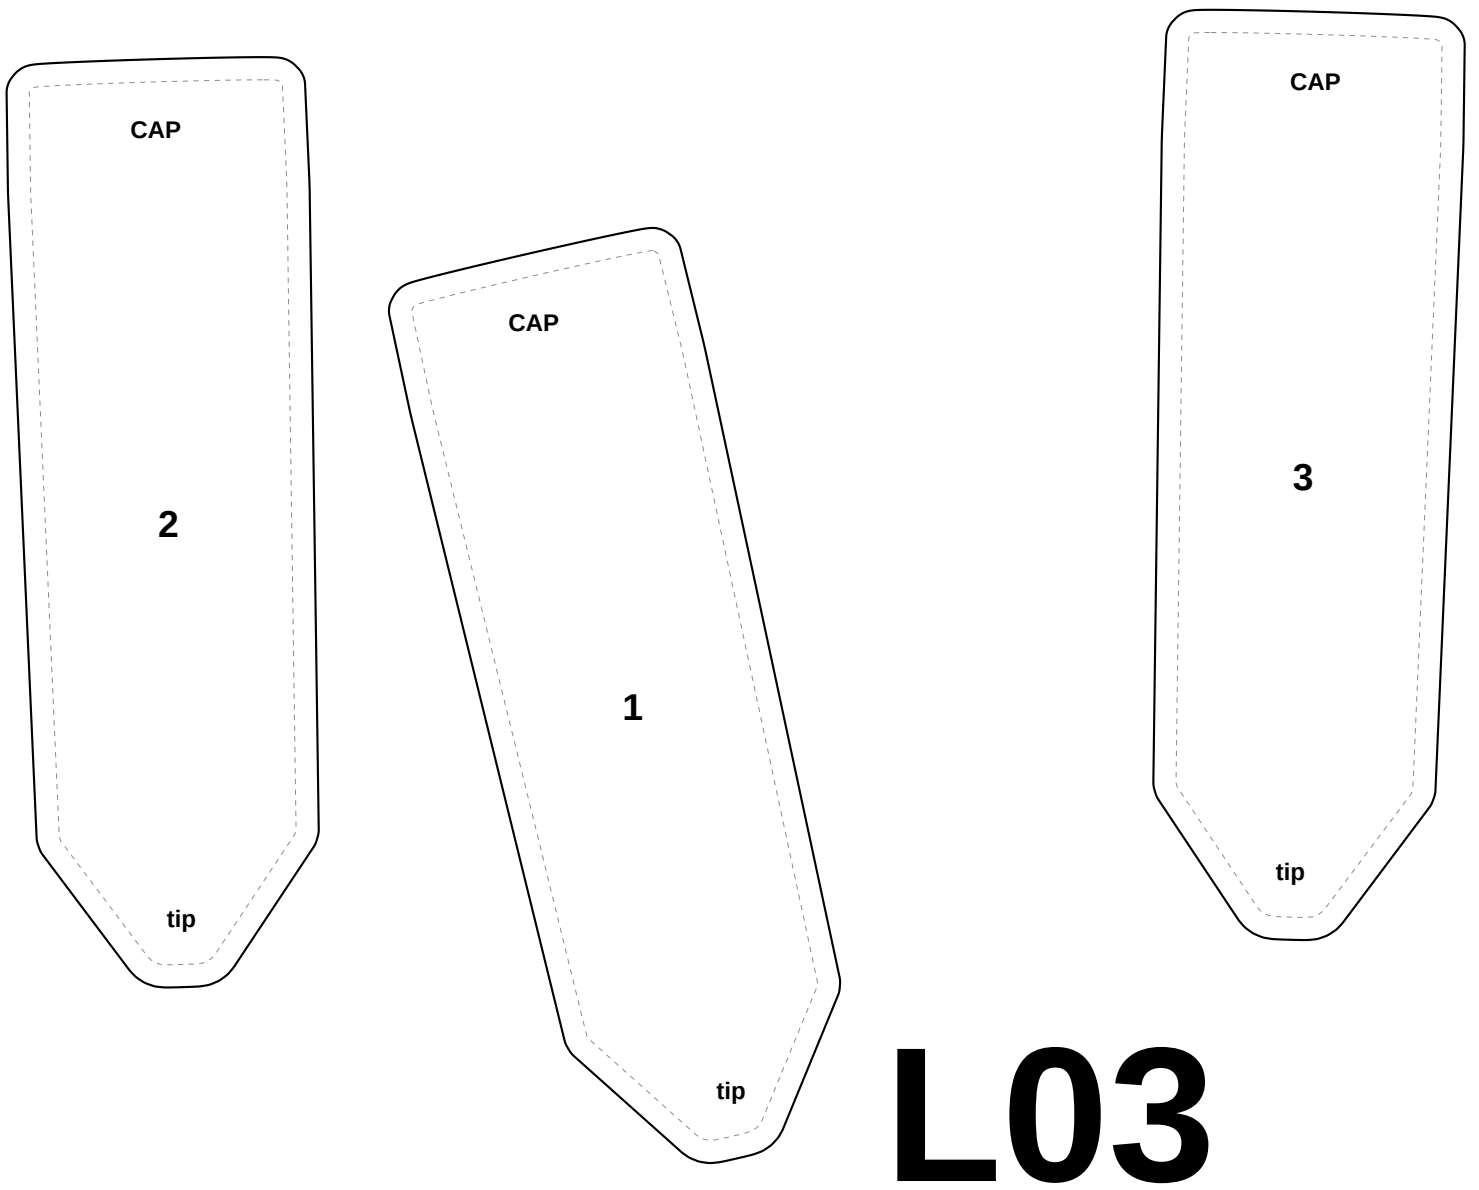

L03

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L03 = sim seed 3 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L04

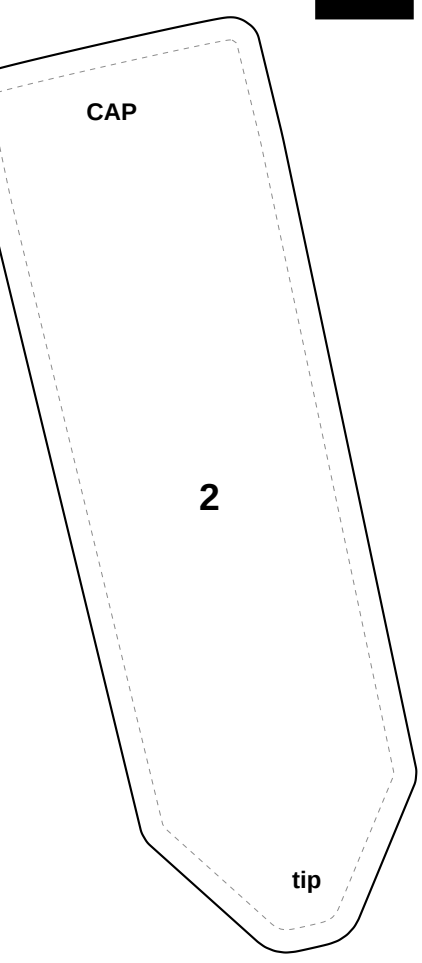

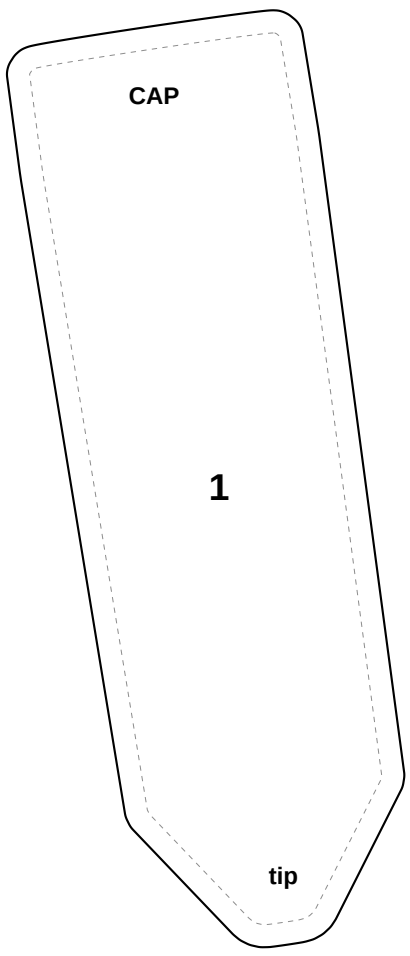

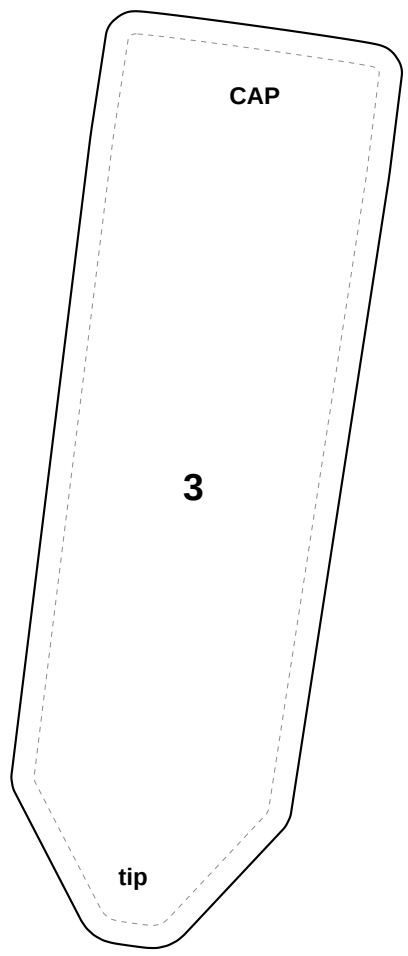

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L04 = sim seed 4 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)


TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >

BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

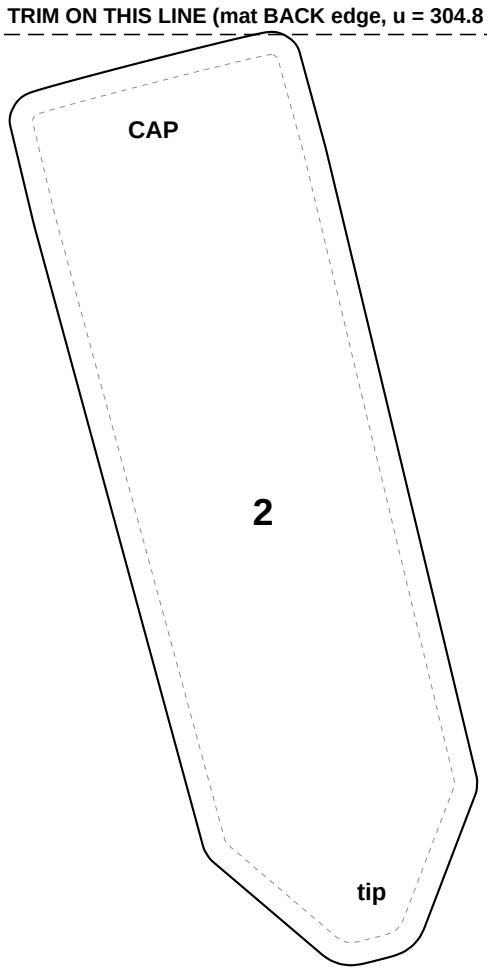

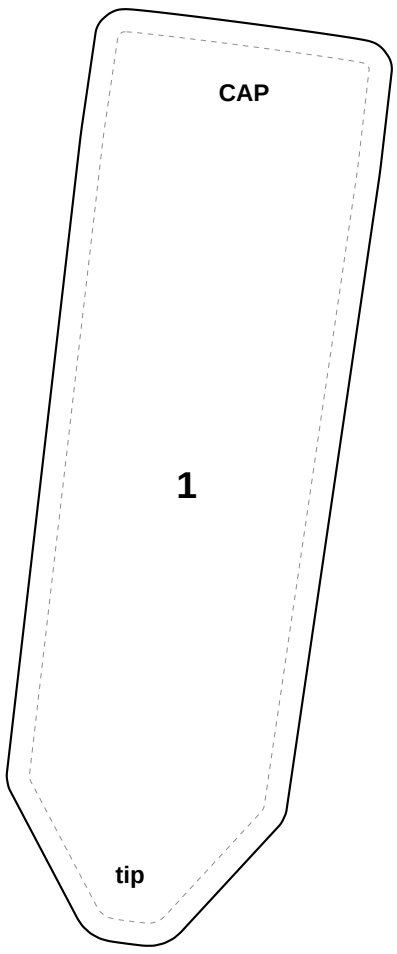

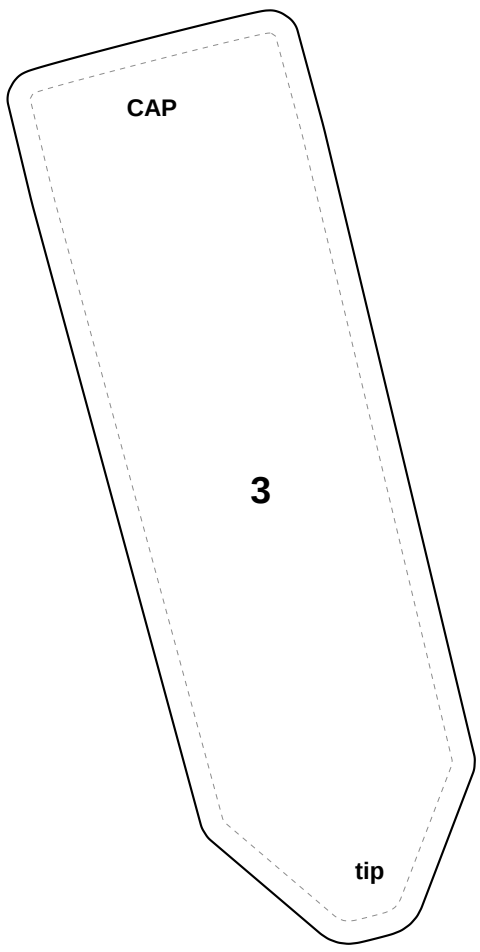

L05

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the back trim line: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L05 = sim seed 5 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >

BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L06

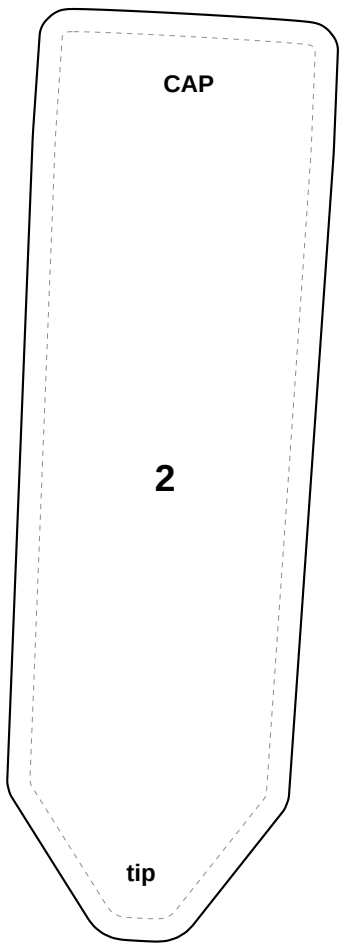

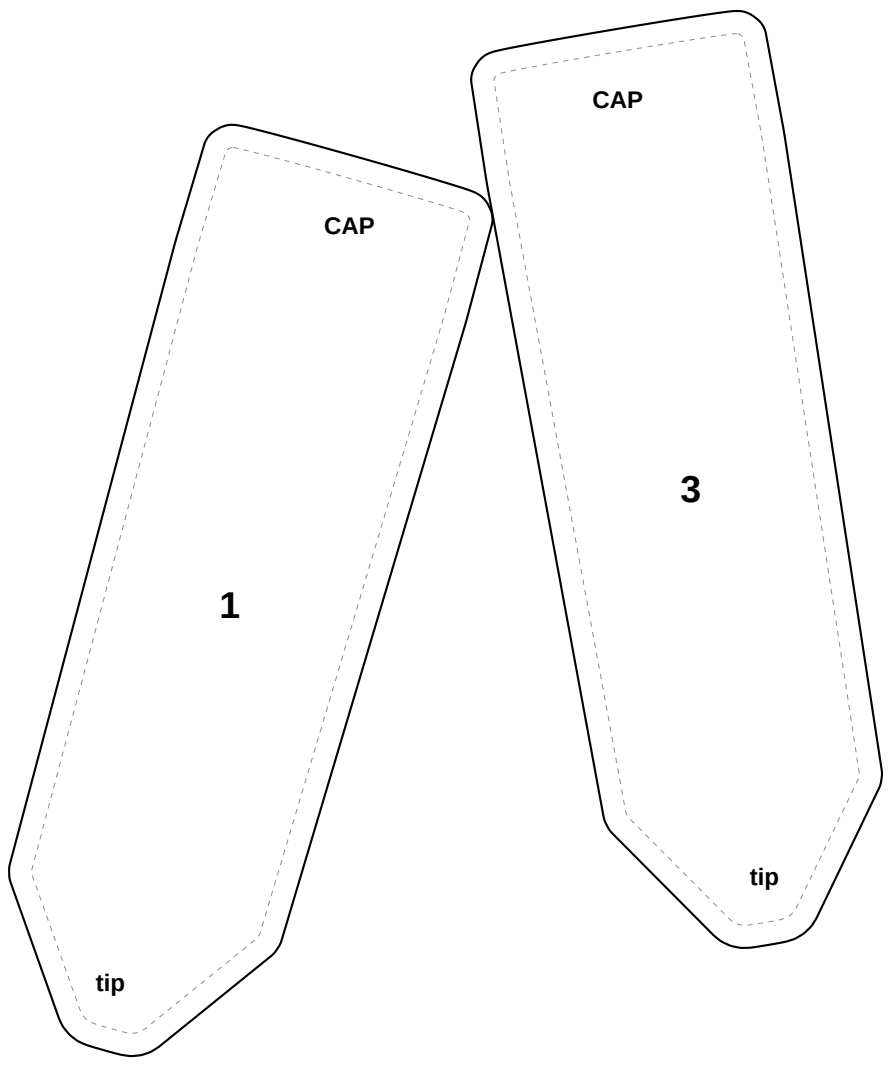

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: windows 1 and 3 touch at the caps: cut them as one opening.
Windows = sim vial outline (grey dashes) + 3 mm.
L06 = sim seed 6 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L07

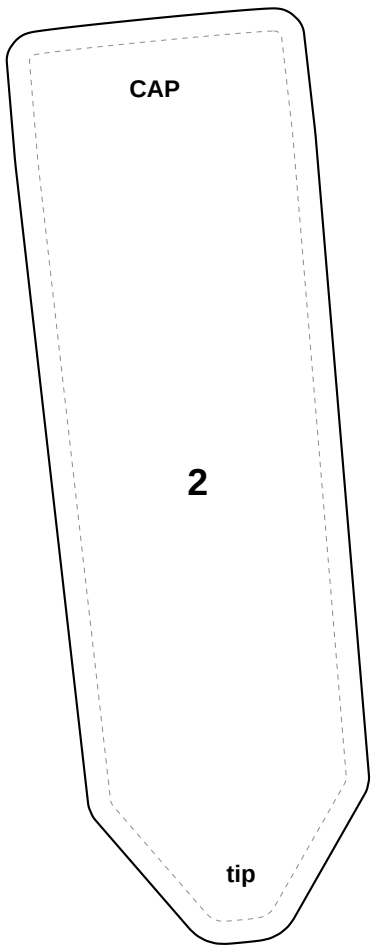

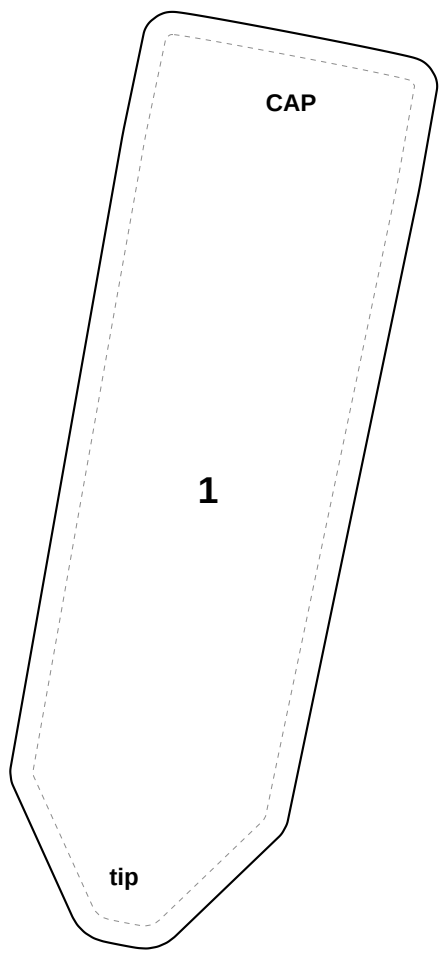

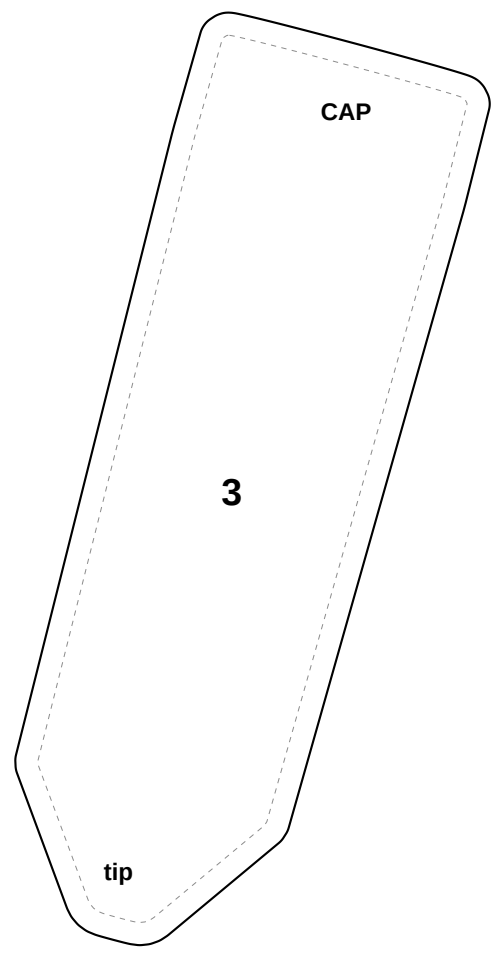

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

Windows = sim vial outline (grey dashes) + 3 mm.
L07 = sim seed 7 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L08

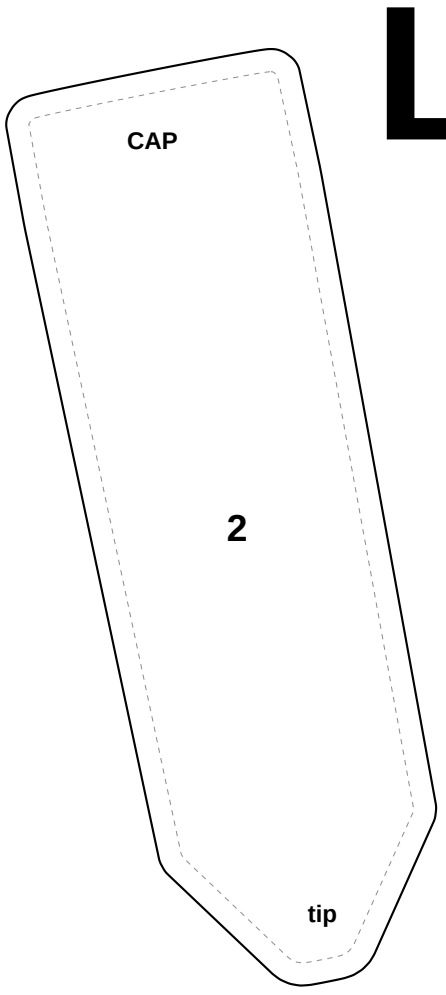

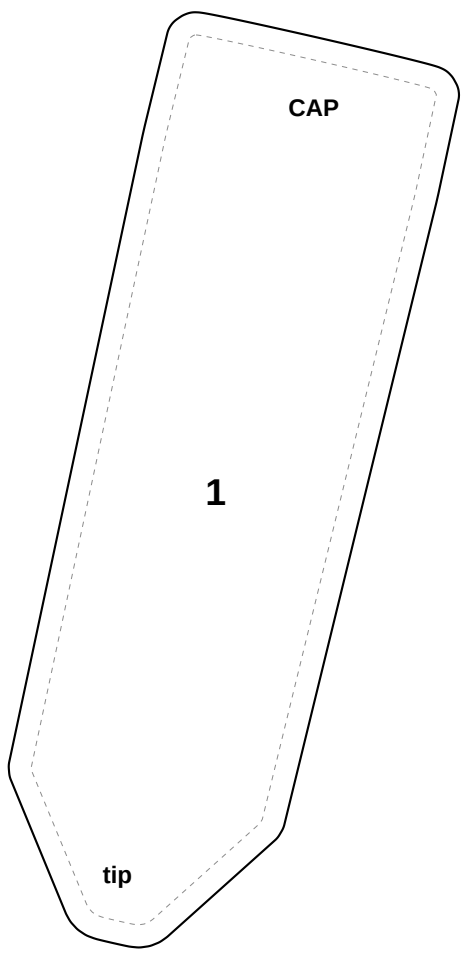

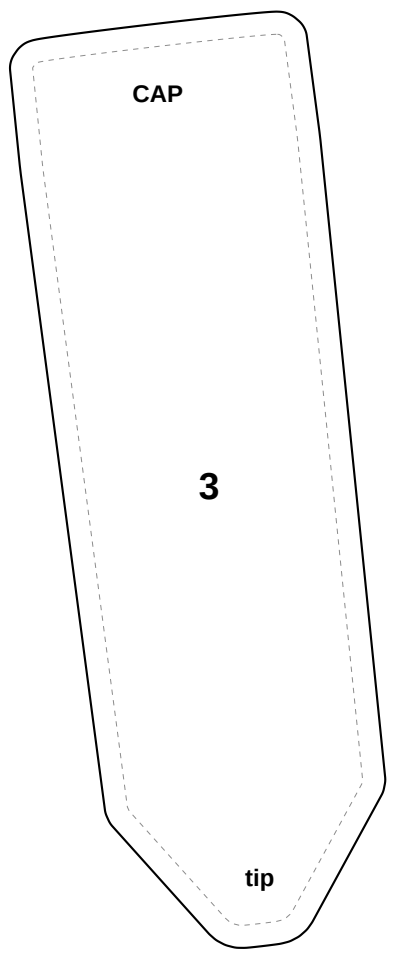

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 2 reaches the LEFT paper edge: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L08 = sim seed 8 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.


MAT FRONT-RIGHT CORNER


TRIM >


BACK WALL ^ (caps this way)

TRIM ON THIS LINE (mat BACK edge, u = 304.8 mm) so the sheet clears the back wall.

L09

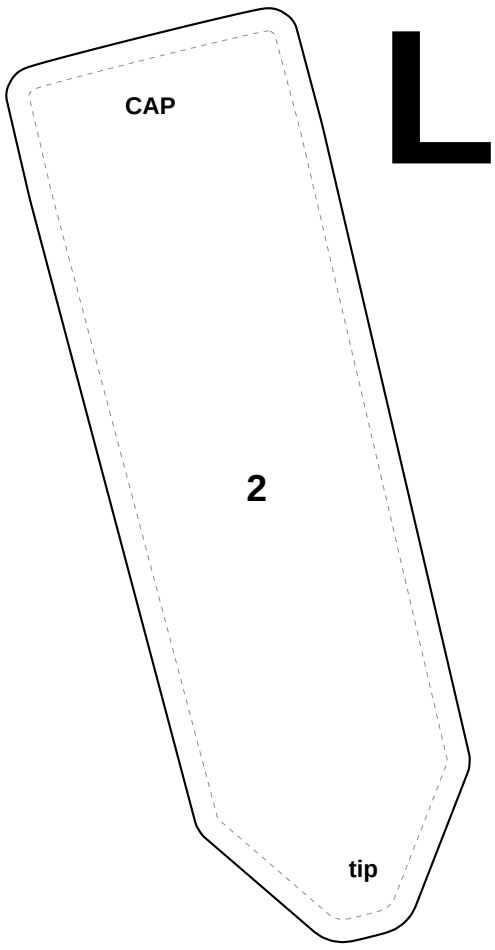

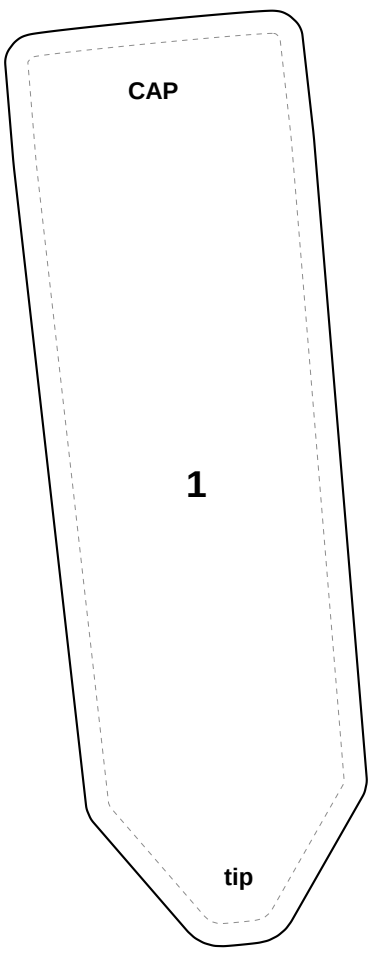

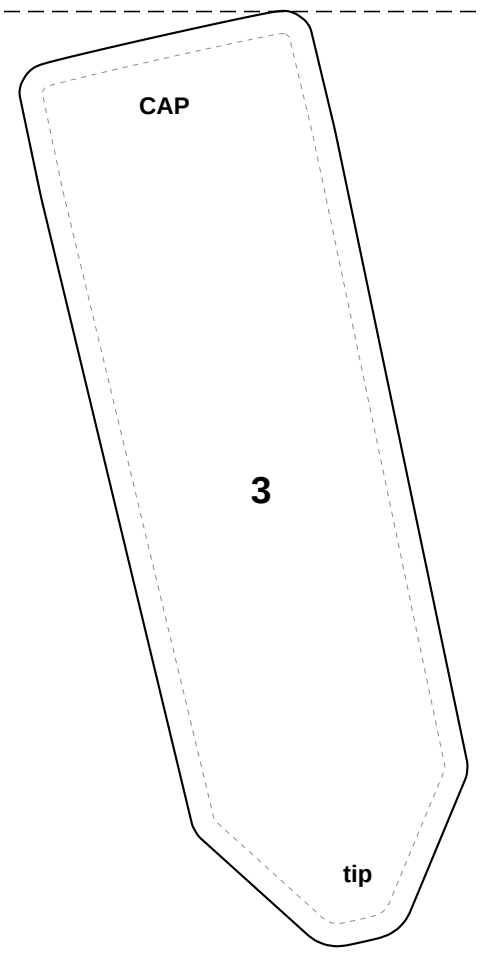

1. Trim the 3 dashed lines (right, front, back).
2. Cut corner on the mat's FRONT-RIGHT corner,
   cut edges flush on both mat edges.
3. Vials in windows, cap at CAP. Lift the sheet straight up.
   Remove it before every trial.

NOTE: window 3 reaches the back trim line: cut it open to the edge.
Windows = sim vial outline (grey dashes) + 3 mm.
L09 = sim seed 9 | set B | tabloid | ff78d3ce0f

CHECK FIRST: this line = 100.0 mm (print at 100%)

TRIM ON THIS LINE (mat FRONT edge). After both trims, this corner = the mat's FRONT-RIGHT corner.

MAT FRONT-RIGHT CORNER