



Cadence Tutorial

for Cadence version 6.1

Inkwon Hwang Feb, 2010


1. Create Library	2
2. Schematic	3
A. Create a cell view	3
B. Draw a schematic	<u>4</u>
3. Run Spectre simulation	9
A. Launch ADE (Analog Design Environment) L	<u> </u>
4. Layout	10
A. Create a layout	10
A. Create a layout B. Add an instance - nmos	<u></u> 11
C. Add more instances – pmos, ptap, ntap, and m1_ploy	
D. Draw metal1	
E. Run DRC	14
E. Run D <mark>RC</mark> F. Add pins	16
G. Extract	
H. Run LVS	
I. Run Spectre simulation	

1. Create Library

A. Tools → Library Manager




B. File \rightarrow New \rightarrow Library

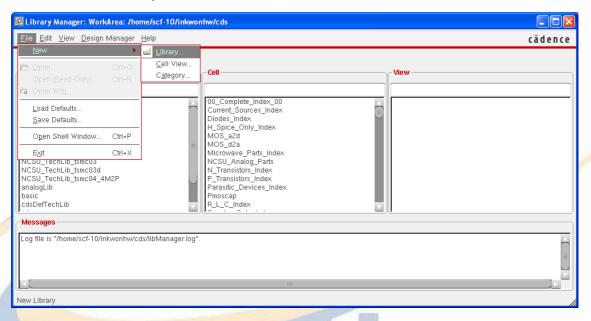


C. Give a name and attach it to a technology library



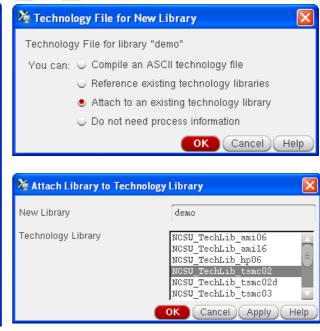

2. Schematic


A. Create a cell view

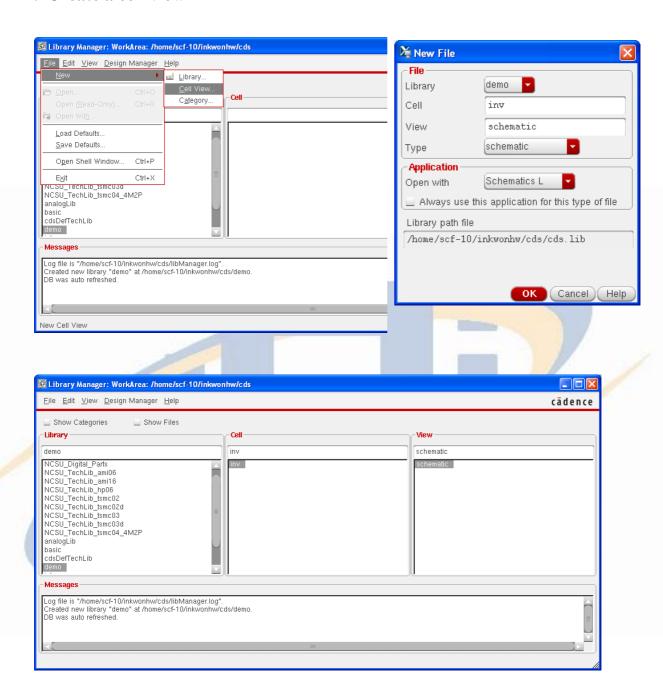


B. Draw a schematic


i. Add instances – pmos

You can modify Width of transistors. Don't modify length unless you have a special purpose. You should select a NCSU_Analog_Parts library.

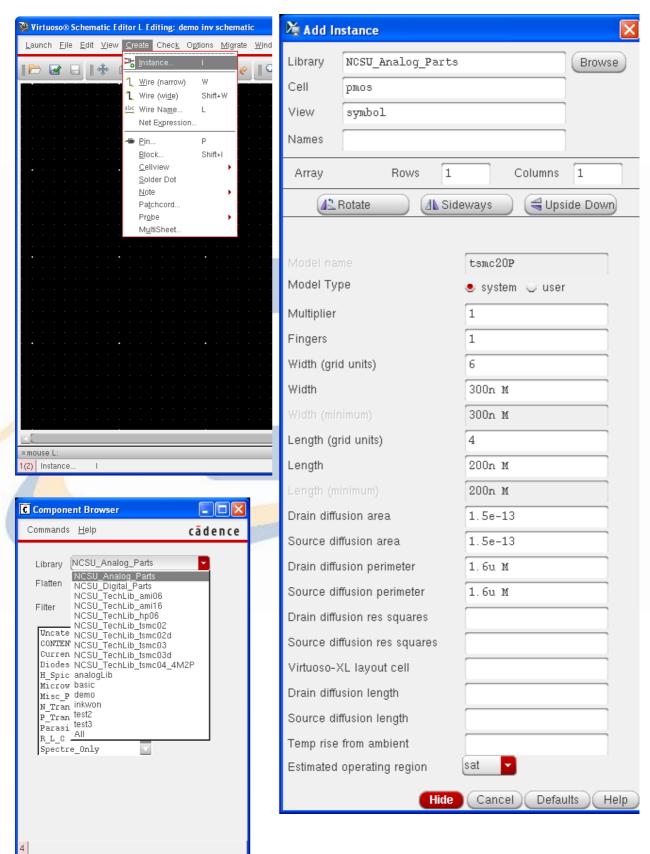


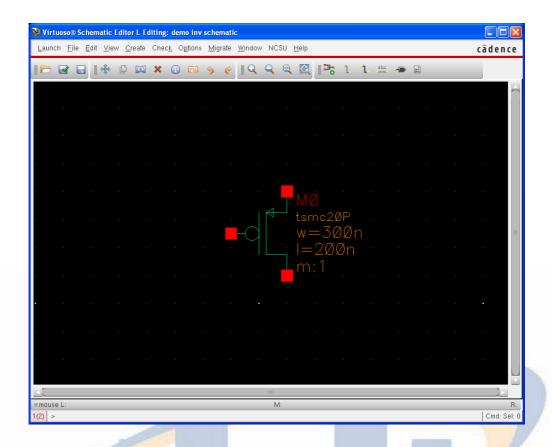


ii. Add instances – nmos, vdd, and gnd

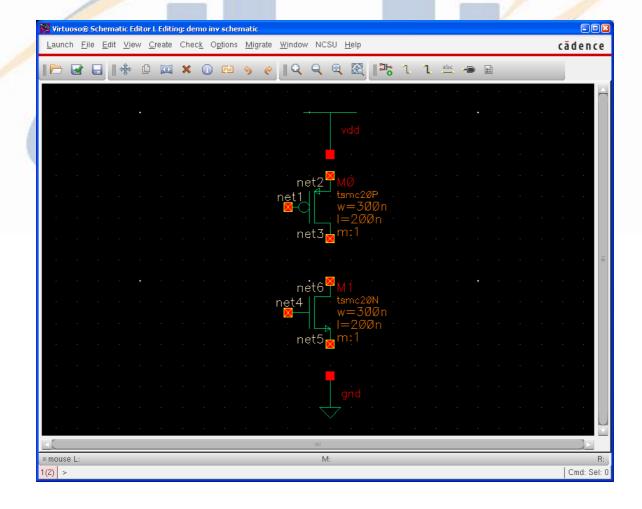


iii. Add wires: Create → Wire

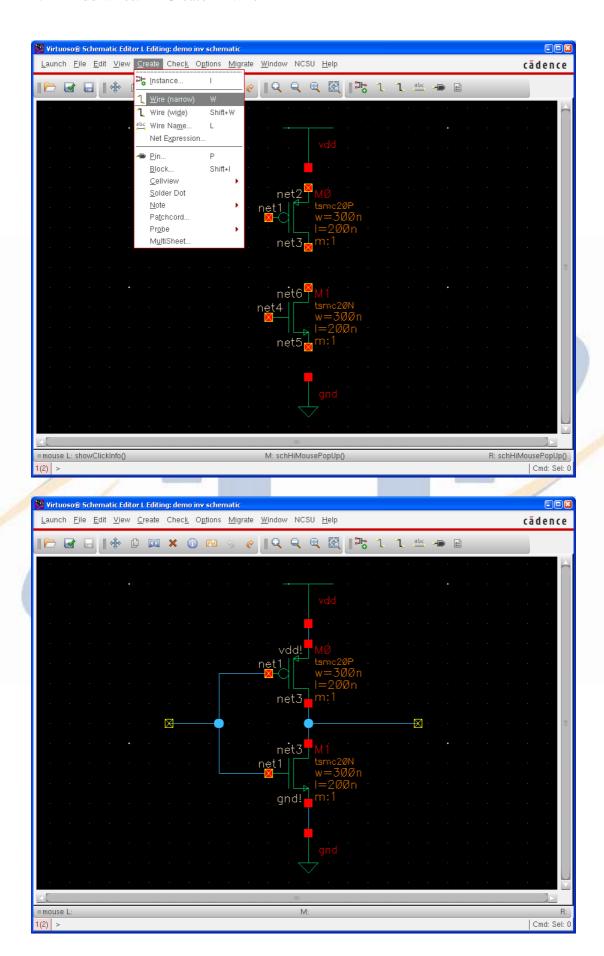


iv. Add pins: Create → Pin

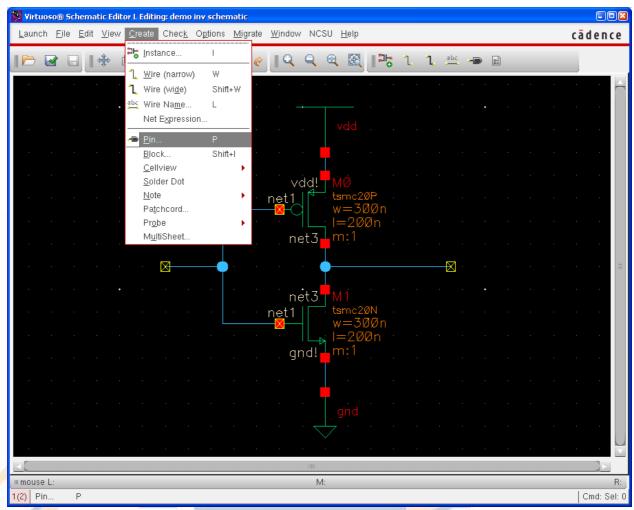

We have for different types of direction. For schematics, we only use two types, input and output. InputOutput type is for supply changes, and it is necessary only for layout. We will discuss about this later.

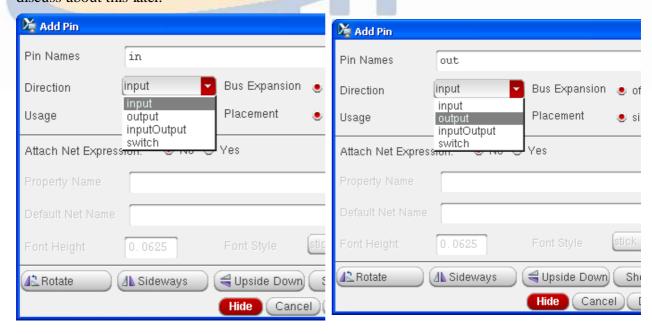

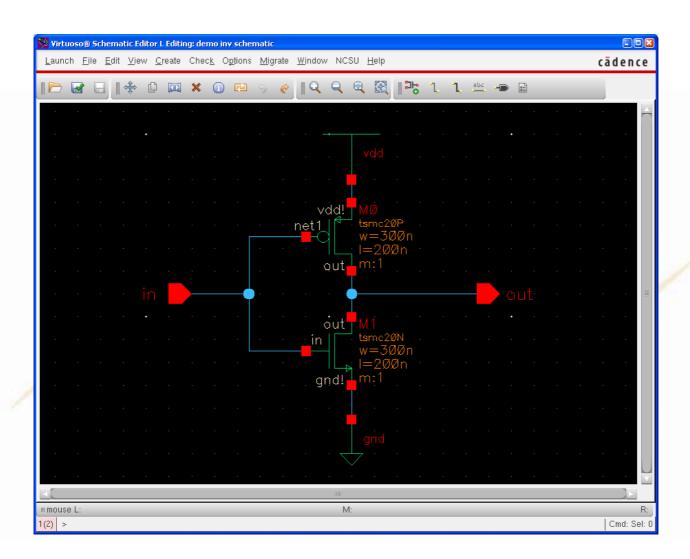


Now, we completed a schematic design. Let's move on the next phase.


3. Run Spectre simulation

We will run spectre simulation. This section is for **both** schematics and layouts. I will show an example for a schematic. You can do the same thing for a layout.

A. Launch ADE (Analog Design Environment) L

Launch → ADE L

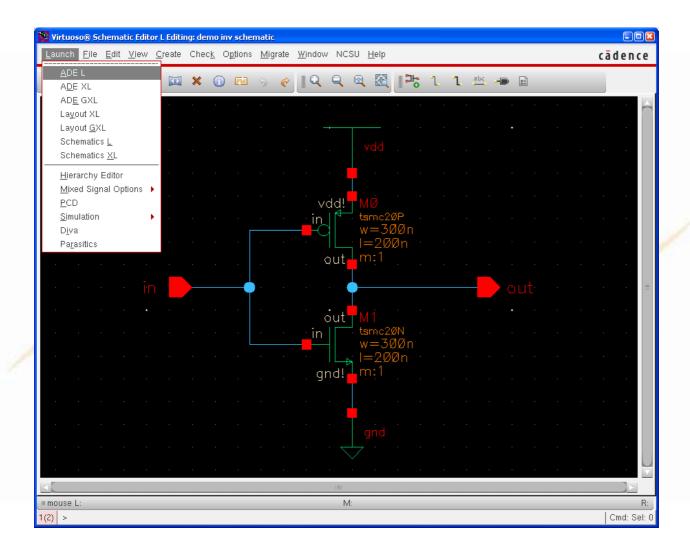

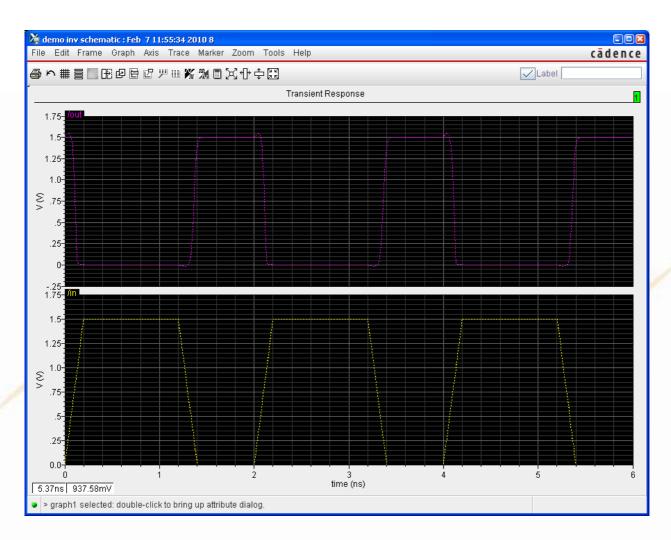


If you see a waveform like above picture, you followed every step properly. Good job!.

4. Layout

It's time to draw layout. Schematics are for verifying your design very roughly. They don't consider physical features like parasitic capacitances. After determining your design variables by schematics, you need to draw layouts.

Design flow of layouts is very similar to one of schematics, but it has additional step which is LVS check. It is for check if your layout is identical to the schematic or not. Hence, this step is very important. If your logic doesn't pass this step, you may lose significant points for that.

A. Create a layout

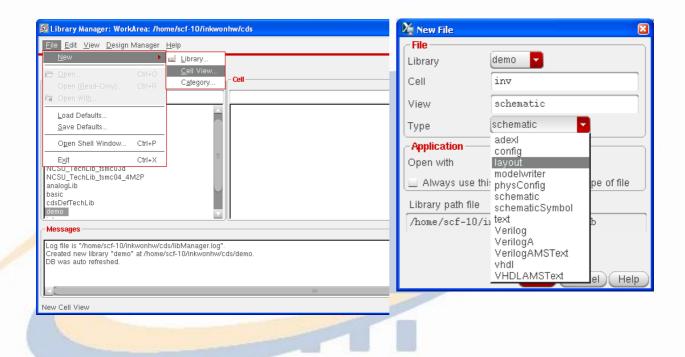


B. Add an instance - nmos

test2

test3

Close

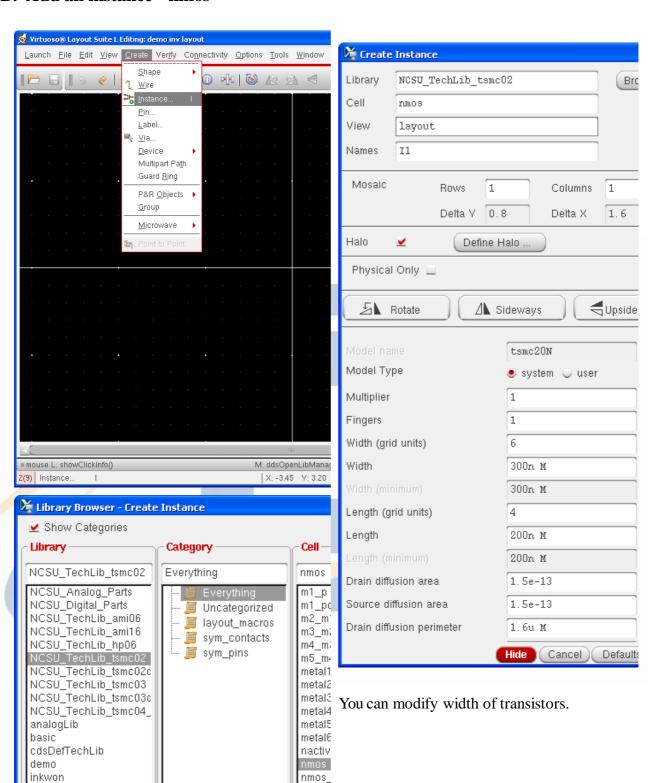


ntap nwell


pactiv pmos

Filters...

C. Add more instances – pmos, ptap, ntap, and m1_ploy

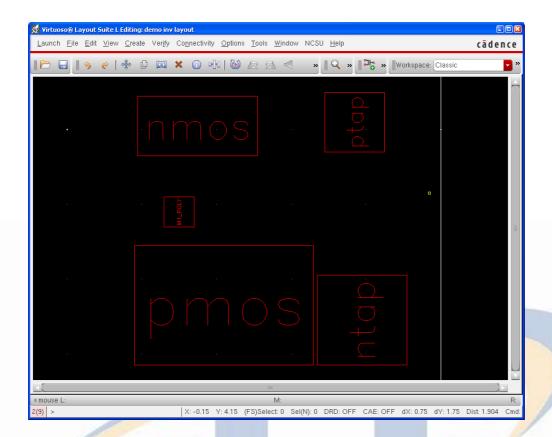

You can select alternate view of a layout. Try 'Shift + f' and 'Ctrl + f'.

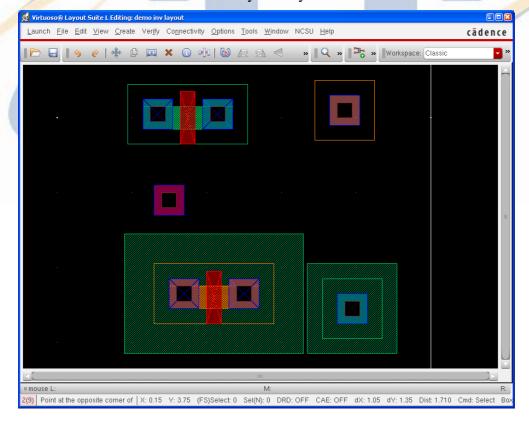


D. Draw metal1

There are few ways for drawing metal, but I recommend you use 'path'. It's quite convenience than others.

Create \rightarrow Shape \rightarrow Path

First of all, you should select metal 1 on LSW window. Default width for metal 1 is 0.3, which means 300nm (3 λ). You can draw metal layer simply by clicking

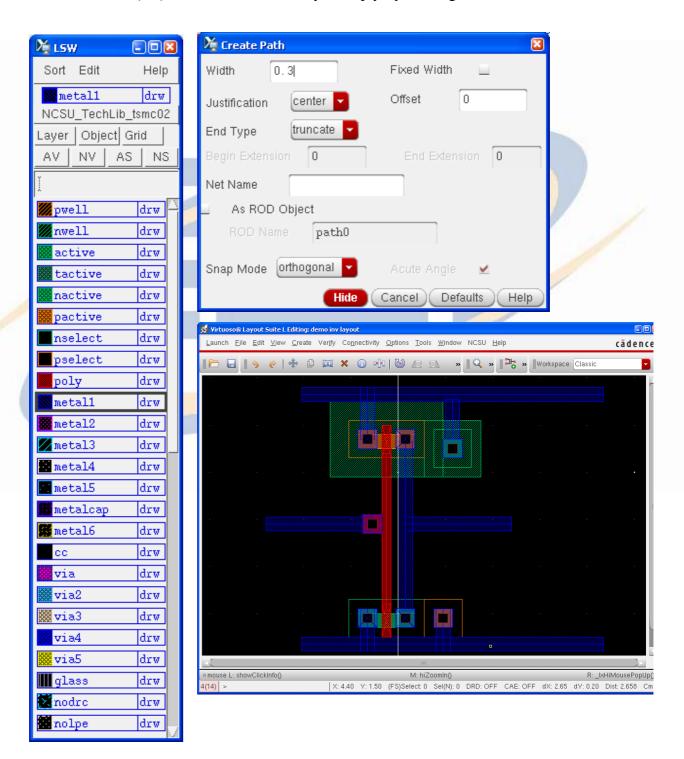

E. Run DRC

This step checks if your layout follows design rules.

Verify → DRC


errors Violated Rules

≡mouse L: showClickInfo()

Total errors found


(SCMOS Rule 7.2) metall spacing: 0.30 um

M: setDRCForm()

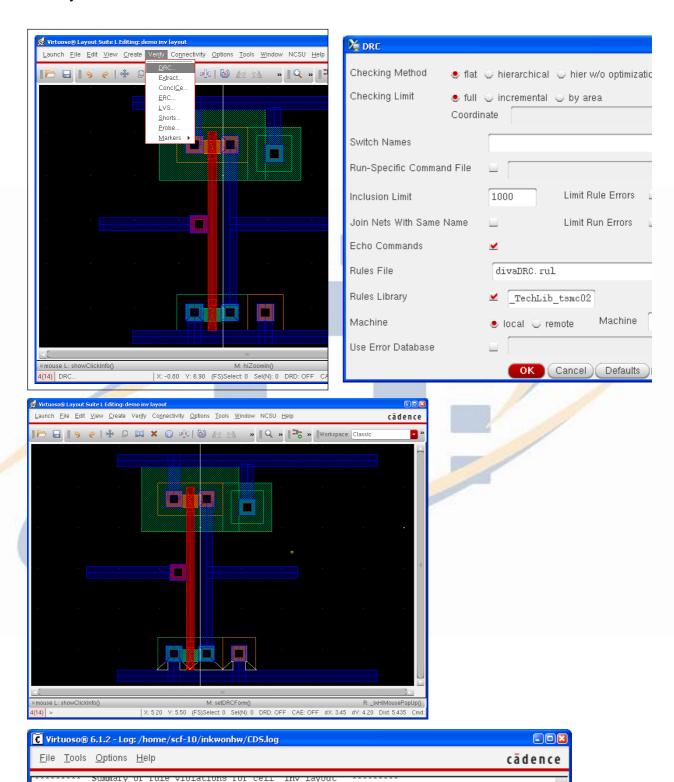

R: _lxHiMousePopUp()

We have five errors. It is because a gnd metal layer is too close to an nmos transistor. After modifying layout, run DRC again.

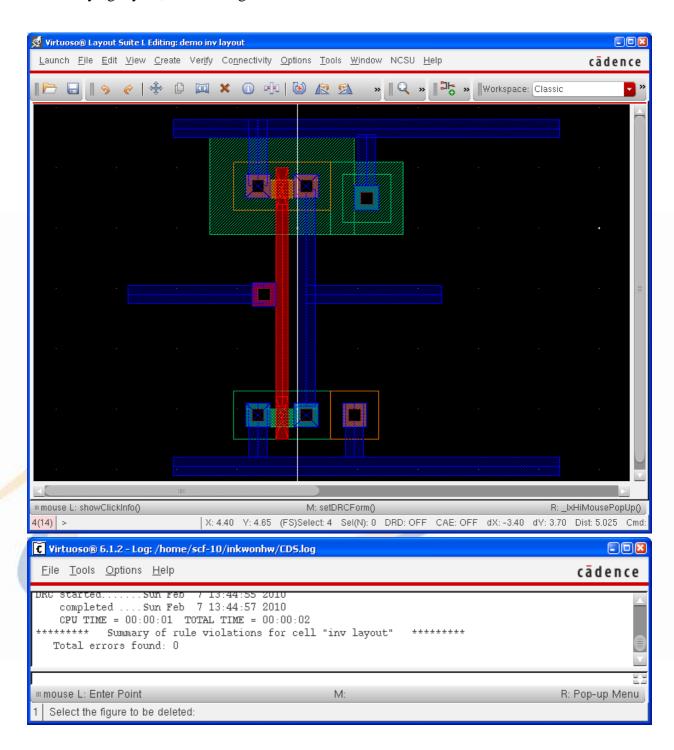



There is no error!!

F. Add pins

We had two pins on a schematic, which are 'in' and 'out'. Pins are for assigning signals to physical device, so we assign voltage level of gnd and vdd by using pins. Hence, we have 4 pins for the layout, which are 'in', 'out', 'gnd!', and 'vdd!'.


Create → Pin

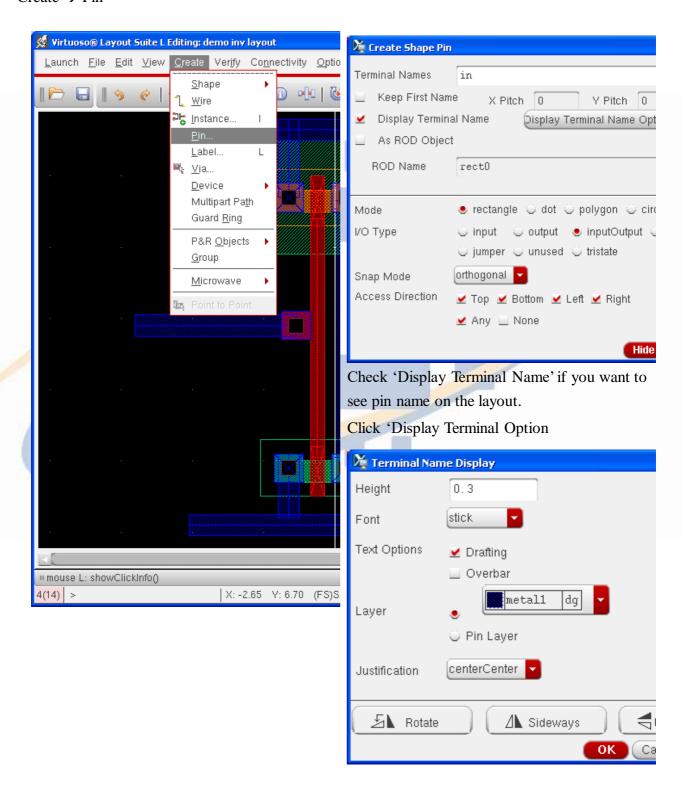

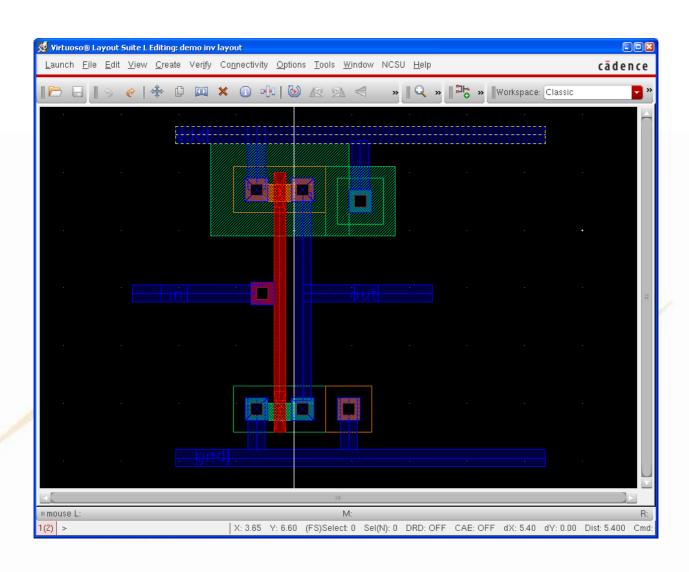

G. Extract

A layout is just a picture. If you need to run simulation using the layout, you should convert it to the other format. It is done by extracting. It's something like compiling a code.

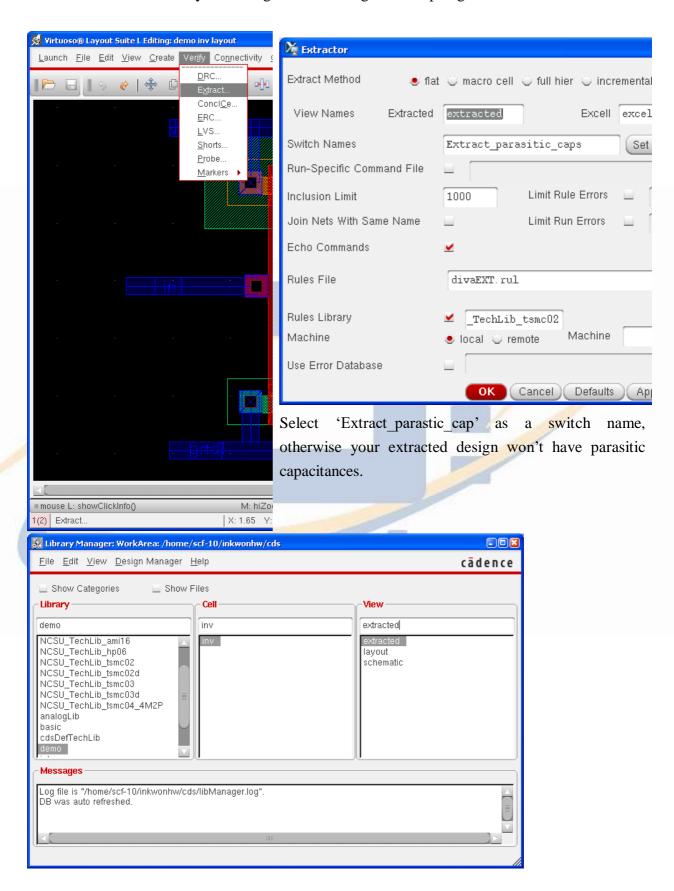


H. Run LVS

As I mentioned before, this step is very important for your grading. More complicated design, more time will be required for debugging LVS.

Verify → LVS

Keep in mind. You **SHOULD** compare your schematic with **EXTRACTED**.

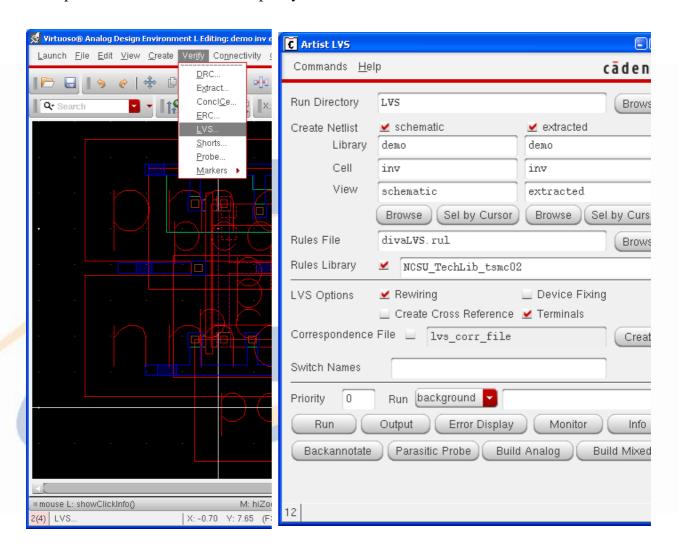


I hope all of you will see the following window.



If there are errors, you can check the results by clicking 'Output' button. 'Error Display' also might be helpful.

I. Run Spectre simulation

It is same as schematics. Go to step '4. Run Spectre simulation'.

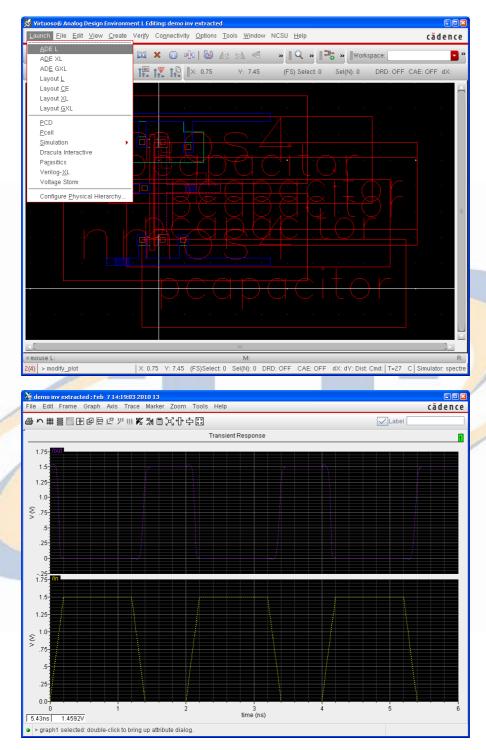

Congratulations!!

You followed all steps I prepared. Let's do the same thing for more complicated designs.