

FULL CIRCUIT


POWER SOURCE

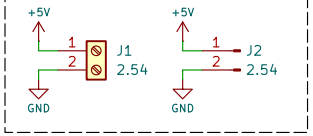


OP-AMP POWER INPUT

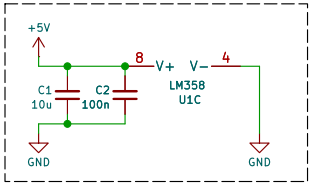

TEMP. ALERT CIRCUIT

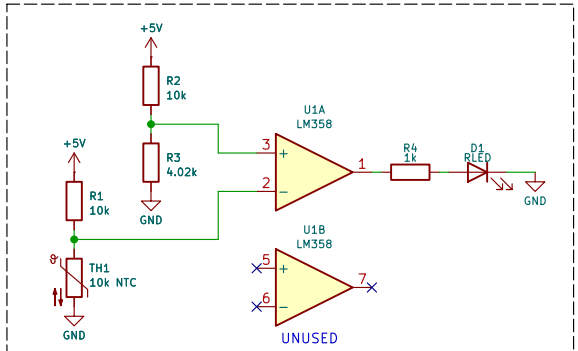

MOUNTING

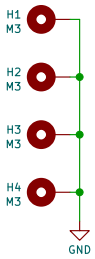

FALSTAD CIRCUIT SIMULATION LINK

* parts are selected on mouser, links to parts are saved inside of the footprint field

R2 CALCULATION

B = ((T2 * T1) / (T2−T1)) * ln(R1/R2)

T1 = 25C
T2 = 50C
B = 3490K
R1 = 10k
.
.
.
R2=4043R

(Closest value for V_{REF} resistor is 4.02k)

CAT CORNER

klidecek



CTU Space Research


Hardware task for avionics application
This project consists of: task 2.1, tasks 2.1.2 and partially 2.1.1 (no BOM)
Contact: +420 605 570 366, savva.popov.sp@gmail.com
made by bismarx
CTU Space Research

Sheet: /
File: TEMP_SENS.kicad_sch

Title: TEMP_SENS

Size: A4	Date: 2026-10-12	**Rev: v1.0.0.**
KiCad E.D.A. 10.0.5		Id: 1/1

overkill for a this tiny PCB I know, but its funny

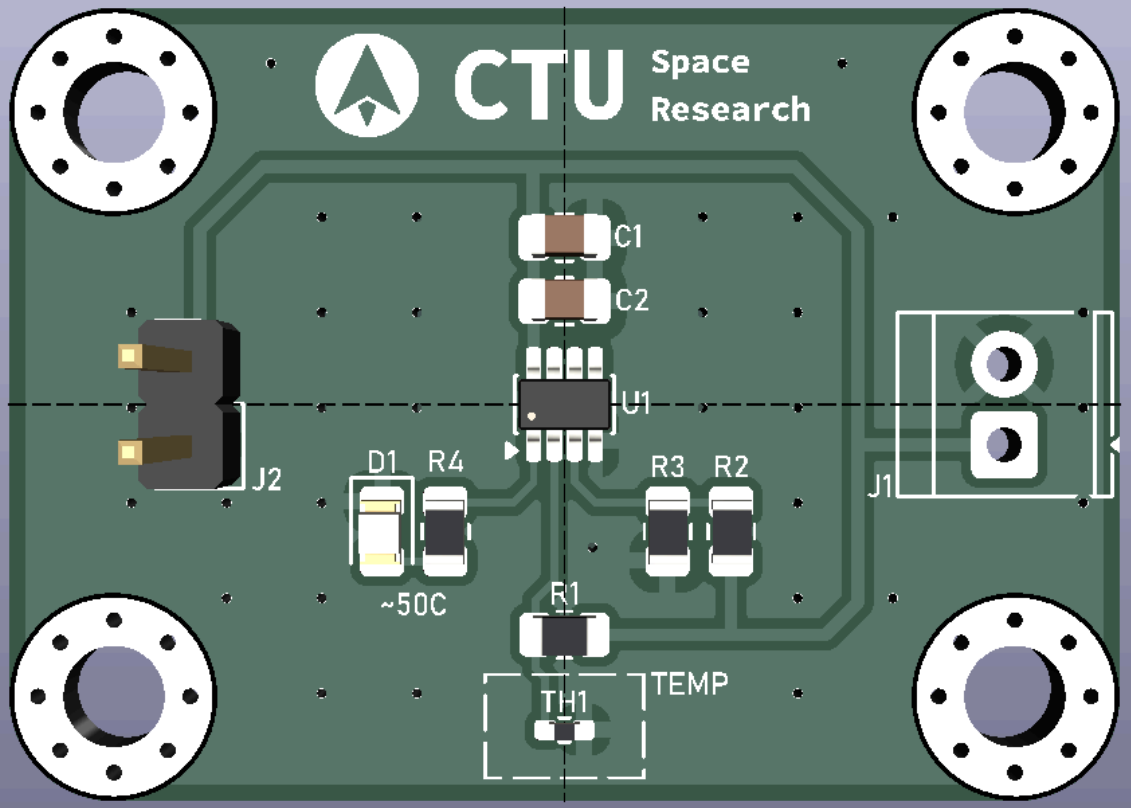

overkill for a this tiny PCB I know, but its funny