ASUSTeK	COMPUTER				
INC.					

# ENGT 530 Standard Operation Procedure

Doc. No:

Date: Nov. 21. 2011 Revision:1.03

Page: 11 Grade:

0Rev	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First release	GRMA	Ariel_wang	Mar.14.2011
1.01		Add new P/N(C1CQI5-A01)	GRMA	Ariel_wang	Apr.26.2011
1.02		Add new P/N(YV0220-A11)	GRMA	Ariel_wang	Oct.14.2011
1.03		Add new PCBA(YV0221-A13)	<b>GRMA</b>	Ariel wang	Nov.21.2011

Authorize by		Review by		Originator By	Ariel_wang
-----------------	--	--------------	--	------------------	------------

Form No: T2-009-01 Rev.01

ASUSTEK COMPUTER INC

ENGT 530

Standard Operation Procedure

Doc. No:

Date: Nov. 21. 2011

Rev.: 1.03 Page: 1

## 1.Objectives

Create test procedure.

## 2.Scope

Model: ENGT 530

PN: C1CQI0(A01)C1CQI5(A01)YV0220(A11)YV0221(A13)

#### 3.Test Item

- 3.1 Diagnostic test in DOS
- 3.2 3DMark06(contain HDMI&DVI test)
- 3.3 Temperature test

### **4.Relevant Document**

None.

**5.Definition**: 1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. Please use Nvidia platform (P5Q) or P7H55-M/USB3 to test in DOS.

ASUSTEK COMPUTER INC ENGT 530 Doc. No:

Standard Operation Procedure Rev.: 1.03 Page: 2

## **6. Operation Procedures:**

## 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ENGT 530 Standard Operation Procedure Rev.: 1.03 Page: 3

Doc. No:

Date: Nov. 21. 2011

#### **6.2** Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 667/800 2GB Memory to DIMM1~4.

6.2.3 Plug PS2 Mouse and PS/2 Keyboard into P5Q Motherboard.

6.2.4 Plug VGA Card ENGT 530 into PCIEX16.


6.2.5 Connect power con of VGA card & Power supply via bundled power cable.



6.2.6 Connect SATA HDD with SATA CON.



- 6.2.7 Plug 4PIN 12V (1200W) power cable into CON12V.
- 6.2.8 Plug ATX Power (1200W) on Power Connector.

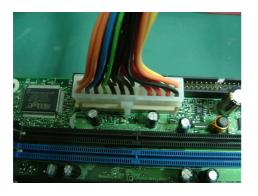


ENGT 530 Date: Nov. 21. 2011 Standard Operation Procedure Rev.: 1.03 Page: 4

Doc. No:
Date: Nov. 21. 2011

## 6.3 Diagnostic test in DOS

6.3.1Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

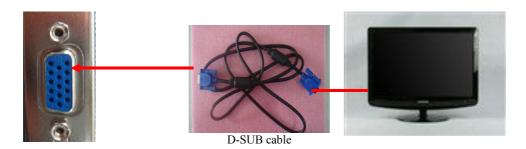

- 6.3.2 Press Power Switch then turn on power button.
- 6.3.3 Press "Del" to enter CMOS setup menu while boot screen is displaying. EXIT -> Load Setup Defaults.



6.3.4 System will reboot, select DOS to run test program.

Path: VBAT\ENGT530\BATCH\

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run mats.exe.

Path: VBAT\ENGT530\25622

6.3.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\ENGT530\BIOS

Command:nvflash xxx.rom -4 -5 -6 -A -y

Notice:

If you can not flash bios because of the bios locked, please use nvflash.exe /r to unlock bios. And then, please use nvflash.exe /w to lock bios after updating latest bios.

ENGT 530 Standard Operation Procedure | Rev.: 1.03 Page: 5

Doc. No:

Date: Nov. 21, 2011

6.3.8 After finish DOS testing, please enter Windows environment to test 3DMark.


## **6.4 3DMark test(contain HDMI test)**

- 6.4.1 Please install 3DMark program by yourself.
- 6.4.2 Please connect VGA card to LCD via HDMI cable.



#### **HDMI CON**

- 6.4.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.4.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.4.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.

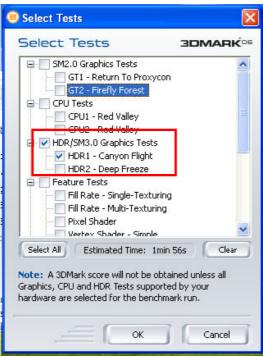


6.4.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting(for HDMI function).

# ENGT 530 Standard Operation Procedure Rev.: 1.03 Page: 6

Doc. No:

Date: Nov. 21. 2011

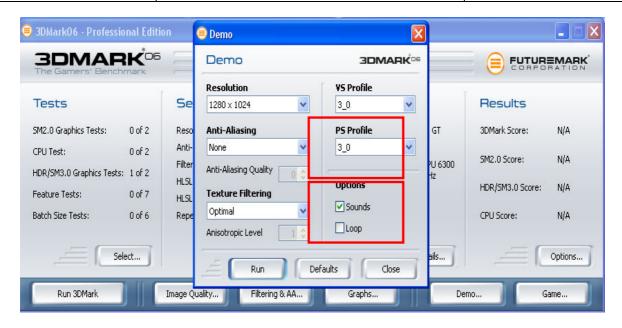

- 6.4.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.4.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail(for HDMI function).



ENGT 530 Standard Operation Procedure Rev.: 1.03 Page: 7

Doc. No:

Date: Nov. 21. 2011

6.4.9 Please connect LCD monitor & card's DVI CON via a DVI cable. (Please refer to step 6.4.4&6.4.5&)



6.4.10 Press "Run 3DMark" to enter 3DMark, Please pay attention to check if there is flickering, discolor, crash and so on. f there's no problem, it can be judged OK!



6. 4.11 If test OK, please test **Temperature test**.

## **6.5** Temperature test


- 6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.5.2 Please run ThermalTest.exe.




ENGT 530 Date: Nov. 21. 2011 Standard Operation Procedure Rev.: 1.03 Page: 8

Doc. No:
Date: Nov. 21. 2011

6.5.3 If test ok, show pass.

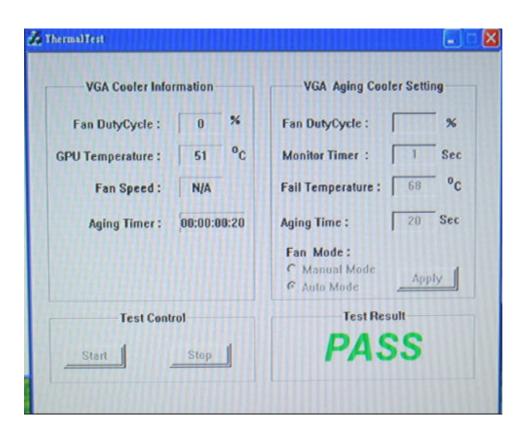

6.5.4 If test fail, show fail.

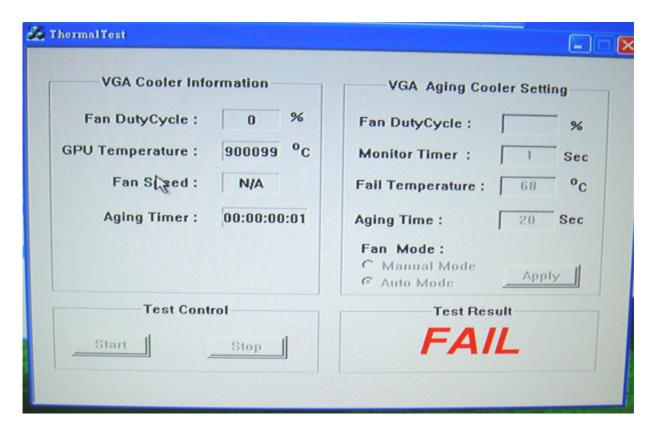

6.5.5 If test OK, NTF test.

ENGT 530 Standard Operation Procedure Rev.: 1.03 Page: 9

Doc. No:

Date: Nov. 21. 2011

# 7 Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW	110001414	з фрим	1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(1200W)			1	
5	INTEL Celeron E1200			1	E1200
6	Intel CPU Intel(R) Core(TM)2 CPU		local	1	611200
7	Heat sink + FAN	22-240000160		1	
8	APACER 800MHz 1G			2	
9	DDR3 1333 2G	20-TT2605618	local	4	
10	SATA HDD			1	
11	SATA HDD Cable	14-000107070		1	
12	PCIEX16 VGA CARD			1	
13	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
14	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O
15	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
16	TV extend cable (Buying a local TV cable by yourself)			1	
17	DVI-HDMI	04G460002400 /04G460002450		1	

ENGT 530 Standard Operation Procedure Rev.: 1.03 Page: 10

Doc. No:

Date: Nov. 21. 2011

18	LCD "Y" Cable	14-010230000		1	
19	P5Q	80-MIB4P0-G0A01		1	
20	P7H55-M/USB3 (YV0220-A11 and later)	80-MIBBKA-G0*	ASUS	1	