ASUSTeK	COMPUTER			
INC.				

ENGTX260 Test Procedure

Doc. No:
Date:May. 24, 2010
Revision:1.08

Page: 13 Grade:

Rev.	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First release	GTC	Janice_Pang	
1.01		Modify for new test structure	GTC	Janice_Pang	
1.02		Add New P/N (C1CMI0)	GTC	Janice_Pang	
1.03		Add New P/N (C1CMB5)	GTC	Janice_Pang	
1.04		Add New P/N (C1CMA5)	GTC	Janice_Pang	
1.05		Add New P/N (C1CMAF&C1CNF5)	GTC	Janice_Pang	Oct.27,2009
1.06		Add New PCBA (C1CMA5-A26)	GTC	Janice_Pang	NOV.4,2009
1.07		Add New PCBA (C1CMAF –A12)	GTC	Ariel_wang	Mar.8,2010
1.08		Add New PCBA (C1CNF5 –A02)	GTC	Chongling	May.24,2010

Authorize by		Review by		Originator By	Janice
-----------------	--	--------------	--	------------------	--------

Form No: T2-009-01 Rev.01

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 1

1.Objectives

Create test procedure.

2.Scope

Model: ENGTX260

PN: C1CMA0 C1CMB0 C1CMI0 C1CMB5 C1CMA5

C1CMAF(A01&A12) C1CNF5(A11&A02) C1CMA5-A26

3.Test Item

3.1 Diagnostic test in DOS

3.2 3DMark06(contain HDMI test)

3.3 Temperature test

3.4 FAN test

4.Relevant Document

None.

5.Definition: 1. If the model name contains P, please test HDCP function.

eg: EN***/HTDP/512M/A

2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 3

6.2 Fixture connect

- 6.2.1 Install Intel P5 CPU & CPU Fan.
- 6.2.2 Install DDR2 667/800 1GB Memory to DIMM1~2.
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card ENGTX260 into PCIEX16 1.
- 6.2.5 Connect power con of VGA card & Power supply via bundled power cable.






C1CMA0

6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(600W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(600W) Connector.

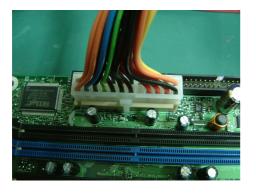

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 4

6.3 Diagnostic test in DOS

6.3.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



- 6.3.2 Press Power Switch then turn on power button.
- 6.3.3 Press "Del" to enter CMOS setup menu while boot screen is displaying. EXIT -> Load Setup Defaults.



6.3.4 System will reboot, select DOS to run test program.

Path:VBAT\ENGTX260\BATCH\

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run mats.exe.

Path: VBAT\ENGTX260\177HX2\

Path: VBAT\ENGTX260\0177JX2\ (For C1CMB5 /C1CMA5/ C1CMA5-A26).

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 5

6.3.6 FAN test

If you want to test FAN, please run fantest1.bat or fantest2

Path: VBAT\ENGTX260\BATCH\FANTEST1.BAT Path: VBAT\ENGTX260\BATCH\FANTEST2.BAT

Notice:

FANTEST1.BAT apply the following Part Number C1CMA5-A06/A26 C1CMAF-A01

FANTEST2.BAT apply the following Part Number C1CNF5-A01/A11

6.3.7 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path: VBAT\ENGTX260\BIOS

Command:nvflash xxx.rom -4 -5 -6 -A -y

Notice:

If you can not flash bios because of the bios locked, please use nvflash.exe /r to unlock bios. And then, please use nvflash.exe /w to lock bios after updating latest bios.

6.3.8 After finish DOS testing, please enter Windows environment to test 3DMark.

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010


Rev.: 1.08 Page: 6

6.4 3DMark test(contain HDMI test)

- 6.4.1 Please install 3DMark program by yourself.
- 6.4.2 Please connect VGA card to LCD via HDMI cable.



- 6.4.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.4.4 Plug 4 Pin black cable into SPDIF_OUT of MB. Plug another 2 Pin white cable into SPDIF IN of VGA card.

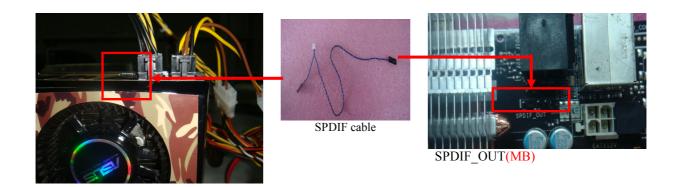

6.4.5 Plug SUPREME FX II card into PCIEX1 of MB.




ENGTX260 Test Procedure

Doc. No:


Date: May. 24, 2010

Rev.: 1.08 Page: 7

- 6.4.6 Please install SUPREME FX II card driver in Windows and enter Windows to test HDMI.
- 6.4.7 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.4.8 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.

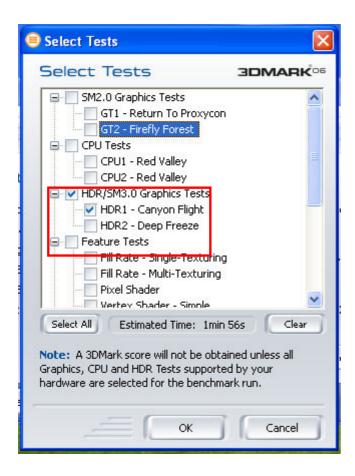

6.4.9 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

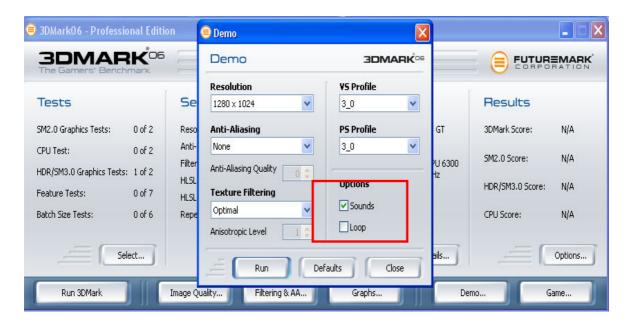

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 8

6.4.10 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!

6.4.11 Listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



- 6.4.12 If test OK, please test other HDMI port.
- 6.4.13 Connect VGA card to LCD via HDMI cable test HDMI function.

(Please refer to step 6.4.2&6.4.3&6.4.4&6.4.5&6.4.6&6.4.7&6.4.9&6.4.10)



ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010


Rev.: 1.08 Page: 9

6.5 Temperature test

- 6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.5.2 Please run ThermalTest.exe.



6.5.3 If test ok, show pass.

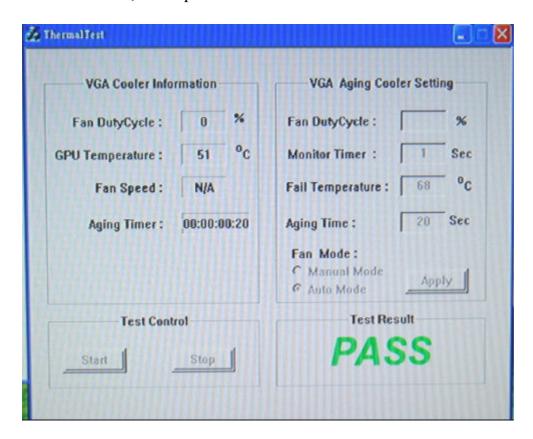

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 10

6.5.4 If test fail, show fail.



6.5.5 If test OK, NTF test.

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 11

7 Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(600W)			1	The Assertion of the Control of the
5	INTEL Celeron E1200			1	E1100
6	Heat sink + FAN	22-240000160		1	
7	APACER 800MHz 512M or 800MHz 1G			512M 2 or 1G 1	
8	SATA HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
12	S CABLE(NVDIA)	14G010005113 /14G010005100		1	
13	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O
14	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
15	TV extend cable (Buying a local TV cable by yourself)			1	

ENGTX260 Test Procedure

Doc. No:

Date: May. 24, 2010

Rev.: 1.08 Page: 12

16	DVI-HDMI	04G460002400 /04G460002450	1	
17	Power Cable	14G000602510 /14G000602502	1	
18	SPDIF CABLE	14G003200813 /14G003200810	1	M
19	SUPREME FX II	80-C1BHK5-0C01	1	
20	LCD "Y" Cable	14-010230000	1	
21	P5E	80-MBB7X0-G0A01	1	