ASUSTeK	COMPUTER			
INC.				

# GT 520 Standard Operation Procedure

Doc. No: Date: Jul. 16. 2012

Revision:1.01

Page: 9 Grade:

0Rev	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First release	GRMA	Ariel_wang	Jun.26.2012
1.01		Add new PCBA(YV0157-A11)	<b>GRMA</b>	Ariel wang	Jul.16.2012

Authorize	Review	Originator	Ariel_wang
by	by	By	

Form No: T2-009-01 Rev.01

ASUSTEK COMPUTER INC

GT 520
Standard Operation Procedure

Doc. No:

Date: Jul.16. 2012

Rev.: 1.01 Page: 1

# 1. Objectives

Create test procedure.

## 2.Scope

Model: GT 520

PN: YV0157(A02&A11)

#### 3.Test Item

- 3.1 Diagnostic test in Linux system
- 3.2 3DMark03(contain HDMI&DVI test)
- 3.3 Temperature test

### **4.Relevant Document**

None.

**5.Definition**: 1. If the model name contains P, please test HDCP function.

Ex: EAH\*\*\*/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. Please use platform (P7H55-M/USB3) to test in LINUX or Windows.

		Doc. No:	
ASUSTEK COMPUTER INC		Date: Jul. 16. 2012	
	Standard Operation Procedure	Rev.: 1.01 Page: 2	

# 6. Operation Procedures:

#### 6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows 7 test environment by yourself).

GT 520 Standard Operation P Doc. No:

Date: Jul. 16. 2012

Standard Operation Procedure Rev.: 1.01 Page: 3

#### **6.2** Fixture connect

6.2.1 Install Intel P7 CPU & CPU Fan.

6.2.2 Install DDR3 Memory to DIMM1~4.

6.2.3 Plug PS2 Mouse and PS/2 Keyboard into P7H55-M/USB3 Motherboard.

6.2.4 Plug VGA Card GT 520 into PCIEX16.

6.2.5 Connect power con of VGA card & Power supply via bundled power cable.



6.2.6 Connect SATA HDD with SATA CON.



- 6.2.7 Plug 4PIN 12V (1200W) power cable into CON12V.
- 6.2.8 Plug ATX Power (1200W) on Power Connector.



GT 520


Standard Operation Procedure | Rev.: 1.01 Page: 4

Doc. No:

Date: Jul. 16. 2012

### 6.3 Diagnostic test in linux system

6.3.1Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

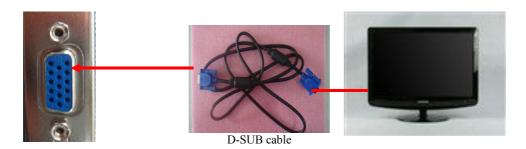

- 6.3.2 Press Power Switch then turn on power button.
- 6.3.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults. Advanced Power Exit Options Exit system setup Exit & Save Changes Exit & Discard Changes after saving the changes. Discard Changes F10 key can be used for this operation. Load Setup Defaults Select Screen Select Item inter Go to Sub-screen General Help Save and Exit (C)Copyright 1985-2002, American Megatrend

6.3.4 System will reboot, select linux to run test program.

Path:GT520\yv0157a0.sh Path:GT5201\yv0157a1.sh

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run ./mats.

Path:GT520\

Path:GT5201\

6.3.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:GT520\ Path:GT5201\

Command:./nvflash xxx.rom -4 -5 -6 -A -y

Notice:

If you can not flash bios because of the bios locked, please use ./nvflash.exe /r to unlock bios. And then, please use ./nvflash.exe /w to lock bios after updating latest bios.

6.3.7 After finish linux testing, please enter Windows 7 environment to test 3DMark.

GT 520

Standard Operation Procedure Rev.: 1.01 Page: 5

Doc. No:

Date: Jul. 16. 2012


# 6.4 3DMark test(contain HDMI test)

- 6.4.1 Please install 3DMark program by yourself.
- 6.4.2 Please connect VGA card to LCD via HDMI cable.



#### **HDMI CON**

- 6.4.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.4.4 Please run 3DMark03 base on this card (please test 1 cycle).
- 6.4.5 Press "Select" to enter Select test menu. You can choose "GT1" for default setting.

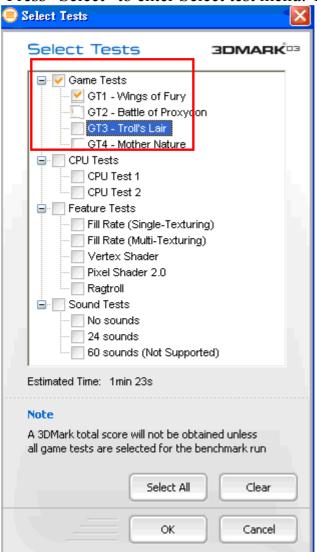


6.4.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

GT 520 Standard Operation Procedure Rev.: 1.01 Page: 6

Doc. No:

Date: Jul.16. 2012

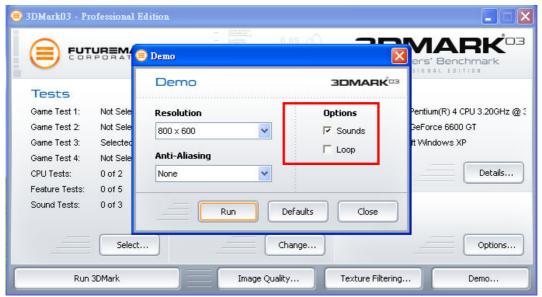

- 6.4.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.4.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



6.4.9 Please connect LCD monitor & card's DVI CON via a DVI cable. (Please refer to step 6.4.4&6.4.5&6.4.6&6.4.7&6.4.8)



6. 4.10 If test OK, please test **Temperature test**.

GT 520 Date: Jul. 16. 2012 Standard Operation Procedure Rev.: 1.01 Page: 7


Doc. No: Date: Jul. 16. 2012

## **6.5** Temperature test

- 6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.5.2 Please run ThermalTest.exe.



6.5.3 If test ok, show pass.

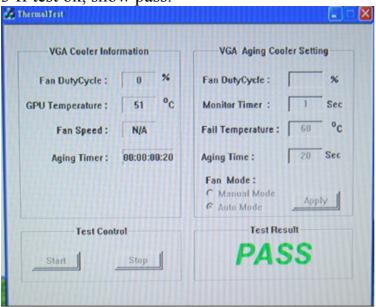

6.5.4 If test fail, show fail.



6.5.5 If test OK, NTF test.

GT 520

Standard Operation Procedure Rev.: 1.01 Page: 8

Doc. No:

Date: Jul. 16. 2012

# 7 Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(1200W)			1	
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	E1100
6	Heat sink + FAN	22-240000160	local	1	
7	DDR3 1333 2G	20-TT2605618	local	4	
8	SATA HDD			1	
9	SATA HDD Cable	14-000107070		1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
12	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O
13	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
14	TV extend cable (Buying a local TV cable by yourself)			1	
15	DVI-HDMI	04G460002400 /04G460002450		1	
16	LCD "Y" Cable	14-010230000		1	
17	P7H55-M/USB3	80-MIBBKA-G0*	ASUS	1	