ASUSTeK	COMPUTER				
INC.					

ARESII Standard Operation Procedure Revision: 1.00

Doc. No:

Date: Jan. 23, 2013

Grade: Page: 9

Rev	Rev. Modified Chapters Modification Description		Issued Dept.	Issued by	Revised Date
1.00		First Release	GRMA	Ariel wang	Jan.23,2013

Authorize by		Review by		Originator By	Ariel
-----------------	--	--------------	--	------------------	-------

Form No: T2-009-01 Rev.01

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013

Rev.: 1.00 Page: 1

1. Objectives

Create test procedure.

2.Scope

Model: ARESII PN: YV003H0 (A01)

3.Test Item

3.1 Diagnostic test in 64-bit Linux

3.2 3DMark06(contain HDMI test)

3.3 Temperature test

3.4 Fan test

4.Relevant Document

None.

5.Definition: 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. System Memory: 1GB for a single GPU test station; please add an additional 512MB of system memory for each additional GPU used for the test configuration
- 4. ARESII Test Program in 64-bit Linux system.

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013

Rev.: 1.00 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows test environment by yourself).

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013

Rev.: 1.00 Page: 3

6.2 Fixture connect

- 6.2.1 Install Intel P7 CPU & CPU Fan.
- 6.2.2 Install DDR3 Memory to DIMM1~4. (a minimum memory of 2GB for Linux test)
- 6.2.3 Plug USB Mouse and PS/2 Keyboard into MB.
- 6.2.4 Plug VGA Card ARESII into PCIEX16 1.
- 6.2.5 If this card has 6 PIN or 8 PIN of Power supply, please connect power con of VGA card & Power supply via bundled power cable.

(6 PIN of Power supply to 6 PIN of VGA card) (8 PIN of Power supply to 8 PIN of VGA card)



6.2.6 Connect SATA HDD & SATA con via SATA cable



- 6.2.7 Plug 4PIN 12V power(a minimum power of 1200W) cable into CON12V.
- 6.2.8 Plug ATX Power on Power(a minimum power of 1200W) Connector.



ARESII

Doc. No:

Jan. 23, 2013 Date: Rev.: 1.00 Page: 4

Standard Operation Procedure

6.3 Certain test.

6.3.1 Diagnostic test in 64-bit LINUX system


6.3.1.1 Please connect LCD monitor & card's DVI CON via a DVI cable.



6.3.1.2 Press Power Switch then turn on power button.

6.3.1.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults.

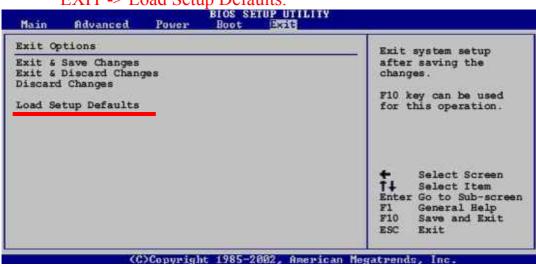

6.3.1.4 Run test program in 64-bit linux system.

Path: aresii\yv03h0a0.sh

Please enter into the file of aresii enter the following command: cd./aresii

Then, please run ./yv03h0a0.sh

Please set the switch to U3(near GPU) to test all function/check U3/Slave BIOS and set it to U2 to check U2 BIOS, after test ok, set the switch to U2(near IO) and return cards to customer.

6.3.1.5 Memory test

If you want to test memory, please run ./tserver -test=memfa

Path: aresii\

6.3.1.6 BIOS Version

If you want to see the version of bios, please run ./atiflash -ai 0 or ./biosinfo.

Path: aresii\

6.3.1.7 BIOS flash(U2/U3)

Please use the following command to flash bios and notice the size of character.

Path: aresii\

Command:./atiflash -p -f 0 xxx.rom

If you can not flash bios because of the bios locked, please use ./atiflash –unlockrom 0 to unlock bios. And then, please use ./atiflash –lockrom 0 to lock bios after updating latest bios.

	,	
ASUSTEK COMPUTER INC		Doc. No: Date: Jan. 23, 2013 Rev.: 1.00 Page: 5
6.3.1.8 FAN Test If you want to t Path: Path: ares Notice: ./aftsi112 apply YV03H0-A03	Standard Operation Procedure est FAN, please run ./AFTSI112	Rev.: 1.00 Page: 5

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013

Rev.: 1.00 Page: 6

6.3.2 3DMark test(contain HDMI test)


6.3.2.1 Please install 3DMark program by yourself.

6.3.2.2 Please connect VGA card to LCD via Display Port cable.



Display Port CON(*4)

- 6.3.2.3 Please install VGA card driver in Windows(You must use individual driver of this card).
- 6.3.2.4 Please run 3DMark06 base on this card (please test 1 cycle).
- 6.3.2.5 Press "Select" to enter Select test menu. You can choose "HDR1" for default setting.

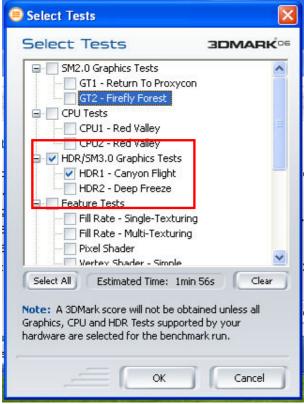


6.3.2.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013 Rev.: 1.00 Page: 7

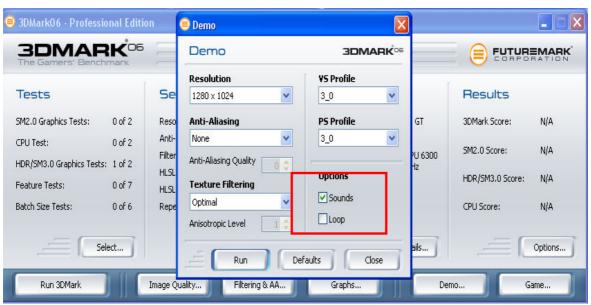

- 6.3.2.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.3.2.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



6. 3.2.9 If test OK, please test temperature test.

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013


Rev.: 1.00 Page: 8

6.4 Temperature test

- 6.4.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.4.2 Please run ThermalTest.exe.



6.4.3 If test ok, show pass.

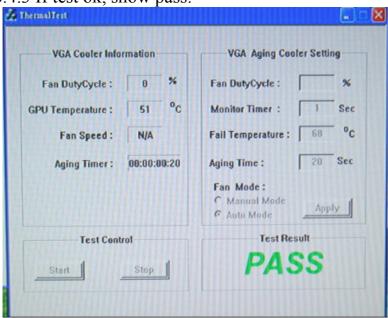

6.4.4 If test fail, show fail.



6.4.5 If test OK, please NTF test.

ARESII Standard Operation Procedure

Doc. No:

Date: Jan. 23, 2013 Rev.: 1.00 Page: 9

7.Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	Dell 30 inches (3008WFP) (Buying a local LCD by yourself)			1	P. Sept III George and A. Sept St. St. St. St. St. St. St. St. St. St
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(a minimum power of 500W)			1	
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	61200
6	Heat sink + FAN	22-240000160		1	
7	DDR3 1333 2G	20-TT2605618	local	4	:
8	TEST HDD			1	
9	SATA HDD Cable	14-000107070	ASUS	1	
10	PCIEX16 VGA CARD			1	
11	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O
12	HDMI extend cable (Buying a local HDMI cable by yourself)			1	O
13 14	P7H55-M/USB3 MB Display port cable (Buying a local Display port cable by yourself)	80- MIBBKA-*		1	e site