



Disassembling and Assembling the MG-1P



Disassembling the MG-1P



1. Remove the three screws securing the power signal plug with the H2.5 hexagonal socket screwdriver, then remove the plug.


Disassembling the MG-1P



1. Remove the four screws securing the landing gear's fixing piece.
Remove the landing gear.

2. Remove the compass on the right landing gear.

Disassembling the MG-1P

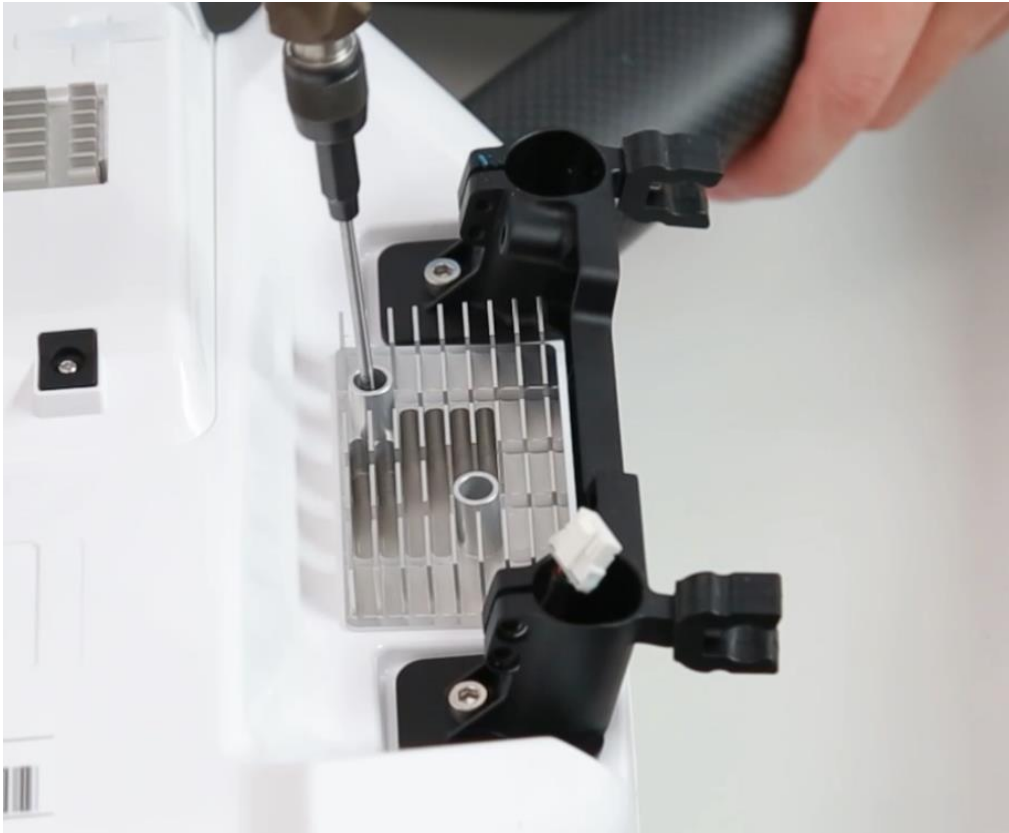

1. Remove the two screws securing the SDR heat sink with the H2.5 hexagonal socket screwdriver, then remove the heat sink.

2. Remove the screw securing the upper shell with the 2.0 screwdriver, then remove the upper shell.

Disassembling the MG-1P




AL

DS


1. Remove the 22 screws on the upper carbon board as shown with the 2.0 hexagonal socket screwdriver, then remove the upper carbon board.

Disassembling the MG-1P

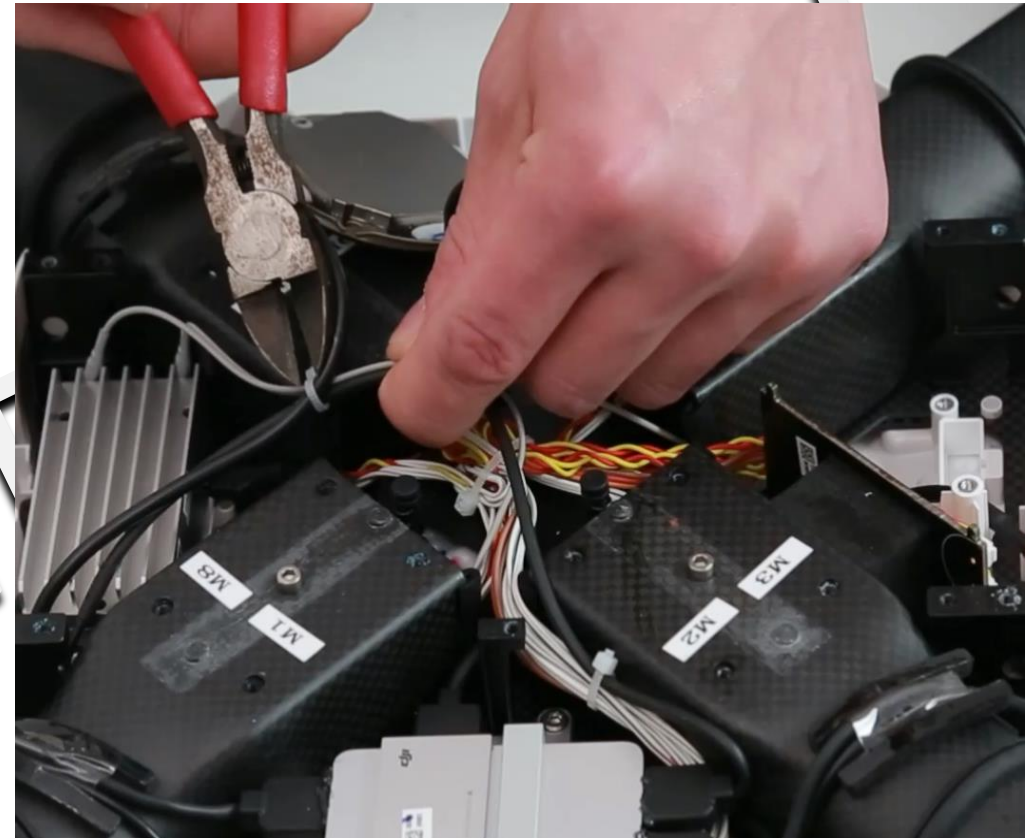


1. Separate the GPS module from the rubber pieces. Remove the GPS module.
2. Cut off the zip-ties with the scissors.

Disassembling the MG-1P

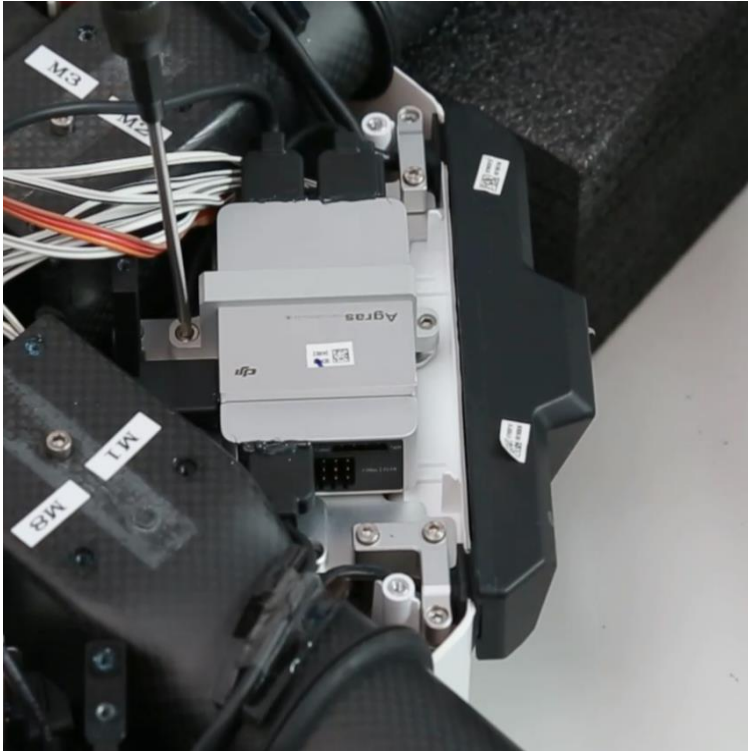



1. Remove the two screws securing the main controller's mounting piece.
2. Separate the main controller and main controller's fixing base with the tweezers (If it's stuck, use a heat gun to warm up the main controller and remove it).
3. Disconnect all the cables on the main controller. (**Do not pull out the cable directly, or the cable may be damaged.**)

Disassembling the MG-1P

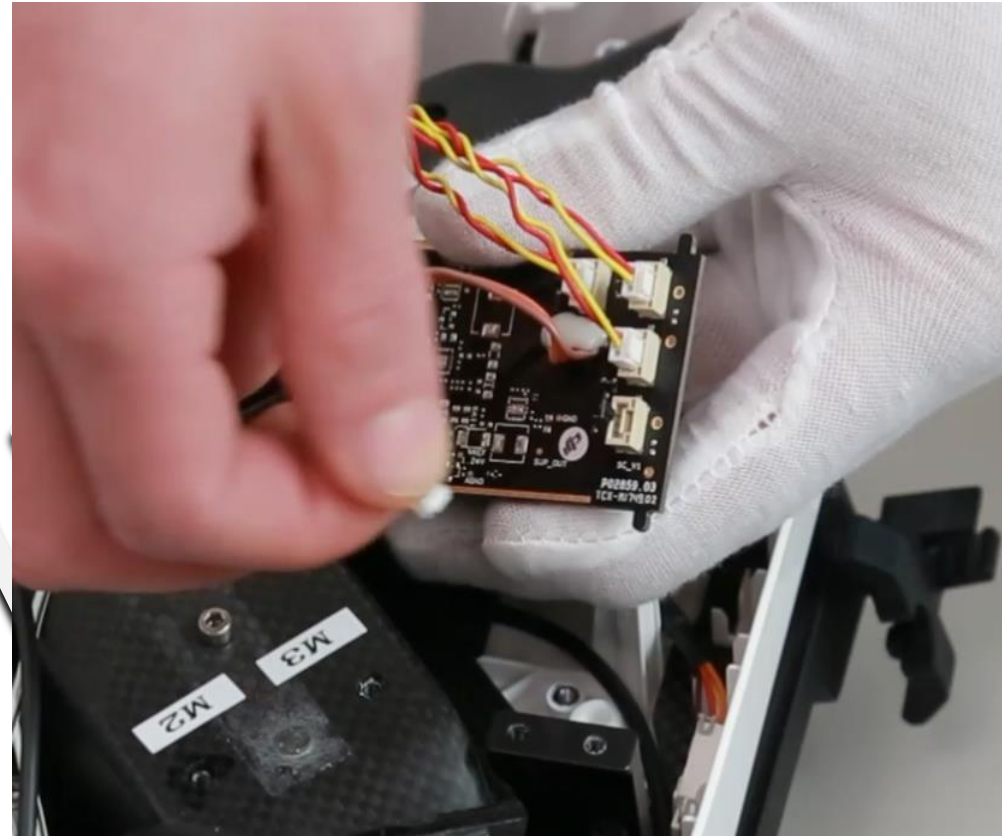



1. Separate the 485 integrated board and EVA foam with the tweezers.
2. Disconnect all the cables on the 485 integrated board and remove the board.

Disassembling the MG-1P

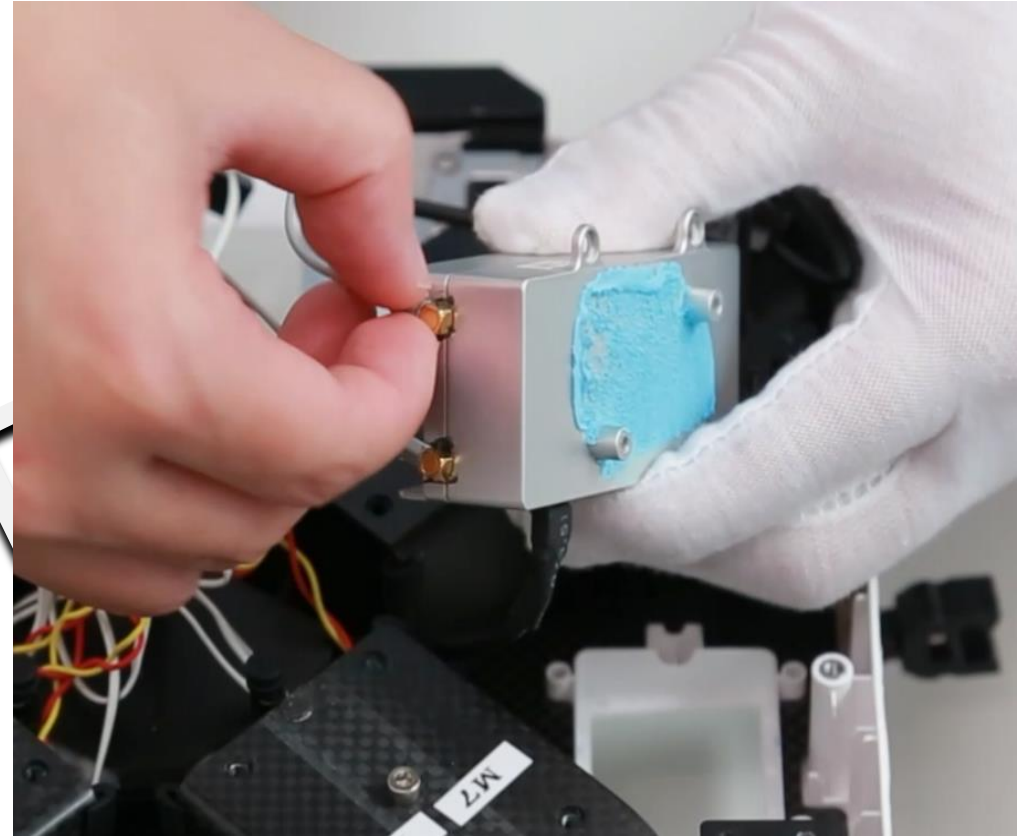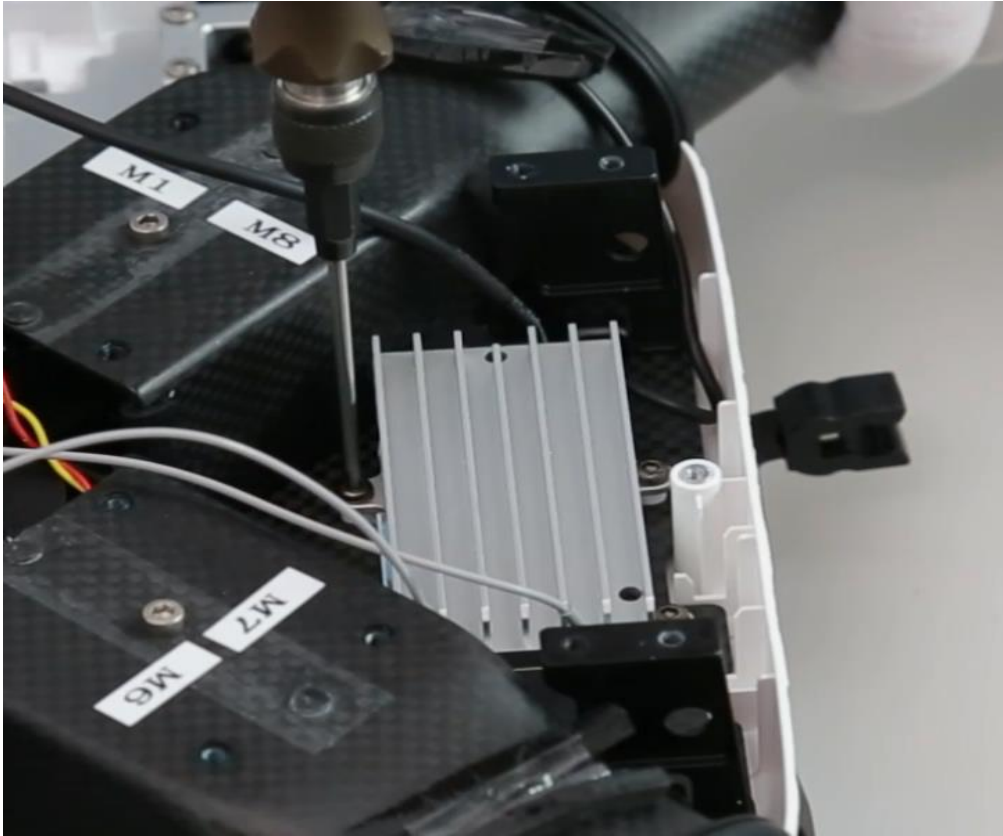


1. Remove the screws securing the SDR module and lower carbon board.
2. Disconnect all the cables on the SDR module. (**Gently remove the antennas, or the antenna connector may be damaged.**)

Disassembling the MG-1P

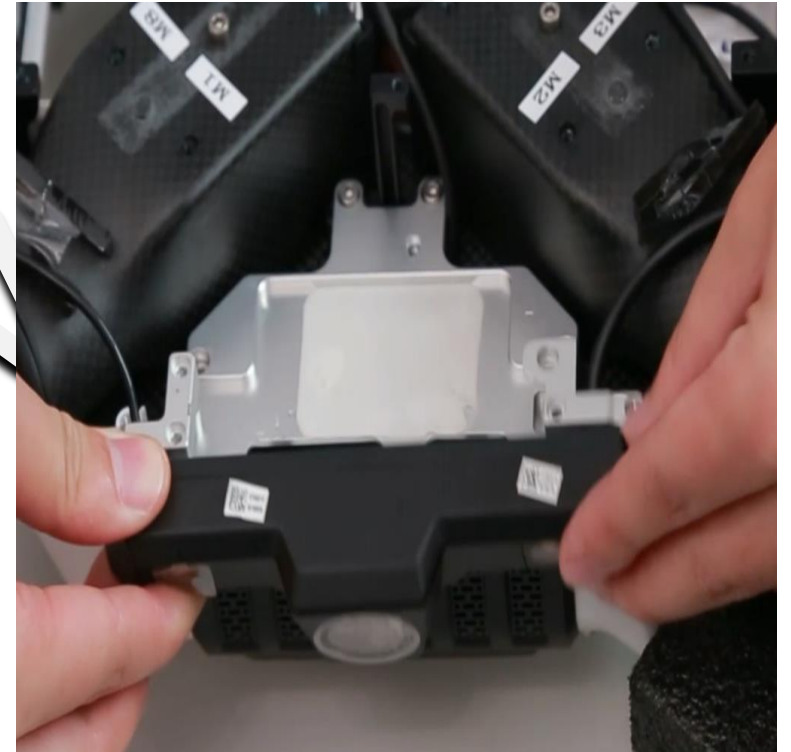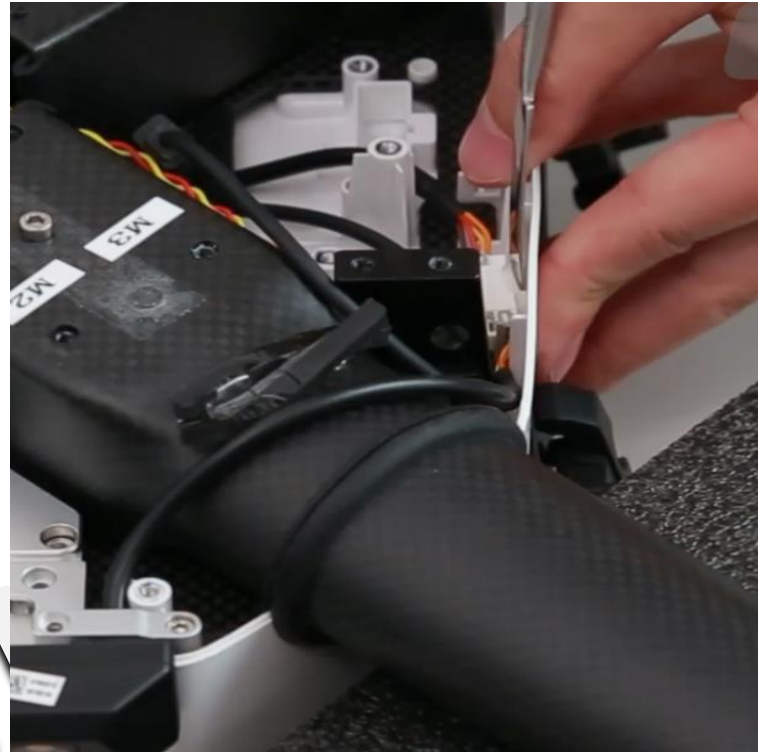


1. Remove the four screws on the FPV module.
2. Unlock the FPV connector on the lower shell and disconnect the cable (or you can use a heat gun to warm up the main controller and remove it).
3. Disconnect all the cables on the main controller.

Disassembling the MG-1P

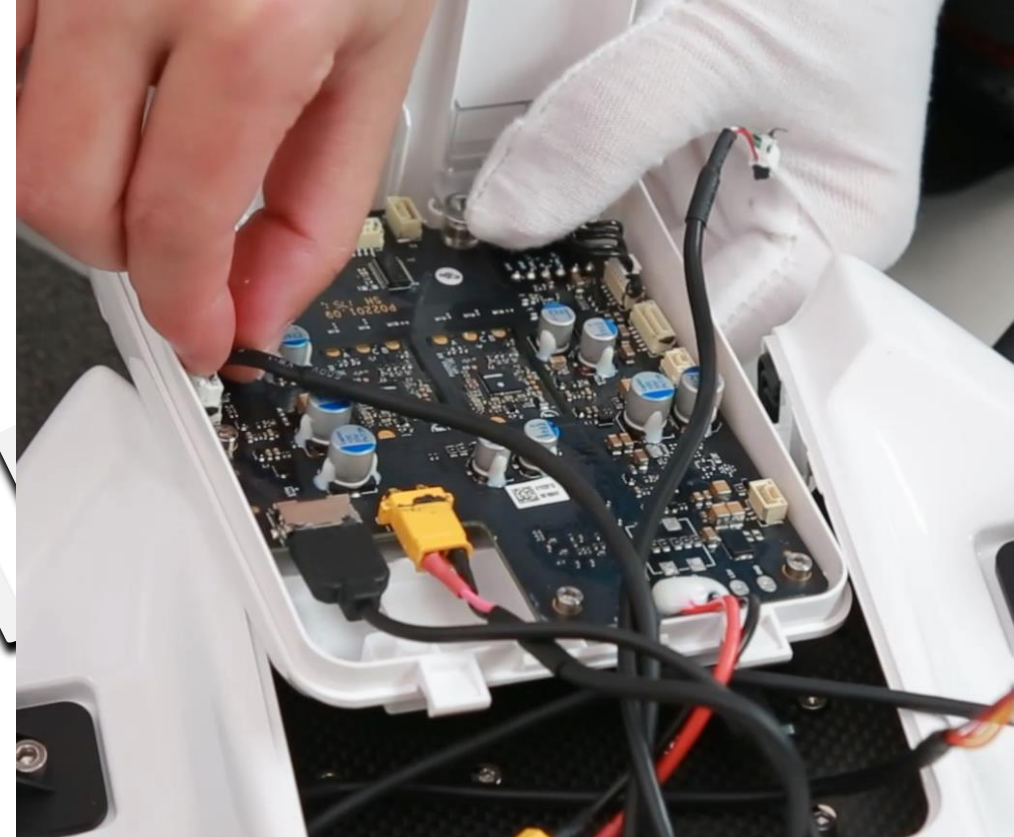




1. Remove the screw securing the central board.
2. Disconnect all the cables on the central board.

Disassembling the MG-1P

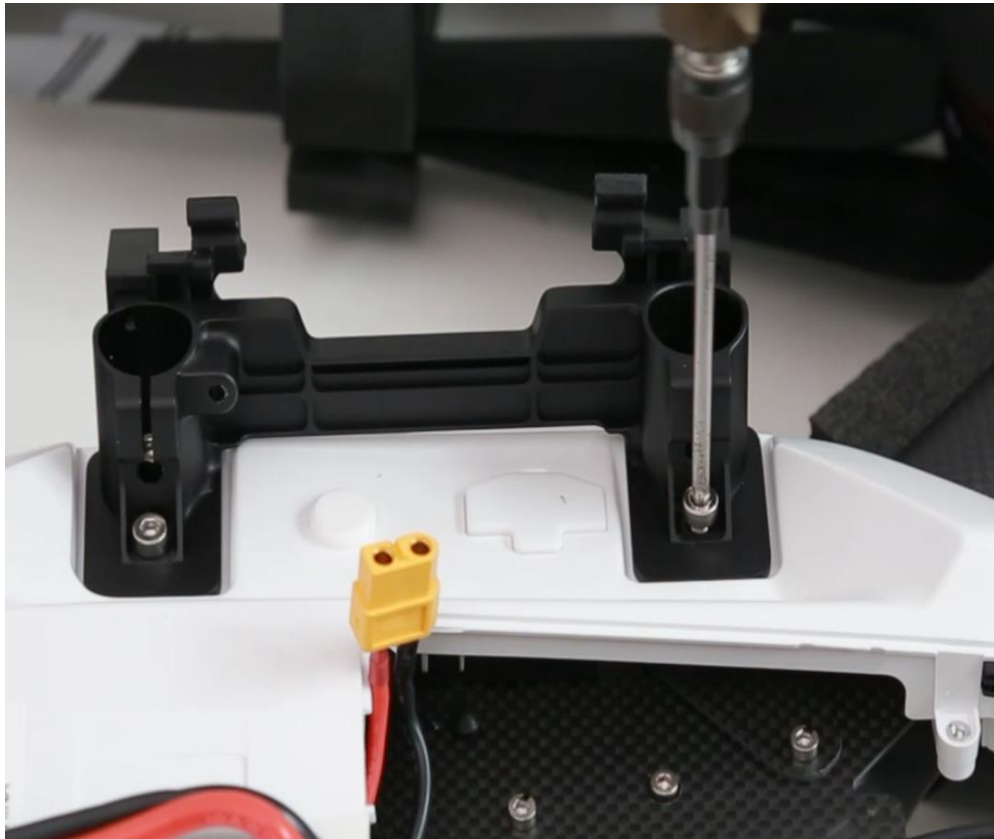



1. Remove the screws securing the landing gear's fixing piece.
2. Remove the lower shell.

Disassembling the MG-1P

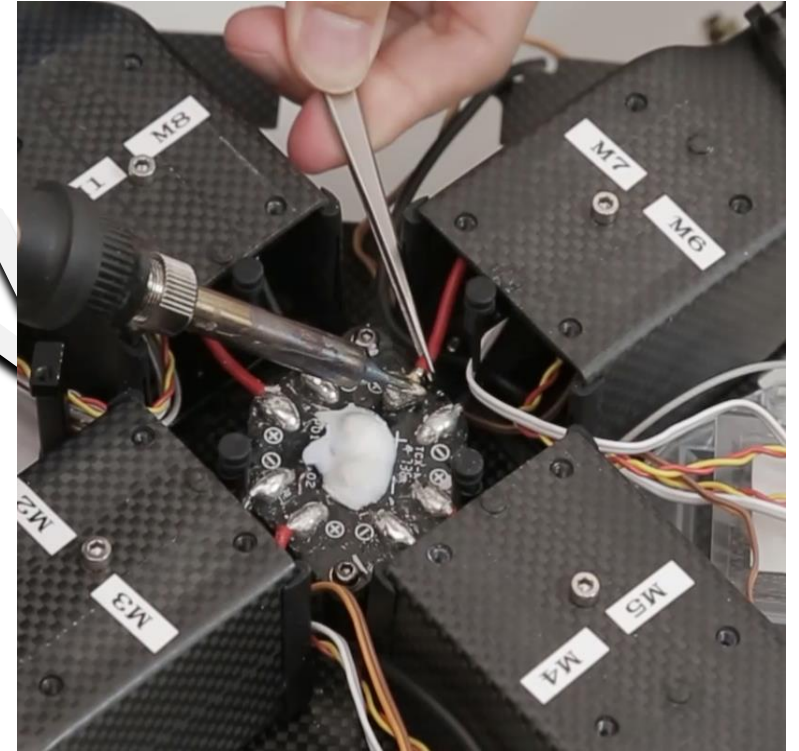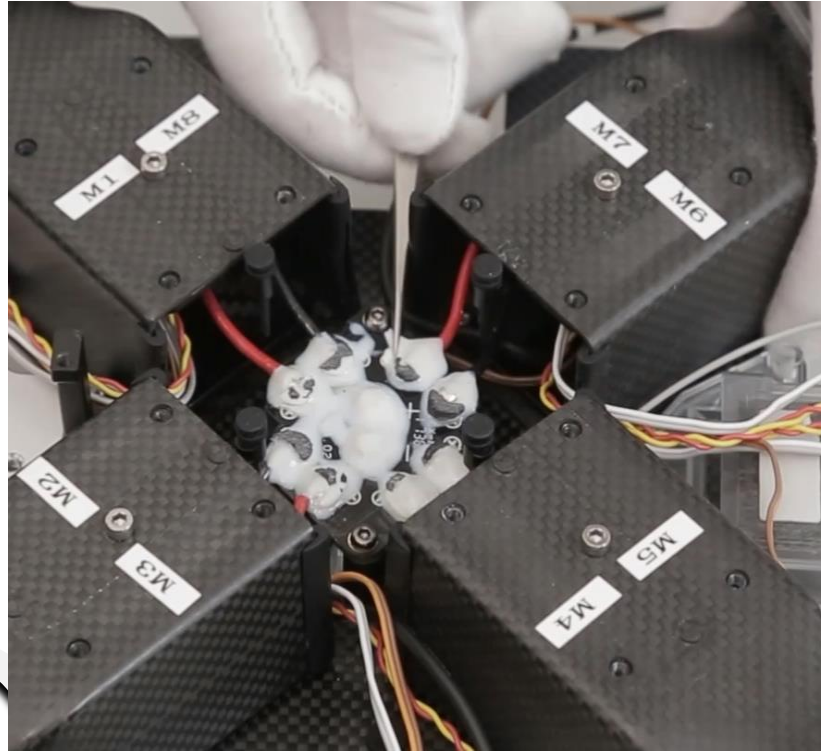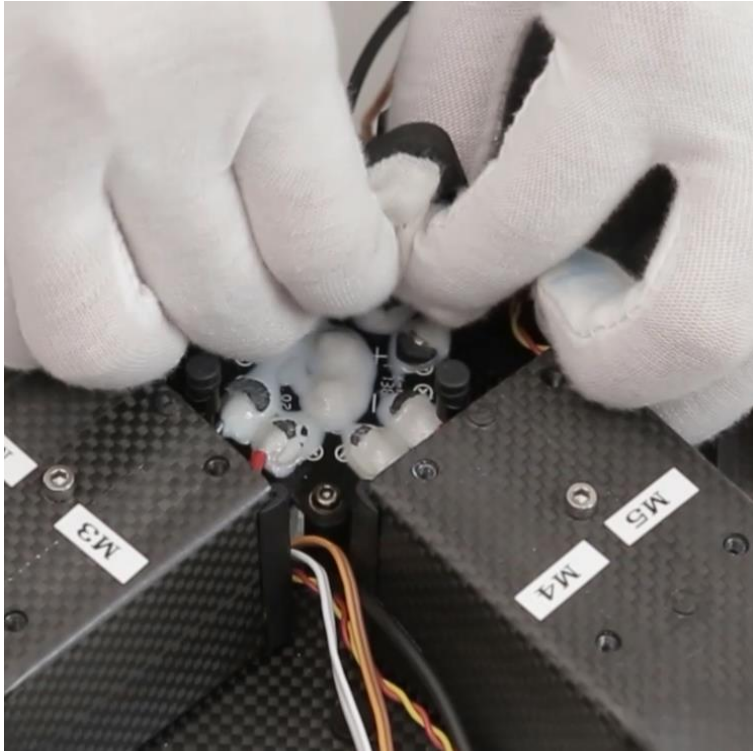

1. Remove the fireproof foam on the power distribution board.
2. Clean off the white glue with the tweezers or pliers.
3. Desolder the power cables on the power distribution board with the soldering iron.
(Do not damage the cables.)

Disassembling the MG-1P

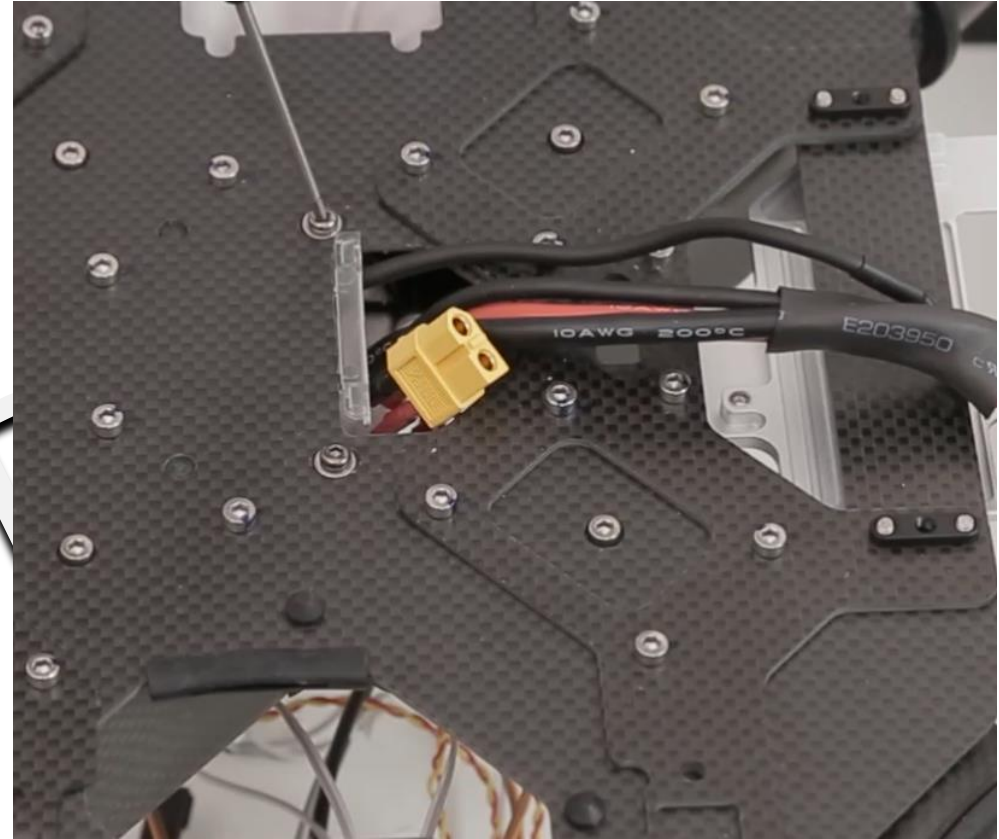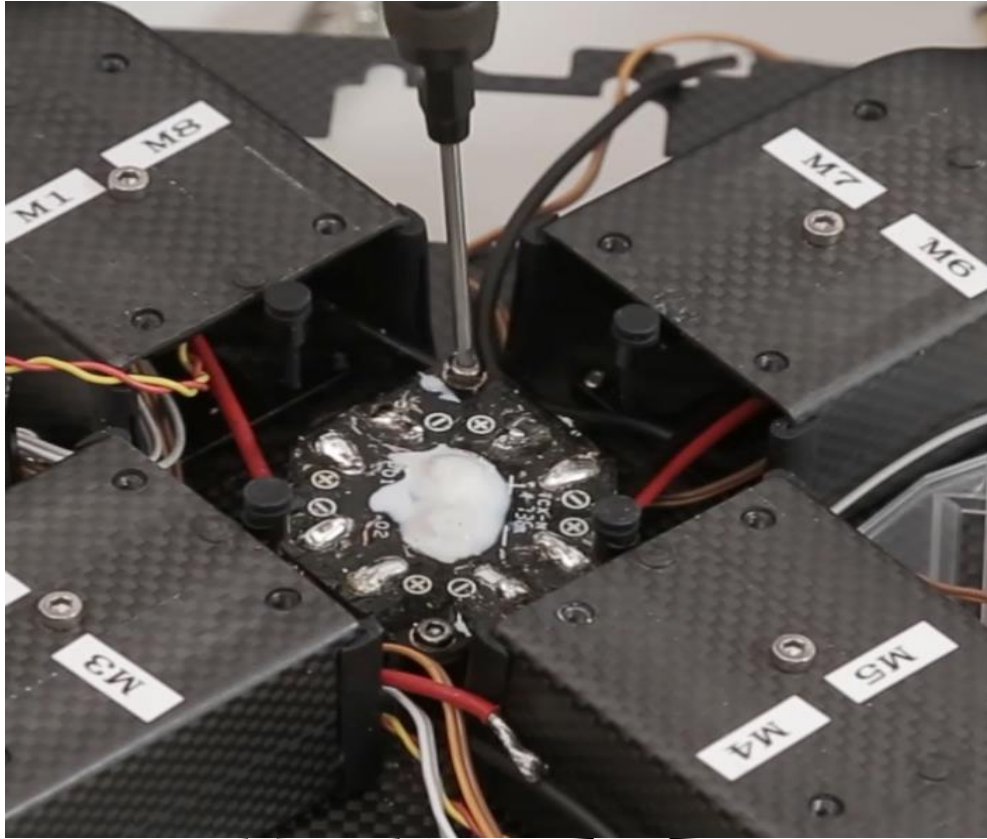


1. Remove the two screws securing the power distribution board.
2. Turn over the product, remove the two screws on the plastic fixing piece, and remove the fixing piece.

Disassembling the MG-1P




1. Remove the 16 screws on the lower carbon board with the 2.0 hexagonal socket screwdriver, then remove the lower carbon board.

Disassembling the MG-1P

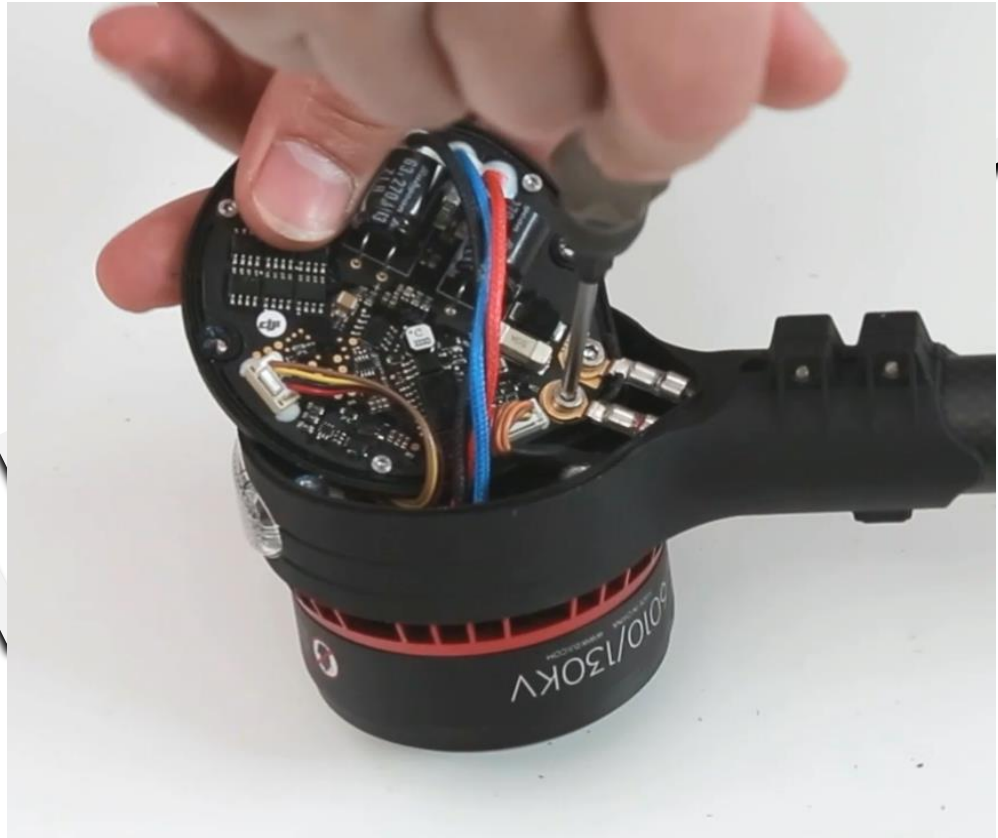


1. Remove the four screws securing the ESC cover plate, and then open the ESC cover plate.
2. Remove the two screws securing the power cable, and then disconnect the power cable.

Disassembling the MG-1P

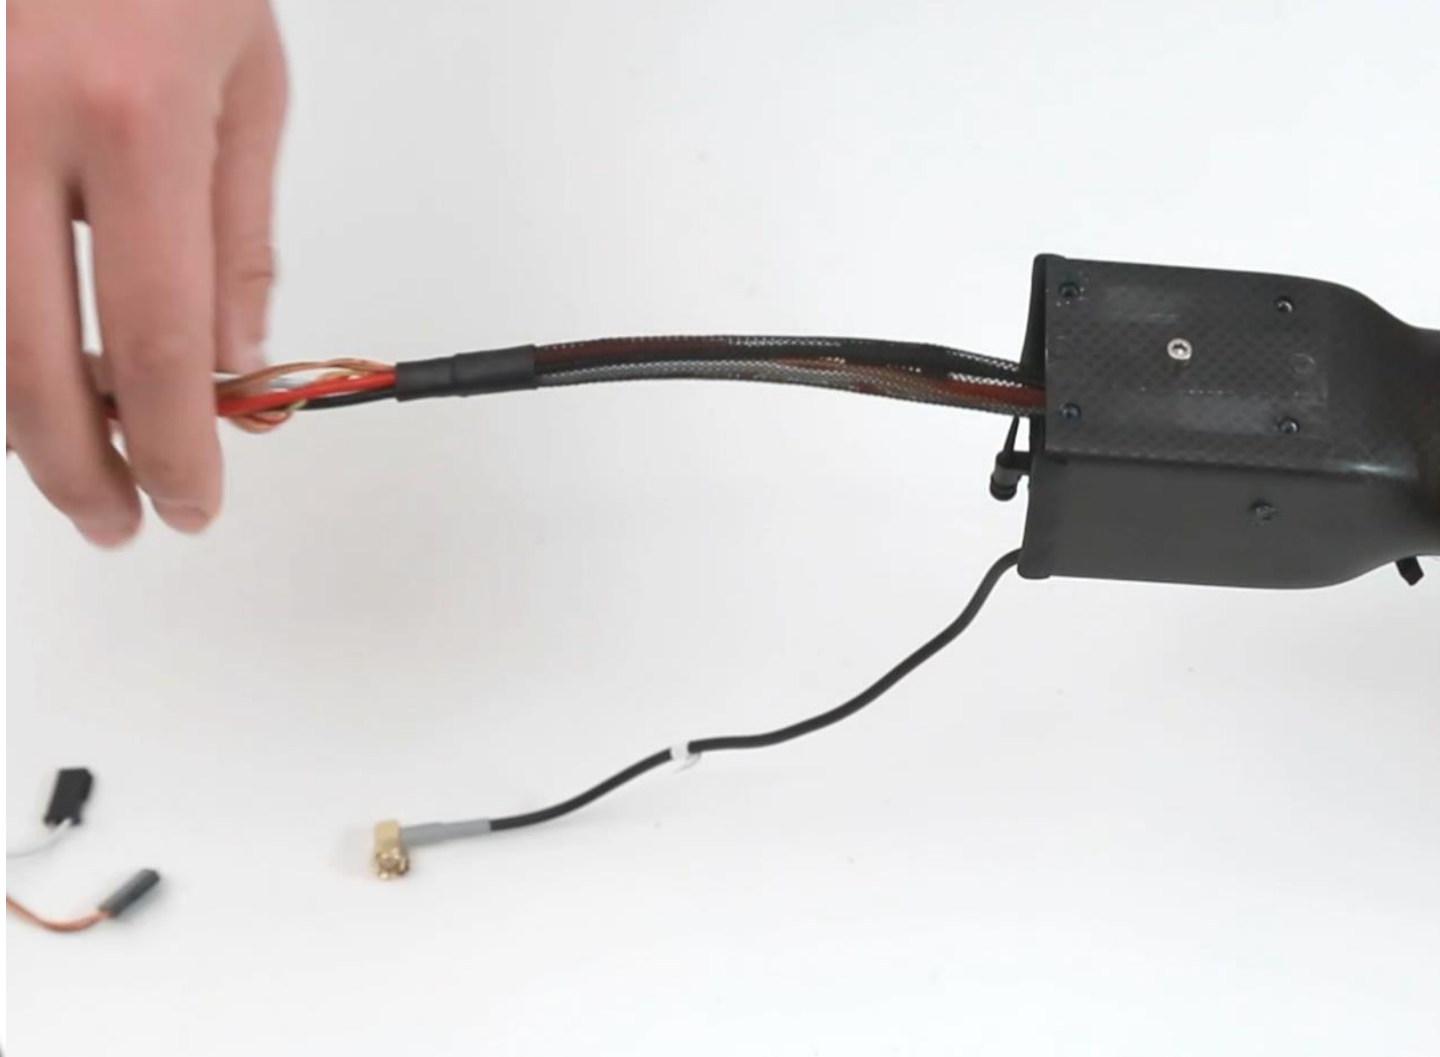


1. Remove the Y-type composite cable.

Disassembling the MG-1P

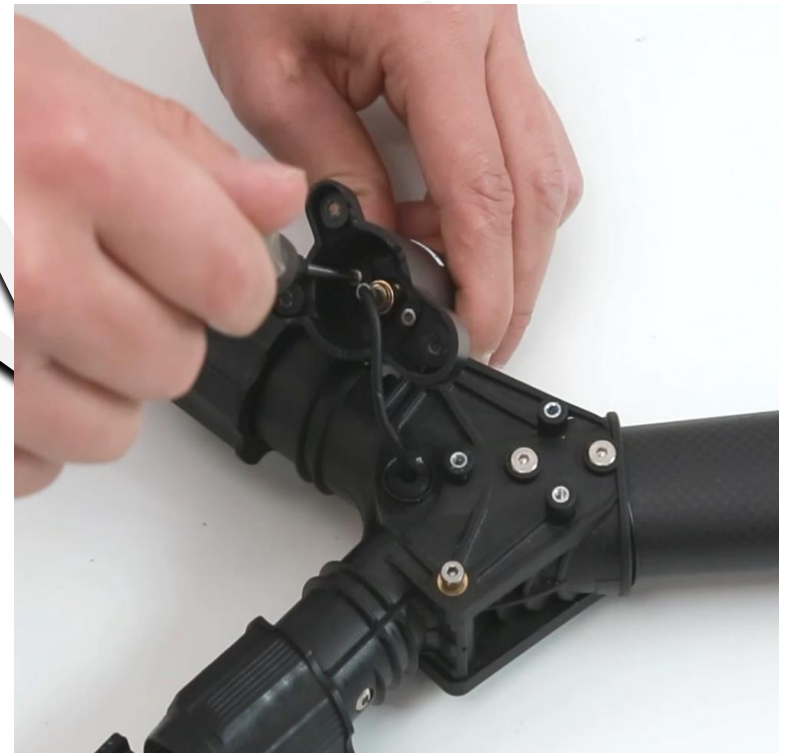


1. Remove the three screws on the RTK antenna's mounting base.
2. Remove the screw on the screw adapter, and remove the adapter.
3. Remove the two screws between the cylinder antenna and antenna's mounting base.

Disassembling the MG-1P

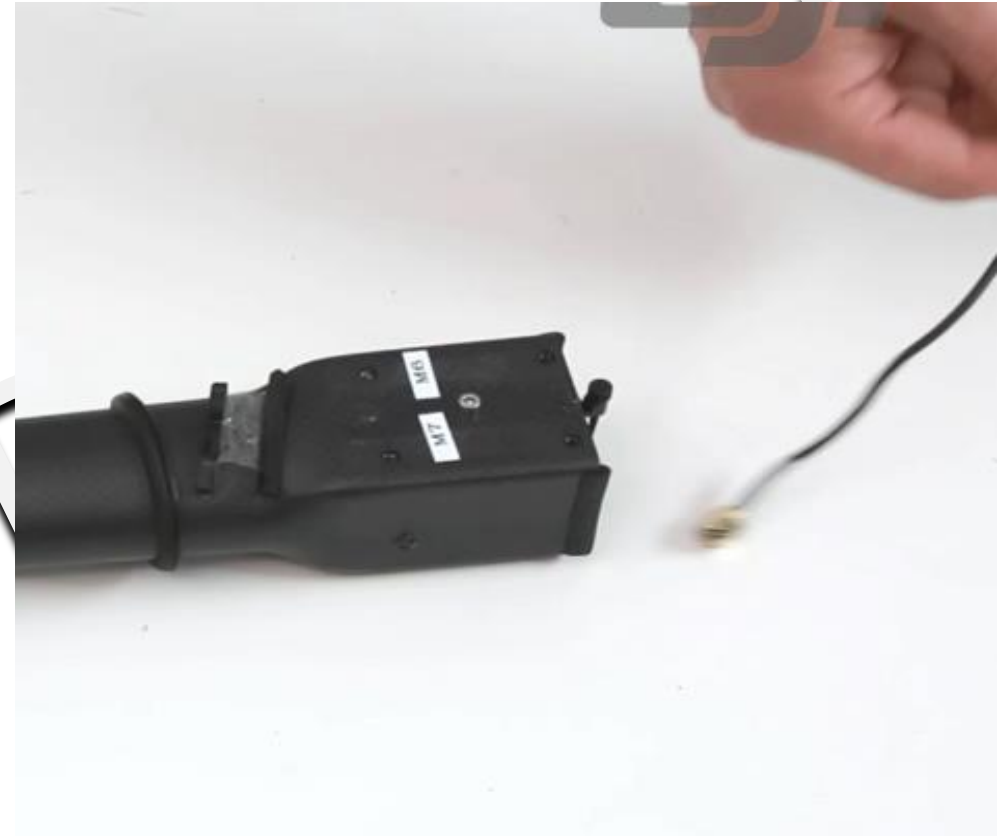

1. Remove the RTK antenna's mounting rubber from the Y-tee part.
2. Remove the RTK antenna feeder.

Disassembling the MG-1P

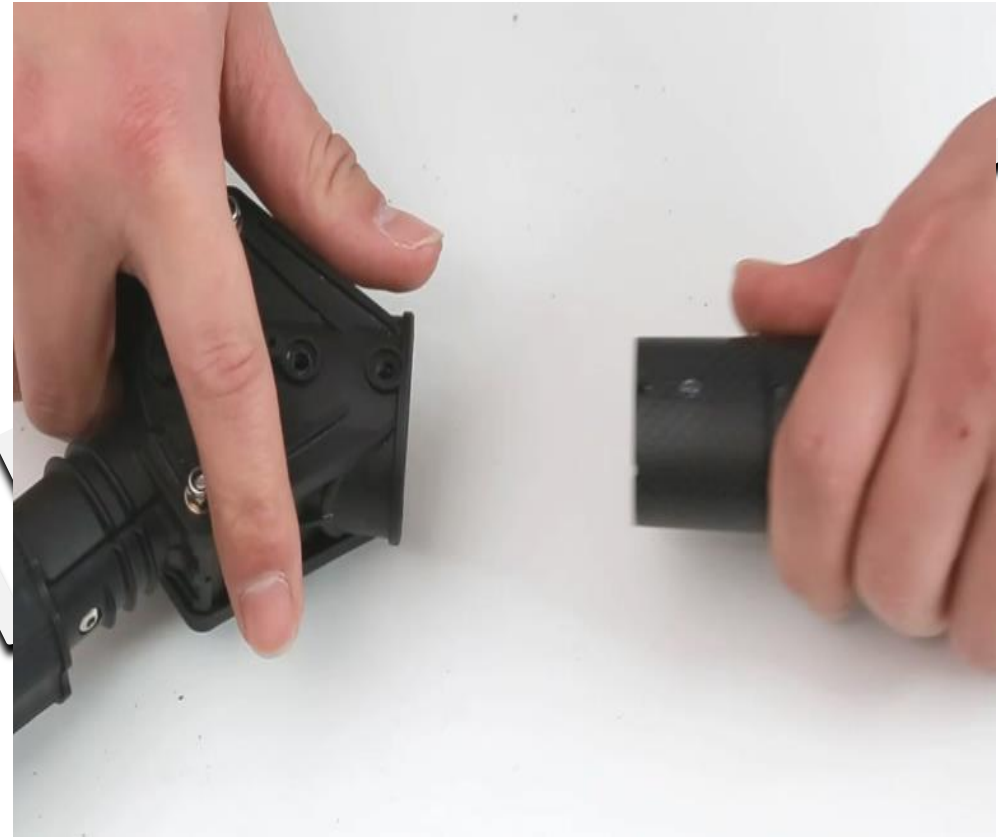

1. Remove the four screws on the carbon tube of the Y-tee part (two screws on each side).
2. Separate the Y-tee part and carbon tube. (Pay attention to the waterproof rubber ring on the carbon tube.)

Disassembling the MG-1P



1. Loosen and remove the long screw on the 25 carbon tube module with the sleeve.

2. Separate the 25 carbon tube module and the Y-tee part.

Disassembling the MG-1P




1. Remove the three screws securing the 25 carbon tube module and motor base.
2. Separate the 25 carbon tube module and the motor module.

Disassembling the MG-1P



1. Clean off the white glue on the soldering joints on the ESC board with the tweezers.
2. Disconnect the motor power cable from the ESC board with the soldering iron.

Disassembling the MG-1P

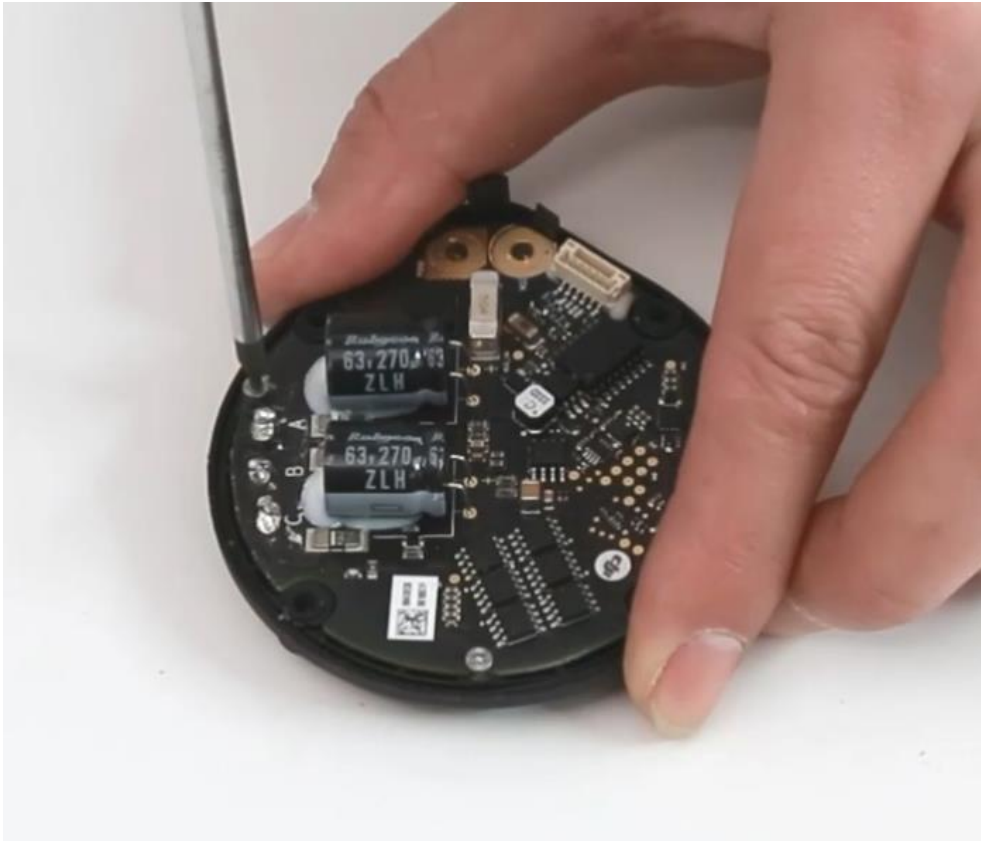


1. Remove the three screws securing the ESC board, then remove the ESC board.
2. Remove the brass gaskets and anti-slip nuts on the bottom motor cover.

Assembling the MG-1P

CONFIDENTIAL



Assembling the MG-1P

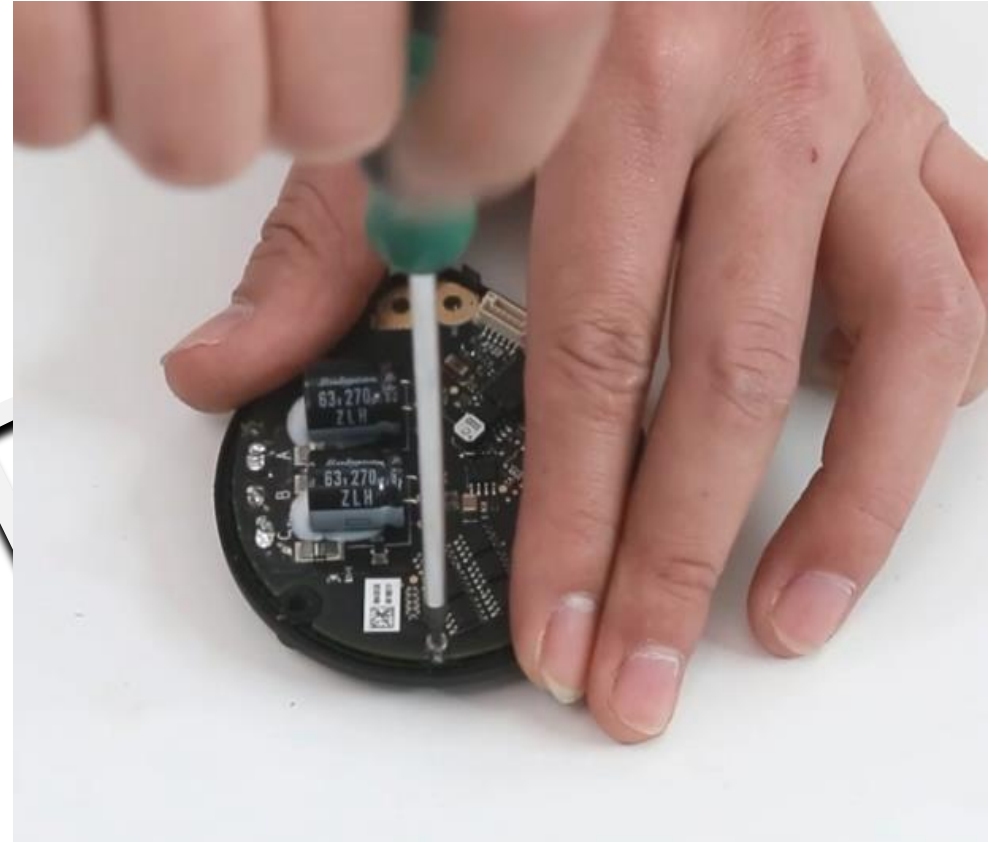

1. Mount the two anti-slip nuts to the bottom motor cover and mount two brass gaskets to the nuts.

2. Mount the ESC to the bottom motor cover and secure it with the three screws

Assembling the MG-1P




1. Apply an appropriate amount of tin to the ESC board's pad.

2. Solder the three power cables to the ESC board as shown.

CCW- Red, Black, Blue

CW- Red, Blue, Black

Assembling the MG-1P

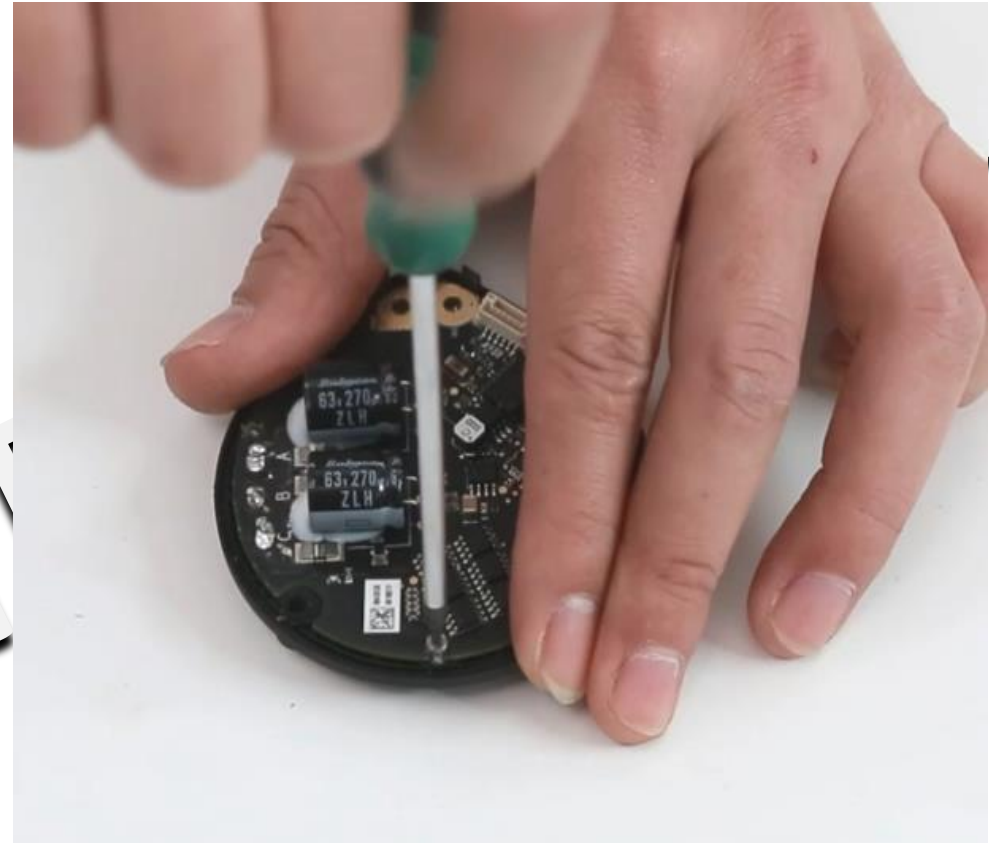

1. Mount the two anti-slip nuts to the bottom motor cover and mount two brass gaskets to the nuts.

2. Mount the ESC to the bottom motor cover and secure it with the three screws

Assembling the MG-1P



1. Mount the carbon board 25 module to the motor base. Mount the motor base's fixing piece and tighten it with the screw.

2. Tighten the two screws on the connection between the motor base and carbon tube 25 module.

Assembling the MG-1P




1. Ensure that the waterproof rubber ring is mounted in place.
2. Secure the two screws to each side of the Y-tee part.
3. Make sure that the sealing rubber ring is mounted.

Assembling the MG-1P



1. Pass the RTK antenna through the carbon tube and the antenna hole on the Y-tee part.
2. Mount the RTK antenna's rubber ring and fix the antenna.

Assembling the MG-1P

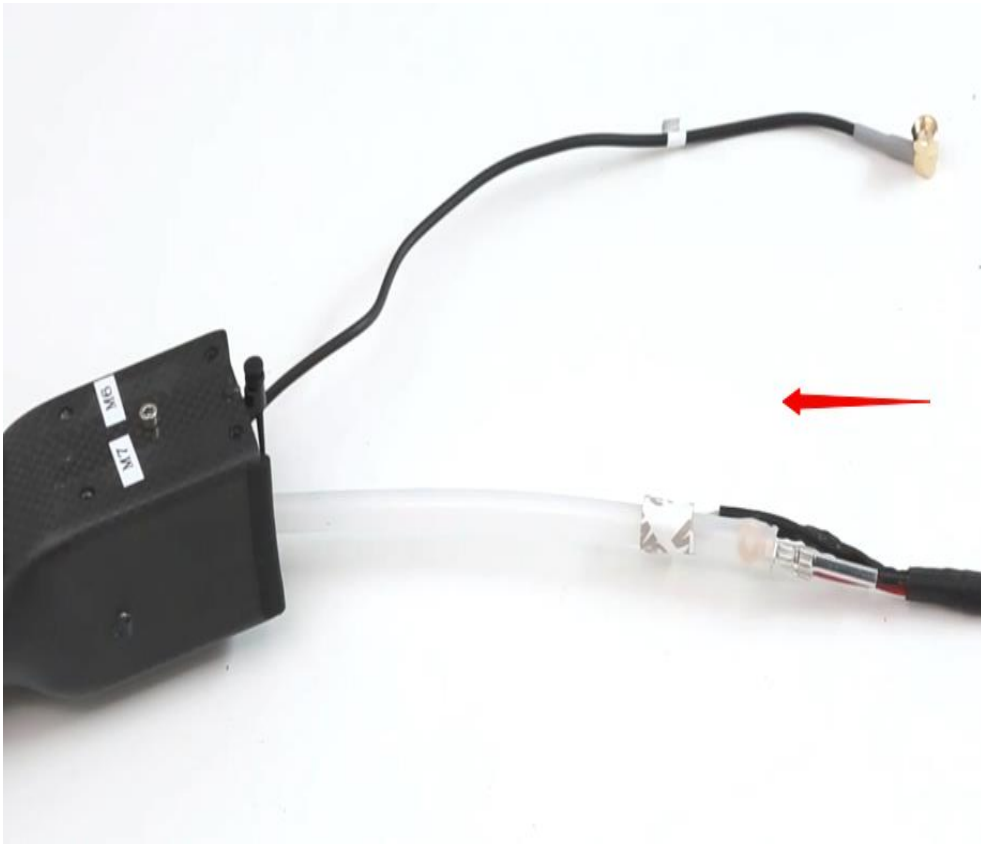

1. Pass one end of the Y-type composite cable through the Y-tee part and carbon tube by connecting a hose.

Assembling the MG-1P



1. Keep the RTK antenna facing upward, pass the left part of the Y-tee part through the GCW 25 carbon tube and right part to CW 25 carbon tube.
2. Mount the two 25 carbon tube modules to the Y-tee part and secure it with the two long screws and anti-slip nuts.

Assembling the MG-1P




1. Mount the screw and brass gasket to the red power cable. Connect the red power cable to the VCC port on the ESC board. Perform the same steps to connect the black power cable to the GND port on the ESC board.

2. Connect the motor signal cable and motor LED cable to the ESC board.

Make sure that the brass gasket is mounted when connecting the power cable.

Assembling the MG-1P

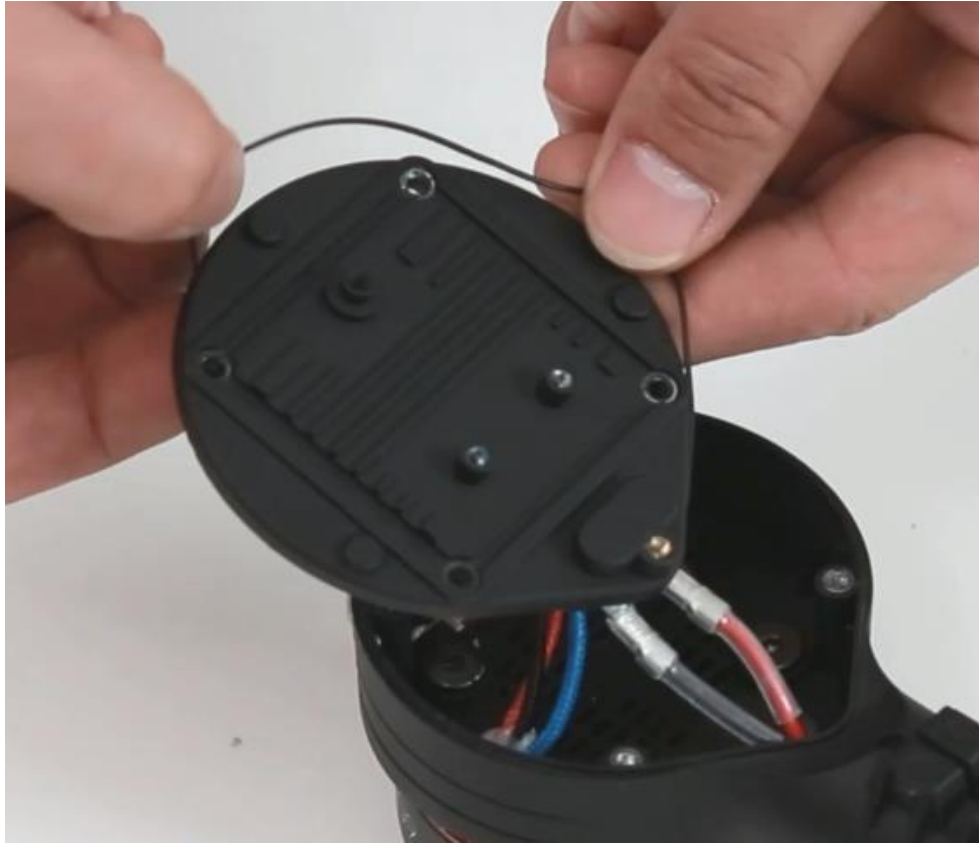

1. Mount the sealing rubber ring to the bottom motor cover.
2. Mount the bottom motor cover to the motor base and secure it with the four screws.

Assembling the MG-1P



1. Pass the RTK antenna through the mounting base.
2. Connect the RTK cylinder antenna and feeder.

Assembling the MG-1P





1. Secure the cylinder antenna and antenna's mounting base with the two screws.
2. Mount the screw adapter to the Y-tee part and secure with the screw.
3. Mount the antenna mounting base to the Y-tee part and secure with the three screws.

Assembling the MG-1P





1. Note that the screw adhesive must be applied before securing the screw.
2. Mount the reinforced carbon boards and secure them with the 16 screws.

Assembling the MG-1P

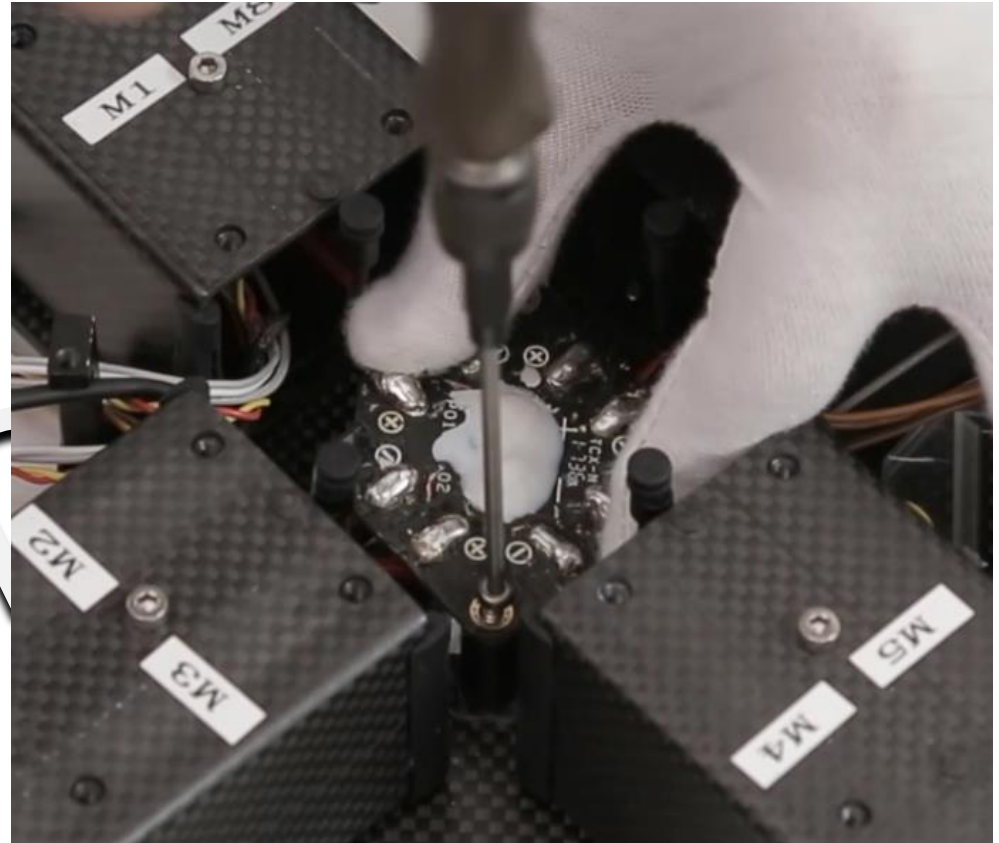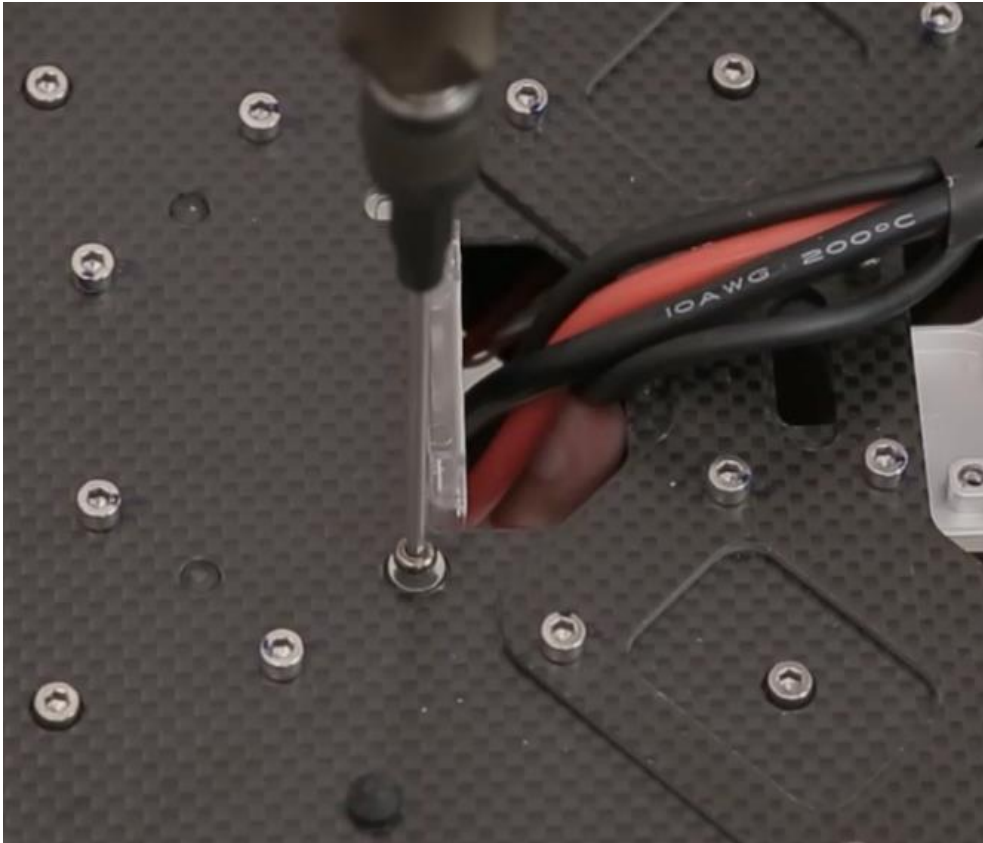




1. Mount the plastic fixing piece and power distribution board's fixing piece as shown. Mount the gasket and secure it with the screw.
2. Mount the power distribution board to the mounting piece and secure it with the two screws.

Assembling the MG-1P

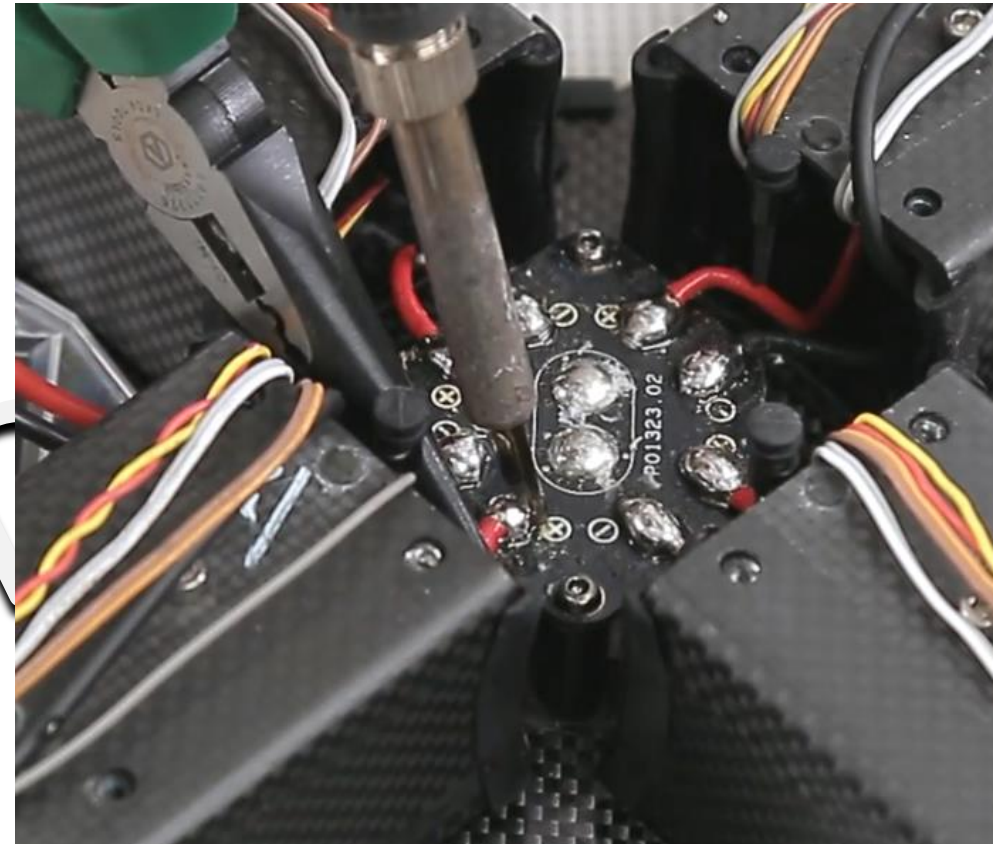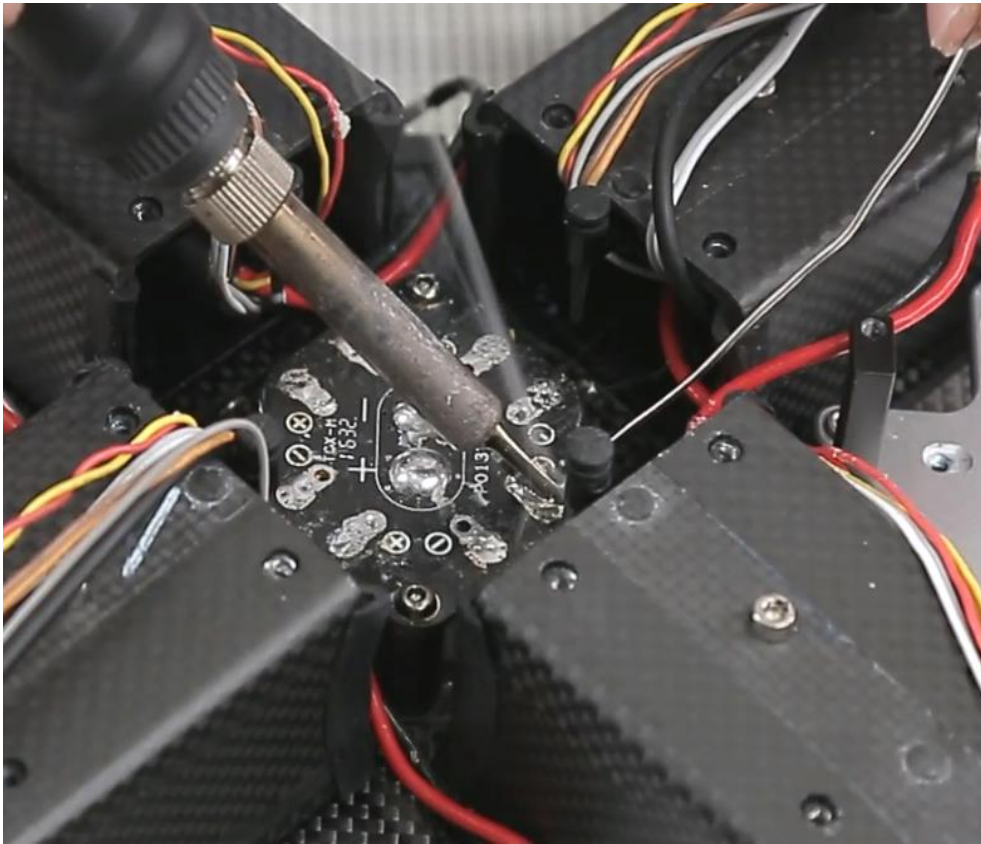


1. Apply the tin to the power distribution board's pad.
2. Solder the power cables to the power distribution board's fixing piece.
(Note that the red cable should be soldered to the anode and black to the cathode.)

Assembling the MG-1P

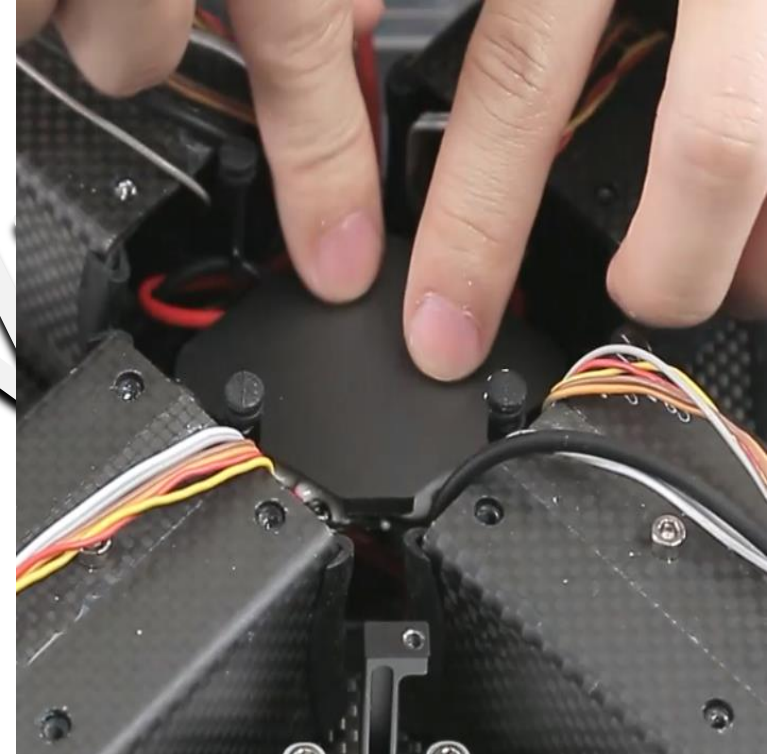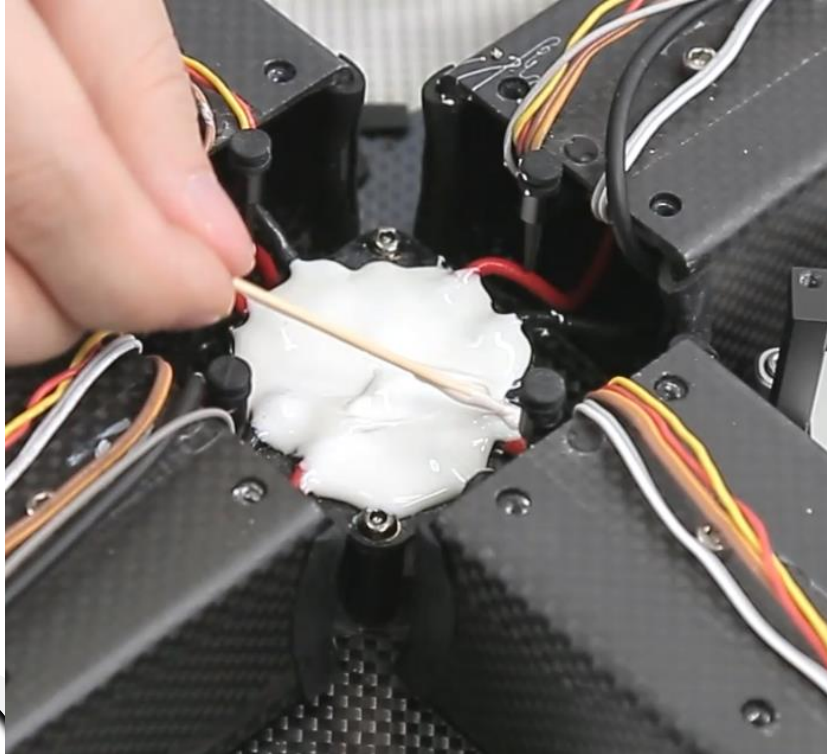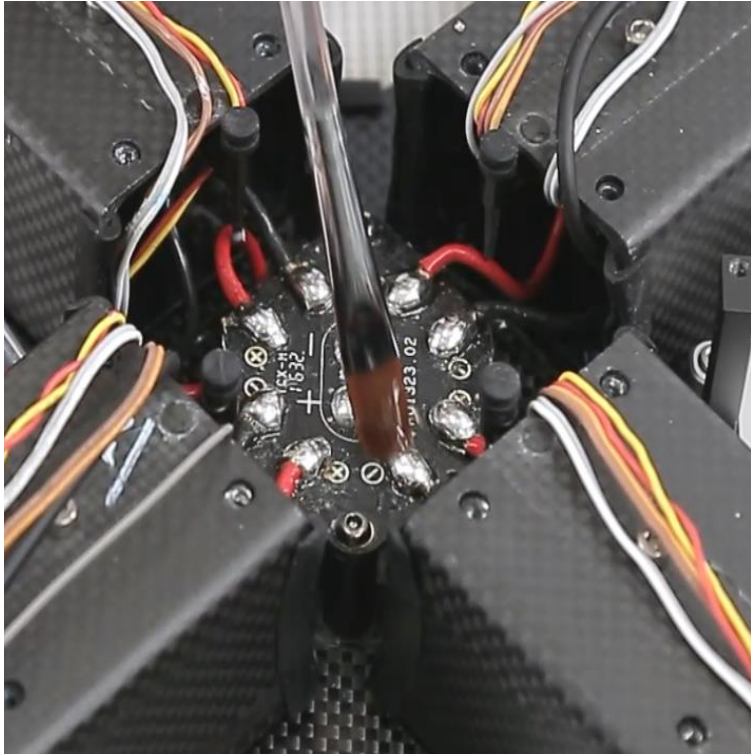

1. Apply an appropriate amount of insulating paint to all the soldering joints.
2. Apply an appropriate amount of white glue to the power distribution board. Ensure all the soldering joints are covered.
3. Attach the fireproof foam to the power distribution board and press it down to ensure that it is mounted firmly.

Assembling the MG-1P

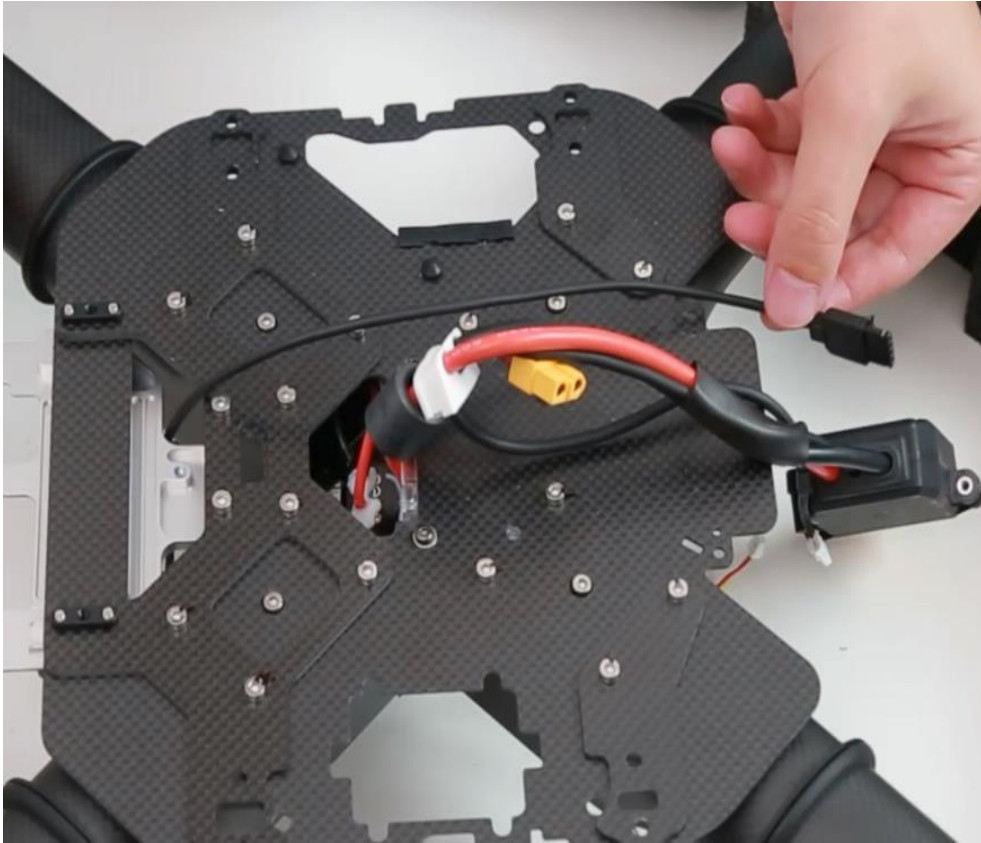

1. Pass the CAN cable connecting the main controller to the central board, and power cable connecting the main controller and central board through the holes on the lower carbon board.

Assembling the MG-1P



1. Pass the cable connecting the SDR USB port and central board, and FPV power cable connecting the pin port on the central board through the holes on the lower carbon board.

Assembling the MG-1P




1. Mount the bottom shell to the bottom of the aircraft.
2. Arrange the four arm's sealing rings.

Assembling the MG-1P



1. Mount the carbon board's fixing piece from the bottom to top as shown, align the screw and tighten it.

Assembling the MG-1P

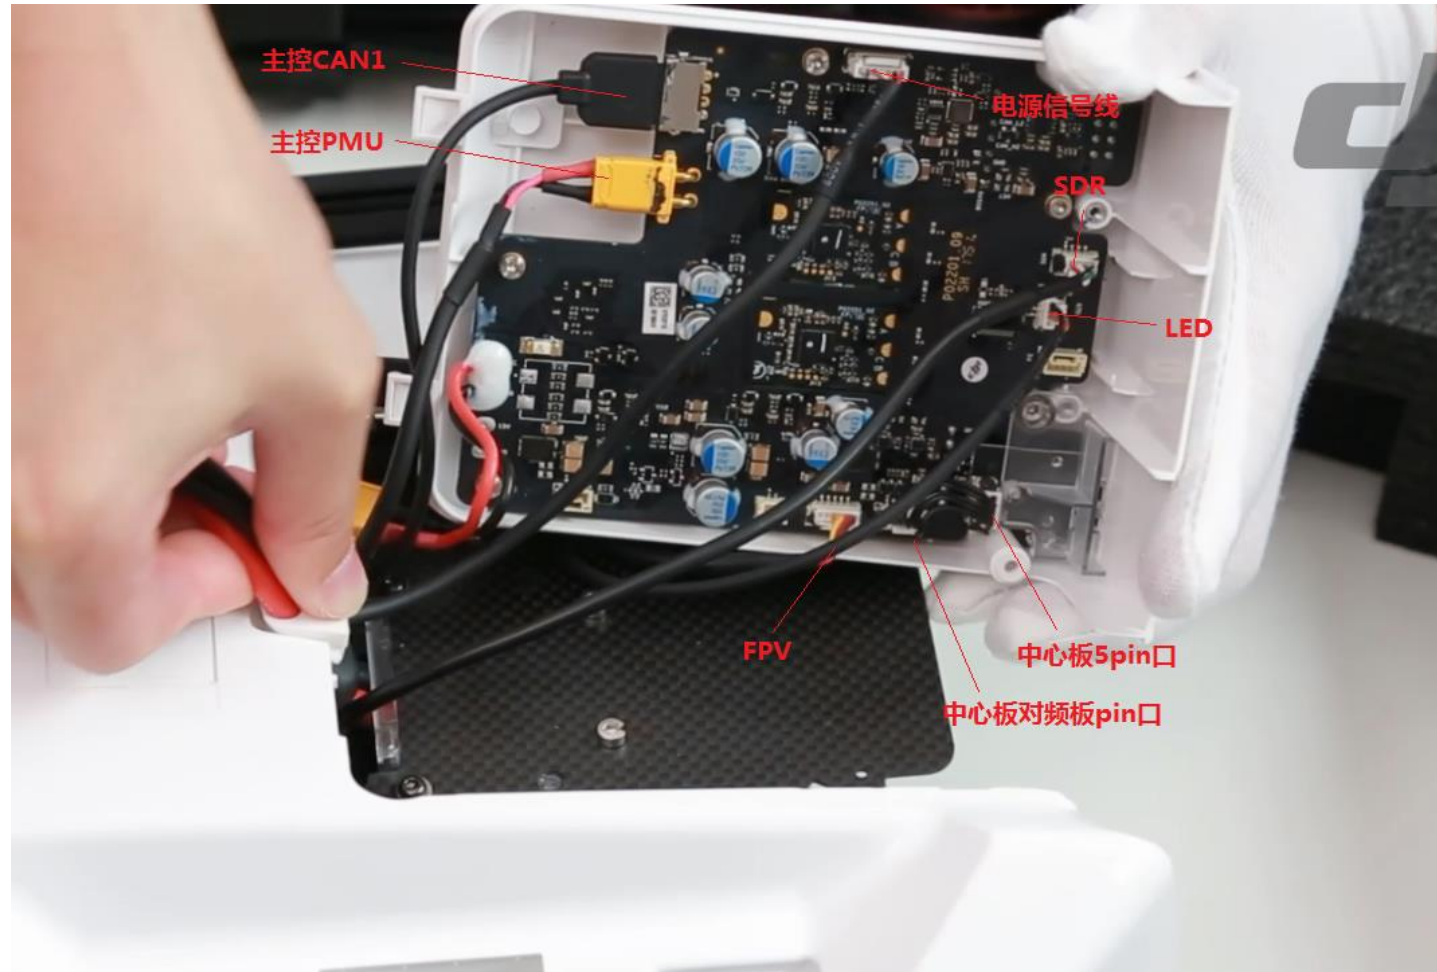



1. Connect the cable connecting the power distribution board and central board, FPV power cable, SDR data cable, main controller CAN 1 cable, and smart plug data cable to the central board.

Assembling the MG-1P



1. Mount the smart adaptor's cable rubber to the lower shell. Mount the rear shell to the lower shell and secure them with the two screws. (Make sure the cables are not pinched.)

Assembling the MG-1P

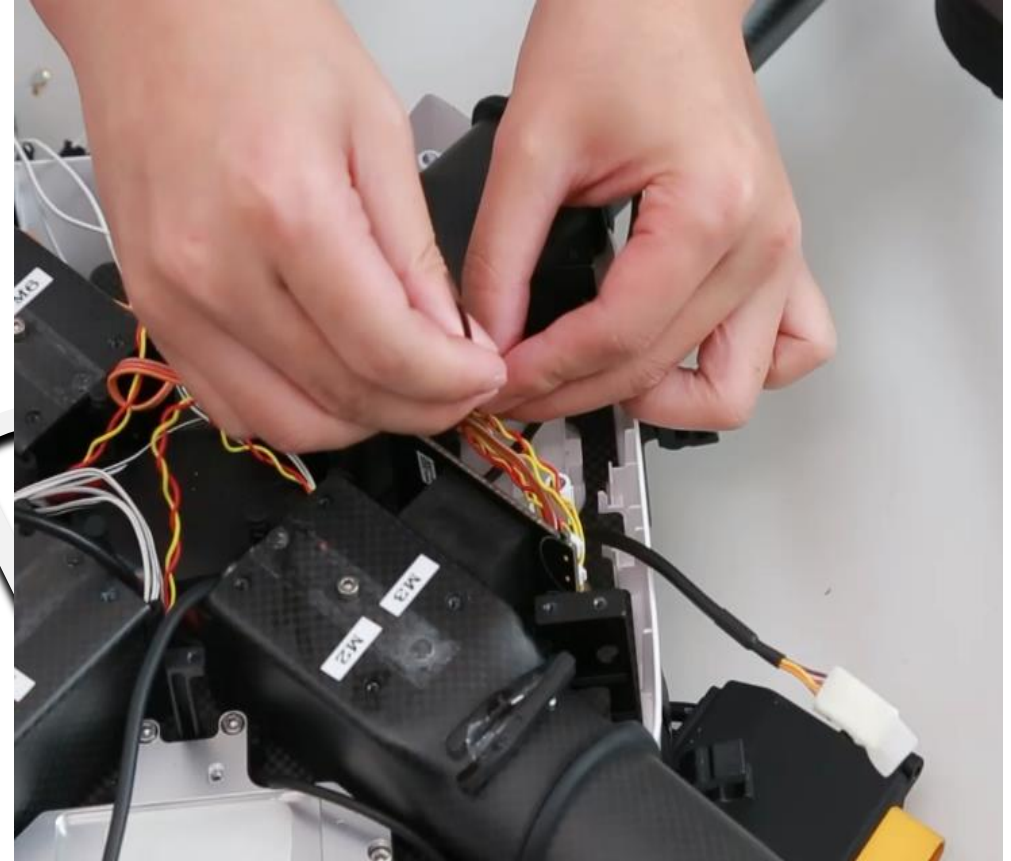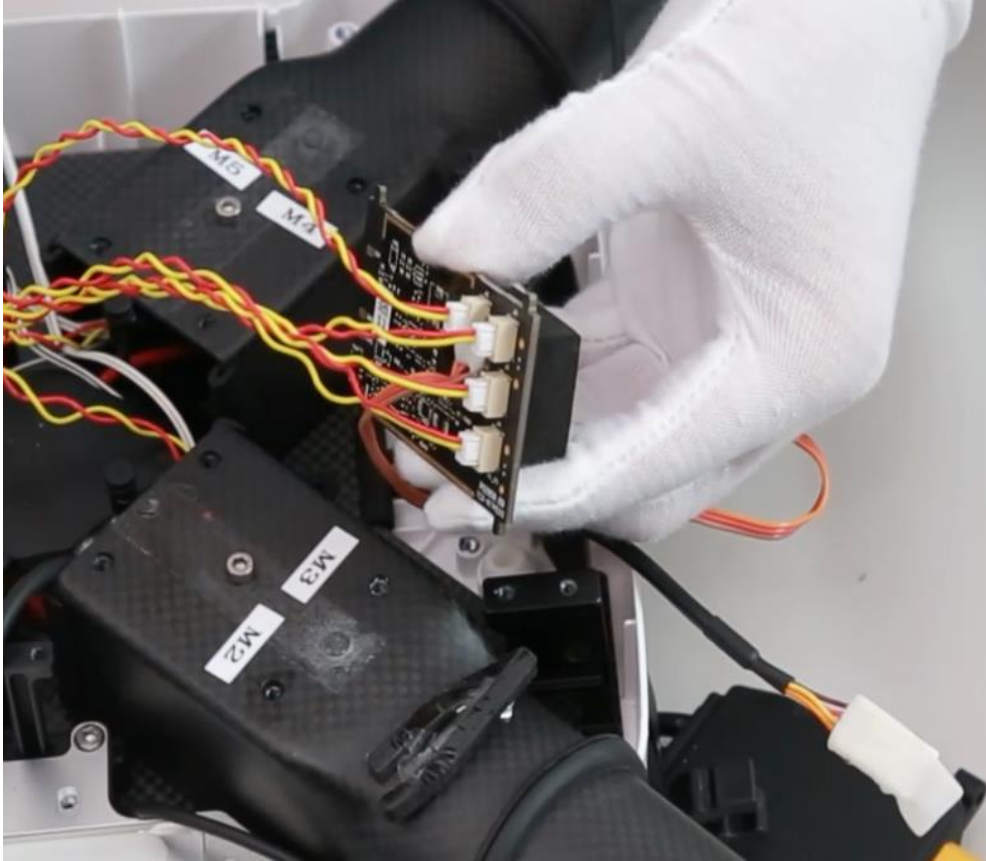




1. Turn over the aircraft and connect the 485 signal cables on the M1 to M4 arms to the 485 board as shown.
2. Mount the 485 board to the lower carbon board and fix the EVA foam to the 485 board with the 3M adhesive.

Assembling the MG-1P





1. Mount the FPV module to the lower shell and secure it with the four screws.
2. Connect the quick-release connector between the FPV module and central board and fix the connector to the side surface of the lower shell with the 3M adhesive.

Assembling the MG-1P

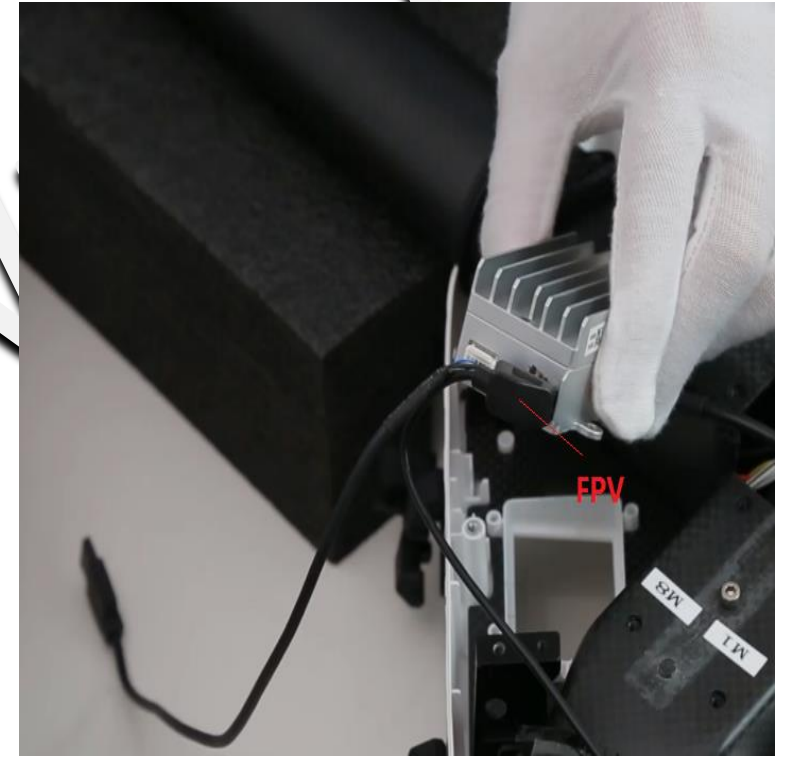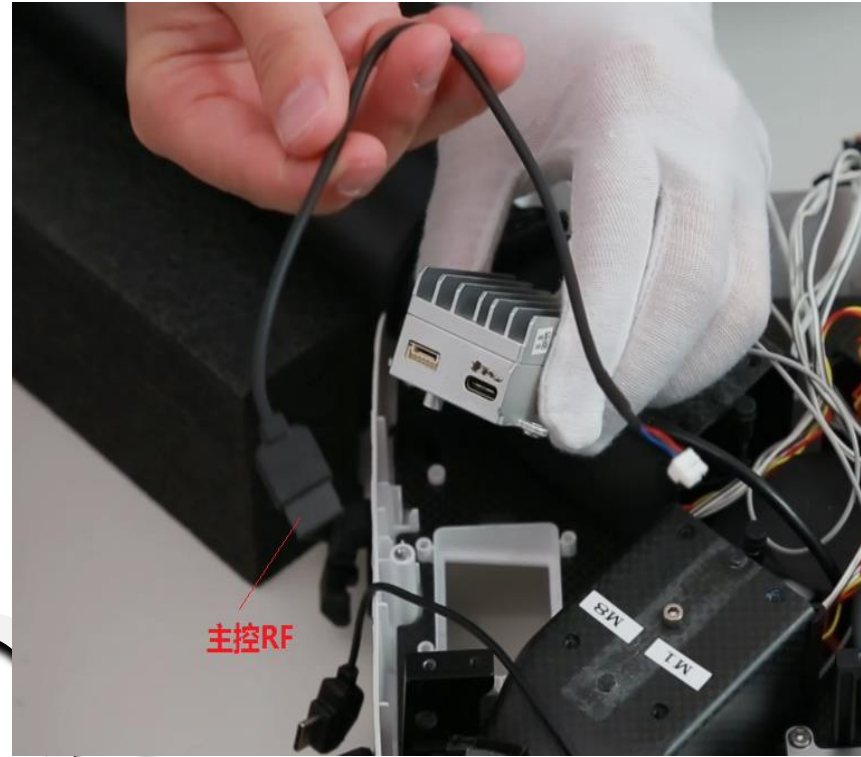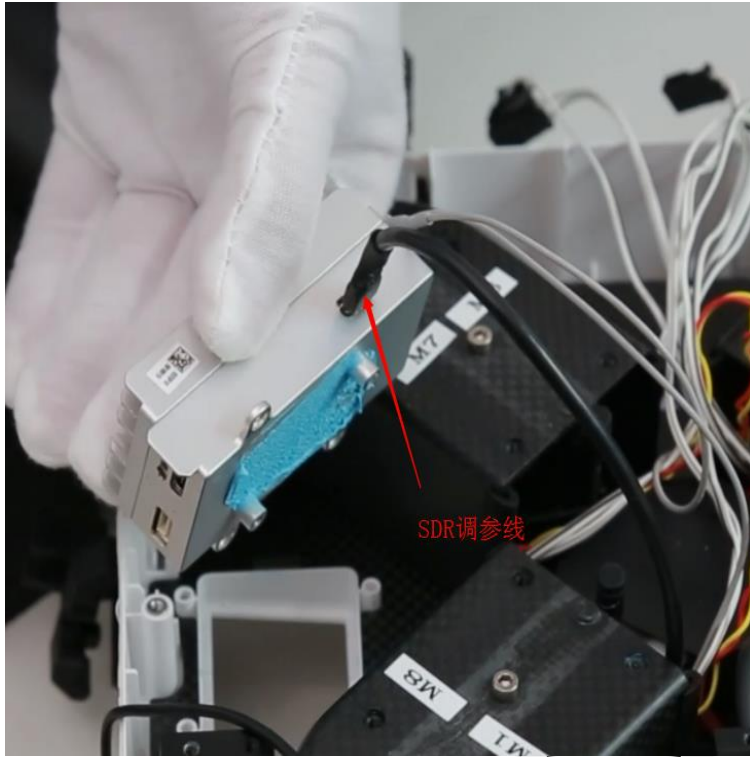



1. Connect the SDR antenna, SDR data cable, cable connecting the SDR to the main controller, and cable connecting the SDR to the FPV to the SDR module.

Assembling the MG-1P

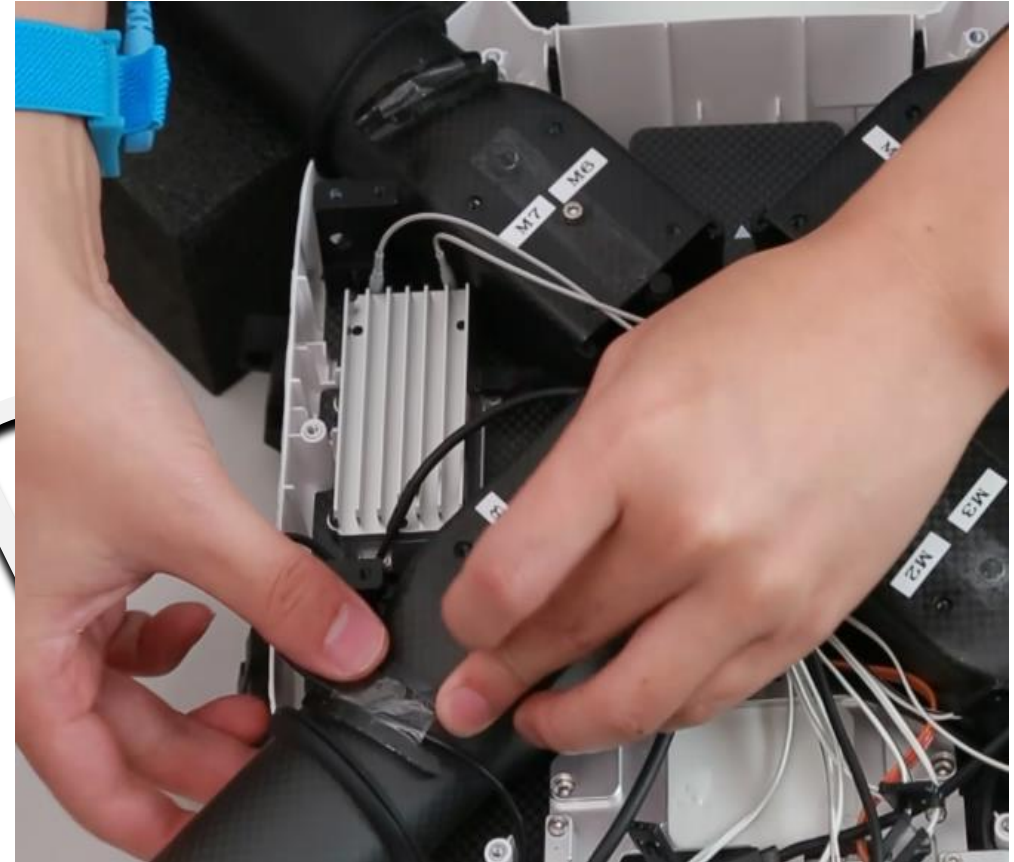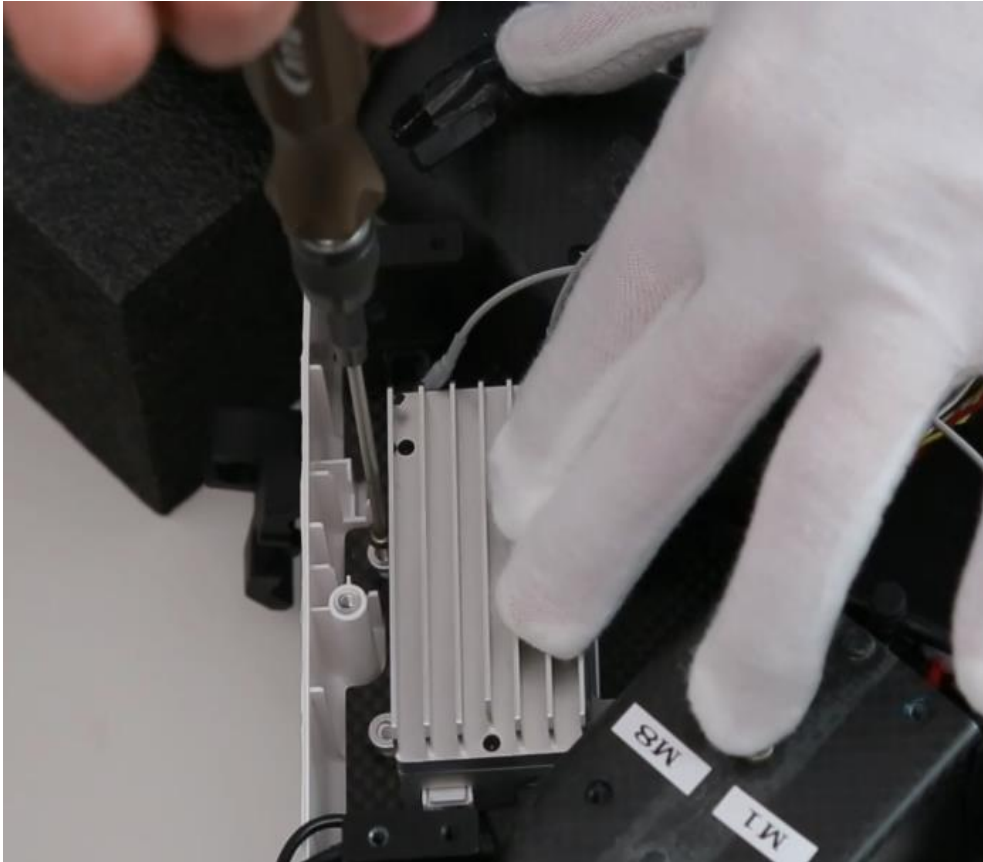


1. Mount the SDR module to the lower shell and secure it with the three screws.
2. Arrange the cables and bind them with zip-ties.

Assembling the MG-1P

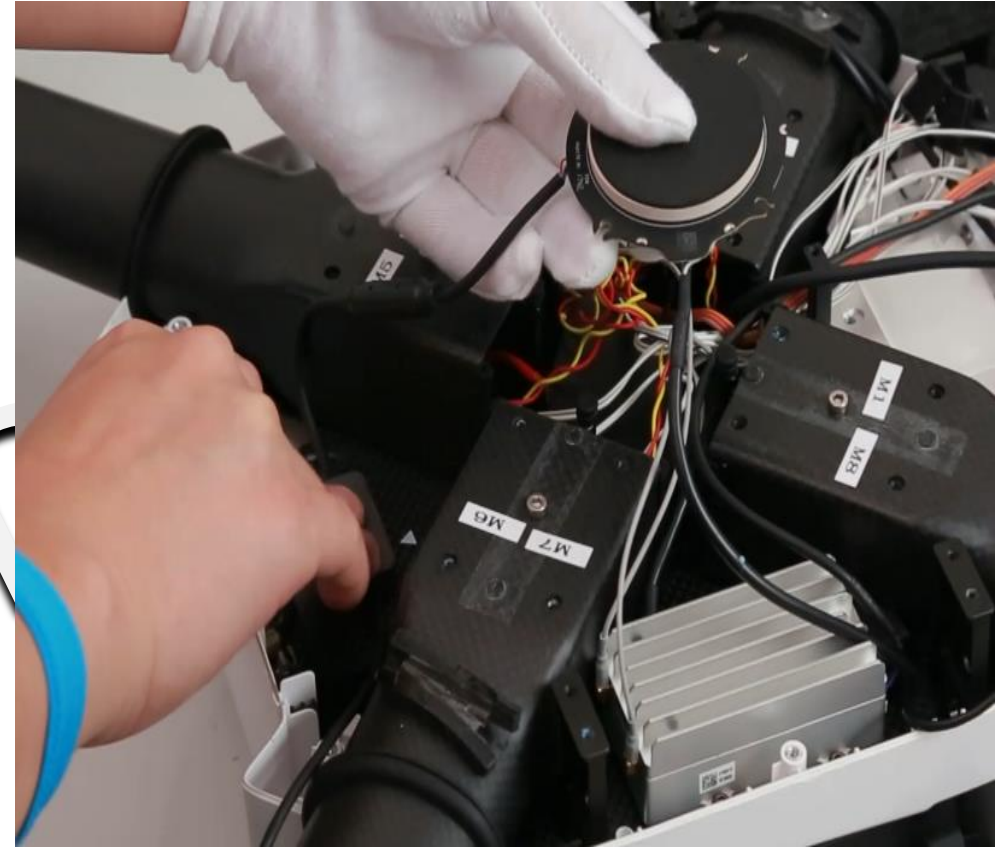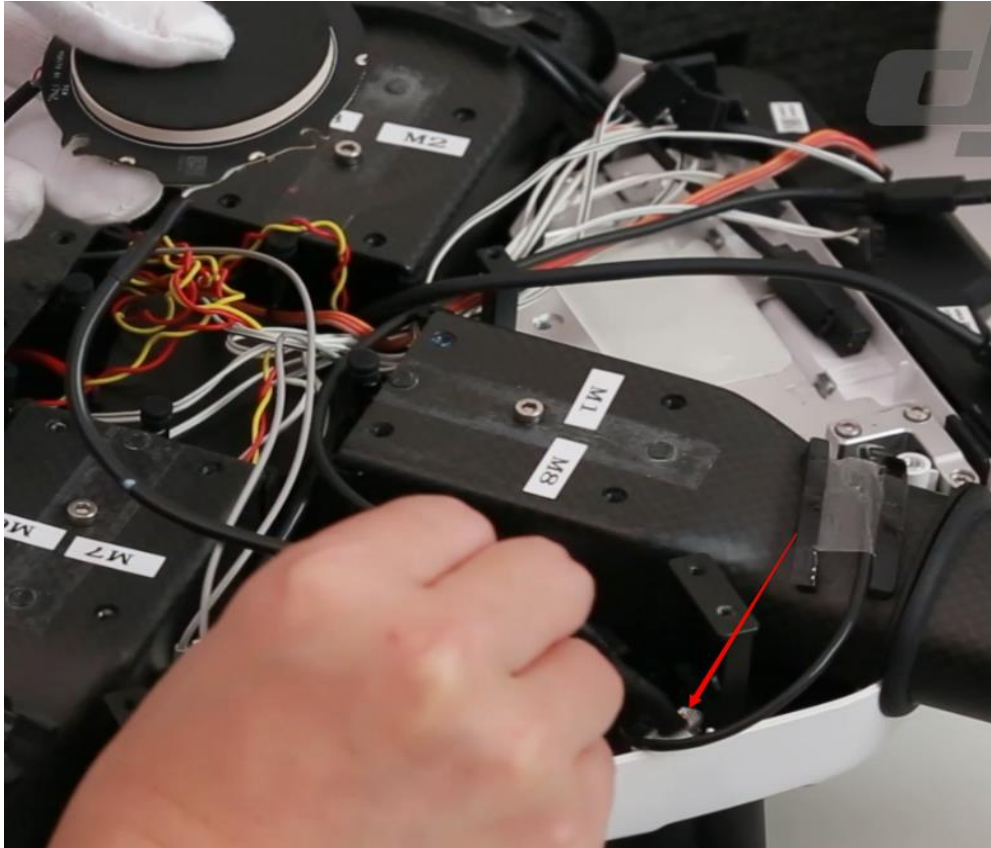


1. Pass the compass cable through the front right landing gear's fixing piece.
2. Attach the T-type part of the GPS signal cable to the bracket with the 3M adhesive to fix the cable to the large arm.

Assembling the MG-1P

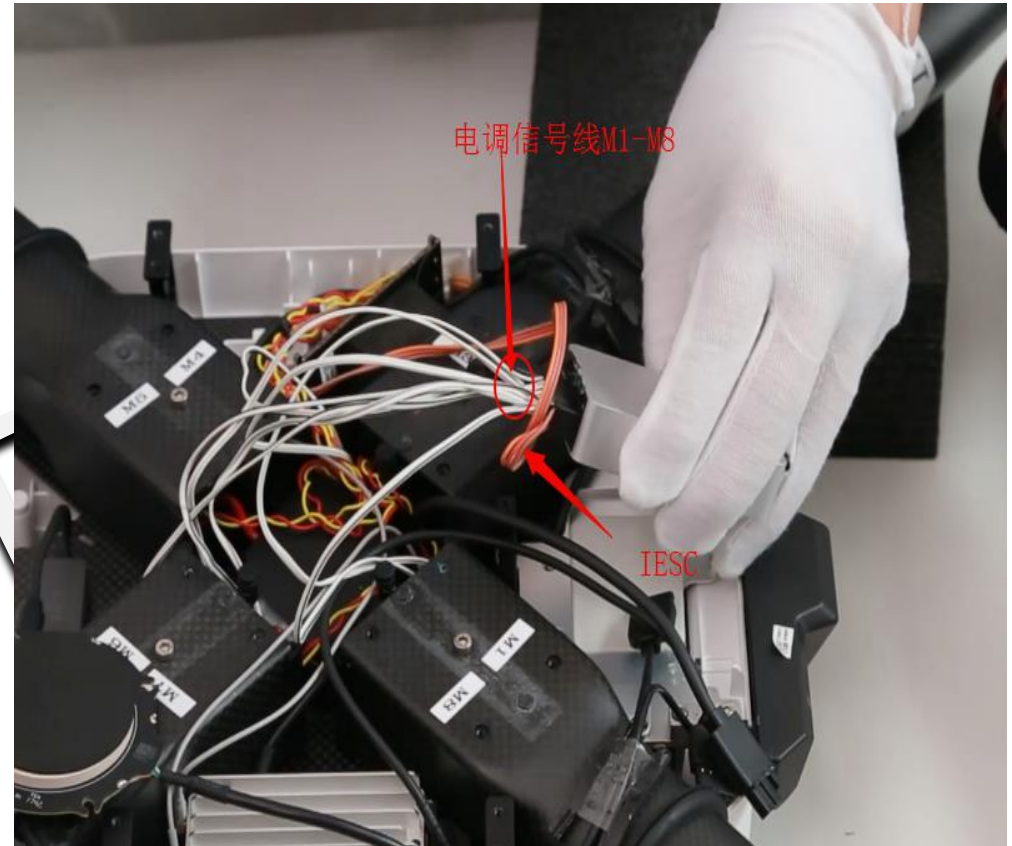

1. Connect the main controller assistant cable to the LED port.
2. Connect the M1 to M8 ESC signal cables and 485 cables to the iESC port on the main controller. (Note that the M1, M3, M5, and M7 signal cables are grey and white while M2, M4, M6, and M8 cables are black and white.)



Assembling the MG-1P

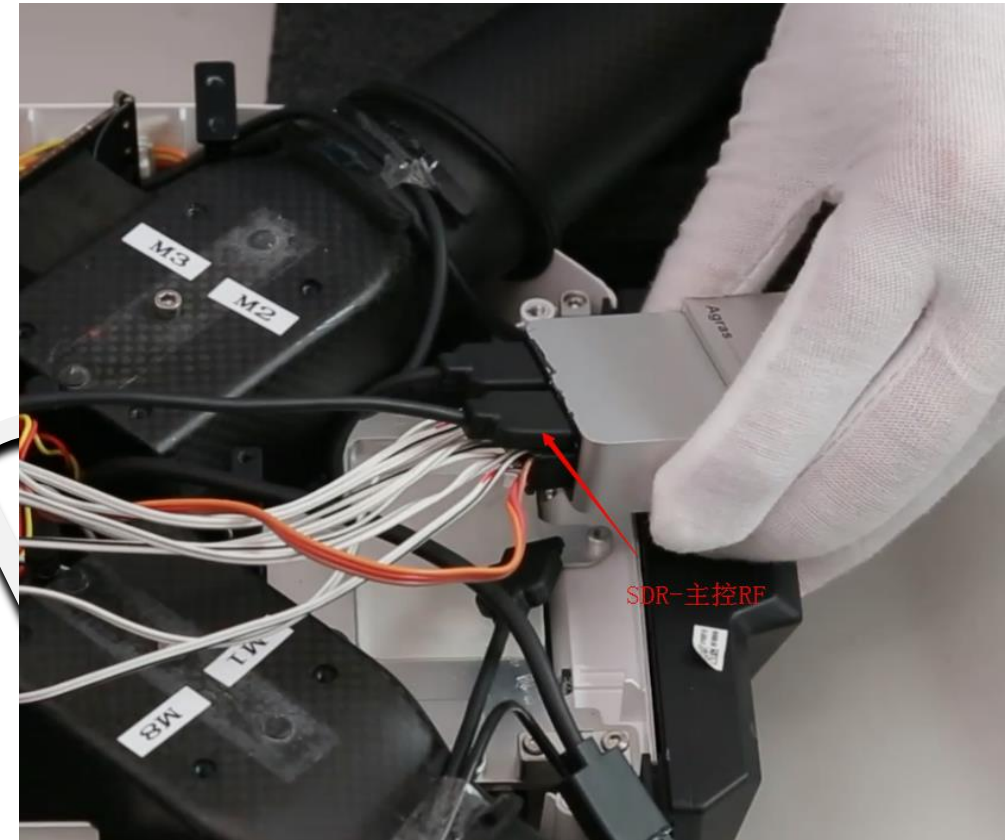

1. Connect the CAN cable connecting the central board to the main controller to the CAN1 port.


2. Connect the cable connecting the central board to the main controller to the RF port.

Assembling the MG-1P

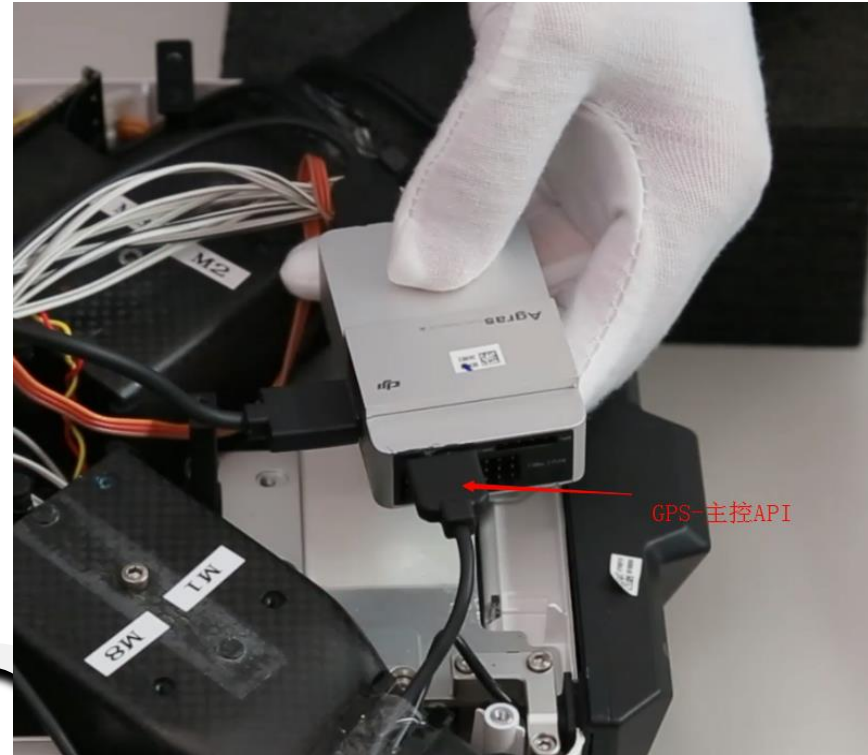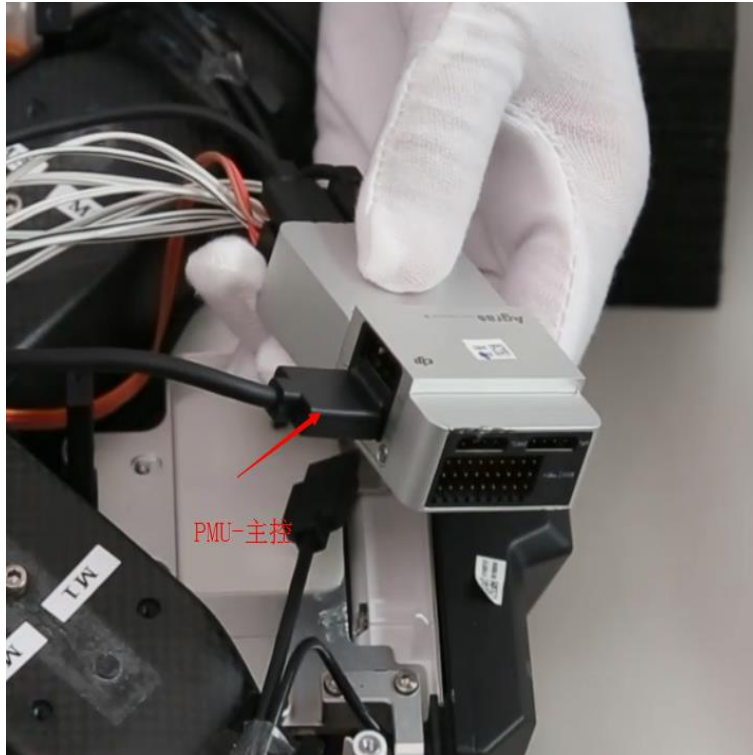


1. Connect the main controller power cable to the PMU port.
2. Connect the GPS signal cable to the CAN2 port on the left of API.
3. Fix the main controller to the main controller's fixing piece with the 3M adhesive. Mount the main controller's mounting piece and secure it with the two screws.

Assembling the MG-1P

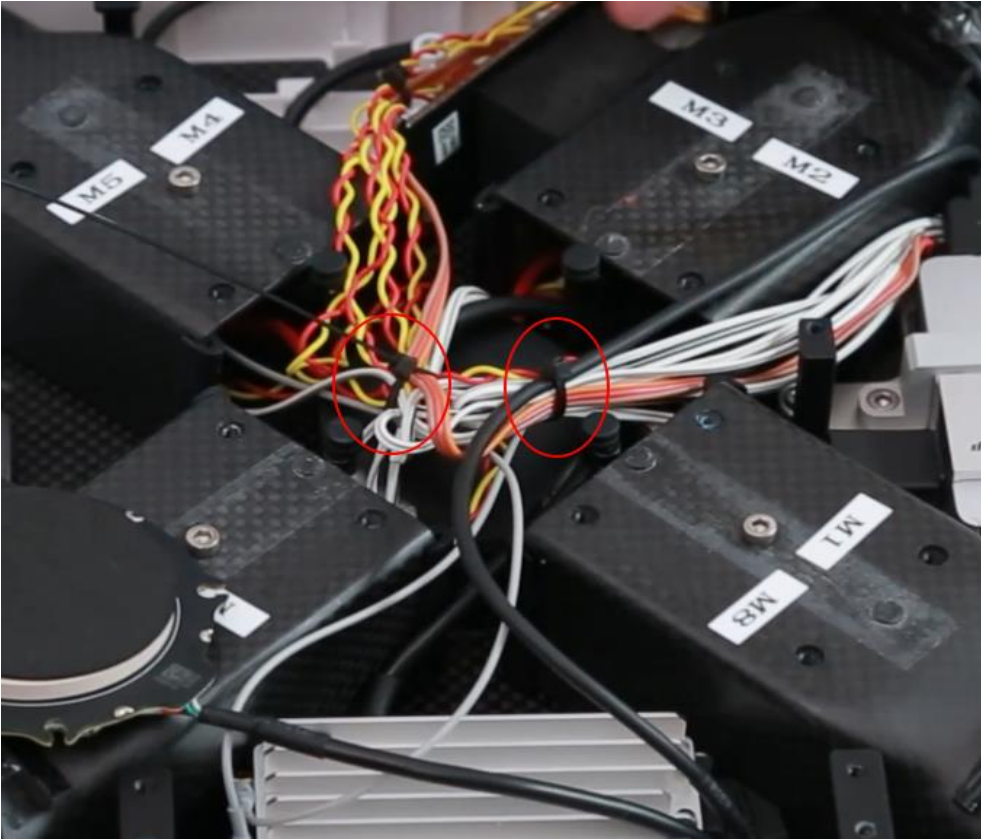

1. Arrange the cables and tighten them with zip-ties.
2. Mount the four rubber buckles to the GPS.

Assembling the MG-1P

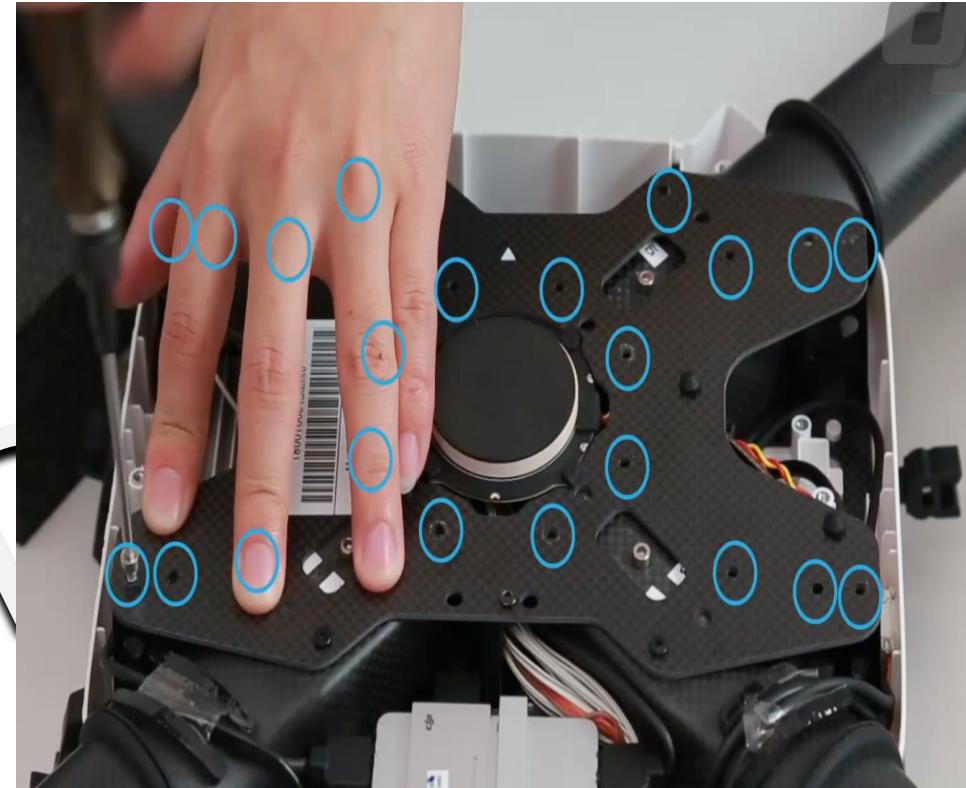

1. Mount the upper carbon board and mount the upper carbon board's rubber rings to the two raised parts on the 485 integrated board. Tighten the three thumb screws as shown.


2. Pre-tighten the screws on the upper carbon board first, and tighten all the screws after the screws are secured.

Assembling the MG-1P



1 Mount the upper cover, arrange the four sealing rings and tighten the six long screws.

Assembling the MG-1P

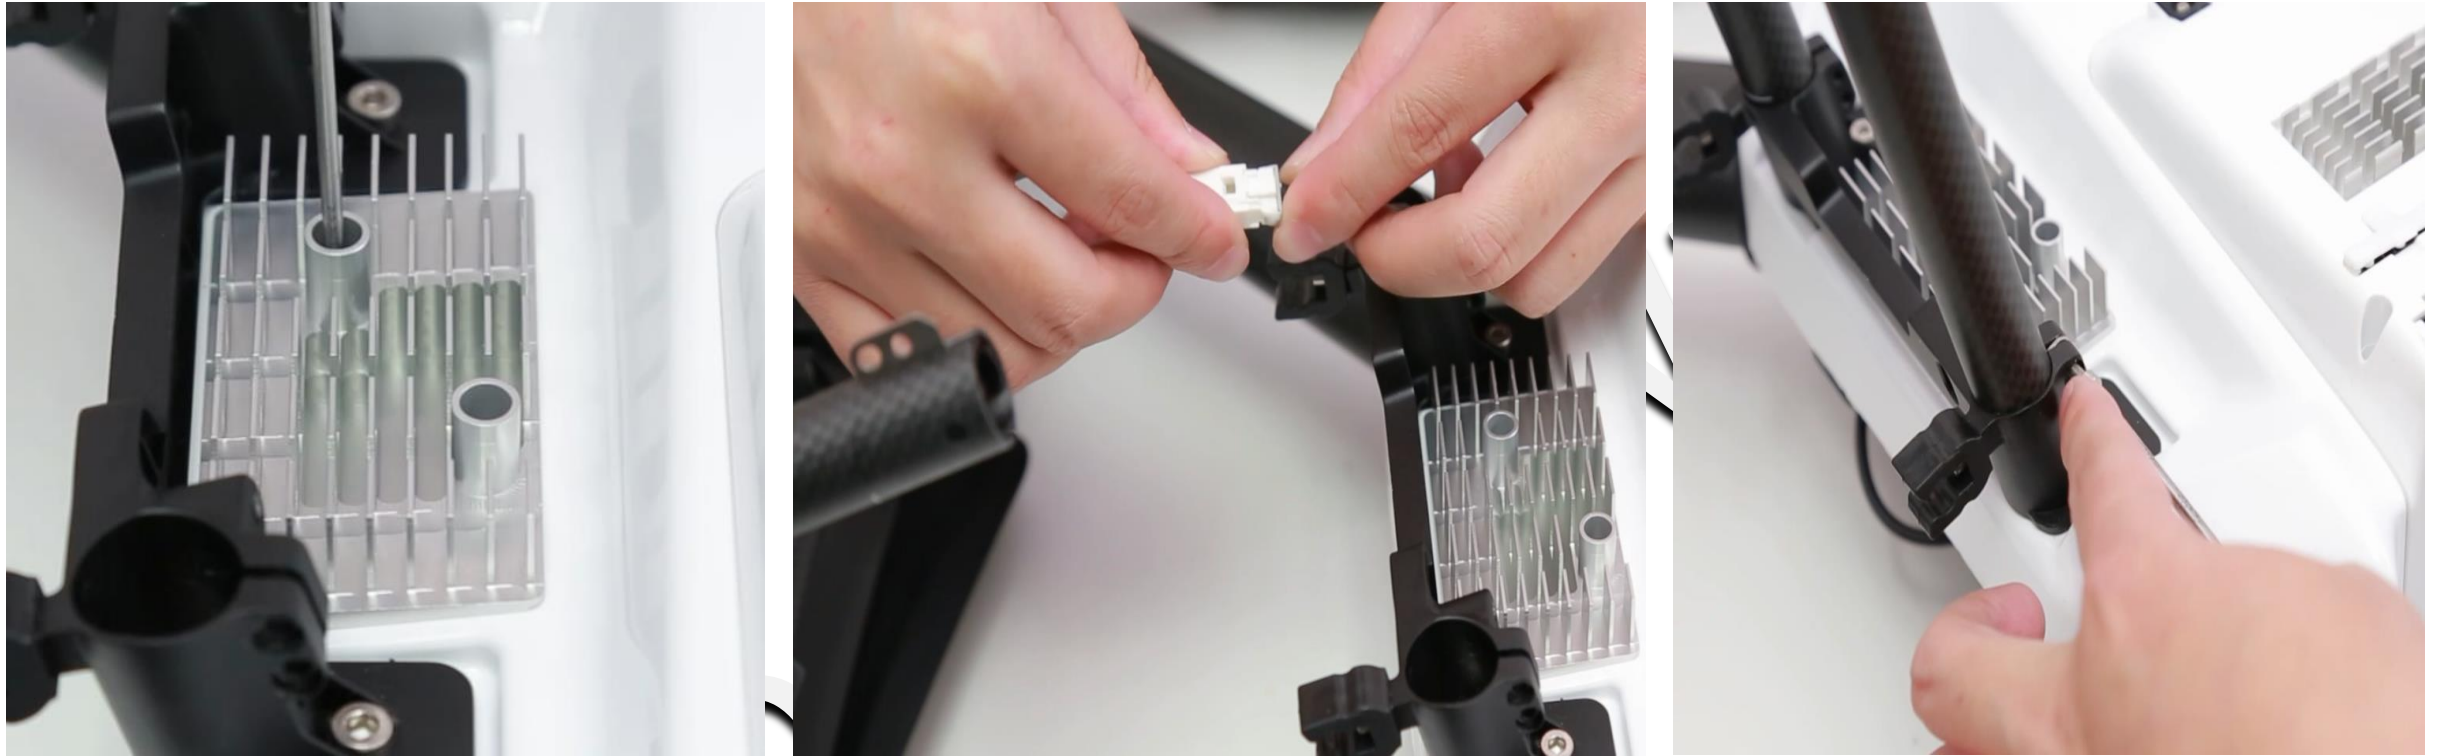

1. Mount the SDR heatsink and secure it with the two screws.
2. Connect the compass cable on the right landing gear.
3. Mount the right landing gear to the landing gear's fixing piece and tighten them with the four screws. (Do not damage the cables.)
4. Do the same to mount the left landing gear.

Assembling the MG-1P



1. Fix the power cable with the buckle.

2. Mount the power plug to the left landing gear and tighten it with the three screws.



INITIAL

**THANK
YOU**

DJI