#0 SEIKO SHUTTER

Type 734 C
735 C
127. 150 736 PRESS 100 2.8 1003.5
737 37 37 760 PRESS 75 mm


731 250 55


SERVICE MANUAL AND PARTS CATALOG


MAMIYA AMERICA CORPORATION 8 Westchester Plaza, Elmsford, NY 10523 • 914-347-3300




EXPLODED VIEWS

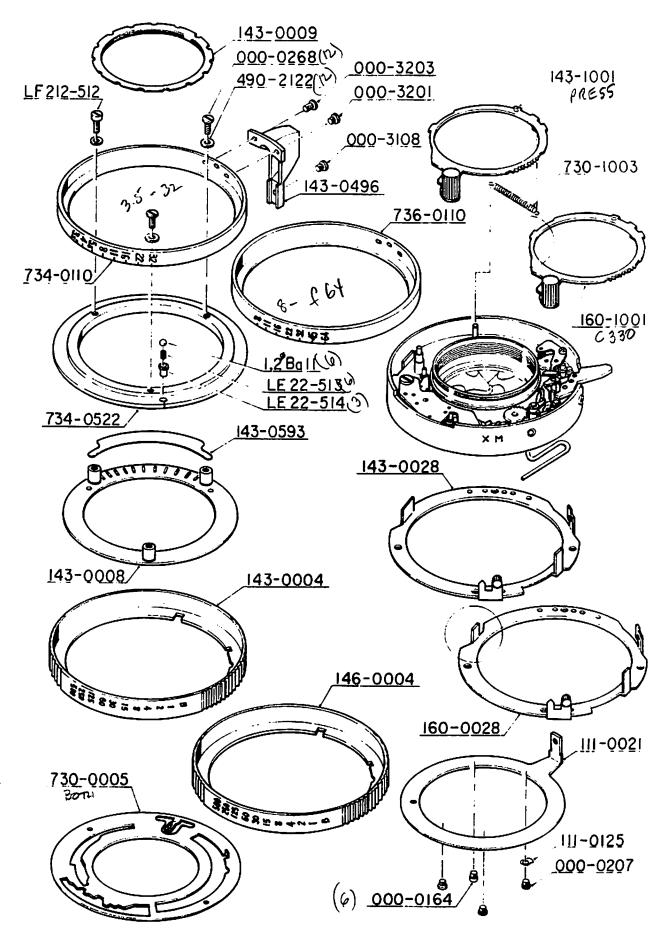

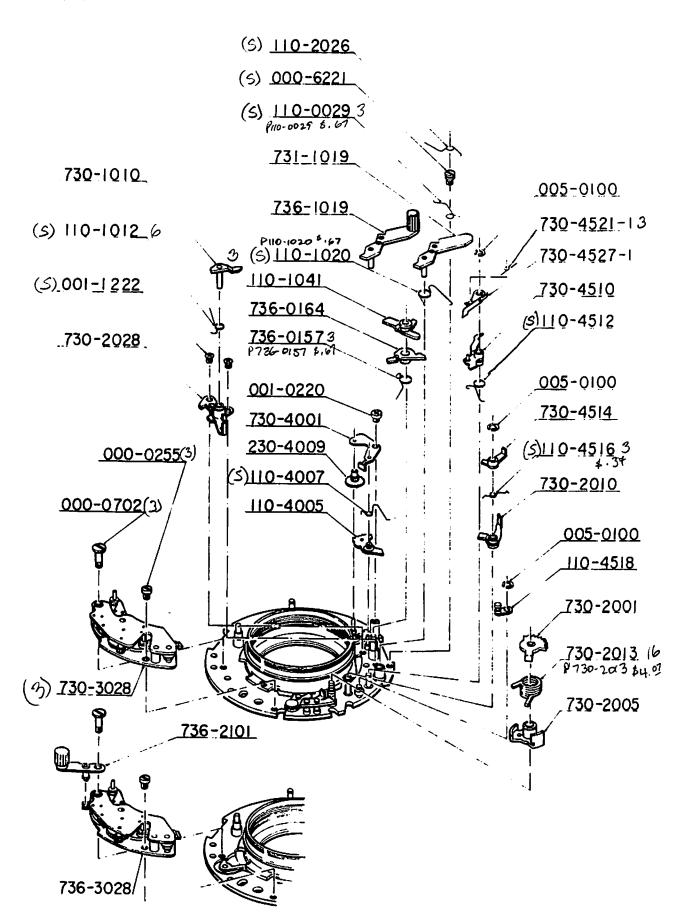

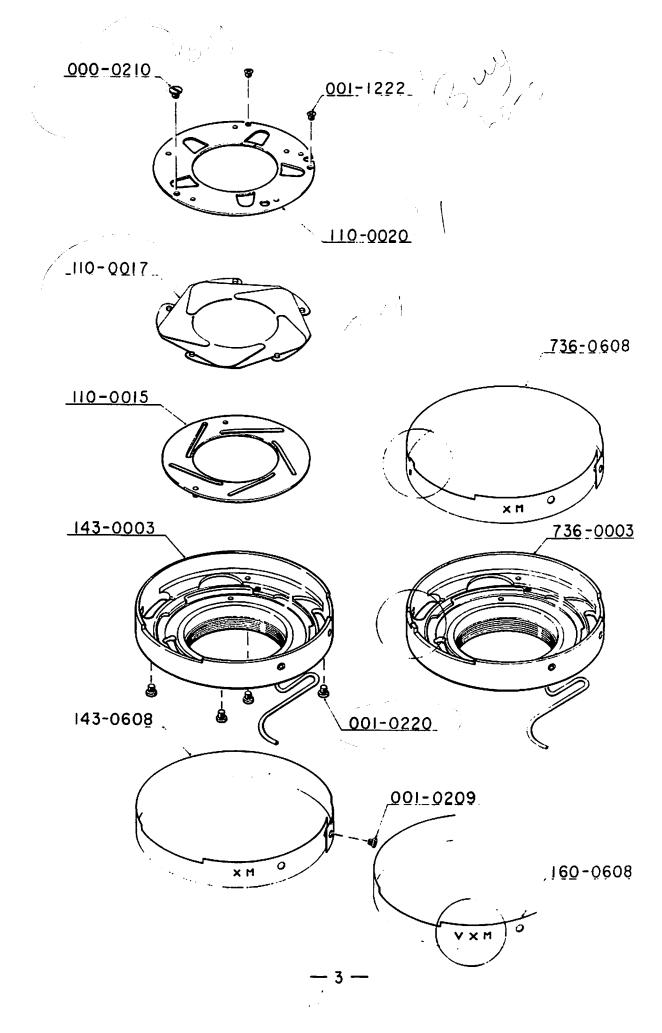

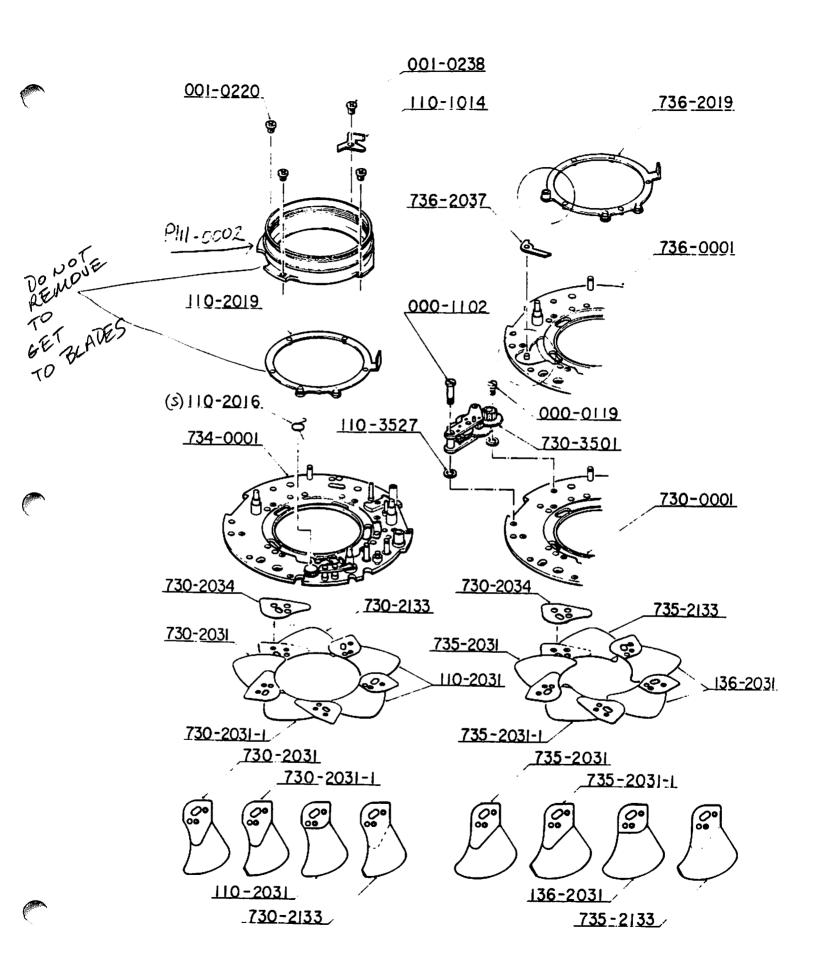

PARTS LIST

PARTS LIST

METHOD OF REQUESTING SPARE PARTS FOR REPAIR USE

When ordering spare parts for repair purposes, mark the request in the following manner after referring to our parts lists.

Spare parts are divided as follows:

Not considered usable for repairing x

Can be supplied o

Parts marked with " * " in the column of term of sale will be charged,

NOTE: When ordering spare parts, always type the complete code and numbers in the Parts No. column of the appropriate parts lists.

#0 SEIKO SLV SHUTTER Common Parts List

(Type 734. 735. 736. 737. 760.)

· / 50: / 5/: /	00.7
1	7

Parts Code No.	Description	Pcs.	Ref. Page	Term of Sale
111-0002	Lens tube	1	4	x
730-0005	Speed setting disk	1	1	0
143-0008	Front ring	1	1	0
110-0015	Diaphragm blade operating ring	1	3	o
110-0017	Diaphragm blade	5	3	o
110-0020	Blade supporting plate	1 .	3	0
111-0021	Aperture operation ring	:	1	0
110-0029	Spring	1	2	0
111-0125	Friction washer	1	2	0
143-0496	Aperture control knob	1	1	o
143-0593	Cover plate	1	1	0
734-0522	Index mark ring	1	1	0
490-2122	Washer	3	1	0
001-0220	Screw	3	4	o
001-0238	Screw " B "	1	4	o
001-0220	Screw	4	3	o
001-0209	Screw	1	3	0
001-1222	Screw	2	3	0
000-0210	Screw	1	3	0
000-0207	Sciew	3	1	o
000-0164	Locating pin	1	1	o
000-3108	Screw	1	1	o
000-3201	Screw " B "	1	1	0
000-3203	Screw " C "	1	1	0
000-0268	Screw	2	1	0
730-1003	Spring	1	1	0
110-1014	Cocking ring stopper	1	4	0
730-1010	Locking lever	1	2	0
110-1012	Spring	1	2	0
110-1020	Spring	1	2	0
110-1041	Lock lever	1	2	0

Parts Code No.	Description	Pcs.	Ref. Page	Term of Sale
730-2001	Cocking pinion	1	2	0
730-2005	Driving cam	1	2	0
730-2013	Main drive spring	1	2	0
730-2034	Sub blade	1	4	0
110-2016	Spring	1	4	0
730-2010	Lathing lever	1	2	0
110-2026	Spring	1	2	0
000-6221	Screw	1	2	0
000-0255	Screw " B "	1	2	0
000-0702	Screw	1	2	0
730-4001	SG upper plate	1	2	0
110-4005	SG 1st gear	1	2	0
110-4007	Spring	1	2	0
230-4009	SG star wheel	1	2	0
001-0220	Screw	1	2	0
730-4527-1	Contact lever	1	2	0
110-4518	X contact lever	1	2	0
730-4521-1	Spring	1	2	0
730-4510	M contact lever	1	2	0
110-4512	Spring	1	2	0
730-4514	Latching lever	1	2	0
110-4516	Spring	1	2	0
005-0100	E retaining ring	3	2	0
730-2128	Bulb lever	1	2	0
001-1222	Screw	2	2	0

#0 SEIKO SLV SHUTTER Exclusive Use Parts List

(Type 734 735 736 737 760)

	<i>Parts</i>	Code No.			De scr iption	Pcs.	Ref.	Term
1	(Shutt	er Type)					Page	of Sale
7/4	736	736	7\77	760				3416
734-0001	734-0001	736-0001	730-0001	736-0001	Base plate	1	4	o
143-0003	143-0003	736-0003	143-0003	736-0003	Shutter casing	1	3	o
143-0004	143-0004	146-00 04	143-0004	146-0004	Shutter speed ring	1	1	o
143-0028	143-0028	143-0028	160-0028	143-0028	MX. Setting ring	7 1	1	0
143-0608	143-0608	736-0608	160-0608	736-0608	Cover plate for casing	1	3	0
143-1001	143-1001	143-1001	160-1001	143-1001	Cocking ring	1	<u>:</u>	0
731-1019	731-1019	736-1019	731-1019	736-1019	Reiease lever	1	2)
110-2019	110-2019	736-2019	110-2019	736-2019	Blade actuating ring	1	4	o
730-2031-	-1 735-2031	-1 730-203	1-1 730-20	31-1 735-2	031-1 Shutter bla	de 1	4	j
730-2031	735-2031	730-2031	730-2031	735-2031	Shutter blade	1	4	0
110-2031	136-2031	110-2031	110-2031	130-2031	Shutter blade	2	4	0
730-2133	735–2133	730-2133	730-2133	735-2133	Shutter blade	1	4	0
-	-	736-2101	-	736-2101	Press focus leve	erl	2	0
-	-	736-2037	-	736-2037	Opening lever	1	4	0
730-3028	730-3028	736-3028	730-3028	736 -3028	Speed regulating governer	1	2	o
-	-	-	730-3501	-	Self-timer gover	nerl	4	9
-	-	-	110-3527	-	Washer	2	4	0
-	-	-	000-1102	-	Screw	1	4	0
-	-	-	000-0119	-	Screw	1	4	o
734-0110	735-0110	736-0110	737-0110	760-0110	Aperture ring	1	1	o
	As	to details	, please r	efer to Re	pair manual.page	5.		
-	-	736-0164	-	736-0164	Locking lever " B "	1	2	0
-	-	736-0157	-	736-0157	Spring	1	2	0
/////	///////////////////////////////////////	///////////////////////////////////////	///////////////////////////////////////	///////////////////////////////////////	///////////////////////////////////////	////	/////	////

REPAIR MANUAL


Moreover, the type of the shutter has been changed from 353R Type to 730 Type.


Speed regulating governor and Shutter setting disc vary with the type of the shutter used.

Professional "C" Series Shutter


353R Type







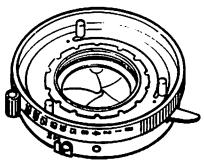



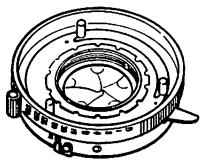




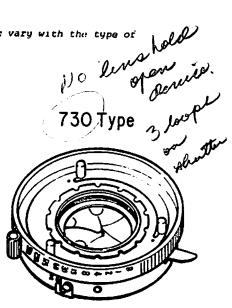




Press Series Shutter


353R Type

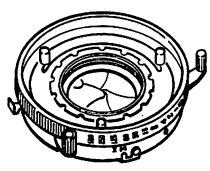

110-3000 NA

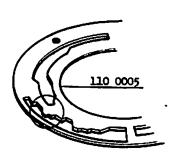


Same as Tentative

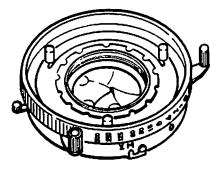

736 Type

736-3028



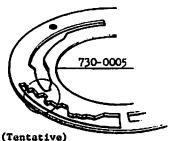


To use Main drive spring (730-2013) of 730 type for 730 (Tentative)

Parts have been changed as shown below due to change of the type of the shutter.

NOTE: 1. Almost all parts of 353R Type can not be interchanged with those of 730 Type.

 Wire diameter of cocking lever spring between 110-1003 with 0.27 ø and 730-1003 with 0.25 ø can not be visually judged. So judge it from the type of Speed regulating governor use.

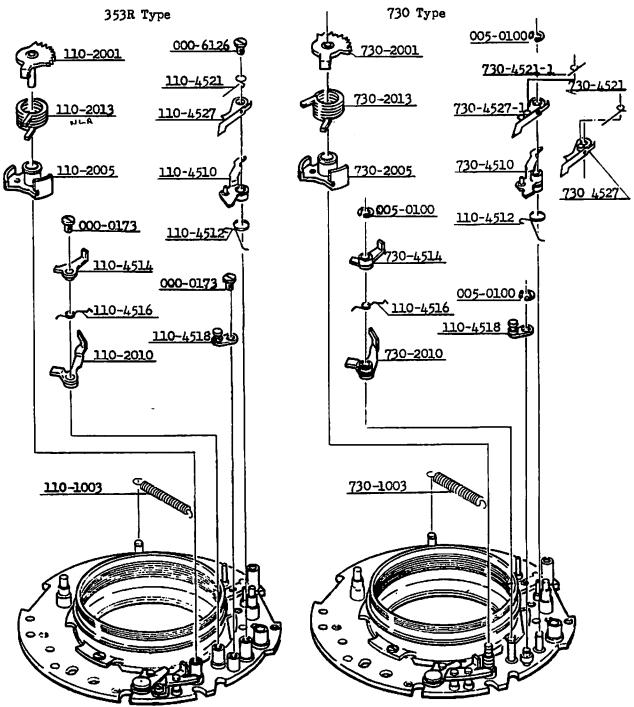

3. To combine 730-4527-1 and 730-4521-1 or 730-4527 and 730-4521 when replacing. -2-

353R Type 736 Type 736 Type 736 Type 736-2101 736-3028


How to replace the shutter blade

There are two types of the shutter blade as follows.


Type	Parts No.	Description	Thickness (m	m) Quantity
730	110-2031	Shutter blade	0.05	2
	730-2031	Shutter blade	0.04	1
	730-2031-1	Shutter blade	0.04	1
	730-2133	Shutter blade B	0.04	1
	730-2034	Sub blade	0.07	1
353R	110-2031	Shutter blade A	0.05	4
	110-2133	Shutter blade B	0.05	1
	110-2162	Sub blade	0.05	1

Please note that parts except 110-2031 Shutter blade can not be interchanged.

Assemble the shutter blandes in numerical order as shown below.

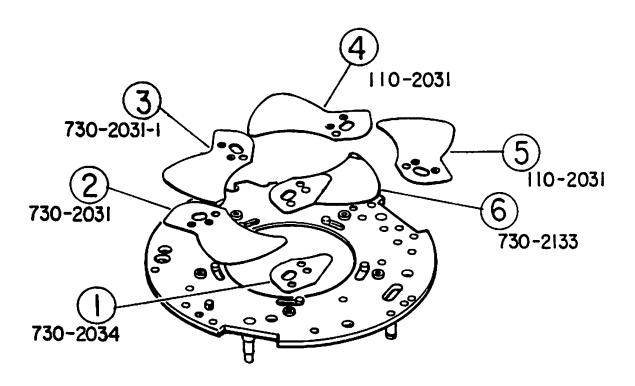

The list of shutter aperture ring on Mamiya professional C Series and Mamiya Press Series

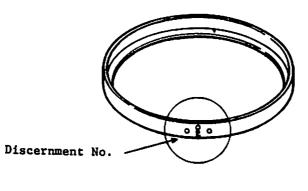

Discernment N	10.			
		Lens model	Parts No.	Aperture ring
Mamiya				C1033111C0C10.
professional "C" series	000	105mm F3.5	734-0110	# 1
	0 2 0	80mm F2.8	734-0110	# 2
	040	180mm F4.5	734-0110	# 4
	0 % 0	65mm F3.5	735-0110	# 6
	000	135mm F4.5	734-0110	# 10
	0000	55mm F4.5	735-0110	# 12
	0 4 0	250mm F6.3	734-0110	# 14
	0000			" - '
	60	D D	s. 73 7- 0110	# 15
Mamiya				
Press series —	090	150mm F5.6	736-0110	<i>#</i> 7
	000	100mm F2.8	736-0110	# 11
	000	100mm F3.5	736-0110	# 13
	0 2 0			
		127mm F4.7	736-0110	# 17
		75mm F5.6	7 60- 0110	# 18


List of shutter type used


Professional "C" Series


Lens model	Shutter 730 Type	Shutter 353R Type	
55mm F4.5	735	6	Middle caliber
65mm F3.5	735	6	Middle caliber
80mm F2.8	734	5	Large caliber
105mm F3.5 D	734	5	Large caliber
105mm F3.5 DS	797	9 with Selftimer	Large caliber
135mm F4.5	734	5	Large caliber
180mm F4.5 S	734	5	Large caliber
250mm F6.3	734	5	Large caliber

Press Series

50mm F6.3	732A	2A	Small caliber
65mm F6.3	732 .	2	Small caliber
75mm F5.6	760	- with P.F lever	Middle caliber
100mm F3.5	736	- with P.F lever	Large caliber
100mm F2.8	736 B	- with P.F lever	Large caliber
127mm F4.7	736	- with P.F lever	Large caliber
150mm F5.6	736	- with P.F lever	Large caliber
250mm F5	731A	1 A	Large caliber

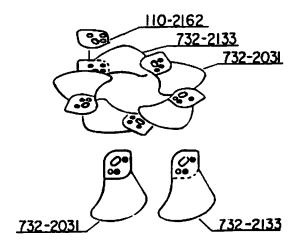

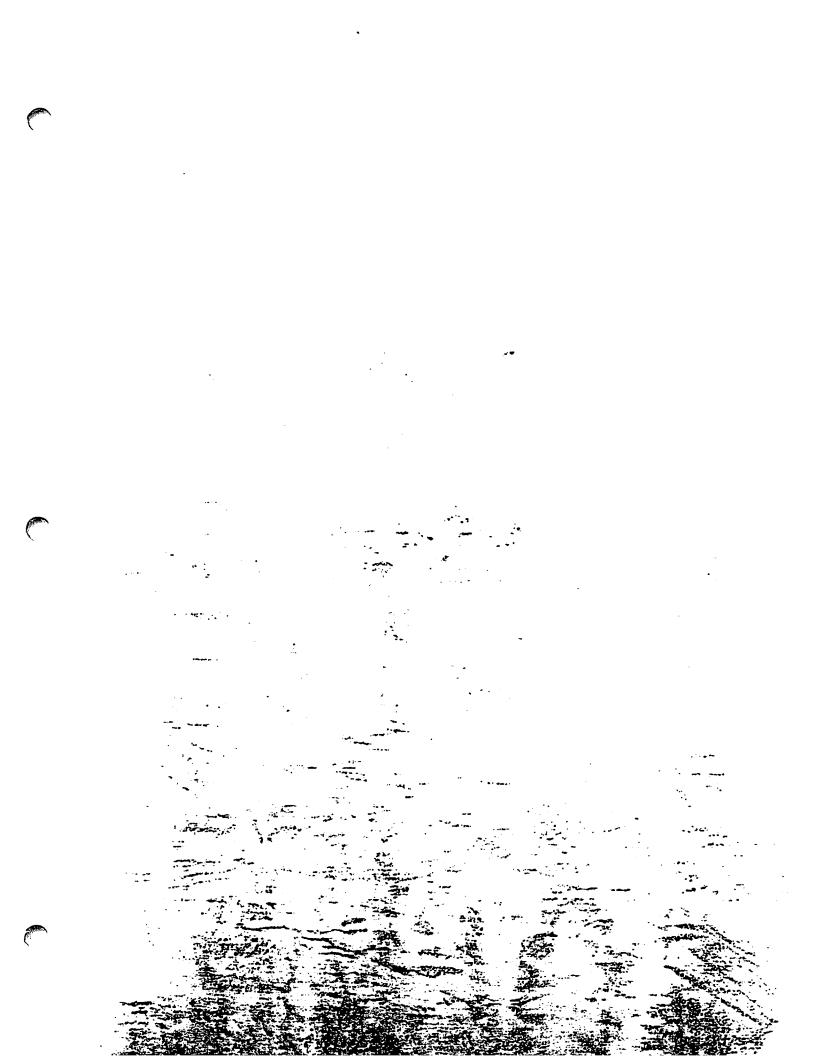

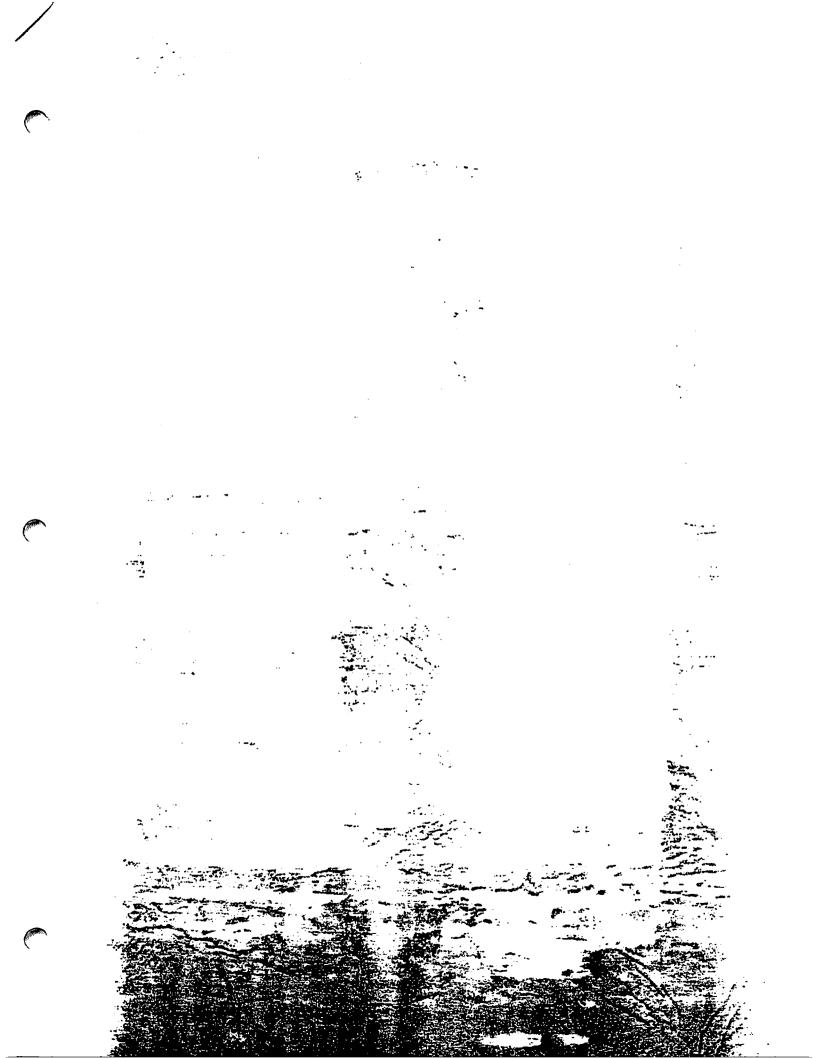



TO THE SEC.