CANON REPAIR MANUAL

CANON DEMI EE 28

(REF. NO. 1-45601)


CANON CAMERA CO., INC.
TOKYO, JAPAN

CONTENTS

WINDING LEVER	1
REWIND CRANK	1
TOP COVER	1
BACK COVER	1
FRONT PANEL	1
BASE COVER	1
LENS	2
SHUTTER	2
E E MECHANISM UNIT	2
WINDING DEVICE	3
BODY	3
SPROCKET	3
CHARGE BASE PLATE	3
INDEX OF DARTS NIIMBER	

of

CANON DEMI EE 28

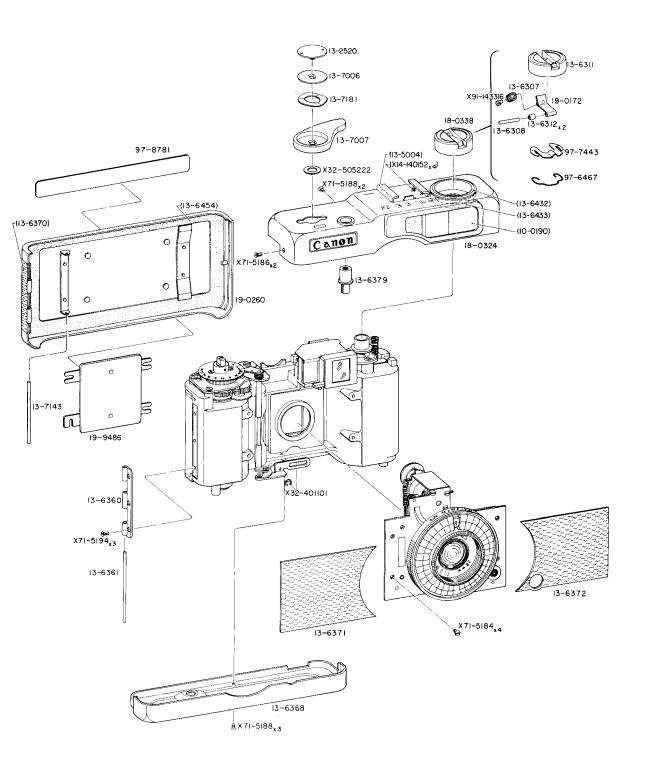

PARTS LIST

WINDING LEVER

FRONT PANEL (cf. p. 2)

13-2520	Pin Face Screw	13-6371	Leather
13-7006	Spacer	13-6372	Leather
13-7007	Winding Lever	X32-401101	Retaining Washer
13-7181	Friction Spring	X71-5184	Screw x 4
X32-505222	Washer		

REWIND CRANK

		13-6368	Base Plate
18-0338	Rewind Crank (Unit)	X71-5188	Screw x 3
13-6307	Rewind Head		
13-6308	Crank Shaft		
13-6311	Rewind Knob		
13-6312	Crank Collar x 2		
19-0172	Rewind Crank Lever(B.	P.)	
97-6467	Spring		
97-7443	Spring		
X91-143316	Screw		

TOP COVER


13-6379	Shutter Release Button
18-0324	Top Cover (Unit)
10-0190	Front Glass
13-5004	Accessory Shoe
13-6432	Rewind Crank Rest
13-6433	Assemble Collar
X14-140152	Screw x 4
X71-5186	Screw x 2
X71-5188	Screw x 2

BACK COVER

13-6360	Hinge
13-6361	Shaft of Hinge
13-7143	Rollar
19-0260	Back Cover (B.P.)
13-6370	Leather
13-6454	Light Shield
19-9486	Pressure Plate (B.P.)
97-8781	Zone Mark Plate
X71-5194	Screw x 3

of

CANON DEMI EE 28

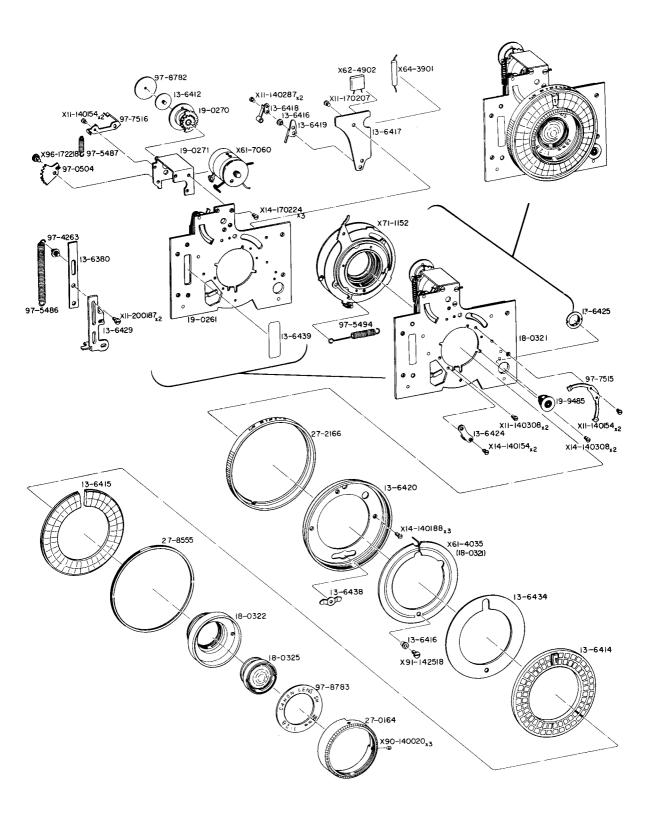

PARTS LIST

WINDING LEVER

FRONT PANEL (cf. p. 2)

13-2520	Pin Face Screw	13-6371	Leather
13-7006	Spacer	13-6372	Leather
13-7007	Winding Lever	X32-401101	Retaining Washer
13-7181	Friction Spring	X71-5184	Screw x 4
X32-505222	Washer		

REWIND CRANK

BASE COVER

		13-6368	Base Plate
18-0338	Rewind Crank (Unit)	X71-5188	Screw x 3
13-6307	Rewind Head		
13-6308	Crank Shaft		
13-6311	Rewind Knob		
13-6312	Crank Collar x 2		
19-0172	Rewind Crank Lever(B	.P.)	
97-6467	Spring		
97-7443	Spring		
X91-143316	Screw		

TOP COVER

13-6379	Shutter Release Button
18-0324	Top Cover (Unit)
10-0190	Front Glass
13-5004	Accessory Shoe
13-6432	Rewind Crank Rest
13-6433	Assemble Collar
X14-140152	Screw x 4
X71-5186	Screw x 2
X71-5188	Screw x 2

BACK COVER

13-6360	Hinge
13-6361	Shaft of Hinge
13-7143	Rollar
19-0260	Back Cover (B.P.)
13-6370	Leather
13-6454	Light Shield
19-9486	Pressure Plate (B.P.)
97-8781	Zone Mark Plate
X71-5194	Screw x 3

REF. NO. 1-45601

PARTS LIST

LENS		X11-140154	Screw x 2
		X11-140287	Screw x 2
13-6414	Lattice Window Frame	X11-170207	Screw
13-6415	Window	X11-200187	Screw x 2
13-6416	Collar	X14-170224	Screw x 3
13-6420	Selen Holder	X61-7060	Meter
13-6434	Filter	X62-4902	Variable Resistor
13-6438	Spring	X64-3901	Resistor
18-0322	Helicoid (Unit)	X96-172218	Screw
18-0325	Lens (Unit)		
27-0164	Focusing Ring		
27-2166	Aperture Scale Ring		
27-8555	Assemble Collar		
97-8783	Name Ring		
X14-140188	Screw x 3		
X61-4035	Selen(included by 18-0321	.)	
X90-140020	Screw x 3		
X91-142518	Screw		

SHUTTER


13-6424	Focusing Stopper
13-6425	Nut
19-9485	Flash Terminal (B.P.)
97-5495	Coil Spring
97-7515	Click Spring
X11-140308	Screw x 2
X14-140154	Screw x 4
X14-140308	Screw x 2
X71-1152	Shutter

E E MECHANISM UNIT

10 0221	T. D. Mr. J /IIi4\
18-0321	E E Mechanism (Unit)
13-6380	Shutter Release Shaft
13-6412	Screw
13-6416	Collar
13-6417	Print Plate
13-6418	Contact
13-6419	Contact
13-6429	Shutter Release Lever
13-6439	Cap
19-0261	Front Plate (B.P.)
19-0270	ASA Change Ring (B.P.)
19-0271	ASA Change Base (B.P.)
97-0504	Gear
97-4263	Screw
97-5486	Coil Spring
97-5487	Coil Spring
97-7516	Click Spring
97-8782	ASA Plate

of

CANON DEMI EE 28

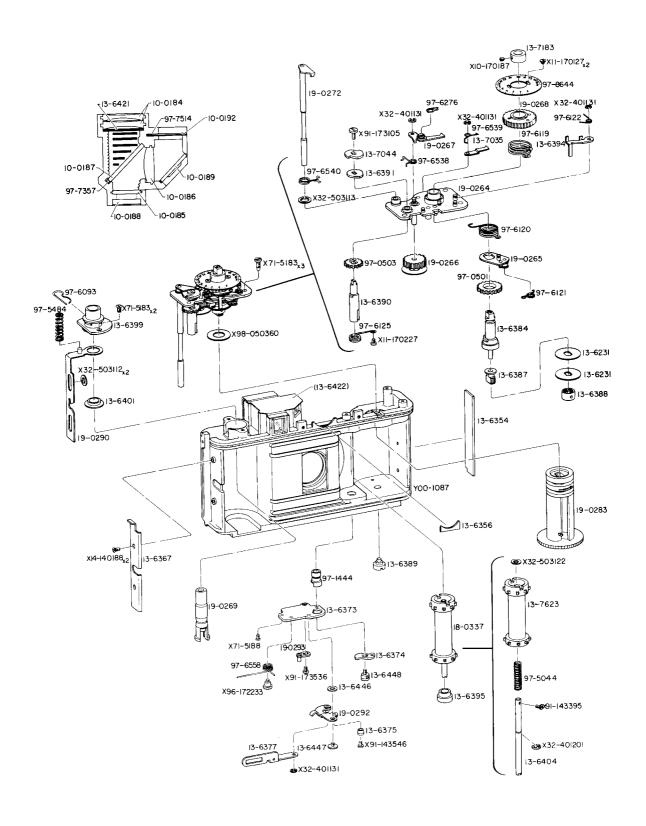


REF. NO. 1-45601


PARTS LIST

WINDING DEVI	CE	97-7357 97-7514	Mirror Holder Frame Holder
13-6231	Friction Disk x 2	13-6354	Light Shield
13-6384	Winding Shaft	13-6356	Accessory Plate
13-6387	Shaft of Disk	13-6367	Hook Cover
13-6388	Nut	13-6389	Spool Screw
13-6390	Sprocket Crutch	13-6399	Bearing
13-6391	Counter Cam	13-6401	Inner Ring
13-6394	Reseting Lever	13-6421	Finder Frame
13 - 7035	Stopper	19-0269	Rewind Fork (B.P.)
13-7044	Winding Stopper Cam	19-0283	Spool (B.P.)
13-7183	Assemble Collar	19-0290	Hook (B.P.)
19-0264	Winding Device Base(B.P.)	97-5484	Coil Spring
19-0265	Rattchet Claw (B.P.)	97-6093	Spring
19-0266	Gear (B.P.)	X14-140188	Screw x 2
19-0267	Feeding Claw (B.P.)	X32-503112	Washer x 2
19-0268	Counter Gear (B.P.)	X71-5183	Screw x 2
19-0272	Winding Stopper (B.P.)		
97-0501	Winding Gear	SPROCKET	
97-0503	Sprocket Gear		
97-6119	Spring	13-6395	Nut
97-6120	Spring	18-0337	Sprocket (Unit)
97-6121	Spring	13 - 64 04	Sprocket Shaft
97-6122	Spring	13-7623	Sprocket
97-6125	Spring	97-5044	Coil Spring
97-6276	Spring	X32-401201	Retaining Wasner
97-6538	Spring	X32-503122	Washer
97-6539	Spring	X91-143395	Screw
97-6540	Spring		
97-8644	Film Counter	CHARGE BASE	PLATE
X10-170187	Screw	10 (0=0	~! ~ ~!
X11-170127	Screw x 2	13-6373	Charge Base Plate
X11-170227	Screw	13-6374	Charge Cam
X32-401131	Retaining Washer x 3	13-6375	Rollar
X32-503112	*** 1	13-6377	Charge Lever
X32-503113	Washer	13-6446	Washer
[X32-503114]	C	13-6447	Screw
X71-5183 X91-173105	Screw x 3 Screw	13 - 6448	Rewind Button
X98-050360	Washer	19-0292	Charge Lever (B.P.)
X70-030300			
	Washer	19-0293	Winding Stopper (B.P.)
DODY	washer	97-1444	Connecting Collar
BODY	washer	97-1444 97-6558	Connecting Collar Spring
		97-1444 97-6558 X32-401131	Connecting Collar Spring Retaining Washer
Y00-1087	Body (Unit)	97-1444 97-6558 X32-401131 X71-5188	Connecting Collar Spring Retaining Washer Screw
Y00-1087 10-0184	Body (Unit) Lens	97-1444 97-6558 X32-401131 X71-5188 X91-143546	Connecting Collar Spring Retaining Washer Screw Screw
Y00-1087 10-0184 10-0185	Body (Unit) Lens Lens	97-1444 97-6558 X32-401131 X71-5188 X91-143546 X91-173536	Connecting Collar Spring Retaining Washer Screw Screw Screw
Y00-1087 10-0184 10-0185 10-0186	Body (Unit) Lens Lens Lens	97-1444 97-6558 X32-401131 X71-5188 X91-143546	Connecting Collar Spring Retaining Washer Screw Screw
Y00-1087 10-0184 10-0185 10-0186 10-0187	Body (Unit) Lens Lens Lens Half Mirror	97-1444 97-6558 X32-401131 X71-5188 X91-143546 X91-173536	Connecting Collar Spring Retaining Washer Screw Screw Screw
Y00-1087 10-0184 10-0185 10-0186 10-0187 10-0188	Body (Unit) Lens Lens Lens Half Mirror Lens	97-1444 97-6558 X32-401131 X71-5188 X91-143546 X91-173536	Connecting Collar Spring Retaining Washer Screw Screw Screw
Y00-1087 10-0184 10-0185 10-0186 10-0187 10-0188 10-0189	Body (Unit) Lens Lens Lens Half Mirror Lens Mirror	97-1444 97-6558 X32-401131 X71-5188 X91-143546 X91-173536	Connecting Collar Spring Retaining Washer Screw Screw Screw
Y00-1087 10-0184 10-0185 10-0186 10-0187 10-0188	Body (Unit) Lens Lens Lens Half Mirror Lens	97-1444 97-6558 X32-401131 X71-5188 X91-143546 X91-173536	Connecting Collar Spring Retaining Washer Screw Screw Screw

of

SHUTTER for CANON DEMI EE 28

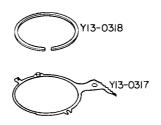

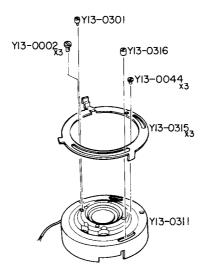












of

SHUTTER for CANON DEMI EE 28

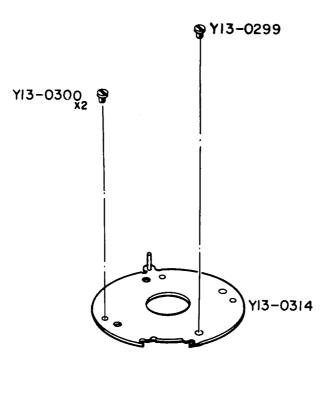






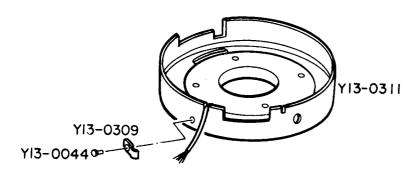

of

SHUTTER for CANON DEMI EE 28

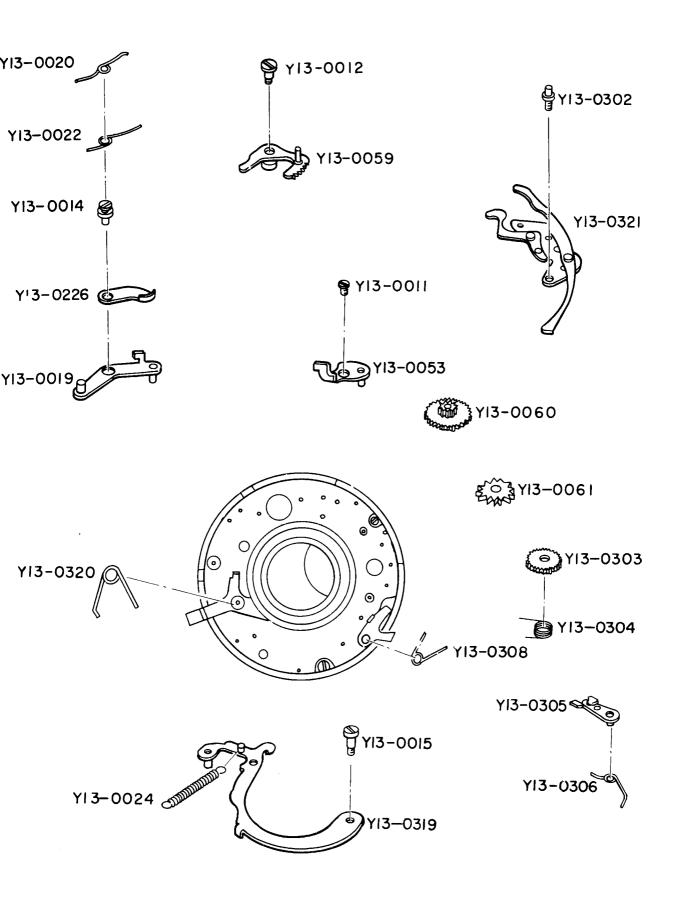


CANON SERVICE TOOLS LIST

CANON DEMI EE 28 (REF. NO. 1-45601)

TESTING EQUIPMENTS

Use	Name of Testing Equipment
Focus	l 200mm T-type Collimator-1
	2 Mirror for 35mm
Field of View	1 Universal Parallax Collimator-12 Square Frosted Focuse Glass
Exposure Meter	l Inspection Device for Canon Meter-l

SPECIAL SCREW DRIVER







Tightning Winding Lever

This tool is common to Canon 7, Demi, Demi S.


2 T0630-27-8555-1T

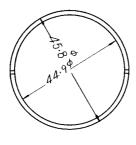

Tightning Assemble Collar

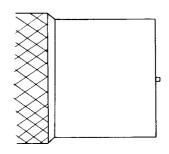

3 T0630-27-1284-1T

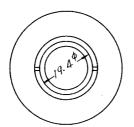

Tightning Helicoid

