作成承認即

配布許可印





Nikon

FINA FAA38001 (SILVER) FAA38051 (BLACK)


PARTS LIST 修 理 部 밂 表





Copyright © 2001 by Nikon Corporation All Rights Reserved.


無断転載を禁ず ワ


Recycled paper 禹生組を使用しています

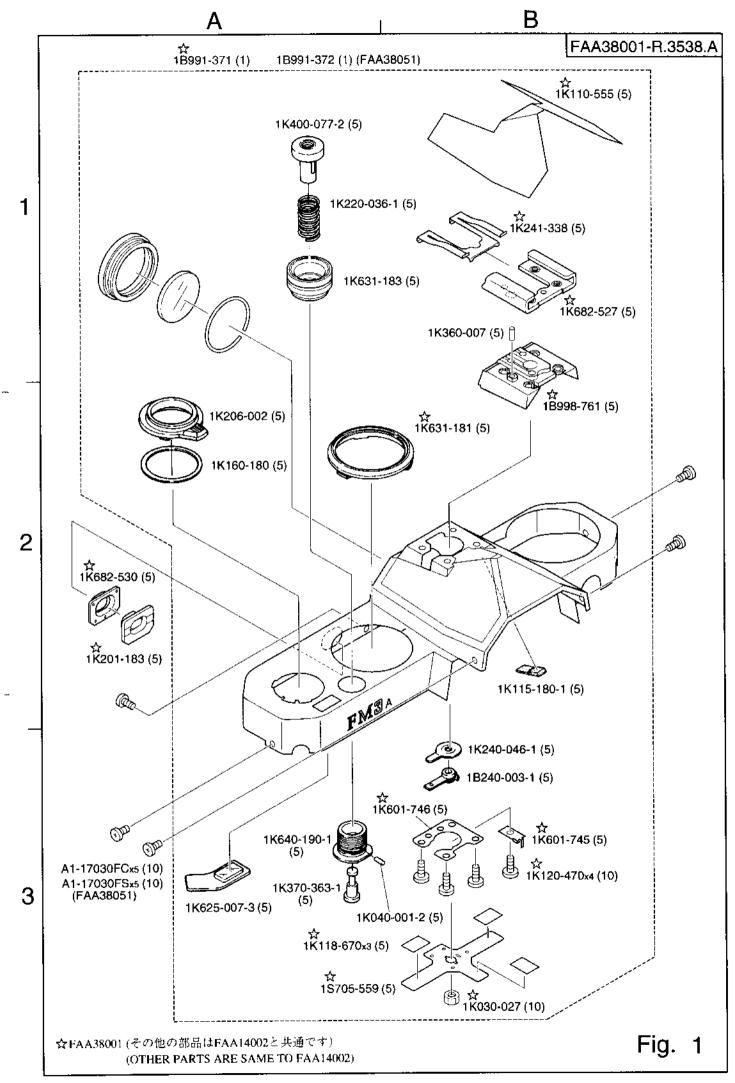


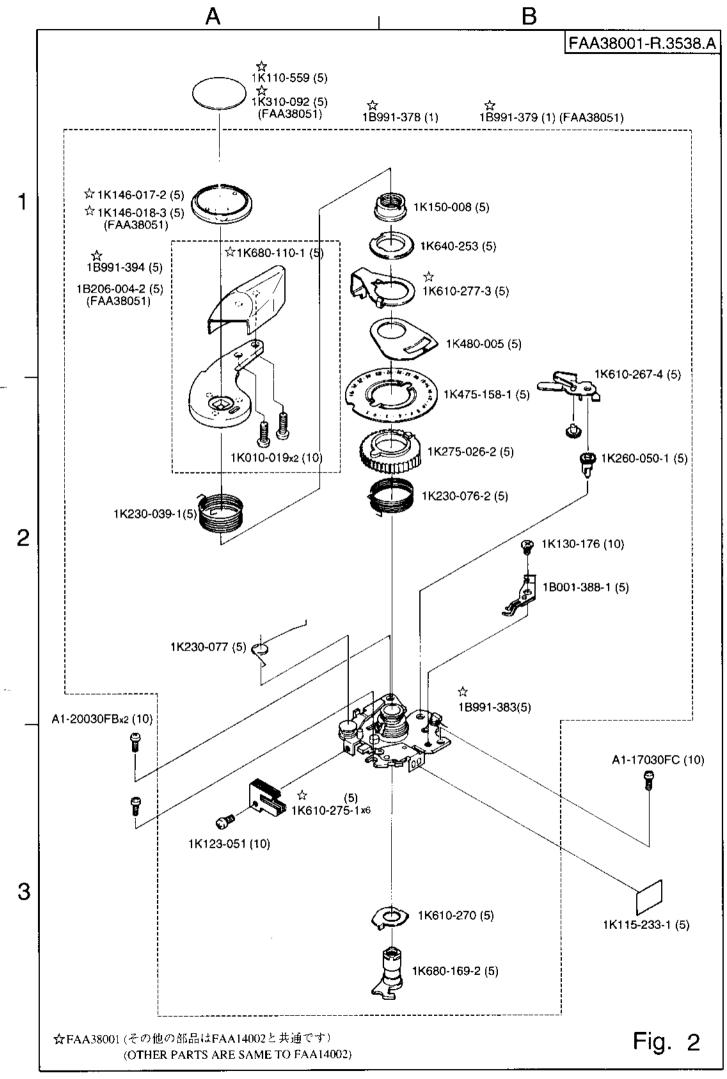


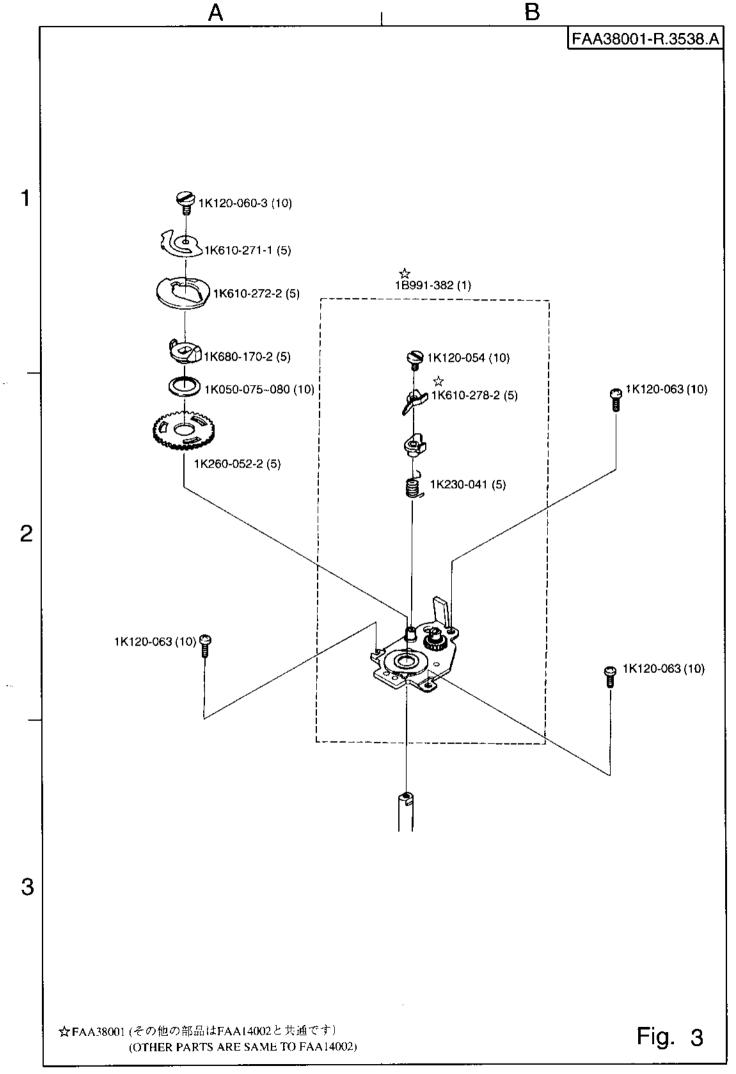


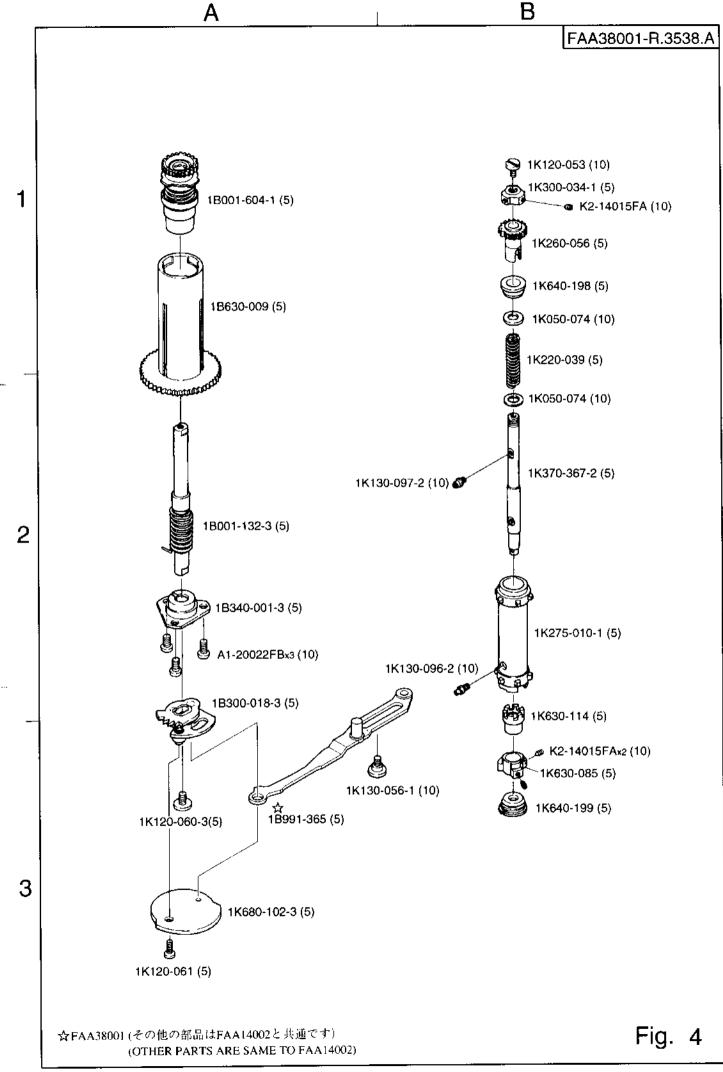


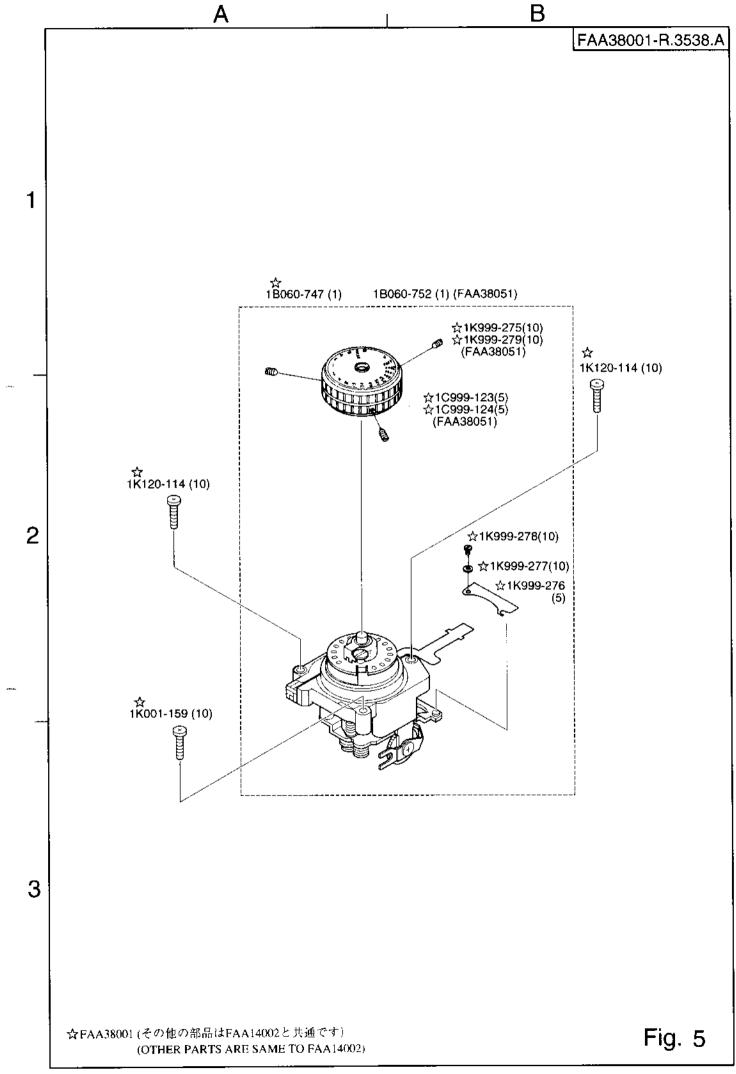


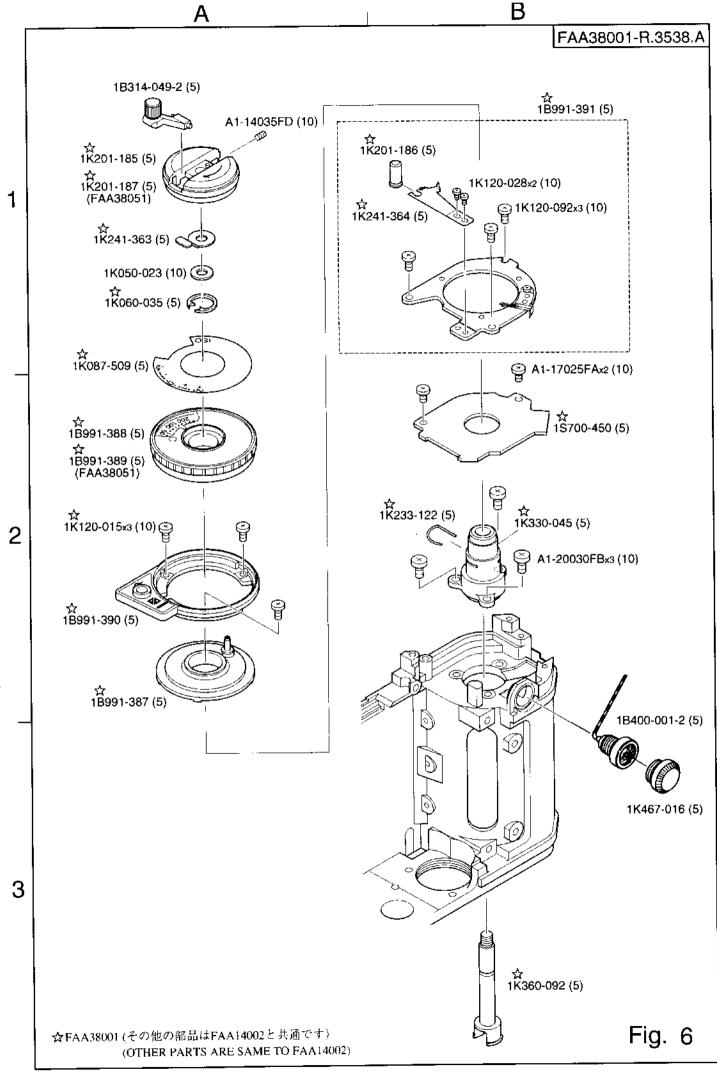


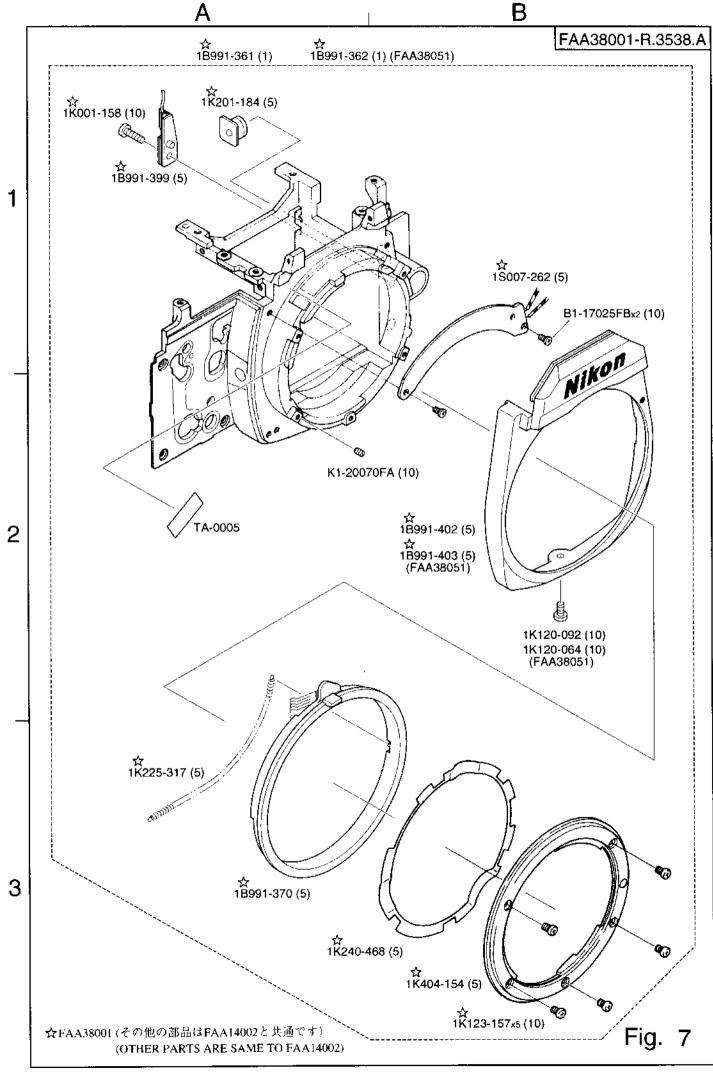


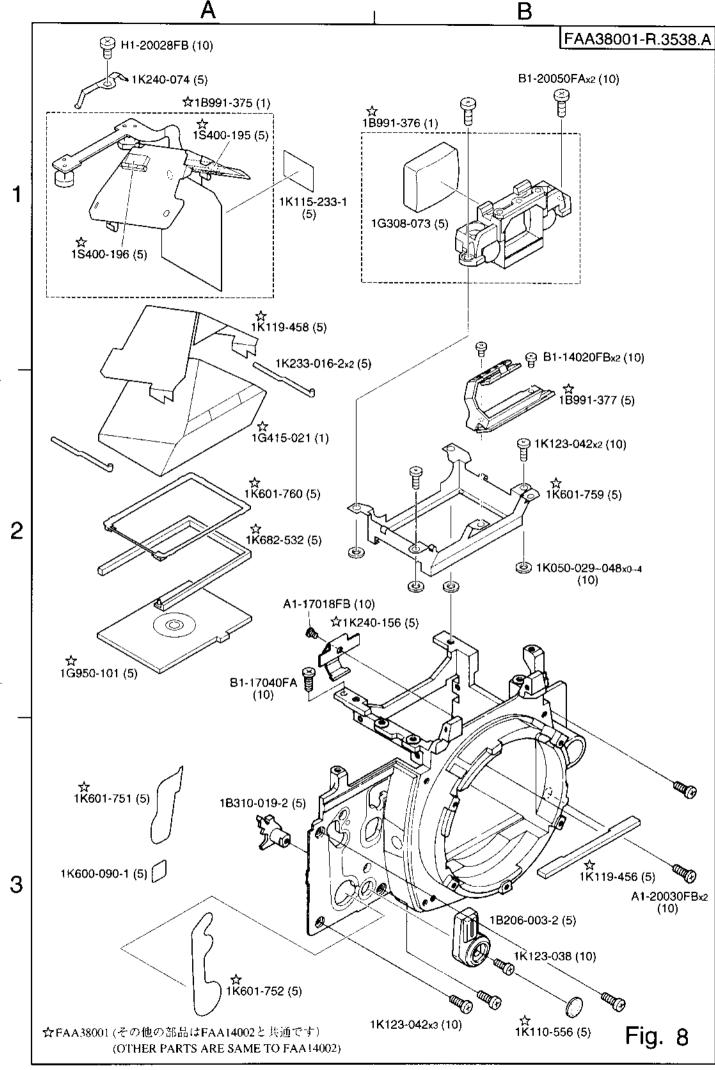


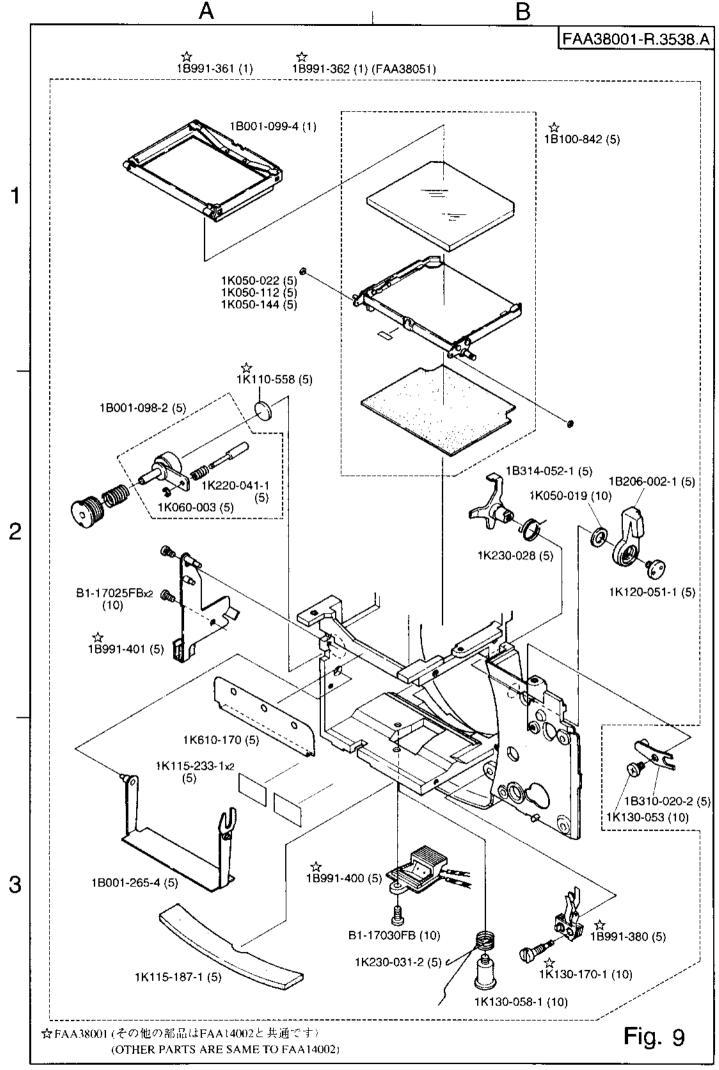


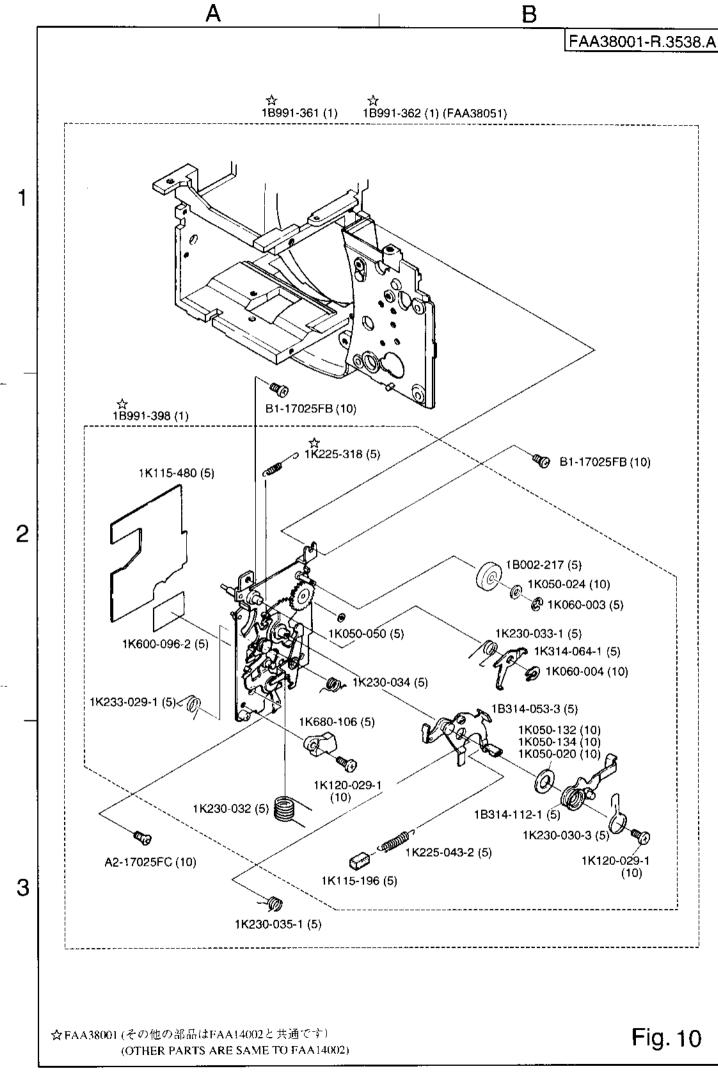

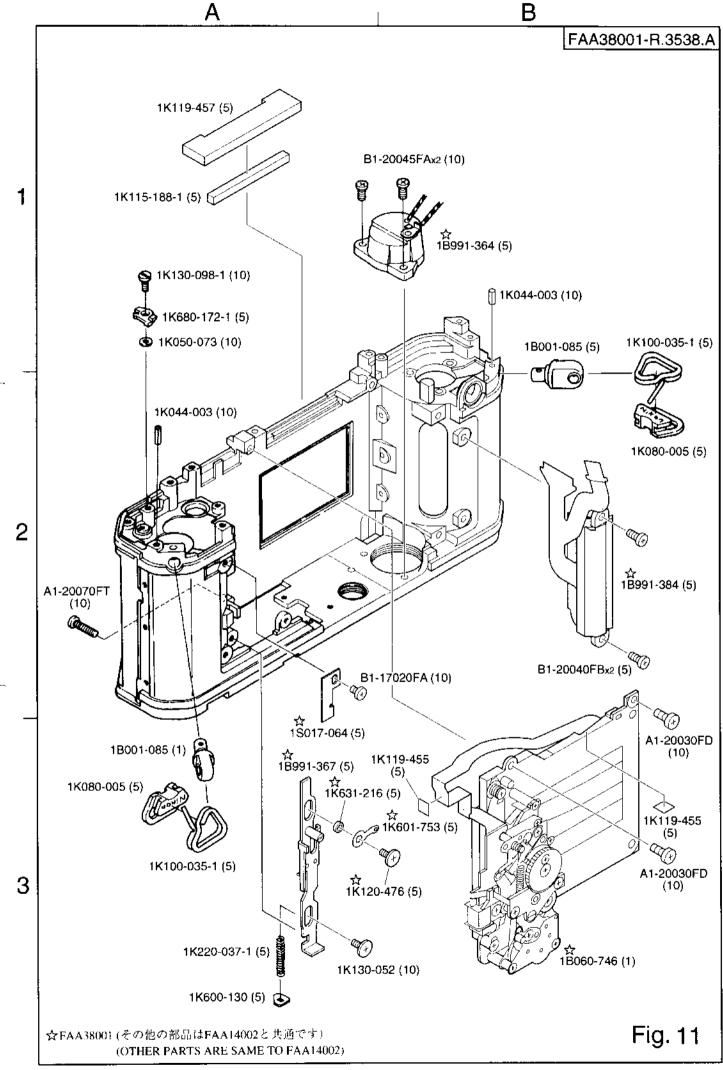

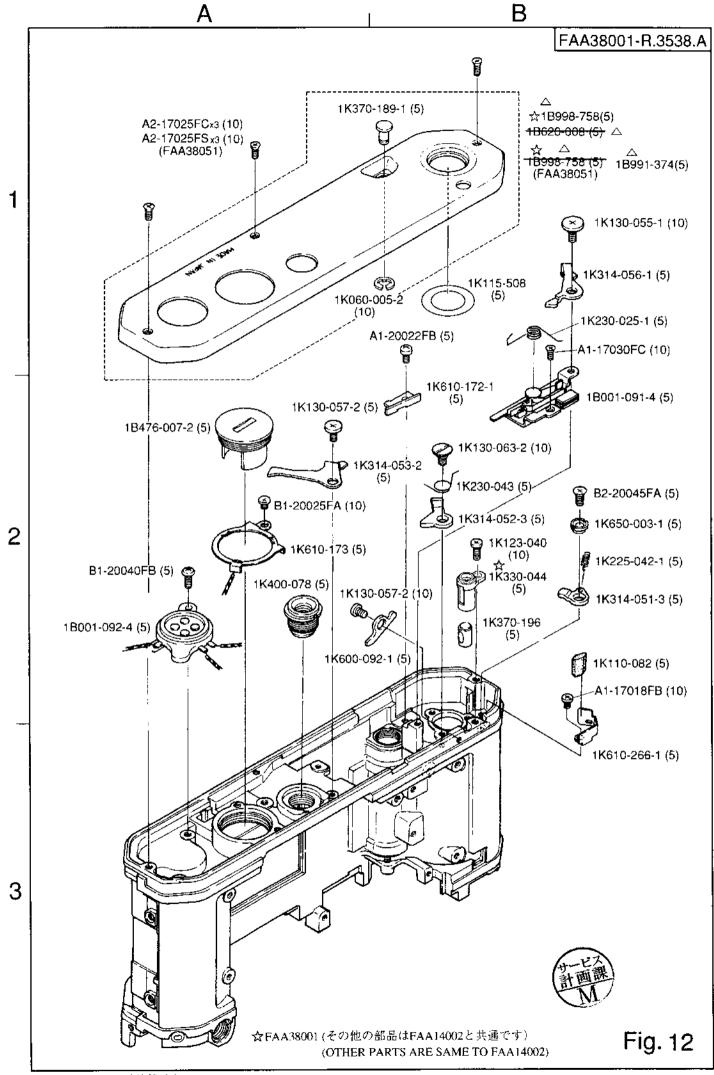

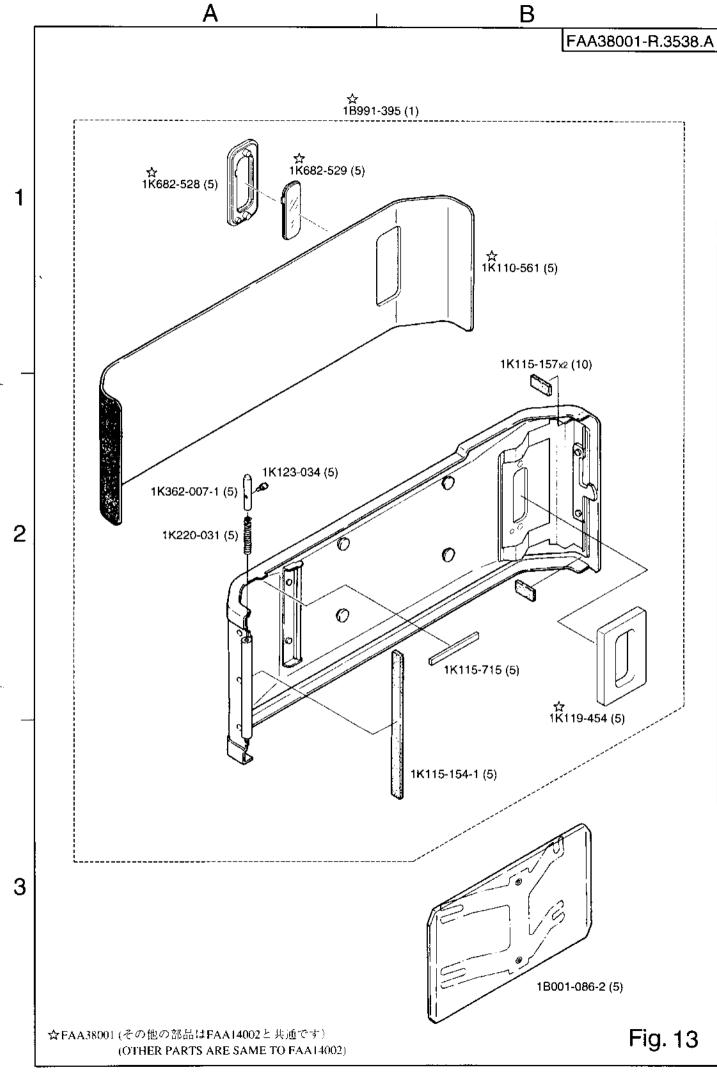

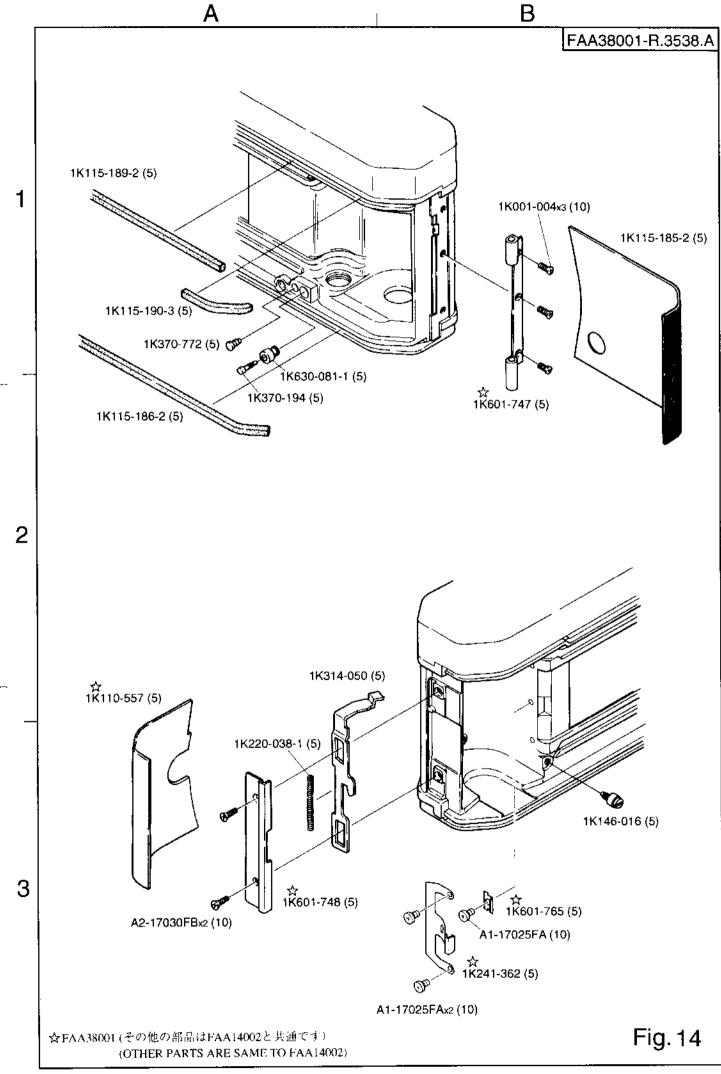

Parts List						FM3A		FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pes. /Unit	fig No.	Main Assembly of Deliver	Q'13/ Order	Remarks
+ 1B001−085	(1B001-085)	耳環部組	EYELET UNIT	1	11	0	5	
× 1B001−086−2	(1B001-086-1)	圧板部組	PRESSURE PLATE UNIT	1	13	0	5	
× 1B001−091−4	(1B001-091-2)	MDSW基板部組	MD SWITCH PLATE UNIT	1	12	0	5	
× 1B001−092−4	(1B001-092)	外部接点部組	EXTERNAL CONTACT UNIT	1	12	0	5	
* 1B001-098-2	(1B001-098-1)	着脱釦部組	LENS RELEASE BUTTON UNIT	1	9	0	5	
* 1B001-099-4	(1B001-099-1)	スクリーン枠部組	SCREEN FRAME UNIT	1	9	0	5	
* 1B001-132-3	(1B001-132-1)	スプール軸部組	SPOOL SHAFT UNIT	1	4	0	5	
* 1B001−265−4	(1B001-265)	遮光板部組	LIGHT BAFFLE PLATE UNIT	1	9	0	5	
* 1B001-388-1	(1B001-131)	巻上げスイッチ部組	PLATE SWITCH UNIT	1	2	0	5	·
* 1B001-604-1	(1B001-604-1)	スプール上ギア部組	SPOOL UPPER GEAR UNIT	1	4	0	5	
1B002-217	(1B002-217)	慣性体部組	INERTIA GEAR UNIT	1	10	0	5	
1B060-746	(1B060-746)	シャッター・部組	SHUTTER UNIT	1	11	0	1	
1B060-747	(1B060-747)	管制部組	SHUTTER CONTROL UNIT	1	5	0	1	
1B100-842	(1B100-842)	チリ取り部組	MIRROR HOLDER UNIT	1	9	0	5	
* 1B206-002-1	(1B206-002-1)	絞込みレバー部組	DIAPHRAGM SET LEVER UNIT	1	9	0	5	
* 1B206-003-2	(1B206-003)	セルフレバー部組	SELF TIMER LEVER UNIT	1	8	0	5	
* 1B240-003-1	(1B240-003)	接点モールド部組	CONTACT MOLD UNIT	1	1	0	5	<del></del>

Parts List					FM3A		FAA38001-R.3538.A	
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembly of Deliver	Q'ty/ Order	Remarks
* 1B300-018-3	(18300-018)	セットカム部組	SET CAM UNIT	1	4	0	5	
* 1B310-019-2	(18310-019)	セルフレバー軸部組	LEVER UNIT	1	8	0	5	
* 1B310-020-2	(1B310-020)	レリーズ調整レバー部組	LEVER UNIT	1	9	0	5	
* 1B314-049-2	(18314-049-1)	巻戻しレバー部組	REWIND CRANK UNIT	1	6	0	5	
* 1B314-052-1	(1B314-052-1)	手動絞りレバー部組	LEVER UNIT	1	9	0	5	
* 1B314-053-3	(1B314-053-2)	ミラーUPレバー部組	LEVER UNIT	1	10	0	5	
* 1B314-112-1	(1B314-054-1)	絞りレバー部組	LEVER UNIT	1	10	0	5	
* 1B340-001-3	(1B340-001-2)	スプール軸受けケース部組	SPOOL SHAFT BEARING COVER	1	4	0	5	
* 1B400-001-2	(1B400-001-1)	シンクロター・ミナル部組	SYNC, TERMINAL UNIT	1	6	0	5	
* 1B467-007-2	(1B467-007-1)	電池キャップ部組	BATTERY CAP UNIT	1	12	0	5	
* 1B630-009	(1B630-009)	スプール部組	SPOOL UNIT	1	4	0	5	
1B991-361	(1B991-361)	前板部組	FRONT PLATE UNIT	1	7	0	1	
1B991-364	(1B991-364)	電池ケース部組	BATTERY CASE UNIT	1	11	0	5	<del></del> :
1B991-365	(1B991-365)	チャージレバー部組	CHARGE LEVER UNIT	1	4	0	5	
1B991-367	(1B991-367)	レリーズ板部組	RELEASE PLATE UNIT	1	11	0	5	
1B991-370	(1B991-370)	連動環部組	COUPLING RING UNIT	1	7	0	5	
1B991-371	(1B991-371)	上カバー部組(製品番号刻印)	TOP COVER UNIT (WITH S/N)	1	1	0	1	

Parts List					FM3A	FAA38001-R.3538.A	
Part Namber	Part Code	名称	Part Name	Pes, /Unit	fig No.		Q'ty/ Order Remarks
1B991-373	(1B991-373)	暫定基板部組	TEMPORARY PCB UNIT	1	8	0	5
1B991-375	(1B991-375)	メインフレキ2部組	MAIN FPC UNIT	1	8	0	1
1B991-376	(1B991-376)	接眼モールド部組	EYEPIECE MOLD UNIT	1	8	0	1
1B991-377	(1B991-377)	ミラー保持基板部組	ADR MIRROR HOLDER UNIT	1	8	0	5
1B991-378	(1B991-378)	上地板部組	FILM ADVANCE LEVER UNIT	1	2	0	1
1B991-380	(1B991-380)	スイッチ切片部組	SWITCH PLATE UNIT	1	9	0	5
1B991-382	(1B991-382)	下地板部組	FILM ADVANCE MECH. UNIT	1	3	0	5
1B991-383	(1B998-383)	上地本体部組	FILM ADVANCE BASE UNIT	1	2	0	5
1B991-384	(1B991-384)	DX部組	DX CONTACT UNIT	1	11	0	5
1B991-387	(1B991-387)	ISOブラシ部組	ISO BRUSH UNIT	1	6	0	5
1B991-388	(1B991-388)	ISOダイヤル部組	ISO DIAL UNIT	1	6	0	5
1B991-390	(1B991-390)	飾り環部組	COVER PLATE UNIT	1	6	0	5
1B991-391	(1B991-391)	ISO飾り環基板部組	ISO BASE PLATE UNIT	1	6	0	1
1B991-394	(1B991-39 <b>4</b> )	巻上げレバー部組	WINDING LEVER UNIT	1	2	0	5
1B991-395	(1B991-395)	<b>裹蓋本体部組</b>	BACK DOOR UNIT	1	13	0	1
1B991-398	(1B991-398)	横基板部組	MIRROR BOX MECHANISM UNIT	1	10	0	5
1B991-399	(1B991-399)	調光補正スイッチ部組	SWITCH UNIT	1	7	0	5

**}** 

!

Part Number   Part Code   名子   Part Name   Part Number   Res.   Re.   Main Assembly Politor   Part Part   Part Number   Part	01-R.3538.A
18991-401 (18991-401)   輪基板部組   MIRROR AXLE BASE UNIT   1 9 0 5     18991-402 (18991-402) エブロン部組   APRON UNIT   1 7 0 5     18998-758 (18998-758)   底カバー部組   BOTTOM PLATE UNIT   1 12 0 1	emarks
1B991-402 (1B991-402) エブロン部組 APRON UNIT 1 7 〇 5 1B998-758 (1B998-758) 底カバー部組 BOTTOM PLATE UNIT 1 12 〇 1 1B998-761 (1B998-761) シュー座モールド部組 SHOE MOLD UNIT 1 1 1 〇 5 1C999-123 (1C999-123) Tダイヤル部組 T DIAL UNIT 1 5 〇 5 1G308-073 (1G308-073) 接眼レンズ EYEPIECE LENS 1 8 1B991-376 〇 5 1G415-021 (1G415-021) ベンタブリズム PENTA PRISM 1 8 ○ 1 1G950-101 (1G950-101) フレネル FOCUSING SCREEN 1 8 ○ 5 **1K001-004 (1K001-004) 裏蓋蝶番ネジ SCREW 3 14 ○ 10 1K001-158 (1K001-158) 調光補正ビス SCREW 1 7 ○ 10	
18998-758   (18998-758)   底力パー部組   BOTTOM PLATE UNIT   1   12   0   1     18998-761   (18998-761) シュー座モールド部組   SHOE MOLD UNIT   1   1   1   0   5     1C999-123   (1C999-123)   Tダイヤル部組   T DIAL UNIT   1   5   0   5     1G308-073   (1G308-073)   接眼レンズ   EYEPIECE LENS   1   8   1B991-376   0   0   5     1G415-021   (1G415-021)   ペンタプリズム   PENTA PRISM   1   8   0   1     1G950-101   (1G950-101)   プレネル   FOCUSING SCREEN   1   8   0   5     * 1K001-004   (1K001-004)   裏蓋蝶番ネジ   SCREW   3   14   0   10     1K001-158   (1K001-158)   顕光補正ビス   SCREW   1   7   0   10     1K001-159   (1K001-159)   管制部取付ビスB   SCREW   1   5   0   10	
1B998-761 (1B998-761) シュー座モールド部組 SHOE MOLD UNIT 1 1 1 O 5 1C999-123 (1C999-123) Tダイヤル部組 T DIAL UNIT 1 5 O 5 1G308-073 (1G308-073) 接眼レンズ EYEPIECE LENS 1 8 1B991-376 O	
1C999-123 (1C999-123) Tダイヤル部組 T DIAL UNIT 1 5 O 5 1G308-073 (1G308-073) 接眼レンズ EYEPIECE LENS 1 8 1B991-376 O	
1G308-073       (1G308-073)       接眼レンズ       EYEPIECE LENS       1       8       1B991-376       〇△ 5         1G415-021       (1G415-021)       ペンタブリズム       PENTA PRISM       1       8       〇 1         1G950-101       (1G950-101)       フレネル       FOCUSING SCREEN       1       8       〇 5         * 1K001-004       (1K001-004)       裏蓋蝶番ネジ       SCREW       3       14       〇 10         1K001-158       (1K001-158)       調光補正ビス       SCREW       1       7       〇 10         1K001-159       (1K001-159)       管制部取付ビスB       SCREW       1       5       〇 10	
1G415-021 (1G415-021) ペンタプリズム PENTA PRISM 1 8 O 1 1G950-101 (1G950-101) フレネル FOCUSING SCREEN 1 8 O 5 * 1K001-004 (1K001-004) 裏蓋蝶番ネジ SCREW 3 14 O 10 1K001-158 (1K001-158) 調光補正ビス SCREW 1 7 O 10 1K001-159 (1K001-159) 管制部取付ビスB SCREW 1 5 O 10	
1G950-101 (1G950-101) フレネル FOCUSING SCREEN 1 8 O 5 * 1K001-004 (1K001-004) 裏蓋蝶番ネジ SCREW 3 14 O 10 1K001-158 (1K001-158) 調光補正ビス SCREW 1 7 O 10 1K001-159 (1K001-159) 管制部取付ビスB SCREW 1 5 O 10	
* 1K001-004 (1K001-004) 裏蓋蝶番ネジ SCREW 3 14 〇 10  1K001-158 (1K001-158) 調光補正ビス SCREW 1 7 〇 10  1K001-159 (1K001-159) 管制部取付ビスB SCREW 1 5 〇 10	
1K001-158     (1K001-158)     調光補正ビス     SCREW     1 7     O 10       1K001-159     (1K001-159)     管制部取付ビスB     SCREW     1 5     O 10	
1K001-159 (1K001-159) 管制部取付ビスB SCREW 1 5 O 10	
* 1K010-019 (1K010-019) SCREW SCREW 2 2 1B991-378 OA 10	
1K030-027 (1K030-027) 六角ナット NUT 1 1B991-371 〇△ 5	
* 1K040-001-2 (IK040-001) ガイドピン PIN 1 1 1B991-371 〇ム 5	
* 1K044-003 (1K044-003) スプリングピン PIN 2 11 〇 10	
* 1K050-019 (1K050-019) 手動紋リレバ一座 WASHER 1 9 〇 5	

Parts List	LIST					FM3A			FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pes, Buil	fig No.	Main Assembly	Term of Deliver	Q'ty Order	Remarks
* 1K050-020	(1K050-020)	ワッシャー t=0.03	WASHER	1	10	1B991-398	ΟΔ	10	
+ 1K050−022	(1K050-022)	ワッシャー t=0.2	WASHER	1	9		0	10	
* 1K050-023	(1K050-023)	ワッシャー	WASHER	1	6		0	10	
* 1K050-024	(1K050-024)	ワッシャー	WASHER	1	10	1B991-398	ОД	10	
* 1K050-029	(1K050-029)	ワッシャー T=0.05	WASHER T=0.05	1	8		0	10	
* 1K050-030	(1K050-030)	ワッシャー T=0.06	WASHER T=0.06	1	8		0	10	
* 1K050-031-1	(1K050-031)	ワッシャー T=0.07	WASHER T=0.07	1	8		0	10	
* 1K050-032	(1K050-032)	ワッシャー T=0.08	WASHER T=0.08	1	8	<u></u>	0	10	
* 1K050−033	(1K050-033)	ワッシャー T=0.09	WASHER T≠0.09	1	8		0	10	
* 1K050-034	(1K050-034)	ワッシャー T=0.1	WASHER T=0.1	1	8		0	10	
* 1K050-035	(1K050-035)	ワッシャー T=0.11	WASHER T=0.11	1	8		0	10	
* 1K050−036	(1K050-036)	ワッシャー T=0.12	WASHER T=0.12	1	8		0	10	
* 1K050-037	(1K050-037)	ワッシャー T=0.2	WASHER T=0.2	1	8		0	10	
* 1K050-038	(1K050-038)	ワッシャー T=0.3	WASHER T=0.3	1	8		0	10	<del> </del>
* 1K050-039-1	(1K050-039)	ワッシャー T=0.4	WASHER T=0.4	1	8		0	10	<del></del>
* 1K050-040-2	(1K050-040)	ワッシャー T=0.5	WASHER T=0.5	1	8		0	10	
* 1K050-041-1	(1K050-041)	ワッシャー T=0.6	WASHER T=0.6	1	8	·· · · · · · · · · · · · · · · · · · ·	0	10	

Parts List					FM.	3A		FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pes, Unit	fig No. Main Ass	Term embly of Deliver	Q'ty/ Order	Remarks
* 1K050-042	(1K050-042)	ワッシャー・T=0.7	WASHER T=0.7	1	8	0	10	2
* 1K050-043	(1K050-043)	ワッシャー T=0.8	WASHER T=0,8	1	8	0	10	
* 1K050-044	(1K050-044)	ワッシャー T=0.9	WASHER T=0.9	1	8	0	10	
* 1K050-045-2	(1K050-045)	ワッシャー T=1.0	WASHER T=1.0	1	8	0	10	
* 1K050-046-2	(1K050-046)	ワッシャー T=1.1	WASHER T=1.1	1	8	0	10	
* 1K050-047-2	(1K050-047)	ワッシャー T=1.2	WASHER T=1.2	1	8	0	10	
* 1K050-048	(1K050-048)	ワッシャー T=0.03	WASHER T=0.03	1	8	0	10	
* 1K050-050	(1K050-050)	ワッシャー	WASHER	1	10 1B991-39	8 OΔ	10	<del></del>
* 1K050-073	(1K050-073)	ワッシャー	WASHER	1	11	0	10	
* 1K050-074	(1K050-074)	ワッシャー	WASHER	2	4	0	10	
* 1K050-075	(1K050-075)	ワッシャー	WASHER	1	3	0	10	
* 1K050-076	(1K050-076)	ワッシャー	WASHER	1	3	0	10	
* 1K050-077	(1K050-077)	ワッシャー	WASHER	1	3	0	10	· · · · · · · · · · · · · · · · · · ·
* 1K050-078	(1K050-078)	ワッシャー	WASHER	1	3	0	10	
* 1K050-079	(1K050-079)	ワッシャー	WASHER	1	3	0	10	
* 1K050-080	(1K050-080)	ワッシャー	WASHER	1	3	0	10	<del></del>

WASHER

\* 1K050-108

(1K050-108)

ワッシャー

1B001-098

ΟΔ 10

Parts List				FM3A_		FAA38001-R.3538.A			
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembly	Term of Deliver	Q'ty/ Order	Remarks
* 1K050-112	(1K050-112)	ワッシャー T=0.3	WASHER T=0.3	1	9		0	10	
* 1K050−132	(1K050-132)	ワッシャー T=0.06	WASHER T=0.06	1	10	1B991-398	ОД	10	
* 1K050−134	(1K050-134)	ワッシャー T=0.08	WASHER T=0.08	1	10	1B991-398	ΟΔ	10	
* 1K050-144	(1K050-144)	ワッシャー T=0.1	WASHER T=0.1	1	9		0	10	
* 1K060-003	(1K060-003)	Eリング	E-RING	2	9	1B991-398	ΟΔ	10	
* 1K060-004	(1K060-004)	GSリング	GRIP RING	1	10	1B991-398	ΟΔ	10	
* 1K060-005-2	(1K060-005-1)	Eリング	E-RING	1	12	1B998-758	ΟΔ	5	
1K060-035	(1K060-035)	ISO環止め輪	CLIP	1	6		0	5	
* 1K080-005	(1K080-005)	吊り環銘板	NECK STRAP RING COVER	2	11		0	5	
1K087-509	(1K087-509)	露出補正表示板	EXP. COMPENSATION RING	1	6		0	5	
* 1K100-035-1	(1K100-035)	三角環	NECK STRAP RING	2	11		0	5	
* 1K110-082	(1K110-082)	経衝ゴム	SHOCK ABSORB RUBBER	1	12		0	5	
1K110-555	(1K110-555)	ペンタ皮	LEATHERETTE TOP COVER	1	1	1B991-371	ΟΔ	5	
1K110-556	(1K110-556)	セルフレバー飾り	LEATHERETTE SELF LEVER	1	8		0	5	
1K110-557	(1K110-557)	ボディ擬革	LEATHERETTE REWIND SIDE	1	14		0	5	
1K110-558	(1K110-558)	レンズ着脱釦飾り	COVER PLATE	1	9		0	5	
1K110-559	(1K110-559)	巻上げレバー飾り環	WINDING LEVER COVER PLATE	1	2		0	5	

Parts List	ode Codillian Mannananananana aa aa a a a a a a a a					FM3A			FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pes, /Unit		Main Assembly	Term of Deliver	Q'ty/ Order	Remarks
1K110-561	(1K110-561)	擬革	LEATHERETTE BACK COVER	1	13	1B991-395	ΟΔ	5	
* 1K115-154-1	(1K115-154-1)	裏蓋モルトプレン	SPONGE	1	13	1B991-395	ΟΔ	5	<del></del>
* 1K115-157	(1K115-157)	裏蓋モルトプレン	SPONGE	2	13	1B991-395	ΟΔ	5	
* 1K115-180-1	(1K115-180)	上蓋取付ゴム	RUBBER PLATE	1	1	1B991-371	ΟΔ	5	
* 1K115-185-2	(1K115-185-1)	ボディ擬革	LEATHERETTE WINDING SIDE	1	14		0	5	
* 1K115-186-2	(1K115-186)	溝用モルトプレン	LIGHT-TIGHT SPONGE	1	14		0	5	
* 1K115-187-1	(1K115-187)	上溝用モルトプレン	LIGHT TIGHT SPONGE	1	9		0	5	
* 1K115-188-1	(1K115-188)	接眼下遮光モルト	LIGHT-TIGHT SPONGE	1	11		0	5	
* 1K115-189-2	(1K115-189)	上溝用モルトA	LIGHT-TIGHT SPONGE A	1	14		0	5	
									•

\* 1K115-190-3 (1K115-190) 上溝用モルトB LIGHT-TIGHT SPONGE B 14 (1K115-196) 防振モルト SPONGE 10 1B991-398  $\Delta$ \* 1K115-196 5 絶縁テープ ISOLATED TAPE 0 \* 1K115-233-1 (1K115-233) 6 2 5 \* 1K115-480 (1K115-480) 植毛紙 **FLOCKPAPER** 10 1B991-398 ΟΔ 5 (1K115-508) カップリング遮光シート 12 0 FILM SHEET 5 \* 1K115-508 1 ISOLATED TAPE 1B991-378  $\Delta$ (1K115-592) 絶縁テープ \* 1K115-592  $O\Delta$ \* 1K115-715 (1K115-715) 植毛紙 LIGHT BAFFLE PLATE 13 1B991-395 DOUBLE-SIDED ADHESIVE TAPE  $\Delta$ (1K118-670) 両面テープ 1 1B991-371 1K118-670

Parts List						FM3A	FAA38001-R.3538.A		
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembly	Terms of Deliver	Q'ty/ Order	Remarks
1K119-454	(1K119-454)	モルトプレン	SPONGE	1	13	1B991-395	ΟΔ	5	
1K119-455	(1K119-455)	あ面テープ	DOUBLE-SIDED ADHESIVE TAPE	4	11		0	5	
1K119-456	(1K119-456)	ミラーUP受けモルト	MIRROR SPONGE	1	8		0	5	
1K119-457	(1K119-457)	遮光モルト	SPONGE	1	11		0	5	
1K119-458	(1K119-458)	プリズム押えシート	PRISM SHEET	1	8		0	5	
1K119-490	(1K119-490)	絶縁テープ	ISOLATED TAPE	1			0	5	
1K119-535	(1K119-535)	絶縁テープ	ISOLATED TAPE	2			0	5	<del></del>
1K120-015	(1K120-015)	ISO飾り環ビス	SCREW	3	6		0	10	
1K120-028	(1K120-028)	SCREW	SCREW	2	6	1B991-391	ΟΔ	10	
* 1K120-029-1	(1K120-029-1)	SCREW	SCREW	3	10	18991-398	ΟΔ	10	
* 1K120-051-1	(1K120-051)		LEVER SCREW	1	9		0	5	
* 1K120−053	(1K120-053)	スプロケット左ネジ	SPROCKET SCREW	1	4		0	10	
* 1K120-054	(1K120-054)	スプールストッパービス	SPROCKET STOPPER SCREW	1	3	1B991-382	ΟΔ	10	<del></del>
* 1K120-060-3	(1K120-060)	巻上げ軸ビス	SHAFT SCREW	3	3		0	10	
* 1K120-061	(1K120-061)	カップリングビス	SCREW	1	4		0	10	
* 1K120-063	(1K120-063)	下地板ビスB	SCREW	3	3		0	10	
* 1K120-092	(1K120-092)	SCREW	SCREW	4	6		0	10	

Parts List	•				_	FM3A		FAA38001-R.3538.	
Part Number	Part Code	名称	Part Name	Pes, Abult	fig No.	Main Assembly	Term of Deliver	Q'ty/ Order	Remarks
1K120-114	(1K120-114)	管制部取付ビスA	SCREW	2	5		0	10	
1K120-470	(1K120-470)	SCREW	SCREW	4	1	1B991-371	ΟΔ	10	
1K120-476	(1K120-476)	レリーズ板ネジA	SCREW	1	11		0	10	
1K123-034	(1K123-034)	裏蓋制限ピン	SCREW	1	13	1B991-395	ΟΔ	5	
1K123-038	(1K123-038)	セルフビス	SCREW	1	8		0	10	
1K123-040	(1K123-040)	SCREW	PRISM BOX SCREW	1	12		0	10	
1K123-042	(1K123-042)	SCREW	FRONT PLATE SCREW	7	8		0	10	
⊧ 1K123-051	(1K123-051)	バネ取付ネジ	SCREW	1	2	1B991-378	ΟΔ	10	
1K123-157	(1K123-157)	パヨネット止めビス	SCREW	5	7		0	10	
× 1K130−052	(1K130-052)	 レリーズ板ネジ	SCREW	1	11		0	10	
× 1K130−053	(1K130-053)	SCREW	SCREW	1	9		0	10	
* 1K130-055-1	(1K130-055)	二重巻上げ防止ネジ	SCREW	. 1	12		0	10	
× 1K130−056−1	(1K130-056-1)	チャージレバービス	SCREW	1	4		0	10	
* 1K130-057-2	(1K130-057)	ミラーチャージレバービス	SCREW	2	12		0	10	
× 1K130-058-1	(1K130-058)	SCREW	SCREW	1	9		0	10	
* 1K130−063−2	(1K130-063)	ロックレバー軸	LOCK LEVER AXLE	1	12		0	5	
× 1K130-096-2	(1K130-096)	スプロケットネジ	SPROCKET SCREW	1	4	·	0	10	

Parts List									FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembl	Term y of Deliver	Q'ty/ Order	Remarks
* 1K130-097-2	(1K130-097)	スプロケットネジ	SPROCKET SCREW	1	4		0	10	
* 1K130-098-1	(1K130-098)	面カム外しレバー軸	CLUTCH CAM RELEASE LEVER AXLE	1	11		0	5	
1K130-170-1	(1K130-170)	バネピン	PIN	1	9		0	5	
* 1K130-176	(1K130-176)	SCREW	SCREW	1	2	1B991-378	ΟΔ	10	
* 1K146−016	(1K146-016)	レールピン	SCREW	1	14		0	10	
1K146-017-2	(1K146-017-2)	レバー押えネジ	WIND-UP LEVER SCREW	1	2	1B991-378	ΟΔ	5	
* 1K150-008	(1K150-008)	レバー軸ナット	LEVER AXLE NUT	1	2	1B991-378	ΟΔ	5	
* 1K160-180	(1K160-180)	多重撮りシートA	MULTI-EXPOSURE SHEET A	1	1	1B991-371	ΟΔ	5	
1K201-183	(1K201-183)	AE-L釦	AE-L BUTTON	1	1		0	5	· 
1K201-184	(1K201-184)	調光補正釦	COMPENSATION BUTTON	1	7		0	5	
1K201-185	(1K201-185)	巻戻しノブ	REWIND KNOB	1	6		0	5	
1K201-186	(1K201-186)	露出補正釦	EXPOSURE BUTTON	1	6	1B991-391	ОΔ	5	
* 1K206-002	(1K206-002)	多重撮りツマミ	MULTI-EXPOSURE KNOB	1	1	1B991-371	ΟΔ	5	
* 1K220-031	(1K220-031)	裏蓋着脱パネ	SPRING	1	13	1B991-395	ΟΔ	5	
* 1K220-036-1	(1K220-036)	レリーズ釦パネ	RELEASE BUTTON SPRING	1	1	1B991-371	ΟΔ	5	
* 1K220-037-1	(1K220-037-1)	レリーズ板パネ	RELEASE PLATE SPRING	1	11		0	5	
* 1K220-038-1	(1K220-038-1)	止め爪バネ	LATCH RIVET	1	14		0	5	

Parts List	List						FM3A FAA3				
Part Number	Part Code	名称	Part Name	Pes. /Unit	fig No.	Main Assembly	Term of Deliver	Q'ty/ Order	Remarks		
* 1K220-039	(1K220-039)	スプロケットバネ	SPROCKET SPRING	1	4		0	5			
* 1K220-041-1	(1K220-041)	着脱ピン押えバネ	LENS RELEASE BUTTON SPRING	1	9	1B001-098	ΟΔ	5			
* 1K225-042-1	(1K225-042-1)	振子パネ	PENDULUM SPRING	1	12		0	5			
* 1K225-043-2	(1K225-043-2)	アップバネ	SPRING	1	10	1B991-398	ΟΔ	5			
1K225-317	(1K225-317)	引張りバネ	SPRING	1	7		0	5			
1K225-318	(1K225-318)	慣性体バネ	SPRING	1	10	1B991-398	ΟΔ	5			
* 1K230-025-1	(1K230-025-1)	二重巻上げ防止パネ	SPRING	1	12	1B001-091	ΟΔ	5			
* 1K230-028	(1K230-028)	手動絞りレバーバネ	MANUAL STOP-DOWN LEVER	1	9		0	5			
* 1K230-029-1	(1K230-029)	45°ストッパーパネ	SPRING	1	10	18991-398	ΟΔ	5			
* 1K230-030-3	(1K230-030-1)	絞りレバーバネ	DIAPHRAGM LEVER SPRING	1	10	1B991-398	ΟΔ	5			
* 1K230-031-2	(1K230-031-2)	ダウンレバーバネ	SPRING	1	9		0	5			
* 1K230-032	(1K230-032)	レリーズレバーパネ	RELEASE LEVER SPRING	1	10	1B991-398	ОД	5			
* 1K230-033-1	(1K230-033-1)	ミラーアップ押えバネ	MIRROR UP SPRING	1	10	1B991-398	ΟΔ	5			
* 1K230-034	(1K230-034)		SPRING	1	10	1B991-398	ОД	5			
* 1K230-035-1	(1K230-035-1)	チリ取りパネ	SPRING	1	10		0	5			
* 1K230-039	(1K230-039)	巻上げレバー戻しバネ	SPRING	1	2	1B991-378	ОД	5			
* 1K230-041	(1K230-041)	スプールストッパーバネ	SPROCKET STOPPER SPRING	1	3	1B991-382	ΟΔ	5			

Parts List						FAA38001-R.3538.A			
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembly	Term of Deliver	Q'ty/ Order	Remarks
* 1K230-043	(1K230-043)	ロックレバーバネ	LOCK LEVER SPRING	1	12	•	0	5	
* 1K230076-2	(1K230-076)	カウンターバネ	COUNTER SPRING	1	2	1B991-378	ΟΔ	5	· · · · · · · · · · · · · · · · · · ·
* 1K230-077	(1K230-077)	零戻しレパー・バネ	COUNTER RESET LEVER SPRING	1	2	1B991-378	ΟΔ	5	
* 1K233-016-2	(1K233-016-1)	プリズム押えバネ	PRISM RETAINER SPRING	2	8		0	5	
1K233-122	(1K233-122)	巻戻し軸クリックパネ	SPRING	1	6		0	5	
* 1K240-046-1	(1K240-046-1)	押え接点	CONTACT	1	1	1B991-371	ΟΔ	5	
* 1K240-074	(1K240-074)	SPDプリント板押え	SBC PRINTED BOARD RETAINER	1	8		0	5	<del></del>
1K240-156	(1K240-156)	スクリーンロックバネ	SPRING	1	8		0	5	
* 1K240-468-4	(1K240-468-2)	バヨネットバネ	BAYONET SPRING	1	7		0	5	
1K241-338	(1K241-338)	シューバネ	SHOE SPRING	1	1	1B991-371	ΟΔ	5	
1K241-362	(1K241-362)	アゴ受けバネ	SPRING	1	14		0	5	
1K241-363	(1K241-363)	レバー受けバネ	SPRING	1	6	TF17_1	0	5	
1K241-364	(1K241-364)	露出補正パネ	SPRING	1		1B991-391	ΟΔ	5	
* 1K260-050-1	(1K260-050)	送り爪レバー	LEVER	1	2	1B991-378	ΟΔ	5	
* 1K260-052-2	(1K260-052-2)	巻上げギア	ADVANCE GEAR	1	3		0	5	
* 1K260-056	(1K260-056)	スプロ上ギア	SPROCKET UPPER GEAR	1	4		0	5	
* 1K275-010-1	(1K275-010)	スプロケット	SPROCKET	1	4	<del></del>	0	5	

Parts List	Parts List					FM3A		FAA38001-R.3538.A	
Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.	Main Assembl	Term y of Deliver	Q'ıy/ Order	Remarks
* 1K275-026-2	(1K275-026)	枚数計ギア	GEAR	1	2	1B991-378	ΟΔ	5	
* 1K300-034-1	(1K300-034)	スプロケット制限カム	SPROCKET STOPPER CAM	1	4		0	5	<del></del>
* 1K314-050	(1K314-050)	止め爪B	LATCH B	1	14	· <u></u> .	0	5	- 4
* 1K314-051-3	(1K314-051)	振子	PENDULUM	1	12		0	5	
* 1K314-052-3	(1K314-052-1)	ロックレバー	LOCK LEVER	1	12		0	5	
* 1K314-053-2	(1K314-053-2)	ミラーチャージレバー	MIRROR CHARGE LEVER	1	12		0	5	<u></u>
* 1K314-056-1	(1K314-056)	二重巻上げ防止レバー	DOUBLE-EXPOSURE-LEVER	1	12		0	5	
* 1K314064-1	(1K314-064-1)	ミラーアップ押えレバー	LEVER	1	10	1B991-398	ΟΔ	5	
1K314-105-2	(1K314-105-2)	零戻しレバー	COUNTER RESET LEVER	1			0	5	
1K330-044	(1K330-044)	MD軸受け	MD SHAFT BEARING	1	12		0	5	
1K330-045	(1K330-045)	巻戻し軸受け	REWIND SHAFT BEARING	1	6		0	5	
* 1K360-007	(1K360-007)	押え棒	SWITCH PLUNGER	1	1	1B991-371	ΟΔ	5	
1K360-092	(1K360-092)	巻戻し軸	REWIND SHAFT	1	6		0	5	
* 1K362-007-1	(1K362-007-1)	蝶番芯金B	ROD	1	13	1B991-395	ΟΔ	5	
* 1K370-189-1	(1K370-189)	巻戻し釦	REWIND BUTTON	1	12	1B998-758	ΟΔ	5	<del></del>
* 1K370-194	(1K370-194)	DB接点	DB CONTACT	1	14	<del></del>	0	5	
* 1K370-196	(1K370-196)	MD軸	MD SHAFT	 1	12		0	5	

Parts List	raris List						FAA38001-R.3538.A		
Part Number	Part Code	名称	Part Name	Pes, Unit	fig No.	Main Assembly	Term of Deliver	Q'ty/ Order	Remarks
* 1K370-363-1	(1K370-363-1)	段付軸	RELEASE INNER TUBE	1	1	1B991-371	ΟΔ	5	
* 1K370-367-2	(1K370-367)	スプロケット軸	SPROCKET SHAFT	1	4		0	5	<del></del> - · · · ·
* 1K370-772	(1K370-772)	DBアース接点	DB CONTACT	1	14		0	5	
* 1K400-077-2	(1K400-077~1)	レリーズ釦	RELEASE BUTTON	1	1	1B991-371	ΟΔ	5	
* 1K400-078	(1K400-078)	三脚座	TRIPOD SOCKET	1	12		0	5	
1K404-154	(1K404-154)	パヨネット環	BAYONET MOUNT	1	7		0	5	· · · · · · · · · · · · · · · · · · ·
* 1K467016	(1K467-016)	ターミナルキャップ	TERMINAL CAP	1	6		0	5	
* 1K475-158-1	(1K475-158-1)	枚数計板	FILM-COUNTER DIAL	1	2	1B991-378	ΟΔ	5	<del></del>
* 1K480-005	(1K480-005)	指標	COUNTER INDEX	1	2	1B991-378	ΟΔ	5	<del></del>
* 1K600-090-1	(1K600-090-1)	前板孔カバーB	FRONT PLATE COVER B	1	8		0	5	
* 1K600-092-1	(1K600-092)	MDシーソーレバー	MD SEE-SAW LEVER	1	12		0	5	
* 1K600-096-2	(1K600-096)	横基板カバー	COVER	1	10	1B991-398	ΟΔ	5	
* 1K600-130	(1K600-130)	制限コマ	STOPPER	1	11		0	5	
1K601-745	(1K601-745)	シューラグ板	RUG PLATE	1	1	1B991-371	ΟΔ	5	
1K601-746	(1K601-746)	シュー座裏打ち板	SHOE PLATE	1	1	1B991-371	ΟΔ	5	
1K601-747	(1K601-747)	裏蓋蝶番A	CAMERA BACK HINGE A	1	14	· ·	0	5	· ·
1K601-748	(1K601-748)	止め爪カバー	LATCH COVER	1	14	<del></del>	0	5	

**Parts List** FM3A FAA38001-R.3538.A Теги Pet, ßg Q'ty/ Part Number 46 Part Code Part Name øf. Main Assembly Remarks Abult Order No. Deliveri 1K601-751 (1K601-751) 前板孔カバーA COVER A 0 1K601-752 (1K601-752) 前板孔カパーC COVER C 8 0 5 1K601-753 (1K601-753) SHUTTER BRIDGE シャッターブリッチ 11 0 5 1K601-759 (1K601-759) プリズムボックス PRISM BOX 8 0 1K601-760 (1K601-760) 視野枠 FINDER FIELD FRAME 0 8 1K601-765 (1K601-765) アゴ受け制限 STOPPER PLATE 14 0 (1K601-805) ラグ板 **RUG PLATE** 1K601-805 0 5 (1K610-170) 遮光板A LIGHT BAFFLE A \* 1K610-170 0 (1K610-172) ARレバー AR LEVER 0 5 \* 1K610-172-1 12 \* 1K610-173 (1K610-173) 電池アース BATTERY CHAMBER EARTH CONTACT 12 \* 1K610-266-1 (1K610-266) 緩衝板 SHOCK ABSORB PLATE 12 0 5 (1K610-267-1) 送り爪バネ CLAW SPRING 2 1B991-378 ΔΟ 5 \* 1K610-267-4 \* 1K610-270 (1K610-270) スプロ制限除板 SPROCKET STOPPER RELEASE PLATE 2 18991-378  $O\Delta$ 5 \* 1K610-271-1 (1K610-271) 面カム板バネ CLUTCH CAM SPRING 3 О 5

- 16 -

0

 $\Delta$ 

 $\Delta$ 

2 1B991-378

2 1B991-378

CLUTCH CAM

CLICK LEVER SPRING

MULTI-EXPOSURE LEVER

\* 1K610-272-2

1K610-275-1

1K610-277-3

(1K610-272-2)

(1K610-275-1)

(1K610-277-3)

板力ム

レバークリックバネ

多重取り連結レバー

Parts List						FM3A			FAA38001-R.3538.A
Part Number	Part Code	名称	Part Name	Pos. /Unit	fig No.	Main Assembly	Term of Deliver	Order	Remarks
1K610-278-2	(1K610-278-2)	スプール制限バネ	SPROCKET STOPPER SPRING	1	3	1B991-382	ΟΔ	5	
* 1K625-007-3	(1K625-007-1)	枚数計窓	COUNTER WINDOW	1	1	1B991-371	ΟΔ	5	
* 1K630-081-1	(1K630-081)	DB絶縁樹脂	DB ISOLATED MOULD	1	14		0	5	
* 1K630-085	(1K630-085)	スプロカラーAナット	SPROCKET COLLAR A NUT	1	4		0	5	
* 1K630-114	(1K630-114)	スプロローラA	SPROCKET ROLLER A	1	4		0	5	
1K631-181	(1K631-181)	飾り環	COVER RING SHUTTER DIAL	1	1		0	5	
1K631-183	(1K631-183)	レリーズ釦飾り環	RELEASE BUTTON COVER RING	1	1	1B991-371	ΟΔ	5	
1K631-216	(1K631-216)	スペーサー	SPACER	1	11		0	5	
* 1K640-190-1	(1K640-190)	丸環	RELEASE RING	1	1	1B991-371	ΟΔ	5	
* 1K640-198	(1K640-198)	スプロ軸受け	SPROCKET UPPER SHAFT METAL	1	4		0	5	
* 1K640-199	(1K640-199)	スプロ下軸受け	SPROCKET LOWER SHAFT METAL	1	4		0	5	
* 1K640-253	(1K640-253)	枚数計押え板	COUNTER RETAINING RING	1	2	1B991-378	ΟΔ	5	
* 1K650-003-1	(1K650-003)	振子偏芯軸	PENDULUM ECCENTRIC AXLE	1	12		0	5	
* 1K680-102-3	(1K680-102-3)	モーターカップリング	CAP FOR MOTOR COUPLING	1	4	<del></del>	0	5	
* 1K680-106	(1K680-106)	ダウンレバー緩衝板	PLATE	1	10	1B991-398	ΟΔ	5	
1K680-110-1	(1K680-110-1)	指当て	WIND-UP LEVER KNOB	1	2	1B991-378	ΟΔ	5	
* 1K680-169-3	(1K680-169)	巻上げ軸	FILM-ADVANCE SHAFT	1	2	1B991-378	ΟΔ	5	

Parts List	CALLS LIST					FM3A		FAA38001-R.3538.A		
Part Number	Part Code	名称	Part Name	Pes, Almii	fig No.	Main Assembly	Term of Deliver	Order	Remarks	
× 1K680−170−2	(1K680-170-2)	巻上げカム	FILM ADVANCE CAM	1	3	·	0	5		
× 1K680−172−1	(1K680-172-1)	三羽根爪外しレバー	LEVER	1	11		0	5		
1K682-527	(1K682-527)	ホットシュー	HOT SHOE	1	1	1B991-371	ΟΔ	5		
1K682-528	(1K682-528)		PATRONE WINDOW FRAME	1	13	1B991-395	ΟΔ	5		
1K682-529	(1K682-529)	パトローネ窓	PATRONE WINDOW	1	13	18991-395	ΟΔ	5		
1K682-530	(1K682-530)	AEーL飾り環	AE-L COVER	1	1		0	5		
1K682-532	(1K682-532)	中間枠	SCREEN FRAME SPACER	1	8		0	5	•	
1K999-275	(1K999-275)	Tダイヤル止めネジ	SCREW	3	5	1B060-747	ΟΔ	10		
1K999-276	(1K999-276)	指標フィルム	INDEX FILM	1	5	1B060~747	ΟΔ	5		
1K999-277	(1K999-277)	指標フィルムワッシャー	WASHER	1	5	1B060-747	ΟΔ	10		
1K999-278	(1K999-278)	指標フィルム止めネジ	SCREW	1	5	1B060-747	ΟΔ	10		
1S007-262	(1S007-262)	F一Fo抵抗部組	F-FO RESISTANCE BASE UNIT	1	7		0	5	,	
1S017-064	(1S017-064)	半押しプリント板部組	PRE-RELEASE PCB UNIT	1	11		0	5		
1S400-195	(1S400-195)	フレキコネクター	CONNECTOR	1	8	1B991-375	ΟΔ	5		
1S400-196	(1S400-196)	フレキコネクター	CONNECTOR	1	8	1B991-375	ΟΔ	5	Al-Ve	
18700-450	(1S700-450)	ISO基板	ISO PCB UNIT	1	6	,	0	5		
1S705-559	(1S705-559)	シンクロ中継フレキ	SYNC. FPC	1	1	1B991~371	ΟΔ	5		

Parts List						FM3A		FAA38001-R.3538.A	
Part Number	Part Code	名称	Part Name	Pes, Almis	fig No.	Main Assembly of Deliver	Markor Dador	Remarks	
* A1~14035FD	(A1-14035FD)	SCREW	SCREW	1	6	0	10		
* A1-17018FB	(A1-17018FB)	SCREW	SCREW	2	8	0	10		
* A1-17025FA	(A1-17025FA)	SCREW	SCREW	5	6	0	10		
* A1-17030FC	(A1-17030FC)	SCREW	SCREW	8	1	0	10		
* A1-20022FB	(A1-20022FB)	SCREW	SCREW	4	4	0	10		
* A1-20030FD	(A1-20030FD)	SCREW	SCREW	2	11	0	10		
* A1-20070FT	(A1-20070FT)	SCREW	SCREW	1	11	0	10		
* A2-17025FC	(A2-17025FC)	SCREW	SCREW	4	10	0	10		
* A2-17030FB	(A2-17030FB)	SCREW	SCREW	2	14	. 0	10		
* B1-14020FB	(B1-14020FB)	SCREW	SCREW	2	8	0	10		
* B1-17020FA	(B1-17020FA)	SCREW	SCREW	1	11	0	10		
* B1-17025FB	(B1-17025FB)	SCREW	SCREW	6	7	0	10		
* B1-17030FB	(B1+17030FB)	SCREW	SCREW	1	9	0	10		
* B1-17040FA	(B1-17040FA)	SCREW	SCREW	1	8	0	10		
* B1-20025FA	(B1-20025FA)	SCREW	SCREW	1	12	0	10	<del></del>	
* B1-20040FB	(B1-20040FB)	SCREW	SCREW	3	11	0	10		
* B1-20045FA	(B1-20045FA)	SCREW	SCREW	2	11	0	10		

	Parts List						FM3A	FAA38001-R.3538.A
*B1-20050FA (B1-20050FA) SCREW SCREW 2 8 O 10  *B2-20045FA (B2-20045FA) SCREW SCREW 1 12 O 10  *H1-20028FB (H1-20028FB) SCREW SCREW 1 8 O 10  *K1-20070FA (K1-20070FA) SCREW SCREW 1 7 O 10	Part Number	Part Code	名称	Part Name	Pes, /Unit	fig No.		y/ ler Remarks
* H1-20028FB (H1-20028FB) SCREW SCREW 1 8 0 10  * K1-20070FA (K1-20070FA) SCREW SCREW 1 7 0 10	* B1-20050FA	(B1-20050FA)	SCREW	SCREW	2	8		)
* K1-20070FA (K1-20070FA) SCREW SCREW 1 7 O 10	* B2-20045FA	(B2-20045FA)	SCREW	SCREW	1	12	O 10	)
	* H1-20028FB	(H1-20028FB)	SCREW	SCREW	1	8	0 10	)
* K2-14015FA (K2-14015FA) SCREW SCREW 3 4 O 10	* K1-20070FA	(K1-20070FA)	SCREW	SCREW	1	7	O 10	)
	* K2-14015FA	(K2-14015FA)	SCREW	SCREW	3	4	O 16	)
						-		
			· · · · · · · · · · · · · · · · · · ·					
				<u></u>				
	. <u> </u>							
							· <del></del>	

Parts List					FM3A			FAA38051-R.3538.A
Part Number	Part Code	名 称	Part Name	Pes. Abut	fig No. Main Assemb	Term ly of Deliver	Q'ty/ Order	Remarks
1B060-752	(1B060-752)	管制部組(黒)	SHUTTER CONTROL UNIT (B)	1	5	0	1	
* 1B206~004	(1B206-004)	巻上げレバー部組(黒)	WINDING LEVER UNIT (B)	1	2	0	5	
1B991-362	(1B991-362)	前板部組(黒)	FRONT PLATE (B)	1	9	0	1	
1B991-372	(1B991-372)	上カバー部組(黒)製造番号	TOP COVER (B) WITH S/N	1	1	0	1	
1B991-374	(1B991-374)	底力バー部組(黒)	BOTTOM PLATE UNIT (8)	1	12	0	5	
1B991-379	(1B991-379)	上地板組(黒)	FILM ADVANCE LEVER UNIT (B)	1	2	0	1	
1B991-389	(1B991-389)	ISOダイヤル部組(黒)	ISO DIAL UNIT (B)	1	6	0	5	
1B991-403	(1B991-403)	エプロン部組(黒)	APRON UNIT (B)	1	7	0	5	
1C999-124	(1C999-124)	Tダイヤル部組(黒)	T DIAL UNIT (B)	1	5	0	5	
* 1K120-064	(1K120-064)	SCREW	SCREW	1	7	0	10	
1K146-018-3	(1K146-018-3)	レバー押えネジ(黒)	WIND-UP LEVER SCREW (B)	1	2 1B991-379	ОД	5	
1K201-187	(1K201-187)	巻戻しノブ(黒)	REWIND KNOB (B)	1	6	0	5	
1K310-092	(1K310-092)	巻上げレバー飾り環(黒)	WINDING LEVER COVER PLATE (B)	1	2	0	5	
1K999-279	(1K999-279)	Tダイヤル止めネジ	SCREW	3	5 1B060-752	ΟΔ	10	
* A1-17030FS	(A1-17030FS)	SCREW	SCREW	5	1	0	10	
* A2-17025FS	(A2-17025FS)	SCREW	SCREW	3	12	0	10	