
# Service Parts List

# PENTAX 2-70 P BUARTZ DATE

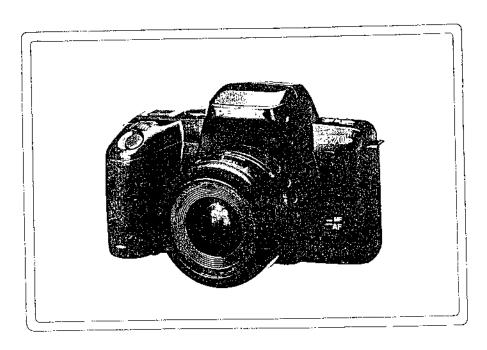


PRODUCT No. 27230 Z-70P QUARTZ DATE

LUCATION QUANTITY DELIVERY#
NOLOC 1 806И71И5 ИИИИ20
EAMERA PART LIST

©Asahi Optical Co., Ltd. Service Engineering Section.


04:95 H.Y



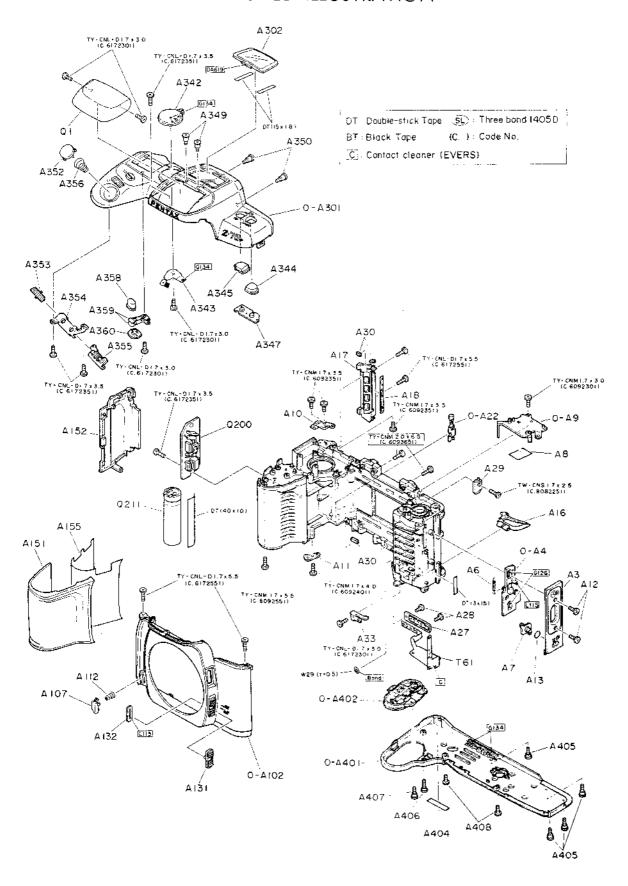


Product No.27230
PENTAX 2-70P MARTIZ


(C. ) Code No.

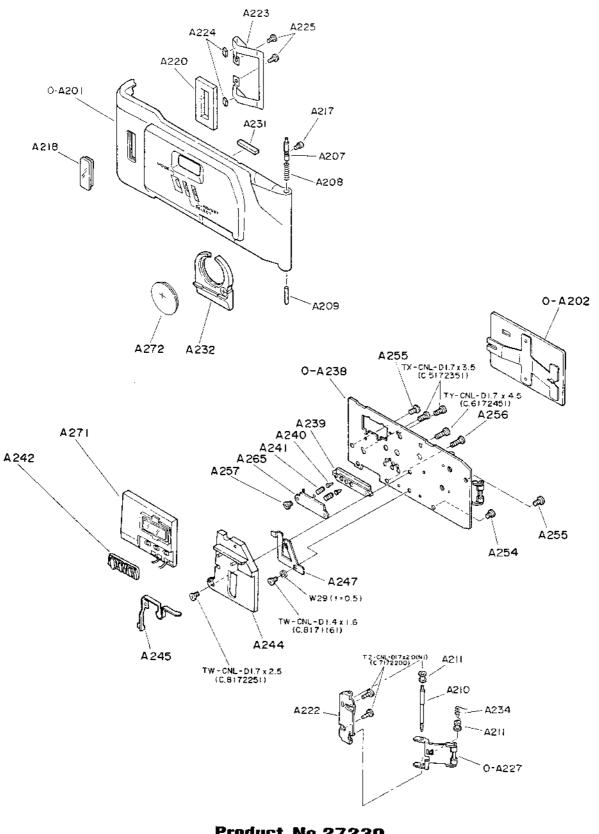

Product No.27230
PENTAX **2-70**P


Fig. 2

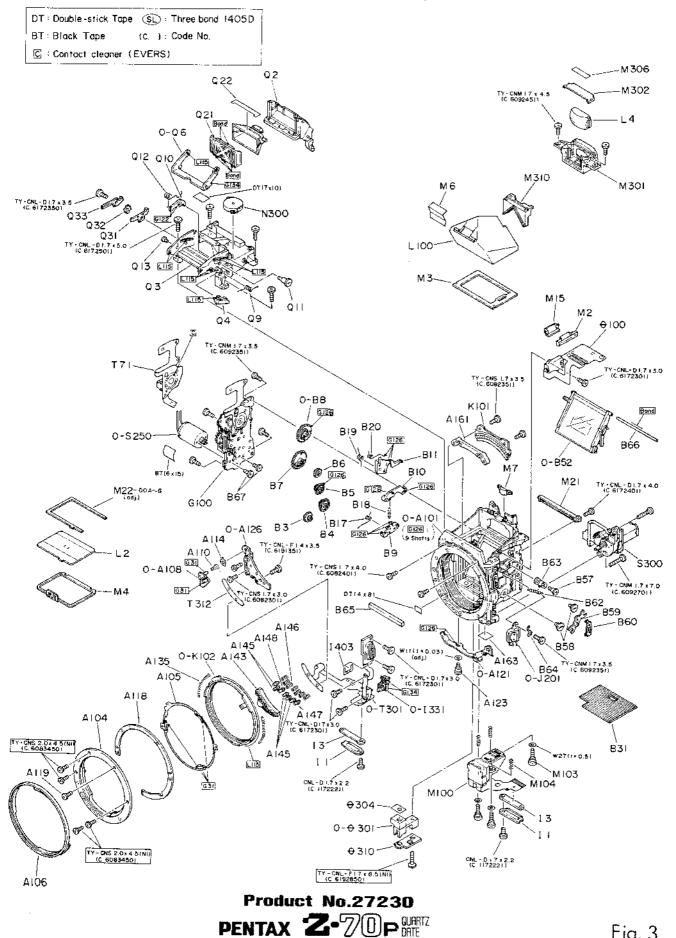

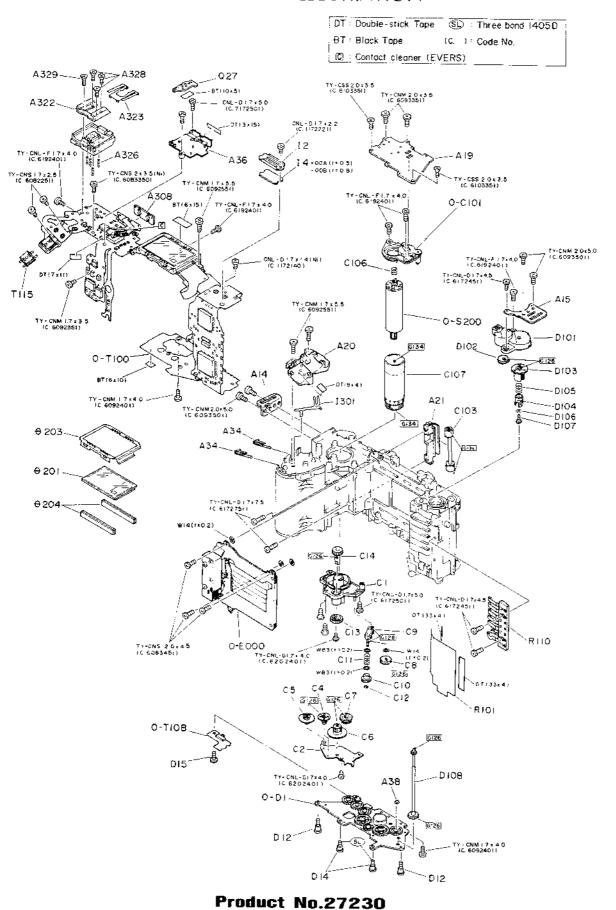

PENTAX 2-70 P BURNTY

Fig. 4

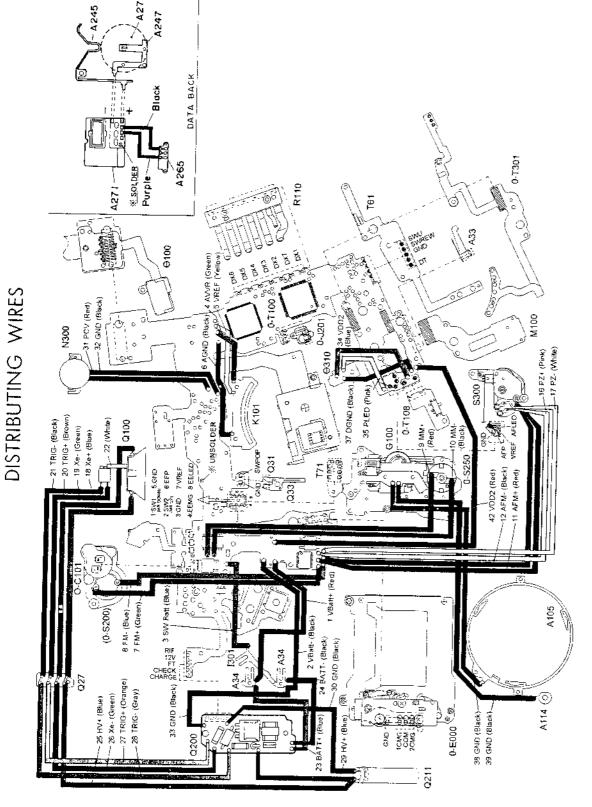

Product No.27230
PENTAX **Z-**70P

## LIST OF SERVICE PARTS

#### Product No. 27230 PENTAX Z-70<sub>P QUARTZ DATE</sub>

Note: 1. The parts with numbers starting '0-' are assemblies.

- 2. Only available parts are listed below.
- 3. The standard parts with a square-mark are new in the EXPLODED ILLUSTRATION. 分解図の中で四角で囲ってある標準部品は新規の部品です。

Parts No.	Description	Qty.	Interchangeability	NM No.
A3	Back cover key cover	1	26900-A3	+
0-A4	Back cover key assy.	1	26900-0-A4	
	(A4, A5)			
A6	Back cover key spring	1	26900-A6	
A7	Rewind SW	1	26900-A7	
8A	Insulation tape	1	27060-A8	
0-A9	Drive/Mode SW base assy.	1	27060-0-A9	
	(A9, A8, A24, A25, A26 x2)		]	
A10	Back cover shaft receptacle, top	1	26900-A10	
A11	Back cover shaft receptacle, bottom	1	26900-A11	
A12	Back cover key cover retainer screw	2	26900-A12	
A13	Rewind SW protector	1	26900-A13	
A14	Strap hook, right	1	27060-A14	
A15	Strap hook, left	1	27060-A15	
A16	Film cartridge retainer spring	1	26900-A16	ļ
A17	Film guide	1	26900-A17	
A18	Film position marker	1	26900-A18	
A19	Accessory shoe base plate	1	27060-A19	
A20	Release SW base	1	27060-A20	
A21	Sprocket receptacle	1	26900-A21	
0-A22	Film retainer plate assy.	1	27060-0-A22	
	(A22,A23)	-	2400 0 112	
A27	Data contact cover	1	26900-A27	
A28	Data contact cover retainer screw	$\frac{1}{2}$	26900-A28	
A29	Film cartridge guide	1	27060-A29	
A30	Spacer	3	26900-A30	
A33	Earth plate	1	27060-A33	
A34	Battery contact piece	2	26900-A34	
A36	Main SW base	1	PUN VOUL	
A38	Spacer	1		

Parts No.	Description	Qty.	Interchangeability	NM No.
0-A101	Front housing assy.	1		
	(A101,A104,A105,A108,A109,A110,A111			
	A114, A118, A119, A121, A122, A123, A124			
	A125, A126, A134, A135 x2, A136 x2, A143	l 3.		
	A145 x5,A146 x7,A147,A148,A161,B3,			
	B4, B5, B6, B7, B8, B9, B10, B11, B15, B17,			
	B18,B19,B20,B31,B52,B55,B57,B58 x2			
	B59,B60,B62,B63,B64,B65,B66,B67 x2			
	G100, I331, I332, I400, I403, J201, J203			
	K101, K102, K106, L1, L6, S250, S251			
	T301, T311, T312, TY-CNL-D1.7x3.0 x2,			
	TY-CNL-D1.7x3.5 x2,TY-CNL-F1.4x3.5			
	TY-CNM1.7x3.5 x5,TY-CNS1.7x3.0 x2,			
	TY-CNS1.7x3.5 x2,TY-CNS1.7x4.0 x2,			
	TY-CNS2.0x4.5 x4)			
0-A102	Front cover assy.	1		İ
	(A102,A107,A112,A131,A132)			
A102	Front cover	1		
A104	Mount ring	1	25900-A104	
A105	Mount spring	1	20300 A104	
A106	Mount cover ring	1		
A107	Mount lock button	1	26900-A107	
0-A108	Mount lock guide plate assy.	1	26900-0-A108	
	(A108, A109, A111)		20000 0 K100	
A110	Mount lock guide plate spring	1	26900-A110	
A112	Mount lock button spring	1	26900-A112	
A114	Lug plate	1	20300 ATTZ	
A118	Mount washer	1		
A119	Mount ring retainer screw			
0-A121	Joint lever assy.	1 1	26900-0-A121	
	(A121, A122)		Z0300-0-A121	
A123	Joint lever retainer screw	1		
0-A126	Joint lever plate assy.	l l		
	(A126, A124, A125, A134)	1		
A131	Focus mode lever	,	00000 1101	
A132	Click plate spring	1	27060-A131	
A135	Restitution spring	1	26900-A132	1
A143	Exterior tube	2	25000-A135	
A145	Connector pin	1	54505 1345	
A146	Connector pin spring	5	24500-A145	
A147	Connector pin C	7	26900-A146	
A147 A148	Connector pin C	1	26900-A147	
A140 A151	-	1	24500-A148	
NIO1	Grip rubber	1	27060-A151	[

Parts No	• Description	Qty.	Interchangeability	NM No
A152	Side cover	1	27060-A152	
A155	Grip rubber adhesive tape	1	27060-A155	
A161	Insulation spacer	1	26900-A161	
A163	Motor spacer	1	27030-C104	
0-A201	Back cover assy. (A201,A207,A208,A209,A217,A218,A220 A231)	1	27062-A200	
0-A202	Pressure plate assy. (A202,A203,A214x2)	1	65548-0-Y20	
A207	Hinge shaft B	1	25900-A207	
A208	Hinge shaft spring	1	25900-A208	
A209	Hinge shaft A	1	25900-A209	
A210	Roller shaft	1	27060-A210	
A211	Roller	2	27060-A211	
A217	Hinge shaft B retainer screw	1	25900-A217	
A218	Film cartridge window	1	26302-A218	
A220	Film cartridge window seal	1	26900-A220	
A221	Pressure plate cover	1	26900-A221	
A222	Roller base plate	1	27060-A222	
A223	Film cartridge retainer spring	1	26900-A223	
A224	Light seal	2	25905-B38	
A225	Roller base plate retainer screw	2	27060-A225	
D-A227	Film roller plate assy.	1	27060-0-A227	
	(A227, A228, A229 x2)	1	Z1000-0-8ZZ1	
A231	Back cover light seal	1	26900-A231	
A232	Battery holder	1	26902-A232	
A234	Film roller plate spring	1	27060-A234	
-A238	Back cover seat assy.	1	27062-1-A238	
	(A238, A210, A211 x2, A222, A227, A228, A229 x2, A234, A253 x2,	1	Z100Z-1-R238	
A239	TZ-CNL-D1.7x2.0 x2)	ļ		
	Non-cord pin holder	1	26902-A239	
A240 A241	Non-cord pin	2	25201-A224	
	Non-cord pin spring	2	25201-A225	
A242	Function button	1	27062-A242	
A244	Battery contact holder	1	26902-A244	
A245	Positive contact piece	1	26302-A236	
A247	Ground contact piece	1	26302-A235	
A254	Back cover seat retainer screw A	1	26902-A254	
A255	Back cover seat retainer screw B	2	26900-A28	
A256	Back cover seat retainer screw C	1	26902-A256	
A257	Non-code holder retainer screw	1	26902-A257	
A265	Non-code plate	1	65547-Y35	

Parts No.	Description	Qty.	Interchangeability	NM No.
A271	Data module	1	26201 <i>-</i> T500	
A272	Battery for data back	1	25201-T401	
0-A301	Top cover assy.	1		
İ	(A301, A302, A303 x2, A306 x2, A342,			
Ì	A343, A344, A345, A347, A352, A353, A354			
	A355,A356,A358,A359 x2,A360,			
	TY-CNL-D1.7x3.0 x2, TY-CNL-D1.7x3.5)	1		Ì
A301	Top cover	1		
A302	LCD window	1		
A306	Mode button	2		
A308	Mode switch	1		
0-A321	Accessory shoe base assy.	1	27060-0-A321	
	(A321, A324, A325 x3)	-		
A322	Accessory shoe	1	26300-A322	
A323	Accessory shoe spring	1	26300-A323	
A326	Contact spring	4	25900-A326	
A328	Accessory shoe retainer screw A	3	27030-A17	
	(A329 with Screw lock)		2.000 Mg/	
A329	Accessory shoe retainer screw B	1	27030-A18	
A342	Main SW knob	1	27000 RIO	
A343	Main SW contact piece	1		
A344	Drive button	1		
A345	F-mode button	1		
A347	Drive/F-mode SW	1		
A349	Top cover retainer screw A	2	26300-A410	
A350	Top cover retainer screw B	2	26900-A350	
A352	Shutter release button	1	27060-A352	
A353	Select dial	1	27060-A353	
A354	Select dial support plate	_	27060-A354	ļ
A355	Select SW	1 1	27060-A355	
A356	Release button spring	1	26900-A356	
A358	TV/AV button	i	20300-850D	
A359	TV/AV SW spring	_	27060_1250	
A360	TV/AV SW	2	27060-A359	
0-A401	Bottom cover assy.	1 1	27060-A360	
o Mioi	(A401, A410, A411)	1	27096-0-A401	
0-A402	Battery cover assy. (A402,A403)	1	26900-0-A402	
A404	Serial number plate	1	25000-A414	
A405	Bottom cover retainer screw A	4	26900-A405	
A406	Bottom cover retainer screw B	1	26900-A406	
A407	Bottom cover retainer screw C	1	26900-A405 26900-A407	
A408	Bottom cover retainer screw D	2	26900-A408	
1 4 4	and deter retainer belefing	۷	∠000U-M4U <b>0</b>	

Parts	lo. Description	Qty.	Interchangeability	NM No.
В3	Mirror reduction gear A (Gray)	1		-
B4	Mirror reduction gear B (Green)	1		
<b>B</b> 5	Mirror reduction gear C (Gray)	1		
В6	Mirror idle gear (Black)	1	26900-B6	1
В7	Shutter charge cam (Gray)	1		
0-B8	Mirror drive cam assy. (Green) (B8,B15)	1		
В9	Diaphragm set lever (Gray)	1		
B10	Shutter charge lever	$\frac{1}{1}$		
B11	Mirror drive lever	1	]	
B17	Diaphragm set lever spring	1	26900-B17	
B18	Lever restitution spring	1	Z0900-B17	ŀ
B19	Mirror drive spring	1		
B20	1st mirror restitution spring	t		
B31	Light seal plate, bottom	1		
0-B52	Mirror seat assy.	1		
	(B52,B55,L1,L6)			
B57	2nd mirror actuating lever shaft	1		ļ
B58	Mirror seat receptacle	2	26900-B58	
B59	Seat receptable retainer plate	1	20000.500	
B60	Plate retainer			ĺ
B62	2nd mirror actuating spring	1 1		
B63	2nd mirror actuating lever	1		
B64	Spring hook plate	1		
B65	Mirror shock absorber	1	26900-B65	
B66	Mirror hinge shaft	1 1		
B67	Mirror motor retainer screw	2		
C1	Bottom mech. plate A	1 1	26900-C1	
C2	Bottom mech. plate B	1 1	26900-C2	
C4	Reduction gear A	1	26900-C4	
C5	Reduction gear B	1	26900-C5	
C6	Reduction gear C	1	26900-C6	
C7	Reduction gear D	1	26900-C7	
C8	Reduction gear E	1	26900-C8	
C9	Planet gear arm	1	26900-C9	
C10	Planet gear	1	26900-C10	
C11 C12	Friction spring	i	26900-C11	
C12	Retainer ring	1	26300-A358	
C14	Reduction gear F	1	26900-C13	
	Reduction gear G	1	26900-C14	
-C101	Motor receptacle plate assy.	1		
	(C101,C16,C102,C104,C105,C111,C112,			
	C113, TY-CNL-B1.4x2.5 x2)			İ


Parts No.	Description	Qty.	Interchangeability	NM No.
C103	Sprocket	1	26900-C103	
C106	Motor retainer spring	1	26900-C106	
C107	Spool	1	26900-C107	
0-D1	Rewind bottom mech. plate assy.	1		
	(D1, D2 x4, D3 x2, D4, D5x 7, D8 x2,			
	D9 x2,D10,D11 x2)			
D12	Bottom mech. plate retainer screw A	2	26900-D12	
D14	Bottom mech. plate retainer screw B	2		
D15	Bottom mech. plate retainer screw C	1	27096-D15	
D101	Rewind top mech. plate	1	27060-D101	
D102	Idle gear	1	27060-D102	
D103	Rewind fork gear	1	26900-D103	
D104	Rewind fork	1	25900-D14-01	
D105	Rewind fork spring	1	26900-D105	
D106	Fork retainer plate	1	26900-D106	
D107	Rewind fork retainer screw	1	25900-D21	
D108	Connecting rod gear	1		
0-E000	Shutter block	1		
G100	Diaphragm control block	1		
I1	Flex. board retainer plate A	2	26900-11	
12	Flex. board retainer plate B	1	27060-12	
13	Flex. board retainer rubber A	2	26900-13	
I 4-00A	Flex. board retainer rubber B,a(t=0.8	5) 1		
-00B	" B,b(t=0.8	Red)		
I301	Battery SW	1	26900-I301	
0-I331	Focus mode SW assy.	1		
•	(1331,1332)			
I 403	Light seal	1	27041-A231	
0-J201	TTL flash photo sensor assy.	1 1		
	(J201, J203)			
K101	f-Volume	1	27030-K101	
0-K102	Diaphragm coupler ring assy.	1	-	
	(K102,K106)			
L2	Fresnel lens	1		
L4	Eyepiece lens	1 1	26900-L4	
L100	Penta mirror assy.	1 1	27060-L100	
	(L101,L102,M8 x2)	-		
M2	Display prism		27060-M2	
мз	Finder mask	$\begin{bmatrix} 1 \\ 1 \end{bmatrix}$	27060-M3	
M4	Fresnel lens retainer plate	1 1	=	
M6	Light seal tape	1	27060-M6	
M7	Condenser lens	1	2.000 HO	
M15	Display prism holder	1		

6/8 27230

Parts No.	Description	Qty.	Interchangeability	NM No.
M21	Fresnel lens retainer plate holder	1	¥ 313.	
M22-00A	Focus adjusting washer A (t=0.15)	1		
-00B	" B (t=0.2)			
-00C	" C (t=0.25)			
-00D	" D (t=0.3)			
-00E	" $E(t=0.35)$			
-00F	'' F (t=0.40)			
-00G	'' $G(t=0.45)$			
M100	AF module	1		
M103	AF module adjusting screw	3		
M104	AF module spring	3	25900-M104	
M301	Eyepiece frame	1	23500-1104	
M302	Eyepiece lens retainer plate	1	26000 4209	
M306	Insulation tape (3x15)	1	26900-M302	
M310	Dust prevention cover	_		
N300	Piezo-electric buzzer	1	00000 H000	
<del>0</del> 100	Finder LCD block	1	26900-N300	
0201	LCD	1		
6201 6203	LCD retainer			
6203 6204	LCD connector	1		
0-8301	P indication lens block	2	27060-0204	
0-6301	(0301,0302,0303)	1	27096-0-0301	
0304	P indication lens cover	1 1	27096-0304	
9310	P indication P.C. board	1		
Q1	Flash cover	1		
Q2	Flash frame	1		
Q3	Flash base	1 1		
Q4	Flash button	1 1		
0~Q6	Flash arm assy.	1		
	(Q6,Q16 x2)	1		
Q9	Flash pop-up spring	1	27060-Q9	1
Q10	Flash hook lever	1	26900-Q10	
Q11	Flash hook lever shaft	1 1	27060-Q11	
Q12	Flash hook spring	1	27060-Q11 27060-Q12	
Q13	Flash SW pin	1	26900-Q13	
Q21	Diffuser	1	₹0200_ <b>6</b> 19	
Q22	Flash insulation tape			
Q27	Flash relay P.C. board	1		
Q31	Flash SW fixed contact piece	1	00000 001	
Q32	Flash SW holder	1	26900-Q31	
Q33	1	1	26300-I321	
Q33 Q100	Flash SW moving contact piece Flash assy.		26900-Q33	
Q200				
ಳ∠∪∪	Flash P.C. board	] 1 [		

Parts No.	Description	Qty.	Interchangeability	NM No.
Q211	Main capacitor	1	27060-Q211	
R101	DX contact cover	1	26900-R101	
R110	DX contact piece	1	26900-R110	
0-\$200	Film transport motor (S200,S201)	1		
0-S250	Mirror motor (S250,S251)	1		
S300	AF motor	1		
T61	Data P.C. board	1		
T71	Connector P.C. board	1		
0-T100	Main P.C. board	1		
0-T108	P select SW assy. (T108,I11)	1	27096-0-T108	
T115	Shutter release SW	1	27060-T117	
0-T301	Mount P.C. board (T301,1400,1403,T62,T311)	1		
T312	Mount P.C. board adhesive tape	1	27060-T312	

8/8 27230

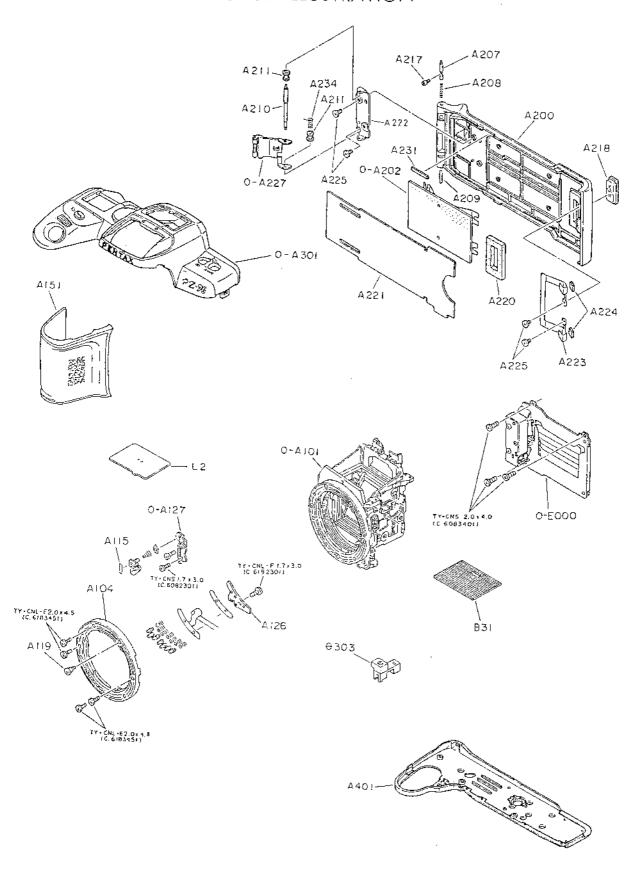

PRODUCT No. 27234

PENTAX **2-70** 

#### LIST OF SERVICE PARTS

#### Product No. 27234 PENTAX PZ-70

Note: 1. The parts not listed below are interchangeable with those of Z-70P QD(Product No.27230).

For other parts, refer to the LIST OF SERVICE PARTS of Z-70P QD(27230).

- 2. The standard parts are with a square-mark are new in EXPLODED ILLUSTRATION.
- 1. 下記の部品以外は、Z-70P QD (製品番号27230) と共通です。 他の部品は、Z-70P QD(27230)のバーツリストを参照して下さい。
- 2. 分解図の中で四角で囲ってある標準部晶は新規の部晶です。

Parts No.	Description	Qty.	Interchangeability	NM No.
0-A101	Front housing assy.	1		
	(A101, A104, A105, A108, A109, A110, A111	_		-
	A114, A119, A121, A122, A123, A124, A125	i		
	A126, A127, A134, A135 x2, A136 x2,			
	A145 x5,A146 x7,A147,A148,A161,B3,			
	B4, B5, B6, B7, B8, B9, B10, B11, B15, B17,			
	B18,B19,B20,B31,B52,B55,B57,B58 x2			
	B59,B60,B62,B63,B64,B65,B66,B67 x2			
	G100, I331, I332, I401, I402 x3, I403,			
	J201, J203, K101, K102, K106, L1, L6,			
	\$250,\$251,T301,T311,T312,			
	TY-CNL-D1.7x3.0 x2,			
	TY-CNL-D1.7x3.5 x2,TY-CNL-F1.4x3.5			
	TY-CNL-F1.7x3.0, TY-CNL-E2.0x4.5 x4			ļ
	TY-CNM1.7x3.5 x5,TY-CNS1.7x3.0 x2,	i		
A104	TY-CNS1.7x3.5 x2,TY-CNS1.7x4.0 x2)	}		
A104 A115	Mount ring (rosin)	1		
A119	Spacer sheet	1	27140-M35	
A119 A126	Mount ring retainer screw B (black)	1		ļ
0-A127	Connector pin plate	1		
U-A127	Mount lock guide plate base assy. (A127,A124,A125,A134)	1		
A151	Grip rubber			
0-A201	Back cover assy.	1	27096-A151	
0 11204	(A201, A207, A208, A209, A217, A218, A220)	1	27060-A200	!
	A231, W82(t=0.2) x4)			
0-A202	Pressure plate assy.	1	96000.0 4000	
	(A202, A203, A214 x2)	1	26900-0-A202	
A207	Hinge shaft B	1	26900-A207	

Parts No.	Description	Qty.	Interchangeability	NM No.
A208	Hinge shaft spring	1	26900-A208	<del></del>
A209	Hinge shaft A	1	26900-A209	
A210	Roller shaft	1	27060-A210	
A211	Roller	2	27060-A211	
A217	Hinge shaft B retainer screw	1	26900-A217	
A218	Film cartridge window	1	26900-A218	
A220	Film cartridge window seal	1	26900-A220	1
A221	Pressure plate cover	1	26900-A221	
A222	Roller base plate	1	27060-A222	
A223	Film cartridge retainer spring	1 1	26900-A223	
A224	Light seal	2	26900-A224	
A225	Roller base plate retainer screw	4	27060-A225	
0-A227	Film roller plate assy. (A227,A228,A229 x2)	1	27060-0-A227	
A231	Back cover light seal	1	00000 kgg1	
A234	Film roller plate spring	1	26900-A231	
0-A301	Top cover assy.	· 1	27060-A234	
	(A301, A302, A303 x2, A306 x2, A342,	i		<u></u>
	A343, A344, A345, A347, A352, A353, A354			•
	A355, A356, A358, A359 x2, A360,			
	TY-CNL-D1.7x3.0 x2,TY-CNL-D1.7x3.5)			
A301	Top cover	1		
A401	Bottom cover	1	27060-A401	
B31	Light seal plate, bottom	1 1	71000-W401	
0-E000	Shutter block (standard format only)	1 1		Ī
L2	Fresnel lens	1		
6303	Cover frame	1		

Note: 1. The parts listed below are not equipped with PZ-70(27230). 下記の部品は、PZ-70 (27234) には使用されていません。

Parts No.	Description	Qty.	Interchangeability	NM No.
27230-A106	Mount cover ring	1	7-22	
27230-A118	Mount washer	1		1
27230-A143	Exterior tube	1		1
27096-0-0301	P indication lens block(0301,0302,030	3) 1		
27096-9304	P indication lens cover	1		
27230-9310	P indication P.C. board	1		
27096-0-T108	P select SW assy. (T108, I11)	1		


#### LIST OF SERVICE PARTS


Product No. 27236 PENTAX Z-70


Note: 1. The parts not listed below are interchangeable with those of  $\frac{PZ-70(Product\ No.27234)}{PC}.$  For other parts, refer to the LIST OF SERVICE PARTS of  $\frac{PZ-70P(27234)}{PC}.$ 

1. 下記の部品以外は、PZ-70(製品番号27234)と共通です。 他の部品は、PZ-70(27234)のパーツリストを参照して下さい。

Parts No.	Description	Qty.	Interchangeability	NM No.
0-A301	Top cover assy.	1	750	· · · · · · · · · · · · · · · · · · ·
	(A301,A302,A303 x2,A306 x2,A342,			
	A343, A344, A345, A347, A352, A353, A354			
	A355,A356,A358,A359 x2,A360,			
	TY-CNL-D1.7x3.0 x2,TY-CNL-D1.7x3.5)	•		
A301	Top cover	1		

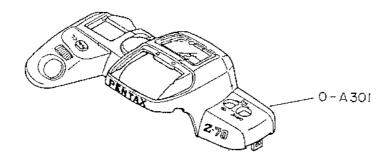

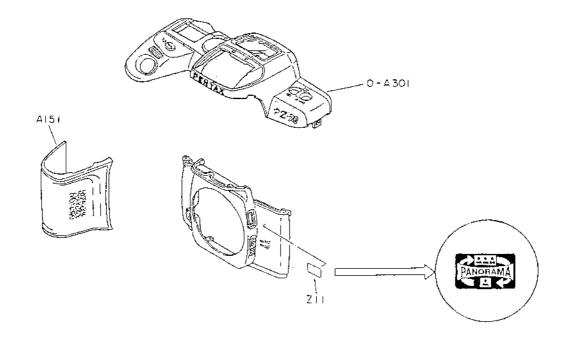

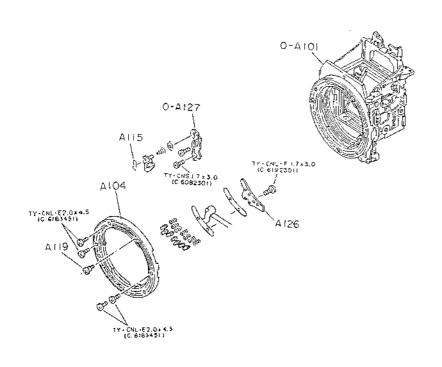

PRODUCT No. 27238
PENTAX PZ-70 PANORAMA
DATE