40FBT-R. 3040. A

Nikon F3T
Nikon F3P
F3 Limited

PARTS LIST

Supplimentary repair manual for the Nikon F3/T (40FBT) and Nikon F3/P (40FBE)

Contents

1.	FPC	2
2.	SHUTTER UNIT	5
3.	FRONT PLATE	6
4.	BODY DIE-CASTING	9
5.	TOP COVER, FILM-ADVANCE SIDE	10
6.	TOP COVER, REWIND SIDE	14
7.	BOTTOM PLATE	17
8	CAMERA RACY	10

Remark:

Part numbers of the F3/P are indicated by the numbers which are added 5000 or 6000 to those of the F3 and also, part numbers of the F3/T by numbers which are added 2000 or 3000 to those of the F3.

Common parts among the F3, F3/P and F3/T are indicated by the part numbers of the F3.

Commom parts between the F3/P and F3/T are indicated by the part numbers of the F3/T.

1. FPC


T: Nikon F3/T (40FBT)

P: Nikon F3/P (40FBE)

		1. NIKON 13/1 (40188)
Section	Item	Solution
FA1-6115 (Release base plate)	Т, Р	An interface circuit is added between Release switch #1006 and IC input. The following parts are installed on Release base plate FA1-6115. 1) Transistors DTA 124, DTC 124. 2) Resistor (4.7K\Omega) Shutter release SW DTC124 (red, black, white, orange)
#3006	T, P	Reinforcement of the power switch circuit
		Mini-mold transistor #1022 on #1066 is replaced with #3022. Resistor #3119 (22KΩ) is added between Terminals B and E of #3022.
FA4-6001	T, P T, P T, P T, P P	① Circuit pattern for the release switch of #1006 is eliminated. ② FA1-6115 is attached to #1004. ③ Four lead wires. ④ MD connector #1034 is modified to #6034. ⑤ Use Paint ECF0011 when coating #132.
		Black 6006 Shutter release SW FA1-6115 6034

		40FBE, 40FBT
Section	Item	Solution
FA1-3115	T, P	1 Shutter release and self-timer reinforcement circuits.
FA1-6115	P	② Shutter release reinforcement circuit.
FA1-3115A	Т, Р	3 Reinforcement circuit of the film-advance completion switch.

Cut the pattern for the release switch of #1001-1 and attach FA1-3115 onto #1004 by adhesive tape after applying moisture-proof coating.

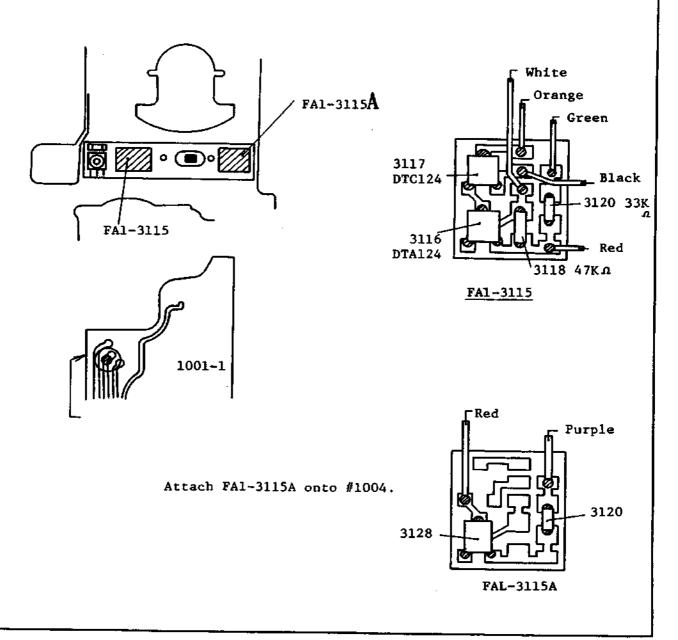

		40FBE, 40FBT
Section .	Item	Solution
FA4-6001	Т, Р	① Moisture-proof coating is applied.
	T	② Self-timer reinforcement circuit is added.
	T, P	Reinforcement circuit of the film-advance completion switch is added. FA1-3115A
	P	Moisture-proof coating is applied to the following sections. • Arround #6034 • Inside #1004 • FA1-6115 • Bottom of #1006 Green of the following sections.
#5200	T, P	 The pertaining section for the film-advance completion switch is cut off. Apply moisture-proof coating to the section indicated by ** in the figure. (Top, bottom, and corner)
		Cut Moisture-proof coating (Top, bottom, corner)
FA4-6001	P	① Moisture-proof coating.
	P	• MD connector • Outside of #1004 • Press-contact joint • Solder joint, gray code contact ② Power switch, the first and second release switches are connected to the shutter unit directly. Misture-proof coating Purple Red Red 12x2 Purple Reinforecement circuit
	T P	3 Sponge strip #3517 is attached by adhesive tape.
	P	4 Insulating tape #743 is attached to the gray code contact. (#962)
	P	5 #12x2
	т. Р	6 Reinforcement circuit of the film-advance completion is added. (FA1-3115A)

(:

		40FBE, 40FBT
Section	Item	Solution
FA4-6001	P	① Use #6560 to cover the gray code press-contact joint.
	Т, Р	2 Apply moisture- proof coating to the press- contact joint.
	P	3 Solder the lead wire (white) to the input terminal of #1005.
	P	4 Secure the lead wire by insulating tape after routing.
	T, P	Section (A) indicated in the figure. Then apply sillicon onto the surface.

2. Shutter Unit

Section	Item	Solution
FA4-5281	P	1 Lead wire soldering
		• Power switch (yellow)
		• The second release switch (orange)
	P	2 Apply misture-proof coating to the following sections.
		 Top/bottom of the connector (Excepting top of the lug plate)
		• Power switch base
		• The first release switch base, solder joint.
		• The second release switch base (bottom, solder joint)
		Closing curtain switch base (Only positive terminal side)
	Т, Р	Solder joint of the trigger switch lead wire (Section(A)) Gray Orange Blue

3. Front plate

Section	Item	Solution
FA3~5006	P	① Attach #6520 to #5006
	P	② Apply Sumiflunon EACO511 to the end face of #6520.
	Т, Р	3 Apply Sumiflunon EACO511 to #5714
	P	4 Use Paint ECF0011 (black) to coat the mirror cage.
	P	5 Attach #5188 by Adhesive SC108-33B for five minutes.
		5118
		5002 Sumiflunon EACO511
	;	Sumiflunon EACO511
	ļ	5733 5714 903
	1	

	r ' "	40FBE, 40FBT
Section	Item	Solution
FA3-5006	Т, Р	1 Attach #3507 and #3518 to #5006.
	P	② Attach #6510
	Т, Р	3 Apply Sumiflunon EACO511 to bottom of the front plate.
	P	4 AF lead wire (orange) is removed.
	P	5 Sync contact is added. Be sure to bend the soldering section of the sync contact for preventing short-circuit.
	P	6 Apply silicon to the through-hole after installing the sync contact as shown in the figure.
	P	7 Attach tape to the solder joint after soldering the sync contact lead wire.
	P	8 Arrange the lead wire of sync contact by using Adhesive #501
	P	Reinforce the solder joints of the release magnet lead
		wires (red, black) by adhesive for five minutes.
	P	Apply moisture-proof coating to the solder joints of
		6538 Purple Tape 3518 3507 Red Black 6510

Section	Item	40FBE, 40FBT
	 	Solution
FA3-5006	P	① Solder lead wire (white) to the former AF contact. Purple White Moisture-proof coating
-		
FA3-5006	P	after adjusting viewfinder frame and infinity focus. 897 113-115 Silicon 978-983

 $\left(\frac{1}{2}\right)$

4. Body die-casting

Section	Item	Solution
FA1-5001	т, Р	① Attach #3519 to #807 by Adhesive #616.
	Т, Р	② Attach #3509 to #803 by Adhesive #501.
	T, P	3 Attach #3508x2, #3511 and #2774 to the body die-casting by adhesive tapes.
	P	Apply misture-proof coating to Sections A, B, C and D.
	P	5 Cover the bearing of film roller shaft and the through hole of multi-exposure lever by silicon. Be careful not to exude the silicon into the holes.
	P	6 Use the sponge strip of 40FB for the camera back spong strip. Apply moisture-proof coating after attaching the sponge strip.
		Silicon (Top and bottom of the holes) 805 805 806 807 807 809 809 809 809 809 809 809 809 809 809

<u>,</u>		40FBE, 40FBT
Section	Item	Solution
FA1-50011	T, P	① Apply Sumiflunon (EACO511) to bottom of the body die-casting. FA2-5603 Sumiflunon (EACO511)
FA2-5603	P	1 #595, #593 and #613 are removed. Moisture-proof Apply silicon and coating moisture-proof coating to FA2-5603 except the film-advance completion switch contact.
5. Top FA1-5003	P P P P P P	1) Secure #6502. 2) Attach #5409 3) Through-hole of the multi-exposure lever is eliminated. 4) Apply silicon to Section a 5) Power switch lever is eliminated. 6) Multiple exposure lever is eliminated. 7) Apply Sumiflunon (EAC0511) to #5353. 8) Attach #6504 to #6501 by adhesive tape. 9) Attach #6566. 10) Apply Sumiflunon (EAC0511) to rear side of the top cover after installation. 11) Apply Sumiflunon (EAC0511) between #341 and #353 after tightening #353.


· 	-	40FBE, 40FBT
Section	Item	Solution
Shutter button mechanical	P	① #346 and #348 are changed to #5346 and #5348.
lock	P	② #6536, #6535 and #6537 are added.
	P	③ #881 is changed to #5881.
	P	4 Attach #6555 with #6556 to #349.
		Apply silicon to them.
		_
		5881 9 9 1=2.8
		5348
	•	
		6536
		FA1-6566
		6535
		5346
		358 365
İ		
		FA1-354
	Ì	rai-357
		9351 or 355
İ		
i		
	Ì	
	ļ	
	1	

40	FBE
----	-----

		10723
Section	Item	Solution
FA2-5201	P	① #5376 (Water~proof seal)
	P	② #6503 is added.
:	P	③ #5212 (4.6mm), #5204 (4.8mm)
	P	4 Silicon application is added.
		5211 6503 FAI-208-1 9320 9
FA2-5381	P	1 The frame counter switch, power lock switch and four lead wires are eliminated.
	P	② Cover the through-holes by seals and silicon.
		•

40FBT top cover, film-advance side


- 1. Film-advance base plate FA2-2381
 - ① Apply Sumiflunon EACO511 to #2346, #2620 #2624 and #2348.
 - 2 Apply moisture-proof coating to Sections A, B, C and D of the power switch.
 - 3 Apply Sumiflumon EACO511 to Sections E and I of the film-advance lever.

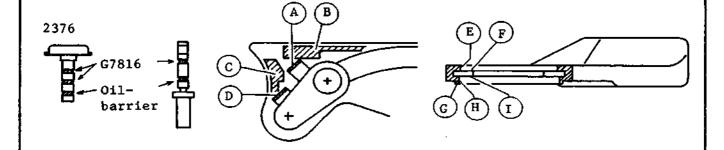

Multiple exposure lever
 Apply Sumiflumon EACO511 to Sections A and B



- 3. Shutter dial FA2-2201
 - Apply silicon to Opening A
 - 2 Attach #2376 onto top face of #1008 and then apply moistureproof coating to it.
 - (3) Install #2405 between #1007 and #1008.

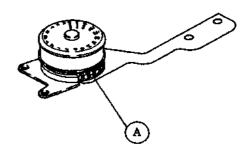


Section	Item	Solution	
Rewind knob	P	① Parts change #663 #5663 #680 #5680 #668 #5668	5762 557 657
	Т, Р	#762 - #5762 2 Apply Sumiflumon EACO511 to corners of #5657 (40FBT #657) 3 Apply silicon to the section of FA1-665 indicated by bold lines in the figure.	671 710 5 3 8 895 895 FAI-665
	т, Р	Avoid the application to the section of the camera back lock lever in case of 40FBT. 4 Apply Sumifluon EACO511 to #926.	3663
Shoe-mount	P	1 Parts change	FAI-664
		FA1-681 - FA1-5681 #752 - #5752	FAI-5681
		Coupling of FRE is executed by #5752.	6505 5752
		② #6251 is added.	
		3 Attach #6505 by adhesive tape.	674 FAI- 5082
FA1-5004	P	(1) Modification	.
		#4, #5683, #5686	
			5686 9 865 676


		40FBT, 40FBE
Section	Item	Solution
FA1-5004	P T, P P	 Apply silicon to section a in the figure. Screws #888x1 #5912x2 Attach #6506 to FA1-5004 by adhesive tape and then, apply Sumiflunon EAC0511 to it. Attach #2378 to FA1-5004. Apply Sumiflunon EAC0511 to rear side of FA1-5004 after installing.
		6506 Sumiflunon EAC0511 888 2378
FA2-5661	P P P	1 Modification #5684, #5661 2 Apply Sumiflunon EACO511 to the sections indicated by oblique lines. 3 Apply silicon to slits of #660 ~ #5661. 4 Cover the screw-hole by silicon Sumiflunon EACO511 Silicon 6565


40FBT Top cover, rewind side


Apply Sumiflunon EAC0511 to Sections A and B indicated by oblique lines in the figure.



- 3 Attach #2378 and #2774 to the camera body.
- 4 Apply Sumiflunon EACO511 to Sections D and E.
- (5) Apply Sumiflunon EACO511 to Sections F, G and H
- 6 Apply silicon to Section I indicated by bold lines.

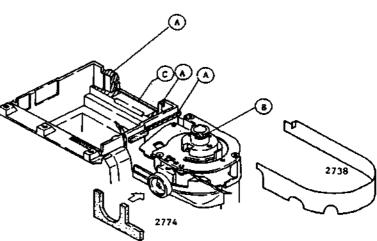

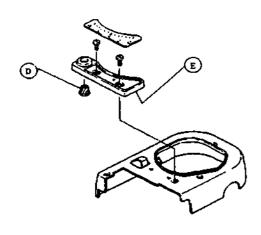


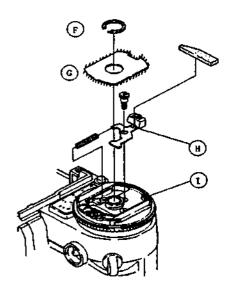

4QFBT Bottom cover


- (1) Apply Sumiflunon EACO511 to Section A indicated by oblique lines.
- ② Apply silicon to Section B indicated by oblique lines.
- Apply Sumiflumon EACO511 to Section C indicated by oblique lines.



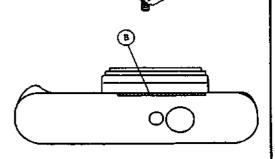

Section	Item	Solution
3018	T, P	1 Modification
	Т, Р	2 Apply Sumiflumon EACO511 to all of surface of #3018
		3018
Bottom cover	T, P	1 Apply Sumiflunon EAC0511 to inner surface of the
		bottom cover
	P	② Attach #743 to #5007.
	P	3 Attach #6557 and #6558 to the body die-casting.
	P	4 Attach #6559 to the MD connector.
	:	
j		
:		6557

- 8. 40FBE Cmera back (FA2-8001)
- 1 Camera back MF-6 is used.
- (2) Film roller is added for preventing double exposures.
- 3 Apply Sumiflumon EACO511 to the sections of #2 indicated by oblique lines.
- 4 Install Pressure plate FA1-2820.

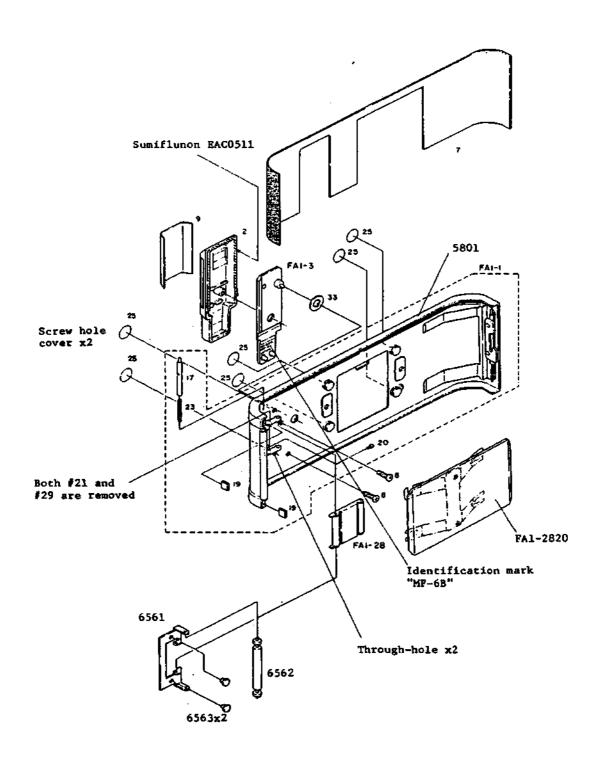

Nikon F3T

PARTS LIST


40FBT-R. 3040. A


部品麦編

総展開図	0
部品表。	P 1
部 組 品 表 ·································	P 4
F 3 ブラック部品表 ····································	P 5
PARTS LIST	
Drawing of Comlete Camera Section	0
PARTS LIST	P 1
ASSEMBLY LIST	P 4
F3 Black Parts List	P 5

展開図の見方

How to use Exploded Drawings

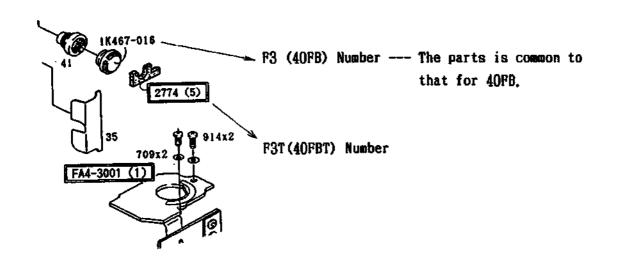


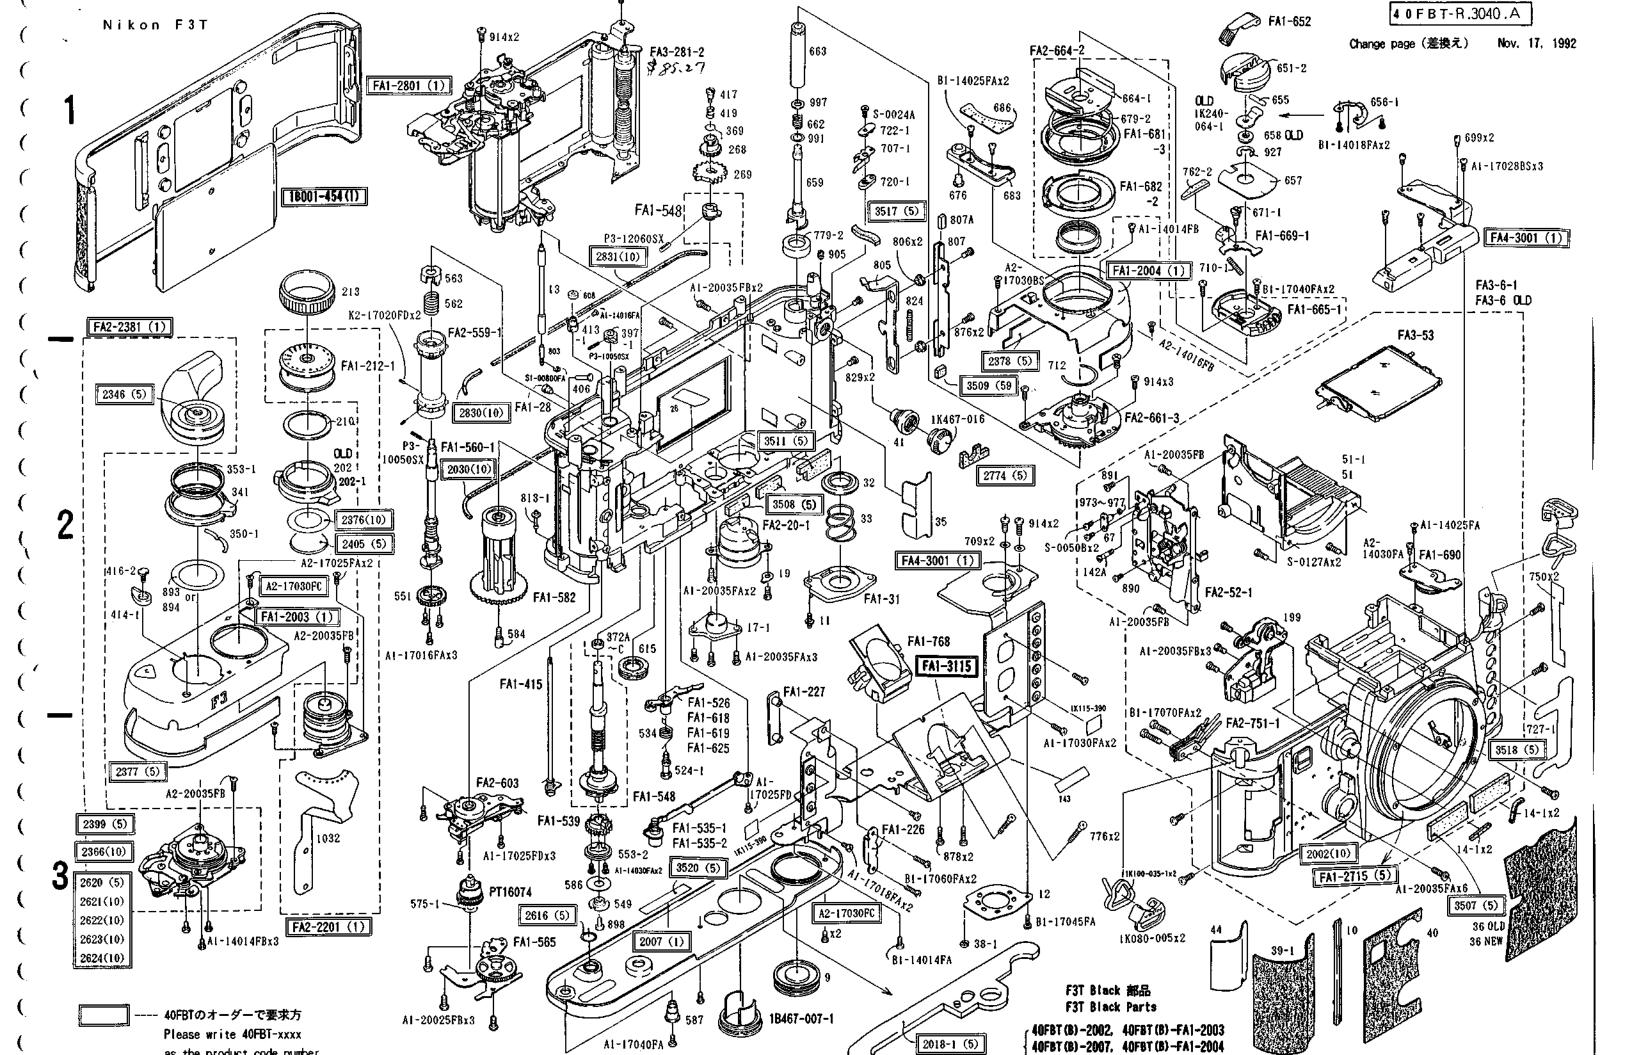


展開図中の部品位置を確認する手順 HOW TO FIND THE PART WITH PART NUMBER IN THE DRAWING

部品表 Parts List

部記書号 Part No.	補助番号 Ckt No.	名 称 Name	1合分 個 数 Of ty Per Unit	部組品番号 Assembly	参照 図書 Fig. Mo	販売区分 Class of Salabil- ity	備 考 Remarks	要求単位 Order Unit Of ty
*1K240-516	573	シュー座板バネ Accessory shoe spring	1	18990-712-2	9 A1	ОΔ	P-401S P-601	5
*1K240-713-1	527	ロックパネB Lock spring B	1	18990-712-2	10 A2	ΟΔ		5

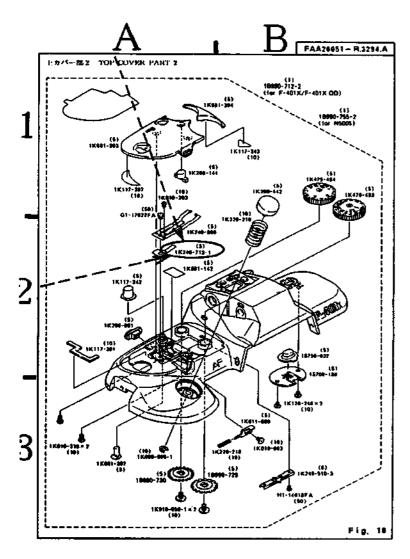

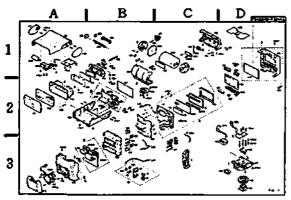

① 部品表の参照図書欄のコードを見る。

Please refer to the letters written in the Fig. No. Column.

② 9,10等の数字は図面番号を示す。

The numbers 9 and 10 mean the Pig. number.

③ A1. A2等のアルファベットと数字の組み合わせは、図面中の部品の位置を示す。

例 A, B. . は横方向の位置を示す。 1, 2. . は縦方向の位置を示す。

※ よって 1K240-713-1)はAと2が示す範囲内にある。

The combinations of alphabets and numbers.
Al and A2, point out the place of relevant parts in the drawing.

Example)

Alphabets like A and B point out the places along the holizontal direction.

Numbers like 1 and 2 point out the places along the vertical direction.

Wit means that the part No. 1K240-713-1 is existing in the area where A and 2 are crossing.

④ 例外 -- ビス、ワッシャー等 は Fig No. のみ記載する。

As for screws and washers and the like, no code number showing existing place is discribed in the Fig. No. Column, but only the relevant drawing number (Fig. No.) is stated.

10 20 20X 1	arts	List		Vikon F	31		4 0 F B T - R. 3	0 4 O. A
部品警号 Part No.	補助番号 Ckt No.	名 称 Name	1台分 個数 Pcs. Per Unit	部組品番号 Assembly	参照 図香 Fig. No.	販売区分 Term of Delivery	所 考 Remarks	要求单位 Q'ly pe order
2002		エプロン	1			0		5
(40FBT-2002)		Apron	1		D3	0		
2007 (40FBT-2007)		庭力バー Bollom cover	1		B3	0		1
2018-1 (40FBT-2018-1)		医部防水ゴム Rubber, bollom cover	1		C3	0		5
2030 (40FBT-2030)		裏蓋濡用スポンジA Sponge A. camera back	ı		B 2	0		10
2346 (40FBT-2346)		レリーズボタン軸 Release button shaft	1	FA2-2381	A2	ОΔ		5
2366 (40FBT-2366)		巻上げレバー戻しバネ Spring, film-advance lever	1	FA2-2381	A3	ΟΔ		10
2376 (40F8T-2376)		防湿シールA Seal A	1	FA2-2201	A2	ΟΔ	·	10
2377 (40FBT-2377)		防湿シールB Seal B	1	_	АЗ	0	•	5
2378 (40FBT-2378)		防灌シールC Seal C	1		C1-2	0		. 5
2399 (40FBT-2399)	-	枚数計百盛板 Scale, frame counter	1	FA2-2381	A3	- ΟΔ	·	5
2405 (40FBT-2405)	:	シリコン用リング Ring	1	FA2-2201	A2	ΟΔ		5
2616 (40FBT-2616)		R創郵モルトプレン Moltplane, R button	1		82	0	_	5
2620 (40FBT-2620)	<u></u>	レリーズ軸 A L= 15.3 Release shaft A						5
2621 (40FBT-2621)		レリーズ軸 C L= 15.1 Release shaft C						10
2622 (40FBT-2622)		レリーズ軸 D L= 15.2 Release shaft D	1	FA2-2381	A3	0Δ		10
2623 (40FBT-2623)		レリーズ軸 E L= 15.4 Release shaft E						10
2624		レリーズ輪 B L* 15.5	1					10

40FBT-R. 3040. A

部品香号	補助香号	名 称	1 右分 個 数	部組品各号	参照	販売区分	# #	要求単位
Part No.	Ckt No.	Name	Pcs. Per Unit	Assembly	Fig.	Term of Delivery	Remarks	Q'ty per order
2774		シンクロ下スポンジ	1			0	USE TO 40FBE-FA3-5006	5
(40FBT-2774)		Sponge			Ç2		40F8E*FR3*3008	
2830		裏蓋溝用スポンジC	1			0		10
(40FBT-2830)		Sponge C			82			
2831		裏査上溝用スポンジ	1			0		10
(40FBT-2831)		Moltplane			B1			10
3507		受光素子下スポンジ	ı			0		5
(40FBT-3507)		Sponge			D3			Ů
3508		受光素子スポンジ	1		ŀ	0		5
(40FBT-3508)		Spange			82			
3509		裏蓋ロックスポンジ	1			0		5
(40FBT-3509)	!	Sponge			C2	_		
3511		前側フレキ下スポンジ	1			0		5
(40FBT-3511)		Spenge	<u> </u>		B-C2			·
3517		シンクロ横スポンジ	1	1		0	1	5
(40FBT-3517)		Spange			CI			
3518		前側スポンジ	1			0		5
(40FBT-3518)		Sponge			D3		,	
3520		底板セグメントシール	1			0		5
(40FBT-3520)		Segment seal			83			
	!							
 			<u> </u>	· -			 	
			Ì	:		:		
	-				<u> </u>		<u>.</u>	
			}					
<u>-</u> .								
							· · ·	
			<u> </u>					
			·- ·-				<u></u>	
-					-		<u>.</u> .	
 					 			
L	L	<u> </u>	<u> </u>					

1

郵租番号	補助香号	名 称	1 台分	大部組品書号	参照		要求単位
Part No.	Ckt No.	Name	個数 Q'ty Per Unit	Constituent parts	図書 Fig. No.	爾 考 Remarks	Order Unit Q'ty
FA1-200	1	右上カバー(巻上げ側)					
(40fBT-FA1-200	3)	Top cover, wind side	1		A2		1
FA1-200	4	左上カバー(巻き戻し側)	1		-	· · · · · · · · · · · · · · · · · · ·	
(40FBT-FA1-200	4)	Top cover, rewind side	1 1		C1		'
FA1-271	5	絞り退動環	1.				_
(40FBT-FA1-271	5)	Aperture coupling ring	1 1		D3		5
FA1-280	1	真 董	1	· · · · · ·			1
(40FBT-FA1-280	1)	Camera back			A1		
FA1-3115		レリーズ補助基板	1				5
(40FBT-FA1-311	5)	Circuit, reléasé sw			C2		
FA2-220	1	シャッターダイヤル基板	ı				1
(40FBT-FA2-220	1)	Unit, shutter-speed selsctor			A3		<u> </u>
FA2-238	1	巻上げ基板] ,				1
(40FBT-FA2-238	1)	Unit. take-up gear			A1		ļ <u> </u>
FA4-300	1	FPC	1				1
(40FBT-FA4-300	1)	·			C2		<u> </u>
						<u> </u>	
				<u> </u>	ļ <u></u>	<u></u>	
] [
							
]		
		<u> </u>	1				
		·			 	•	
	<u> </u>	 	-		-		
	· · ·	<u> </u>	 		 		
	<u> </u>		+	 			
					!		

この部品表は、40FBT(F3T)専用部品のみ記載。 他の部品については、40FB(F3)要求方。

This parts list shows the exclusive parts for 40FBT (F3T) only. As for the common parts, please refer to the parts list for 40FB (F3).

赛品源	Parts	List	Nikon F31	Black		40F	BT (B) -R. 3	040. A
部品委号 Part No.	推助参号 Ckt No.	名 练 Name	i 台分 僅 数 Pcs. Per Unit	部組品番号 Assembly	Fig. Te	作区分 im of ivery	何 考 Remrks	要求単位 Of ty per order
2002 (40FBT(B)-2002	2)	エプロン Apros	1	İ	,	o	<u> </u>	5
2007 (40FBT(8)-200	n	座カバー Bottom cover	ì		,	>		1
								-
				· · · · · · · · · · · · · · · · · · ·			<u> </u>	
								<u> </u>
] !				

The state of the second and the second the second second second the second seco

	部組香号	補助香号	名 称 Name	1 台分 編 数 Q ty Per Unit	大部組品香号 Constituent parts	参照 関書 Fig.	報 考 Remarks	要求単 Order Unit Of ty
	Pert No.	Ckt No.		- Unit	Constituent parts	144	2P-9548	-"-
۱'	FAL-2003 (40FBT-FA1-2003	*	右上カバー(巻上げ偶) Top cover, wind side	l t		1	HT-2040	1
د	FA1-2003 (40FBT(B)-FA1-2		toh cover, write stoe	_				
۱	FAL-2004 (40FBT-FAL-2007		左上カバー(巻き戻し側)	1		ĺ	RP-9548	l
۱	FA1-2004 (40FBT(B)-FA1-2		Top cover, rewind side					
اد	FAL-2715 (40FBT-FAL-2715		校り連動環	i			RP-9548	5
د	FA1-2715 (40FBT(B)-FA1-2		Aperture coupling ring					
۱	FAL-2801 (40FBT-FA1-2801		裏蓋	1	,		RP-9548	1
۱	FA1-280 (40FBT(8)-FA1-2		Camera back		· · · · · · · · · · · · · · · · · · ·			
			·					
			T (B) / (F3T Black) 専 OFB (F3)・40FBT (F:				<u> </u>	<u> </u>
	This parts li	st shows t	he exclusive parts for 40FBT(8 . please refer to the parts li)/(F3T Black) (sts for 40FB (only. F3) / 40FBT (F3T).			

Change page (建し替え) △×8

(1-1) (1-1) Jun. 5, 1995

Nikon F3P

PARTS LIST


150


部品喪編

¥	製組	朔凶		•••••	**********			•-•	**** *** * * * * * * * * * * * * * * * *	•••••	• • • • • • • • • • • • • • • • • • • •	******				0)
台	B 1	品	表			••••••			•••••••	•••••		·····		••••••	P	٠ 1	
æ	B :	組	品	表	**********	••••••	• • • • • • • • • • • • • • • • • • • •			••••••		············			P	4	ļ
PAF	łТ	s	LI	ST													
Dra	win	g of	Cor	alete	Camera	a Secti	on ·	•••••	•••••••	• • • • • • • • •	• • • • • • • • •	••••••	* * * * * * * * * * * * * * * * * * * *			0)
PAR	TS	LIST		•••••••	······································		• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	••	•••••	• • • • • • • • • • • • • • • • • • • •			••••••	P	' 1	
ASS	ENB	LY L	IST					• • • • • • • • • • • • • • • • • • • •	••••••	•••••					P	٠ 4	Ļ

展開図の見方

How to use Exploded Drawings

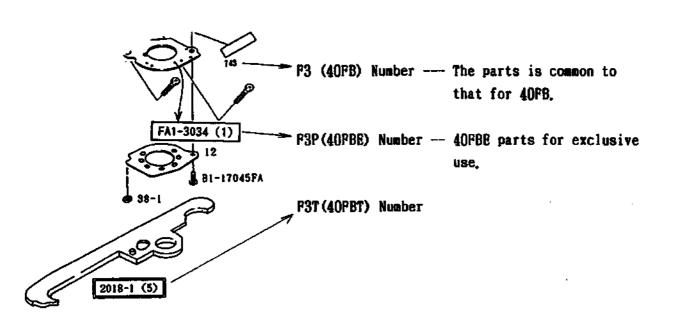

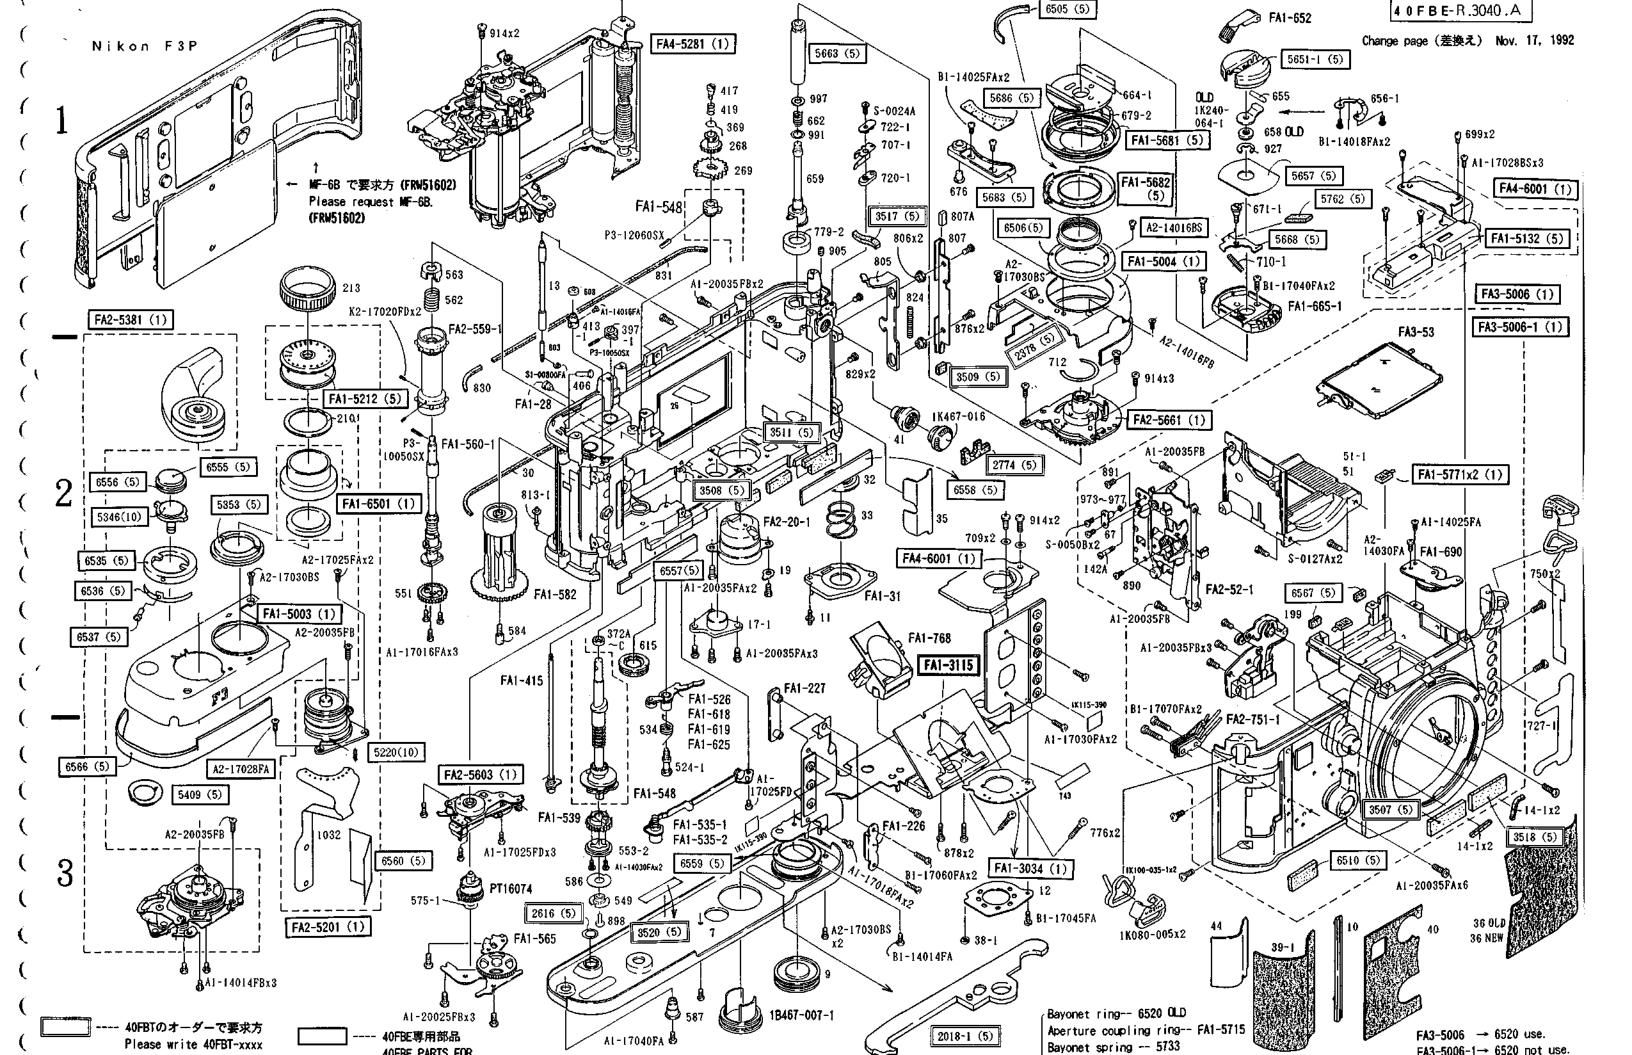

经品馆	Parts	List		Nikon	F3P	4	0FBE-R. 304	0. A
都品番牙	補助番号	名 称	1台分 数	都組品等号	無機	顺光区分	4.3	要求单位
Part No.	Oct No.	Name	Pcs. Per Unit	Assembly	Fig.	Term of Delivery	Remrks	Q' ty per order
5220		シャッターダイヤル クリックパネ		FA2-5201		ОД		10
(40FBE-5220)		Click spring	<u> </u>	THE GEST	A3			
5346		レリーズ押しポタン	1	ļ		0]	5
(40FBE-5346)		Release button shaft	<u></u>		A2			
5353	•	カバー押さえ瑞	1 1	FA2-5381		ΟΔ	2P-8330	5
(40FBE-5353)		Ring, power lock			A2		<u></u>	
5409		枚数表示意	1	FA1-5008	1	OΔ		5
(40FBE-5409)		Window. frame-counter			A3			
5651-I		巻き戻しノブ	1			0	RP-8342 RP-8517	5
(40FBE-5651-1)		Rewind knob	•	<u> </u>	Di		RP-8527	
5657		シュー姉り板	1]]	0		5
(40FBE-5657)		Cover. shoe mount	·	<u>.</u>	Dl			
5663		巻き戻し軸文之				0	i	. 5
(40FBE-5663)		Tube			Bi			
5668	. 1	開発クリックレバー	1			0		5
(40FBE-5668)		Lock lever			Di			
5683 (40FBE-5683)		補正百盛ホルダー Holder. exposure compensation scale	ı	FA1-5004	Cı	ОД		5
5686		神正自盛捷						
(40FBE-5686)		Exposure compensation scale	ı		Ci	0		5
5714		バヨネット理		FA3-5006	40FB			
(40FBE-5714)	İ	Bayonet ring	1	FA3-5006-1	Fig5	ΟΔ		5
5733		パヨネットパネ		FA3-5006	40FB			
(40FBE-5733)		Bayonet spring	' [FA3-5006-1	Fig5	ΟΔ		5
5762		シュー飾り板下シール						
(40F8E-5762)		Seal	1		Dt	°		5
6505		ASA環保護シール						
(40FBE-6505)		Seal, ASA diel	1		Cı	0	•	5
6506		ASA環シール						-
(40FBE-6506)	l	Seal. ASA dial	·		Cı	0		5
6510		前側多重都スポンジ						5
(40FBE-6510)		Sponge, multi-exposure	ı ı		D3	0		
							(3-2)	

Change page (差し替え)

-- i' 1 - RP-INF. NO. 9467

Nov. 21. 1994

委品 语	Parts	List					4	0FBE-R. 304	0. A
部品書号	補助番号	名 称		L 台分 個数	郭祖品香号	学照 全型	暖港区分	83	要求单位
Part No.	Ckt No.	Name		Pcs. Per Unit	Assembly	Fig.	Term of Delivery	Reserves	Q ty per order
6520 (40FBE-6520)		バヨネット推助リング Bayonet ring		ı	FA3-5006		04	USE TO 40FBE-FA3-5006	5
6535	 	ロックリング		 		!			
(40FBE-6535)		Lock ring		1		1/2	0	·	5
6536		メカロックバネ							
(40FBE-6536)		Spring		1 1		A2	0		5
6537		メカロックボタン							
(40F8E-6537)		Button, mechanical lock		1		A2;	0		5
6555		ゴムキャップ		1			0		5
(40FBE-6555)		Rubber cap		1		A2			3
6556		キャップ押さえ					0		5
(40FBE-6556)		Retainer, cap	0			A2			
6557	1	症却防湿シールA					0		5
(40FBE-6557)		Seal A		-		B2			
6558		底部防盗シールB		1			0		5
(40FBE-6558)		Seal B				8			
6559		MDカップリングキャップ	:	1			0	į	5
(40FBE-6559)		Cap. 10 capring	:			B3		•	
6560		圧接部シール		ı !			0		5
(40F8E-6560) 6566		Seal 巻上げDCシール				A3			
(40FBE-6566)		Seal		1		A3	0		5
6567		カバー下スポンジ	•			~			
(40FBE-6567)		Sponge. cover		1		D2	0		5
6568		多重爪制限ビン				-		RP-9467	
(40FBE-6568)	Ì	Pia		ı	İ	83	0	3301	5
		· · · · · · · · · · · · · · · · · · ·				1			
1				· [
		<u></u>				\neg			
						\neg			
٠									
								_	
	- 1				İ	1		(Sanit)	

a. Not bester abstraction of the control of the Mills and Theorem is a managed to the control of

Change page (差し替え) △×I

Δ

-P2- 67-INF. NO. 9467

シャー

Nov. 21. 1994

40 F B E - R. 30 40. A

部品番号	補助番号	名 称	1 台分 個 数	- 部組品委号	参照	販売区分	備考	要求单位
Part No.	Ckt No.	Name	Pcs. Per Unit	Assembly	Fig.	Term of Delivery	Remarks	Q' ty pe order
A2-17028FA	5881	上カバー受け台ネジ Screw, top cover	1		A3	0	_	10 or 5
A2-14016#S	5912	上カバー止めネジ Screw	1		C1	0		IO or
-	6126	リード線 Lead wire	1			×	W-0056PU	
	6130	シンクロ信号 C. リード線 Lead wire	1	FA1-5771		×	W-0080PU	
	6131	レディライト用コード Lead wire	1			×	W-0056WH	
		裏蓋 Camera back	1		A1		USE TO FRW51602 (MF-GB)	
			_					
]			i	

この部品表は、40FBE(F3P)専用部品のみ記載。 他の部品については、40FB(F3)・40FBT(F3T)にて要求方。

This parts list shows the exclusive parts for 40FBE (F3P) only. As for the common parts, please refer to the parts lists for 40FB (F3) \neq 40FBT (F3T).

部組品表	t Asse	embly List				4 0 F B E - R. 3 0 4 9	0. A
部租番号	補助番号	名 称 Name	l台分個数 仅'ty Per Unit	大部組品番号 Constituent parts	子二因時 10 韓選	備 考 Remarks	要求単位 Order Unit Q'ty
Part No. Ckt No.		<u></u>	VIII	Constituent parts	iwa.	Remarks	4 (7
FA1-3034 (40FBE-FA1-3034)		MDコネクター基板 MD connector base plate	1	FA4-6001	C3		5
FA1-5003	 }	右上カバー(巻上げ側)			-		
(40FBE-FA1-5003		Top cover, wind side	1		A2		1
FA1-5004		左上カバー (巻き戻し側)		<u> </u>			
(40FBE-FA1-5004	1)	Top cover, rewind side	1		C1		1
FA1-5132		表示プロック			<u> </u>		
(40FBE-FA1-5132	2)		1	FA4-6001	D1		5
FA1-5212		シャッターダイヤル			 		
(40FBE-FA1-5212	2)		1	FA2-5201	A2		5
FA1-5681	_	ASA環			 		_
(40FBE-FA1-5681	D	ASA dial	1		C 1		5
FA1-5682		補正環	_				
(40FBE-FA1-5682	2)	Exposure compensation ring	1		C1		5
FA1-5715	5	校り連動環			40FB		
(40FBE-FA1-5715	i)	Aperture coupling ring	1		Fig5		1
FA1-5771	 	接点(ホットシュー)	2	FA3-5006 FA3-5006-1		1	5
(40FBE-FA1-5771)	Conector (H shoe)			02		, , , , , , , , , , , , , , , , , , ,
FA1-6501		中間リング	1	: 			5
(40FBE-FAL-6501	D	Ring			A2		
FA2-5201	l	シャッターダイヤル基板	1				1
(40F8E-FA2-5201) <u> </u>	Unit. shutter-speed selsctor			A3		
FA2-5381	l	巻上げ墓板	1				1
(40FBE-FA2-5381)	Unit, take-up gear			Al		
FA2-5603	3	巻上げシグナル基板 Unit.	1				ı
(40FBE-FA2-5603	3)	film-advance completion signal	<u></u>	<u> </u>	83		
FA2-5661	1	巻き戻し部取付け被	1				1
(40FBE-FA2-5661	l)	Unit. rewind shaft			C2		
FA3-5006	3		1			USE TO 40F8E-6520	1
(40FBE-FA3-5006)		前ボディー	1		Di	OLD	<u>'</u>
FA3-5006-1		Assembly, front plate				サービス技報 Na.#90-17号	- 1
(40FBE-FA3-5006	5-1)				<u> </u>		<u> </u>
FA4-5281		ユニットシャッター	1		1		1
(40F8E-FA4-528	D	Assembly, shutter			81		<u> </u>
FA4-6001		FPC	ı				l i
(40FBE-FA4-600)	l)				C2	<u> </u>	

_	_	許	_	~
•	ж		41	ш
-	-,μ	5 1		-1-

F3 Limited

PARTS LIST 修理部品表



© Copyright 1993 ALL RIGHTS RESERVED

Printed in Japan December

その他の部品、部組品は、F3Pと共通です.

Other parts and assemblies are same to those of F 3 P's.