Mamiya

PARTS CATALOG

FOR

Mamiya RB 67 PRO S


> Camera Body Roll Film Holder





April 1975


EXPLODED VIEWS


mamiya RB67 PROS

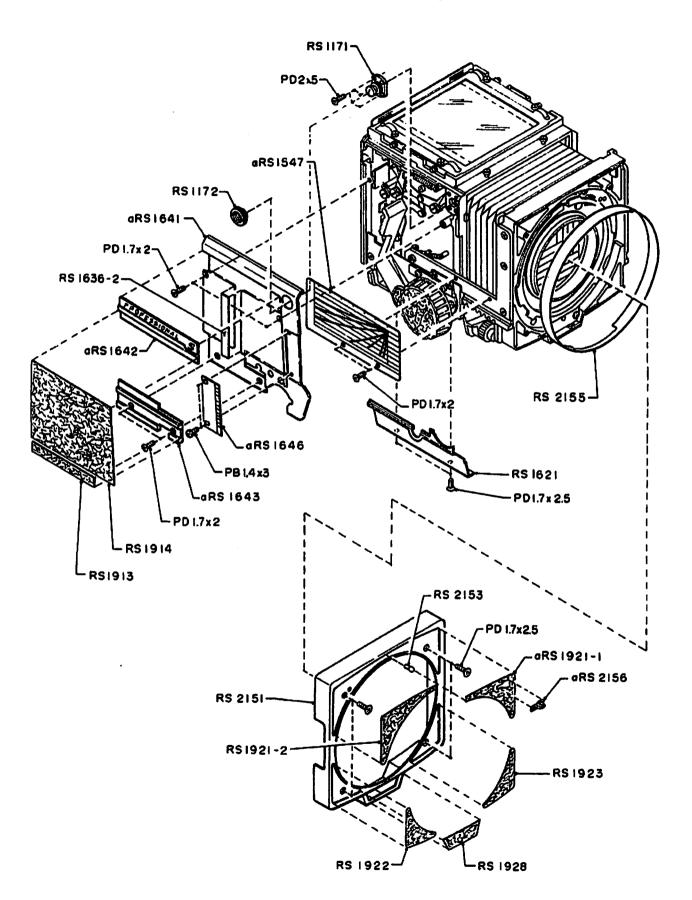


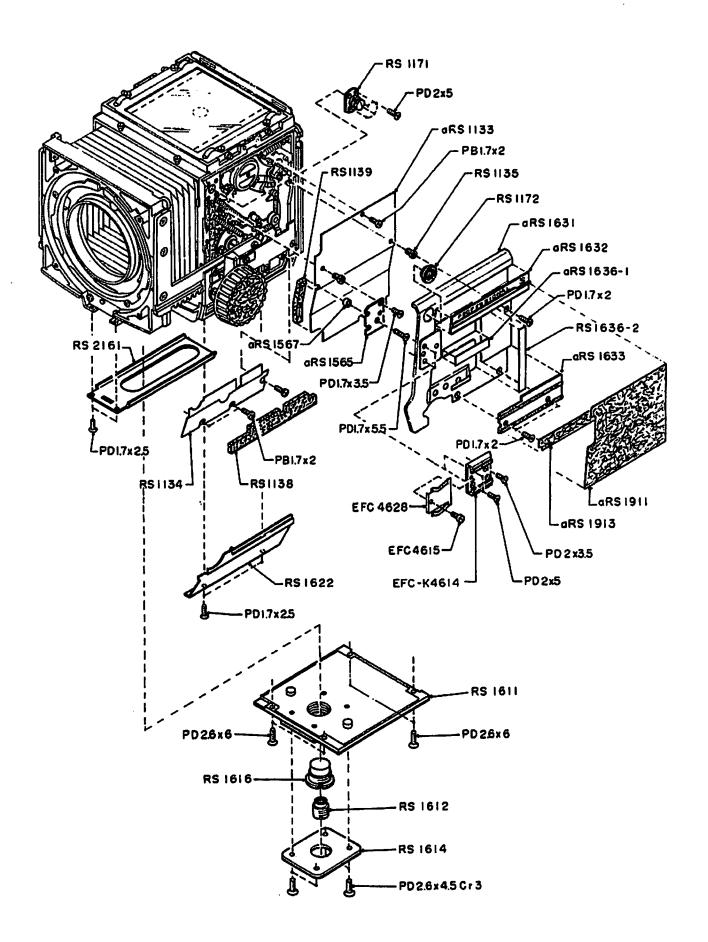


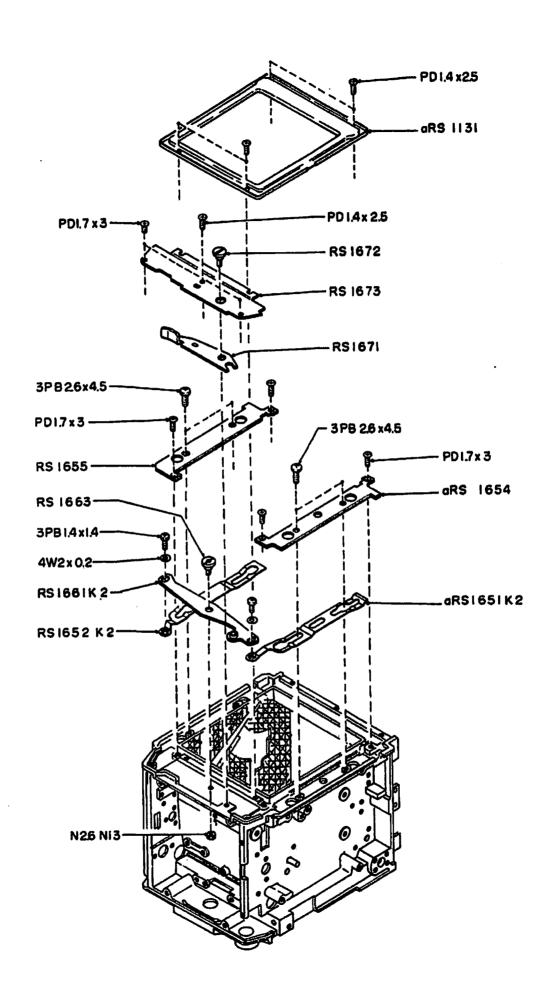


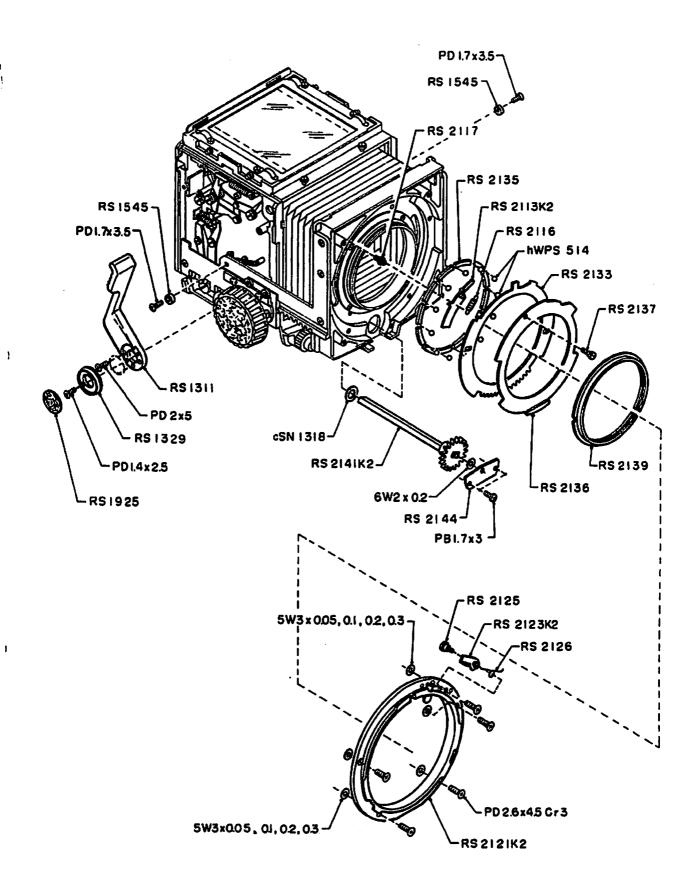


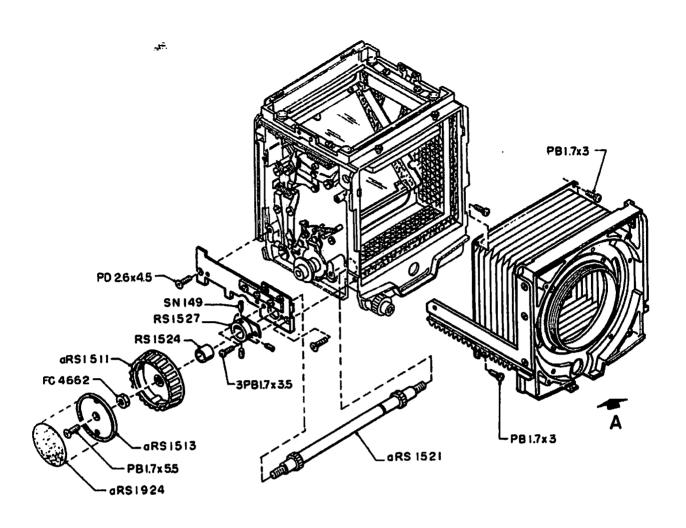


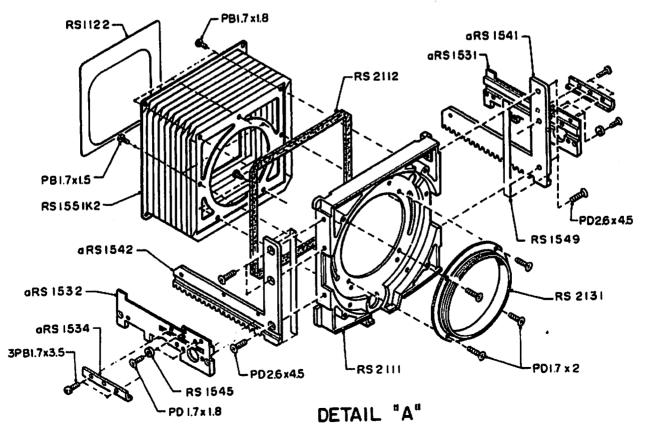


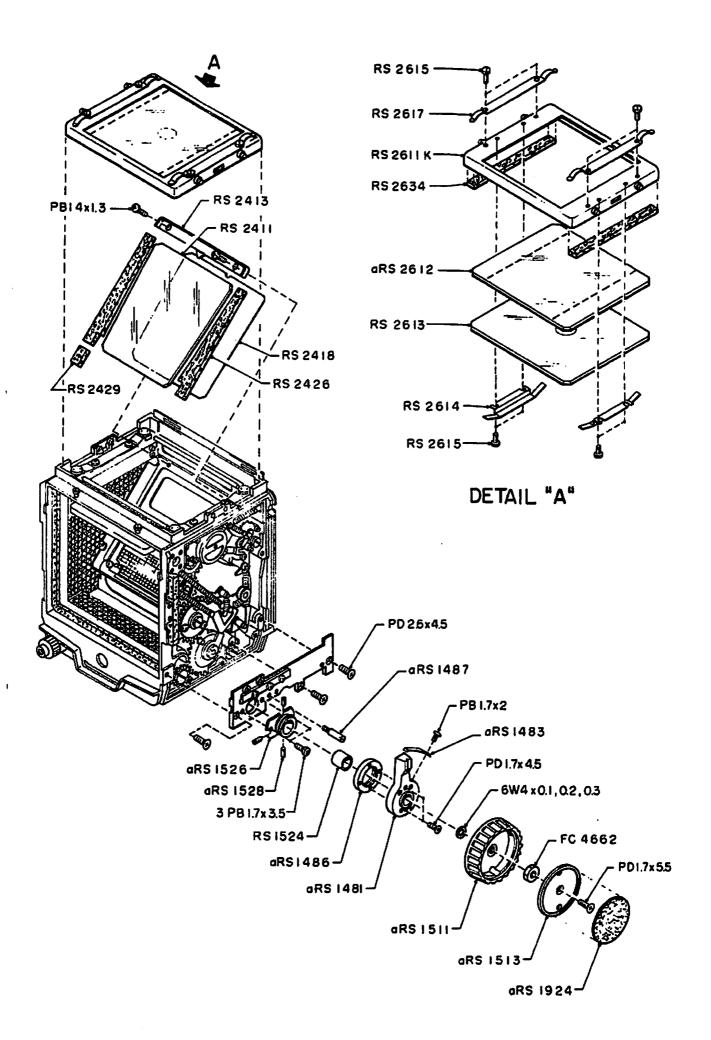


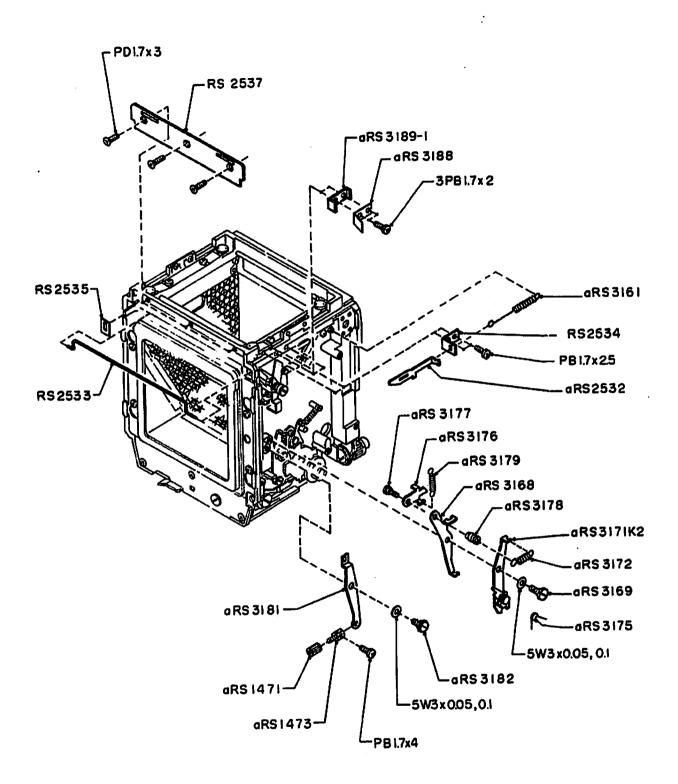


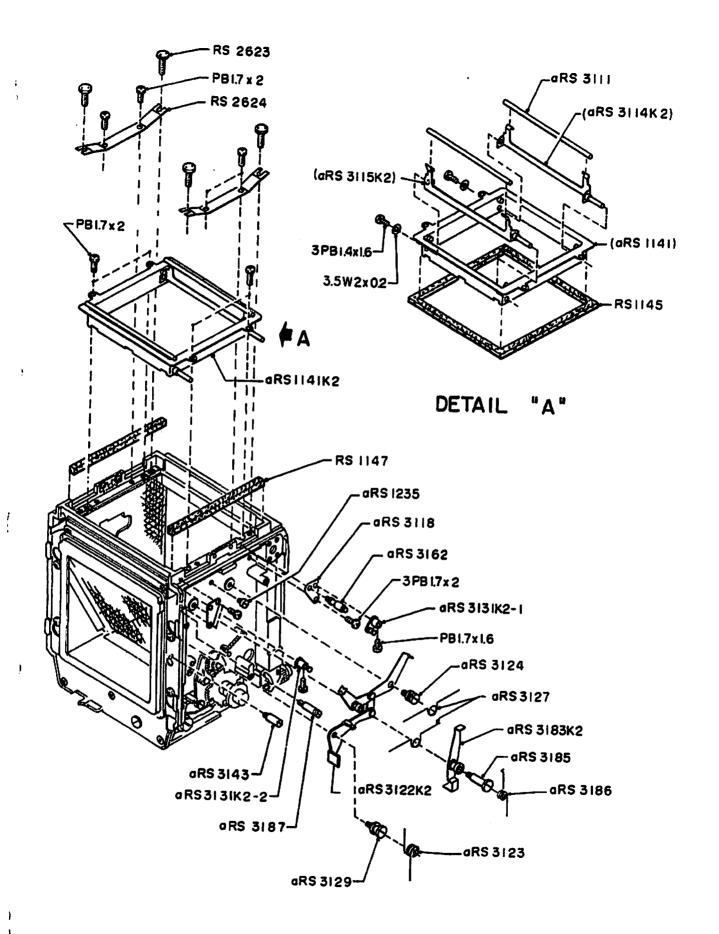


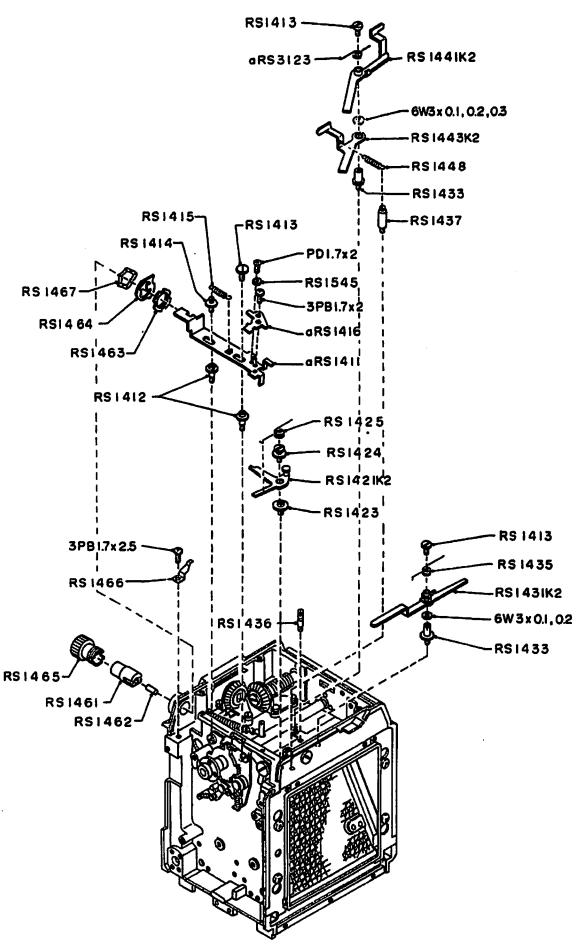


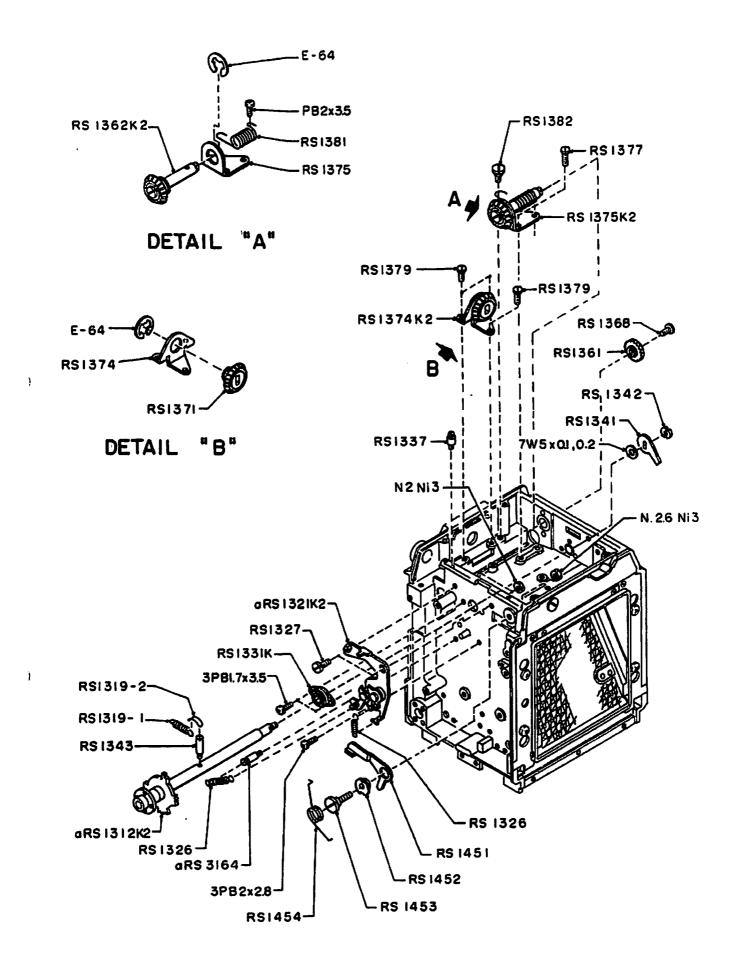


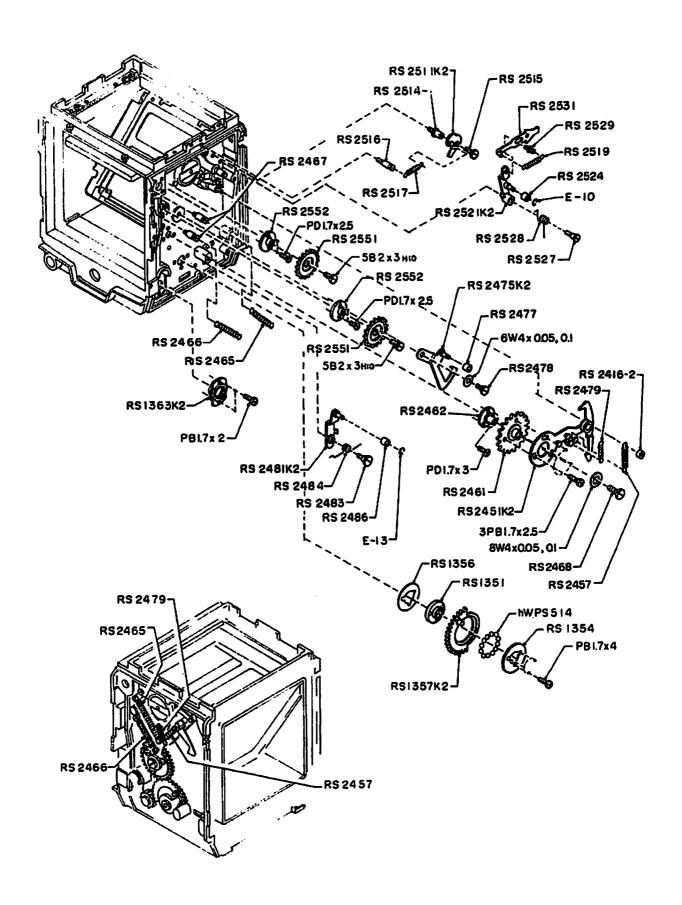


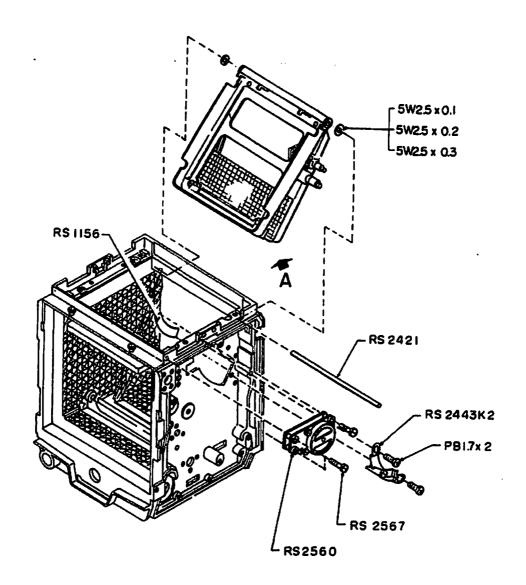

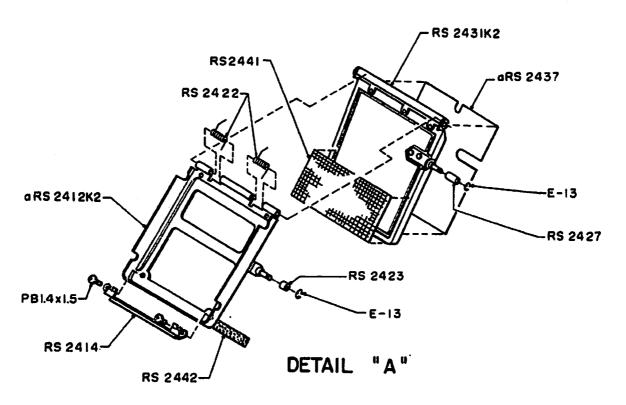

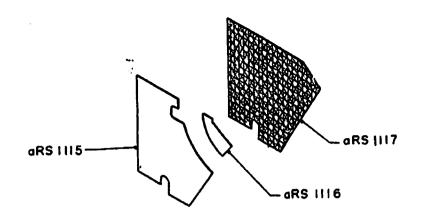


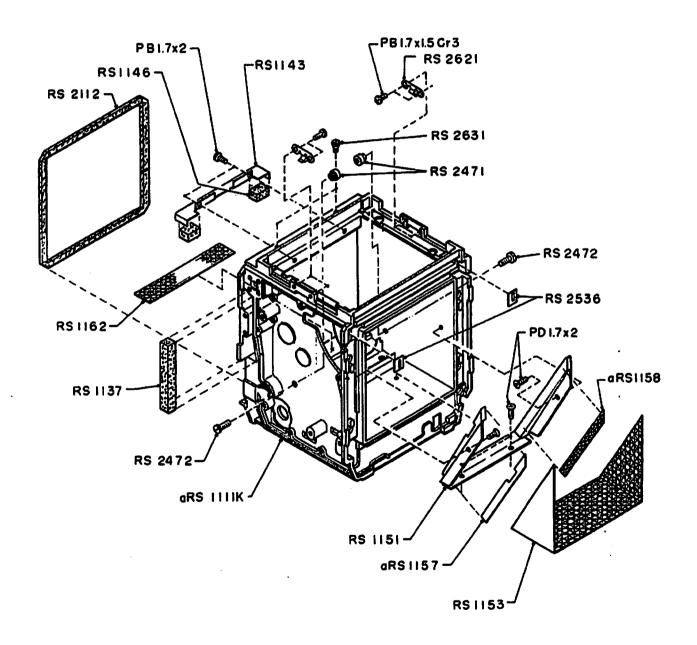

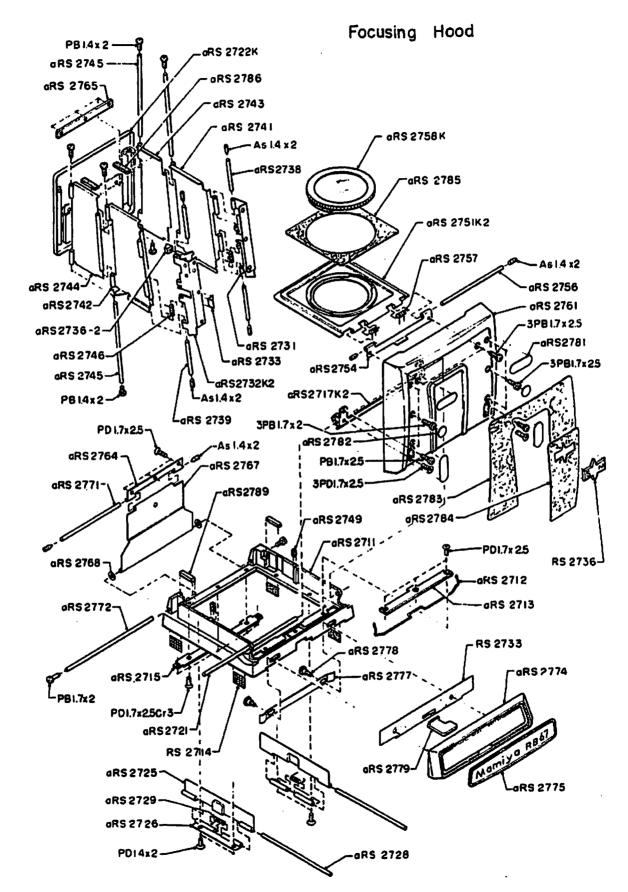



}


Revolving Adapter aRS 1255 · oRS 1254 oRS 1258 RS 1252 oR\$1251 aRS 1261 --RS 1253 RS 1262 oRS 1263 aRS 1256 P02x2--aRS 1257 PD 1.7 x 3 PD 1.7 x 4 PD 17x3aRS 1228K2 oRS 1227K2 aRS 1224 PD 1.7 x 4oRS 1231K2 oRS 1232K2 aRS 1225 aRS 1224aRS 1221K2 aRS 1226aRS 3151 aRS 1222 K2 -RS 1276 aRS 3152 -aRS 1211 - RS 1271K2 aRS 1212 5W3 x 0.1,02,03 aRS 1247 5W3xQ1,Q2,Q3 3PB1.7x35 RS1245 RS1242aR\$1241 RS 1245 -RS 1243 3PB1.7x3.5-SN 1006 aRS 1248 -RS 1243 SN 1006 -

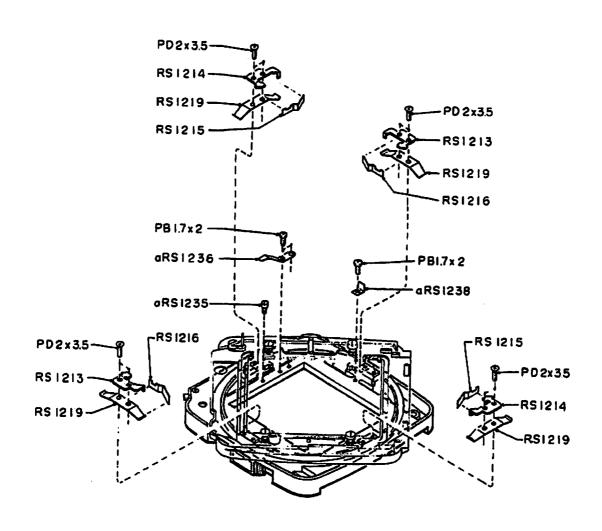



Rool Film Holder for mamiya RB67 PROS

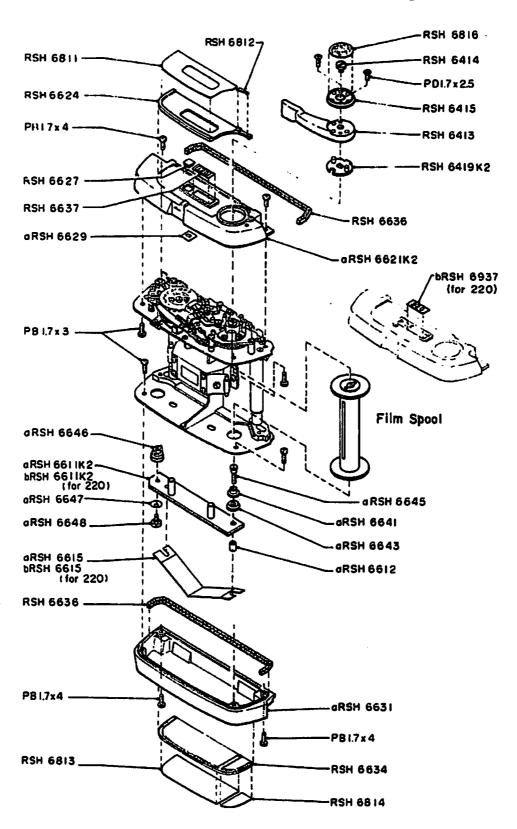

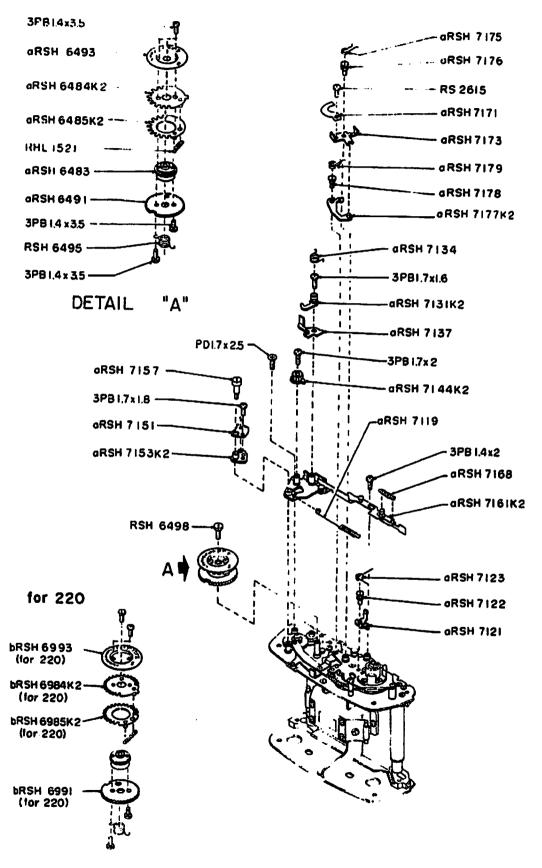

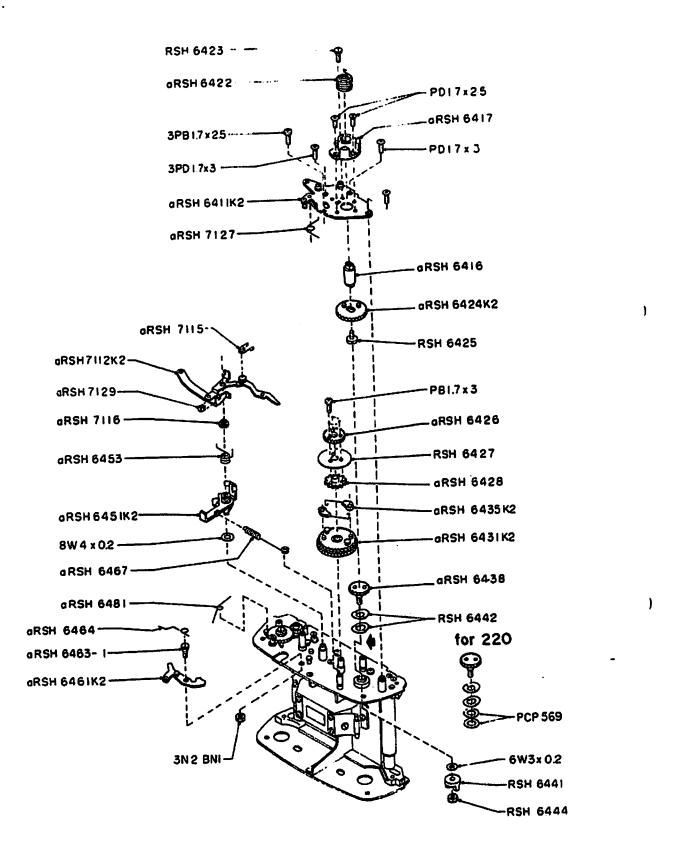

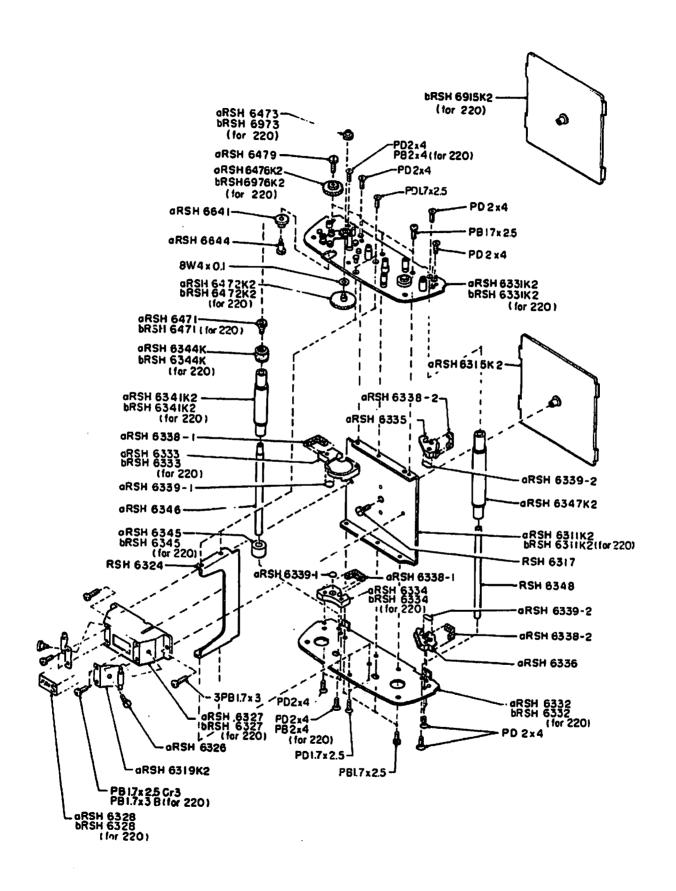

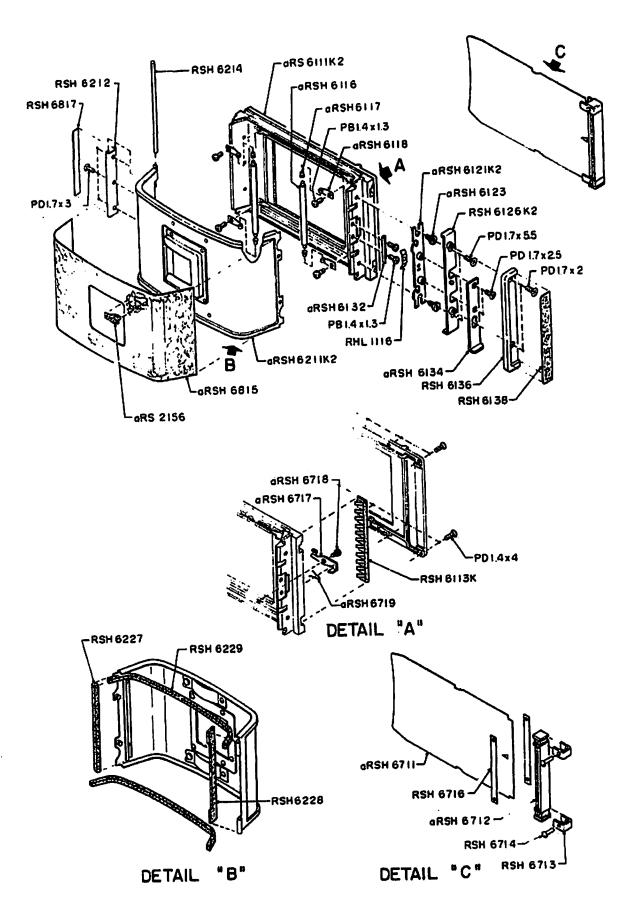

PARTS LIST

METHOD OF REQUESTING SPARE PARTS FOR REPAIR USE

When ordering spare parts for repair purposes, mark the request in the following manner after referring to our parts lists.

Spare parts are divided as follows:

Not	considered	usable f	or	repairing	• • • • • • • • • • • • • • • • • • • •	X
Can	be supplied	1				0

Parts marked with " * " in the column of term of sale will be charged,

NOTE: When ordering spare parts, always type the complete code and numbers in the Parts No. column of the appropriate parts lists.

Mamiya RB67 ProS (aRS)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1111K	(G)	Camera body	1	13	×
aRS1115	(A)	Reflection absorber paper	1	13	0
aRS1116	(A)	Reflection absorber paper	1	13	0
aRS1117	(A)	Reflection absorber paper	1	13	0
RS1122	(B)	Light baffle frame	1	5	0
aRS1131	(B)	Rear light baffle frame	1	3	0
aRS1133	(A)	Light baffle plate, upper	1	2	0
RS1134	(F)	Light baffle plate, lower	1	2	o .
RS1135	(B)	Post screw	1	2	0
RS1137	(A)	Light baffle	1	13	0
RS1138	(A)	Light baffle	1	2	0
RS1139	(A)	Light baffle	1	2	o
aRS1141K2	(C)	Frame for red bar assy.	1	8	0
RS1143	(C)	Light baffle cover	1	13	0
RS1146	(B)	Cushion	2	13	0
RS1147	(B)	Light baffle	2	8	0
RS1151	(F)	Light frame	1	13	0
RS1153	(B)	Reflection absorber paper	1	13	0
RS1156	(B)	Reflection absorber paper	, 1	12	0
aRS1157	(A)	Reflection absorber paper	1	13	0
aRS1158	(A)	Reflection absorber paper	1	13	0
RS1162	(B)	Reflection absorber paper	1	13	0
RS1171	(P)	Strap lug	2 .	1 & 2	0
RS1172	(B)	Nut	2	1 & 2	0

Revolving Adapter (aRS1200)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1211	(G)	Revolving back panel	1	15	×
aR51212	(B)	Light baffle	1	15	0
RS1213	(F)	Catch angle - A	2	16	0
RS1214	(F)	Catch angle - B	2	16	0
RS1215	(C)	Click spring - A	2	16	0
RS1216	(C)	Click spring - B	2	16	0
RS1219	(C)	Spring plate	4	16	0
aRS1221K2	(B)	Lock lever - A	1	15	0
aRS1222K2	(B)	Lock lever - B	1	15	0
aRS1224	(A)	Shaft	2	15	0
aRS1225	(B)	Spring - A	1	15	0
aRS1226	(B)	Spring - B	1	15	0
aRS1227K2	(A)	Cover plate - A	1	15	0
aRS1228K2	(A)	Cover plate - B	1	15	0
aRS1231K2	(A)	Release lock lever - A	1	15	0
aRS1232K2	(A)	Release lock lever - B	1	15	0
aRS1235	(A)	Post screw	2	8 & 16	0
aRS1236	(A)	Spring	1	16	0
aRS1238	(A)	Bracket	1	16	0
aRS1241	(A)	Slide lock, upper	1	15	0
RS1242	(D)	Slide lock, lower	1	15	0
RS1243	(B)	Leaf spring	2	15	0
SN1006		Shoulder screw	4	15	0
RS1245	(C)	Slide lock knob	2	15	0
aRS1247	(C)	Mark plate upper	1	15	0
aRS1248	(C)	Mark plate lower	1	15	0
aRS1251	(D)	Revolving adapter panel	1	15	×
RS1252	(C)	Lock pin	3	15	0
RS1253	(G)	Stopper	1	15	0
aRS1254	(B)	Lock pin - B	1	15	0
aRS1255	(D)	Horizontal changing bar	1	15	0
aRS1256	(C)	Guide	1	15	0
aRS1257	(B)	Horizontal changing pin	1	15	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1258	(A)	Sealing strip	1	15	0
aRS1261	(D)	Release lock bar	1	15	0
RS1262	(E)	Spring	1	15	0
aRS1263	(A)	Plate	1	15	0
RS1271K2	(B)	Coupling pin assy.	1	15	0
aRS3151	(D)	Warning signal pin	1	15	0
aRS3152	(B)	Sleeve	1	15	0
RS1276	(B)	Spring	2	15	0

÷

.

,

Mamiya RB67 Pros (aRS)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS1311	<i>(3)</i>	Cocking lever	1	4	0
aRS1312K2	(N)	Cocking lever shaft	1	10	o
RS1319-1	(D)	Spring	1	10	0
RS1319-2	(A)	Ring	1	10	0
aRS1321K2	(G)	Cocking base plate	1	10	0
N2Ni3		Nut	2	10	0
RS1326	(C)	Spring	2	10	. o
RS1327	(C)	Screw	2	10	0
RS1329	(E)	Button cover	1	4	0
RS1331K	(F)	Hub	1	10	0
RS1337	(A)	Anchor	1	10	0
RS1341	(B)	Arm	1	10	0
RS1342	(D)	Nut	1	10	0
RS1343	(C)	Pin	1	10	0
RS1351	(D)	Bushing	1	11	0
hwps514		Steel ball	42	4 & 11	0
RS1354	(C)	Cover ring	1	11	0
RS1356	(B)	Washer	1	11	0
RS1357K2	(G)	Cocking gear	1	11	0
RS1361	· (D)	Gear	1	10	0
RS1363K	(D)	Hub	1	11	0
RS1368	(B)	Screw	1	10	0
RS1374K2	(D)	Bevel gear	1	10	0
RS1375K2	(D)	Bevel gear	1	10	0
RS1:377	(C)	Screw	2	10	0
RS1379	(A)	Shoulder screw	3	10	0
RS1382	(C)	Anchor screw	1	10	0
aRS1411	(C)	Release plate	1	9	0
RS1412	(B)	Lever shaft	2	9	0
RS1413	(B)	Screw	3	9	0
RS1414	(B)	Anchor screw	1	9	0
RS1415	(B)	Spring	1	9	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1416	(B)	Release plate supporting	1	9	0
RS1421K2	(D)	Stop lever	1	9	0
RS1423	(C)	Shaft	1	9	0
RS1424	(B)	Anchor screw	1	9	0
RS1425	(B)	Spring	1	9	0
RS1431K2	(D)	Release lever	1	9	0
RS1433	(A)	Shaft	2	9	0
RS1435	(A)	Spring	1	9	0
RS1436	(A)	Anchor	1	9	0
RS1437	(A)	Anchor	1	9	0
RS1441K2	(A)	Upper release lever	1	9	0
RS1443K2	(A)	Lower release lever	1	9	0
RS1448	(C)	Spring	1	9	0
RS1451	<i>(</i> J)	Stop lever	1	10	0
RS1452	(E)	Hub	1	10	0
RS1453	(D)	Shoulder screw	1	10	0
RS1454	(D)	Spring	1	10	0
N2.6N13		Nut	1	3	0
RS1461	(G)	Release button	1	9	٠ ٥
RS1462	(B)	Release lod	1	· 9	0
RS1463	(C)	Nut	1	9	0
RS1464	(E)	Retaining ring	1	9	0
RS1465	(F)	Locking hub	1	9	0
RS1466	(D)	Spring	1	9	0
RS1467	(D)	Spring washer	1	9	0
aRS1471	.(D)	Nut	1	7	0
aRS1473	(B)	R.L bar	1	7	0
aRS1481	(B)	Setting lever	1	6	0
aRS1483	(C)	Spring	1	6	0
aRS1486	(B)	Setting ring	1	6	0
aRS1487	(B)	Stopper	1	6	0
aRS1511	(D)	Focusing knob	2	5 & 6	0
FC4662	(A)	Nut	2	5 & 6	0
aRS1513	(C)	Cover	2	5 & 6	0
aRS1521	(C)	Pinion shaft	1	5	0
RS1524	(B)	Pipe	2	5 & 6	0

Parts No.		Description	Pcs.	Ref.	Torm	
				Page	Term of Sale	
SN149	•	Set screw	3	5	0	
aRS1526	(C)	Bushing, right	1	6	0	
aRS1527	(C)	Bushing, left	1	5	0	
aRS1528	(B)	Set screw	3	6	0	
aRS1531	(G)	Guide plate, right	1	5	0	
aRS1532	(F)	Guide plate, left	1	5	0	
aRS1534	(B)	Hold plate	2	5	0	
aRS1541	(C)	Rack plate, right	1	5	0	
aRS1542	(D)	Rack plate, left	1	5	0	
RS1545	(A)	Eccentric stopper	7	4,5 & 9	0	
aRS1547	(B)	Distance scale plate	1	1	0	
RS1549	· (A)	Washer	0 - 2	5	0	
RS1551K	(B)	Bellows ,	1	5	0	
EFCK4614	(E)	Accessory shoe	1	2	0	
BPC4628		Shoe cover	1	2	0	
BFC4615	(A)	Stopper	1	2	0	
aRS1565	(B)	Base	1	2	0	
aRS1567	(A)	Collar	1	2	0	
RS1611	(V)	Bottom cover	1	2	0	
RS1612	(F)	Tripod screw	1	2	0_	
RS1614	(F)	Plate	1	2	0	
RS1616	(C)	Tripod socket	1	2	0	
RS1621	(G)	Side plate, left	1	1	0	
RS1622	(H)	Side plate, right	1	2	0	
aRS1631	(D)	Right panel	1	2	0_	
aRS1632	(C)	Decorative plate	1	2	0	
aRS1633	(C)	Decorative plate	1	2	0	
aRS1636-1	(A)	Sheet	1	2	0	
RS1636-2	(A)	Sheet	2	2	0	
aRS1641	(C)	Side plate, left	1	1	0	
aRS1642	(C)	Decorative plate	1	1	0	
aRS1643	(B)	Decorative plate	1	1	0	
aRS1646	(B)	Distance scale	1	1	0	
aRS1651K2	(A)	Slide plate, right	1	3	0	
RS1652K2	(B)	Slide plate, left	1	3	0	

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1654	(B)	Slide cover, right	1	3	0
RS1655	(E)	Slide cover, left	1	3	0
RS1661K2	(A)	Slide coupling plate	1	3	0
RS1663	(B)	Shaft	1	3	0
N2.6N13		Nut	1	3	0
RS1671	(B)	Lever	1	3	0
RS1672	(B)	Shoulder screw	1	3	0
RS1673	(C)	Cover plate	1	3	0
aRS1911	(B)	Leatherette	1	2	0
aRS1913	(C)	Leatherette	1	2	0
RS1914	(A)	Leatherette	1	1	0
RS1913	(B)	Leatherette	1	1	0
aRS1921-1	(B)	Leatherette	1	1	0
RS1921-2	(I)	Leatherette	1	1	0
RS1922	(G)	Leatherette	1	1	o '
RS1923	(F)	Leatherette	1	1	0
aRS1924	(A)	Leatherette	2	5 & 6	0
RS1925	(F)	Leatherette	1	4	0
RS1928	(D)	Leatherette '	1	1	0
RS2111	(L)	Front panel	1	5	*
RS2112	(C)	Sealing sponge	1	5	0
RS2113K2	(C)	Stopper plate	1	4	0
RS2116	(A)	Spring	1	4	0
RS2117	(B)	Anchor	1	4	0
RS2121K2	(N)	Bayonet	1	4	*
RS2123K2	(F)	Lock lever	1	4	0
RS2125	(C)	Shaft	. 1	4	0
RS2126	(D)	Spring	1	4	0
RS2131	(H)	Mounting ring	1	5	0
RS2133	(G)	Cocking ring	1	4	0
RS2135	(A)	Spacer	12	4	0
RS2136	(H)	Retaining plate	1	4	0
RS2137	(H)	Shoulder screw	1	4	0
RS2139	(E)	Retaining ring	1	4	0
RS2141K2	(E)	Cocking shaft	1	4	0
CSN1318		Washer	1	4	0

¥

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2144	(C)	Catch plate	1	4	0
RS2151	(A)	Front cover	1	1	0
RS2153	(B)	Red bead	1	1	0
RS2155	(B)	Cover plate	1	1	0
aRS2156	(B)	Name plate	1	1	0
RS2161	(C)	Hole plate	1	2	0
RS2411	(D)	Mirror	1	6	0
aRS2412K2	(E)	Mirror holder	1	12	0
RS2413	(D)	Holder, upper	1	6	0 .
RS2414	(C)	Holder, lower	1	12	0
RS2416-2	(A)	Nut	1	11	0
RS2418	(B)	Paper	1	6	0
RS2421	(A)	Shaft	1	12	0
RS2422	(B)	Spring	2	12	0
RS2423	(B)	Collar	1	12	0
RS2426	(E)	Cushion	2	6	0
RS2427	(A)	Collar	1	12	0
RS2429	(A)	Cushion	1	6	0
RS2431K2	(L) ·	Light baffle plate	1	12	0
aRS2437	(C)	Reflection absorber paper	1	12	0
RS2441	(B)	Curtain	1	12	0
RS2442	(G)	Cushion	1	12	0
RS2443K2	(D)	Stop lever	1	12	0
RS2451K2	(I)	Mirror raising lever	1	11	0
RS2457	(C)	Spring	1	11	0
RS2461	(H)	Gear	1	11	0
RS2462	(G)	Bushing	1	11	0
RS2465	(D)	Spring	1	11	0
RS2466	(D)	Spring	1	11	0
RS2467	(B)	Anchor	2	11	0
RS2468	(C)	Screw	1	11	0
RS2471	(B)	Angle pin	2	13	0
RS2472	(A)	Screw	2	13	0
RS2475K2	(E)	Light baffle plate lever	1	11	0
RS2477	(C)	Collar	1	11	0

.

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RS2478	(D)	Shoulder screw		11	0
RS2479	(C)	Spring	. 1	11	0
RS2481K2	(E)	Hang lever	1	11	0
RS2483	(D)	Shaft	1	11	0
RS2484	(D)	Spring	1	11	0
RS2486	(D)	Collar	1	11	• 0
RS2511K2	(E)	Signal cam	1	11	0
RS2514	(C)	Shaft	1	11	0
RS2515	(B)	Screw	1	11	0
RS2516	(B)	Anchor	1	11	0
RS2517	(A)	Spring	1	11	0
RS2519	(D)	Spring	1	21	0
RS2521K2	(C)	Signal lever	1	11	0
RS2524	(B)	Collar	1	11	0
RS2527	(C)	Shaft	1	11	0
RS2528	(D)	Spring	1	11	0
RS2529	(B)	Anchor	1	11	0
RS2531	(c)	Coupling arm, right	1	11	0
aRS2532	(B)	Coupling arm, left	1	7	0
RS2533	(B)	Coupling rod	1	7	0
RS2534	(B)	Bracket	1	7	0
RS2535	(C)	Stopper	1	7	0
RS2536	(C)	Guide	2	13	0
RS2537	(B)	Catch plate	1	7	0
RS2551	(H)	Gear	2	11	0
RS2552	(E)	Hub	2	11	0
RS2554	(A)	Screw ·	2	11	0
RS2560	(B)	Governor	1	12	0
RS2567	(D)	Screw	3	12	0
RS2611K	(L)	Focusing screen frame	1	6	*
aRS2612	(B)	Screen glass	1	6	0
RS2613	(E)	Fresnel lens	1	6	0
RS2614	(B)	Spring plate	2	6	0
RS2615	(A)	Screw	8	6	0
RS2617	(D)	Leaf spring	2	6	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
R52621	(E)	Click	2	13	0
RS2623	(D)	Adjusting screw	4	8	0
RS2624	(B)	Adjusting spring	2	8	0
RS2631	(B)	F H lock pin	2	13	0
RS2634	(B)	Cushion	2	6	0
RS7149	(A)	Washer	1 - 2	6	0
aRS3118	(B)	Plate	1	8	0
aRS3122K2	(E)	Red bare changing lever	1	8	. 0
aRS3123	(E)	Spring	2	8 & 9	0
aRS3124	(D)	Shoulder screw	. 1	8	0
aRS3127	(D)	Retaining spring	2	8	0
aRS3129	(A)	Shoulder screw	1	8	0
aRS3131K2-1	(C)	Marking lever, right	1	8	0
aRS3131K2-2	(C)	Marking lever, left	1	8	0
aRS3143	(B)	Stopper	1	8	0
aRS3161	(B)	Spring	1	7	0
aRS3162	(E)	Anchor	1	8	0
aRS3164	(D)	Anchor .	1	10	0
aRS3168	(B)	No. 1 lever	1	7	0
aRS3169	(D)	Shoulder screw	1	7	0
aRS3171K2	(A)	Sub lever	1	7	0
aRS3172	(D)	Spring	1	7	0
aRS3175	(C)	Spring	1	7	0
aRS3176	(B)	Coupling plate	1	7	0
aRS3177	(A)	Shaft	1	7	0
aRS3178	(B)	Nut	1	7	C
aRS3179	(B)	Spring	1	7	
aRS3181	(A)	No. 2 lever	1	7	
aRS3182	(D)	Shoulder screw	. 1	7	
aRS3183K2	(C)	No. 3 lever	1	8	(
aRS3185	(C)	Shaft	1	8	(
aRS3186	(B)	Spring	1	8	
aRS3187	(C)	Anchor	1	8	(
aRS3188	(A)	Setting spring	. 1	7	. •
aRS3189-1	(A)	Stopper	1	7	(

Focusing Hood (aRS2700)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS2711	(E)	FH base frame	1	14	0
aRS2712	(C)	Spring	1	14	0
aRS2713	(A)	Plate	1	14	0
aRS2715	(D)	Stopping plate	1	14	0
aRS2717K2	(B)	Hinge plate		14	0
aRS2721	(A)	Shaft	1	14	. 0
aRS2722K	(C)	Rear panel	1	14	0
aRS2725	(B)	Light baffle plate	2	14	0
aRS2726	(A)	<i>Hinge</i>	2	14	0
aRS2728	(A)	Shaft	2	14	0
aRS2729	(A)	Spring	2	14	0
aRS2731	(E)	Hinge plate, right	1	14	0
aRS2732K2	(E)	Hinge plate, left	1	14	0
aRS2733	(B)	Stopper	1	14	0
aRS2738	(C)	Shaft .	2	14	0
aRS2739	(B)	Shaft	2	14	0
aRS2741	(D)	Side panel, right	1	14	0
aRS2742	(D)	Side panel, left	1	14	0
aRS2743	(C)	Side panel, right	1	14	· 0
aRS2744	(C)	Side panel, left	1	14	0
aRS2745	(B)	Shaft	4	14	0
aRS2746	(A)	Spring	2	14	0
aRS2749	(A)	Cushion	2	14	0
aRS2751K2	(D)	Magnifier frame	1	14	0
aRS2754	(A)	Hinge plate	1	14	0
aRS2756	(B)	Shaft	1	14	0
aRS2757	(A)	Spring	2	14	0
aRS2758K	(B)	Magnifier	1	14	*
aRS2761	(C)	Hood cover	1	14	·· 0
RS2736	(D)	Mamiya mark	1	14	0
aRS2764	(A)	Hinge plate	1	14	0
aRS2765	(A)	Plate	1	14	0

ì

Parts No.	-	Description	Pcs.	Ref. Page	Teru of Sale
2RS2767	(D)	Panel	_ 1	14	0
aRS2768	(A)	Washer	2	14	0
aRS2771	(B)	Shaft	1	14	0
aRS2772	(A)	Shaft	1	14	0
aRS2774	(A)	Frame	1	14	0
aRS2775	(B)	Name plate	1	14	0
RS2733	(H)	Latch plate	1	14	0
aRS2777	(A)	Leaf spring	1	14	0
a <i>RS2778</i>	(B)	Guide screw	2	14	0
RS2779	(C)	Lock plate	1	14	0
RS2781	(A)	Sealing plate	4	14	0
aRS2782	(B)	Sealing plate	2	14	0
aRS2783	(A)	Leatherette	1	14	0
aRS2784	(B)	Leatherette	1	14	0
aRS2785	(A)	Leatherette	1	14	0
aRS2786	(B)	Cushion	2	14	0
RS2714	(A)	Velveteen	4	14	0
aRS2789	(C)	Cushion	2	14	0

Parts No.	Description	Pcs.	Page	Term of Sale
(3)PB1.7x2.2BNi	Screw for 2717K2	2	14	0
(3)PB1.7x3.5BNi	Screw for 1526, 1527, 1534	8	5,6	0
PD1.4x2BNi	Screw for 2726	4	14	0
PD1.4x2.5BNi	Screw for 1131, 1329, 1673	7	2, 3	0
PD1.7x1.8BNi	Screw for 1534	4	5	0
PD1.7x2BNi	Screw for 1151, 1416, 1547, 1631, 1641, 2131	19	1,2,5,9,1	3 0
PD1.7x2.5BNi	Screw for 1621, 1622, 2151, 2161, 2552, 2713, 2715, 276		1,2,11,14	0
PD1.7x3BNi	Screw 1227, 1228, 1654, 1655 1673, 2462, 2537	, 16	3,7,11,15	0
PD1.7x3.5BNi	Screw for 1565, 1541, 1542	3	2,4	0
PD1.7x4BNi	Screw for 1227, 1228	2	15	0
PD1.7x4.5BNi	Screw for 1481	2	6	0
PD1.7x5.5BNi	Screw for 1513, 1565	3	2, 5, 6	0
PD2x2BNi	Screw for 1263	2	15	0
PD2x3.5BNi	Screw for 1213, 1214, 1215, 1218, 1561	9	2, 16	0
PD2x5BNi	Screw for 1171, 1312K2, 1561	14	1, 2, 4	0
PD2.6x4.5BNi	Screw for 1531, 1532, 1541, 1542	12	5	0
PD2.6x4.5Cr3	Screw for 1614, 2121	9	2, 4	ọ
PD2.6x6BNi	Screw for 1611	4	2	0
3PD1.7x2.5BNi	Screw for 2717K2	2	14	0
AS1.4x2	Screw for Focusing hood	8	14	0
4W2x0.2	Washer for 1661	2	3	0
5W2.5x0.2	Washer for 2511	1	12	0
6W3x0.1	Washer for 1441K2	2	9	0
B-10	E ring for 2521K2	1	11	0
E-13	E ring for 2412, 2481	3	11, 12	0
E-64	E ring for 1375K2, 1374K2	2	10	0
PBl.4xl.3BNi	Screw for 1646, 2413	4	1,6	0
PB1.4x1.5BNi	Screw for 2414	2	12	0

Parts No.	Description	Pcs.	Page	Term of Sale
PBl.4x2BNi	Screw for Focusing hood	8	14	0
PB1.7x1.5BNi	Screw for 1551K	2	5	0
PB1.7x1.5Cr3	Screw for 2621	4.	13	0
PB1.7x1.6BNi	Screw for 3131K2	2	8	0
PBl.7xl.8BNi	Screw for 1551K	5	5	0
PB1.7x2BNi	Screw for 1133, 1134, 11418 1143, 1236, 1238, 1363K2, 1483, 2443K2, 2624, 2711	2, 25	2 - 16	v
P <i>B1.7x2.5BNi</i>	Screw for 2534	2	7	0
PB1.7x3BNi	Screw for 1551, 2144	6	4,5	0
PB1.7x4BNi	Screw for 1351, 1473	4	7, 11	0
PB2x3.5BNi	Screw for 1375	1	10	0
3PB1.4x1.4BNi	Screw for 1651, 1652	2	3	0
3PB1.4x1.6BNi	Screw for 1141K2	2	8	0
3PB1.7×2BNi	Screw for 1416, 3118, 2741, 3189-1, 3118	11	7, 8, 9	0
3PB1.7x2.5BNi	Screw for 1466, 2451, 2741, 2754	, 11	9, 11, 14	0
3PB1.7x3.5BN1	Screw for 1245, 1331K	6	10, 15	0
3PB 2x2. 0BNi	Screw for 1321K2	1	10	0
3PB2.6x4.5BNi	Screw for 1654, 1655	4	3	0

•

.

Breakdown List for Special Assembly

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1141K2	(C)	Frame for red bare assy.	1 .	8	0
-aRS1141	(C)	Frame	1	-	x
RS1145	(D)	Sealing sponge	1	-	0
- aRS3111	(B)	Red bare	2	-	0
-2.8W1.4x3		Washer	4	-	x
-aRS3114	(C)	Axm	1	-	x
-aRS3115	(C)	Arm	1	-	x
-aRS3116	(C)	Hub	2	. -	x
-aRS3117	(C)	Shaft	2	-	×
aRS3121	(B)	Stopper	4	-	x
aRS1221K2	(B)	Lock lever - A	1	15	o
-aRS1221	(B)	Lock lever	1	-	x
-aRS1223	(A)	Hub	1	-	x
- aRS3155	(A)	Pin	1	-	×
LaRS3156	(A)	Boss	1	-	x
aRS1222K2	(B)	Lock lever - B	. 1	15	o
-aRS1222	(B)	Lock lever	1	•	x
-aRS1223	(A)	Hub	1	-	x
-aRS3155	(A)	Pin	1	-	x
LaRS3156	(A)	Boss	1	-	x
<u>aRS1227K2</u>	(A)	Cover plate - A	1	15	0
- aRS1227	(A)	Plate	1	-	x
LaRS1233	(A)	Boss	1	-	x
aRS1228K2	(A)	Cover plate - B	1	15	0
-aRS1228	(B)	Plate	1	-	x
aRS1233	(A)	Boss	1	-	×
_ARS1231K2	(A)	Release lock lever - A	1	15	o
-aRS1231	(A)	Lever	1	-	×
-aRS3157	(C)	Pin	1	-	×
aRS3158	(B)	Collar	1	-	×

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRS1232K2	(A)	Release lock lever - B	1	15	0
_aRS1232	(A)	Lever	1	-	×
L aRS3159	(C)	Pin	1	-	×
RS1271K2	(B)	Coupling pin assy.	1	15	0
– RS1271	(B)	S. adapter	1	-	×
- RS1 272	(D)	Sleeve	1	-	×
- RS1273	(A)	Rođ	1	-	×
-RS1274	(B)	Guide	1	-	x
- RS1275	(B)	Screw	1	-	×
RS1276	(B)	Spring	1	-	×
aRS1312K2	(N)	Cocking lever shaft	1	10	0
- RS1312	(N)	Shaft	1	-	x
– RS1313	(G)	Kub	1	-	×
- RS1318	(E)	Knok pin	2	-	×
ars1316	(B)	Angle gear	1	-	×
aRS1321K2	(G)	Cocking base plate	1	10	Ò
- RS1321	(G)	Base plate	1	-	×
RS1 322	(C)	Hub	2	-	x
RS1323	(D)	Collar	2	-	×
- RS1324	(B)	Paw1	2	-	×
- RS1338	(A)	Anchor	1	-	x
aRS3163	(B)	Pawl	1	-	x
<u>RS1357K2</u>	(G)	Cocking gear	1	11	0
RS1357	(G)	Gear ·	1	-	×
L RS1358	(D)	Pin	1	-	×
RS1374K2	(D)	Bevel gear	1	10	0
- RS1371	(D)	Gear	1	10	0
- RS1 374	(B)	Base	1	10	0
E-64		E ring	1	10	0
RS1375K2	(D)	Bevel gear	1	10	0
- RS1362K2	(F)	Bevel gear	1	10	0

) .

)

Parts No.		Description	· Pcs.	Ref. Page	Term of Sale	
 - RS1362	(S)	Shaft	1	-	x	
RS1371	(Ď)	Gear	1	-	×	
L RS1368	(B)	Screw	1	-	x	
- RS1375	(C)	Base	1	10	0	
- RS1381	(C)	Spring	1	10	0	
E-64		E ring	1	10	0	
RS1421K2	(D)	Stop lever	1	9	0	
- RS1421	(D)	Lever	1	••	x	
RS1422	(B)	Pin	1	- .	x	
R\$1431K2	(D)	Release lever	1	9	0	
- RS1431	(D)	Lever	ì	-	x	
RS1432	(C)	Hub	1	-	×	
RS1441K2	(A)	Upper release lever	1	9	0	
- RS1441	(A)	Lever	1	-	x	
L _{RS1442}	(B)	Hub	1	-	×	
RS1443K2	(A)	Lower release lever	1	9	o	
- RS1443	(A)	Lever	1	_	×	
L RS1444	(B)	Hub	1	-	x	
aRS1651K2	(A)	Slide plate, right	1	3	0	
-aRS1651	(A)	Slide	1	-	×	
RS1653	(B)	Pin	1	-	x	
RS1652K2	(B)	Slide plate, left	1	3	0	
- RS1652	(B)	Slide	1	•	×	
RS1653	(B)	Pin	1	-	×	
RS1661K2	(A)	Slide coupling plate	1	3	0	
- RS1661	(A)	Plate	1	-	×	
L RS1662	(A)	Boss	1	-	x	
RS2113K2	(C)	Stopper plate assy.	1	4	o	
- RS2113	(C)	Stopper plate	1	-	x	
RS2115	(B)	Boss	1	-	×	

•

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
<u>RS2121K2</u>	(N)	Bayonet	1	4	*
- RS2121	(N)	Bayonet	1	-	x
- RS2127	(A)	Angle	1	-	x
└ PD1.4x1.8c	r3	Screw	2	-	x
221222	/ 5.3	You'le Tarren	•		0
RS2123K2	(F)	Lock lever	1	4	_
- RS2123	(F)	Lever	1	-	<i>x</i>
L RS2124	(B)	Hub	1	-	X
RS2141K2	(E)	Cocking shaft	2	4	0
- RS2141	(E)	Cocking gear	1	-	x
- RS2142	(D)	Knok pin	1	-	×
RS2147	(D)	Shaft	1	_	x
•					
aRS2412K2	(E)	Mirror holder	1	12	0
-aRS2412	(E)	Holder	1	-	×
RS2415K	(E)	Arm	1	-	x
- RS2417	(B)	Rivet	ı	-	×
aRS2425	(A)	Rivet .	2		×
			_		•
<u>RS2431K2</u>	(L)	Light baffle plate	1	12	0
- RS2431K	(L)	Plate	1	-	X
- RS2433-2	(B)	Plate	1	-	x
- RS2435	(A)	Hub	2	-	x
- RS2436K	(E)	Arm	1	-	x
L RS2439	(C)	Rivet	2	-	×
RS2443K2	(D)	Stop lever	1	12	0
- RS2443	(D)	Angle	1	-	x
- RS2444	(D)	Lever	1	-	x
- RS2445	(C)	Screw	1	-	x
- RS2446	(B)	Spring	1	-	×
4W2x0.1	,-,	Washer	1	-	x

RS2451K2	(I)	Mirror raising lever	1	11	0
- RS2451	(I)	Lever	1	-	x
- RS2452	(C)	Anchor	4	-	x
ļ					

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
- RS2455	(B)	Collar	1	-	×
L RS2456	(C)	Shaft	1	-	×
RS2475K2	(E)	Light baffle plate lever	1	11	0
- RS2475	(E)	Lever	1	-	x
L RS2476	(B)	Shaft	1	-	x
RS2481K2	(E)	Hang lever	1	11	0
RS2481	(E)	Lever	1	-	x
- RS2482	(D)	Hub	1	-	x ,
RS2487	(E)	Shaft	1	-	x
RS2511K2	(E)	Signal cam	1	11	0
- RS2511	(E)	Cam	1	<u>-</u>	x
- RS2512	(C)	Anchor	1	-	x
L _{RS2513}	(C)	Hub	1	-	x
RS2521K2	(C)	Signal lèver	1	11	0
- RS2521	(C)	Lever	1	-	×
- RS2522	(B)	Hub ·	1	-	×
- RS2523	(D)	Bush	1	-	x
L RS2525	(C)	Shaft	1	-	x
aRS2717K2	(B)	Hinge plate	1	14	0
-aRS2717	(B)	Plate	1	-	×
-aRS2718	(B)	Spring holder	2	-	x
aRS2788	(B)	Pulley	2		x
aRS2732K2	(E)	Hinge plate, left	1	14	0
-aRS2732	(E)	Plate	1	_	x
-aRS2733	(E)	Stopper	1	-	x
-aRS2734	(D)	Spring	1	-	×
-Rm1.7		Rivet	2	_	x
- aRS2736-1	(C)	Lever	1	_	x
- aRS2736-2	(B)	Knob	1	_	0
aRS2737	(A)	Rivet	1	-	×

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
_aRS2751K2	(D)	Magnifier Frame	1	14	0
-aRS2751	(D)	Frame	1	-	x
-aRS2752	(B)	Retaining ring	.1	-	x
L <i>Pm−1</i>		Rivet	4	-	x
aRS3122K2	(E)	Red bar changing lever	1	8	0
-aRS3122	(E)	lst lever	1	_	×
-aRS3125	(B)	2nd lever, right	1	-	×
-aRS3126	(D)	2nd lever, left	1	-	x
-aRS3128	(D)	Hub	1	_	×
-aRS3135	(A)	Lever	1	-	x
-aRS3136	(B)	Hub	1	-	x
LaRS3137	(B)	Hub	1	-	x
_aRS3131K2	(C)	Marking lever	1	8	0
-aRS3131	(C)	3rd lever	1	-	x
-aRS3132	(C)	Pin	1	-	x
LaRS3133	(D)	Hub	1	-	×
aRS3171K2	(A)	Sub lever	1	7	0
-aRS3171	(A)	Lever	1	-	×
-aRS3173	(A)	Stop lever	1	-	x
aRS3174	(C)	Rivet	1	-	×
aRS3183K2	(C)	No. 3 lever	1	8	0
-aRS3183	(C)	Lever	1	-	x
aRS3128	(A)	Hub	1	-	×

120 Roll Film Holder for Mamiya RB67 ProS (aRSH6000)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6111K2	(C)	Film holder frame	1	21	*
aRSH6116	(D)	Film roller	2	21	0
aRSH6117	(D)	Collar	4	21	0
aRSH6118	(D)	Spring	4	21	0
aRSH6121K2	(A)	Latch	1	21	0
aRSH6123	(A)	Guide	2	21	0
RSH6126K2	(D)	Latch cover	1	21	0
RHL1116	(A)	Spring	1	21	0
aRSH6132	(A)	Plate	1	21	0
aRSH6134	(A)	Lock lever	1	21	0
RSH6136	(D)	Lock lever cover	1	21	0
RSH6138	(A)	Leatherette	1	21	0
aRSH6211K2	(A)	Back lid	1	21	*
RSH6212	(B)	Hinge	1	21	0
RSH6214	(A)	Shaft	1	21	0
aRS2156	(B)	Name plate	1	.21	0
RSH6227	(A)	Light baffle	1	21	0
RSH6228	(B)	Light baffle	1	21	0
aRSH6229	(D)	Sealing strip	2	21	0
aRSH6311K2	(C)	Plate holder	1	20	0
aRSH6315K2	(A)	Pressure plate	1	- 20	0
RSH6317	(B)	Screw	1	20	0
aRSH6319K	(B)	T-spring	2	20	0
RSH6324	(E)	Bracket	1	20	0
aRSH6326	(A)	Screw	2	20	0
aRSH6327	(B)	T-spring base	. 1	20	0
arsh6328	(A)	Name plate	1	20	0
aRSH6331K2	(E)	Base plate, upper	1	20	•
aRSH6332	(C)	Base plate, lower	1	20	0
aRSH6333	(B)	Film guide	1	20	0
aRSH6334	(B)	Film guide	1	20	0
aRSH6335	(A)	Film guide	1	20	0
'aRSH6336	(A)	Film guide	1	20	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6338-1	(B)	Light baffle	2	20	0
aRSH6338-2	(B)	Light baffle	2	20	0
aRSH6339-1	(A)	Guide plate	2	20	0
aRSH6339-2	(A)	Guide plate	2	20	0
aRSH6341K2	(C)	Roller	1	20	0
arsh6344K	(C)	Counter roller	1	20	0
aRSH6345	(C)	Coller	1	20	0
aRSH6346	(B)	Shaft	1	20	0
aRSH6347K2	(B)	Roller	1	20	0
RSH6348	(B)	Shaft	1	20	0
aRSH6411K2	(C)	Base plate	1	19	0
RSH6413	(G)	Winding lever	1	17	0
RSH6414	(C)	Screw	1	17	0
RSH6415	(B)	Disk	1	17	0
aRSH6416	(A)	Shaft	1	19	0
aRSH6417	(C)	Hub	1	19	0
RSH6419K2	(D)	Disk	1	17	0
aRSH6422	(A)	Spring	1	19	0
RSH6423	(B)	Anchor	. 1	19	0
arsh6424K2	(A)	Winding gear, No. 1	1	19	0
RSH6425	(D)	Screw	1	19	0
aRSH6426	(B)	Winding gear, No. 2	1	19	0
RSH6427	(A)	Disk	1	19	0
aRSH6428	(A)	Clutch gear	1	19	0
arsii6431K2	(C)	Winding stop gear	1	19	0
aRSH6435K2	(C)	Pawl	2	19	0
RSH6438	(A)	Winding gear No. 3	1	19	0
RSH6441	(A) .	Film take up spool	1	19	0
RSH6442	(A)	Spring washer	1 - 2	19	0
RSH6444	(A)	Nut	1	19	0
SN8147		Washer for 6444	0 - 2	19	0
aRSH6451K2	(C)	Release lever	1	19	0
arsh6453	(A)	Spring	1	19	0
aRSH6461K2	(D)	Release plate	i	19	0
aRSH6463-1	(B)	Screw	1	19	0
3N2BNi	<u>-</u>	Nut	1	19	0
aRSH6464	(C)	Spring	1	19	0
aRSH6467	(C) ·	Spring	1	19	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6471	(B)	First gear	1	20	0
aRSH6472K2	(B)	Second gear	1	20	0
aRSH6473	(D)	Second small gear	1	20	0
aRSH647 6K2		Third gear	1	20	0
aRSH6479	(A)	Screw	1	20	· 0
aRSH6481	(B)	Spring	1	19	0
aRSH6483	(B)	Base	1	18	0
aRSH6484K2	(C)	Counter dividing device	1	18	0
aRSH6485K2	(C)	Auxiliary dividing disc	1	18	0
RHL1521		Spring	1	18	0
aRSH6491	(E)	Film counter gear	1	18	0
aRSH6493	(D)	Exposure counter plate	1	18	0
RSH6495	(C)	Spring	1	18	0
RSH6498	(A)	Scraw	1	18	0
arsh6611k2	(A)	Film spool holder	1	17	0
aRSH6612		Collar	1	17	0
aRSH6615	(A)	Leaf spring	1	17	0
aRSH6621K2	(C)	Top cover	1	17	0
RSH6624	(B)	Cover plate	1	17	0
RSH6627	(D)	Counter window	1	17	0
aRSH6629	(A)	Nask	1	17	0
RSH6631	(D)	Bottom cover	1	17	0
RSH6634	(E)	Cover plate	1	17	0
RSH6636	(A)	Sealing strip	2	17	0
RSH6637	(F)	Discrimination plate	1	17	0
aRSH6641	(A)	Film spool holder	2	17 & 20	0
aRSH6643	(A)	Collar	1	17	0
aRSH6644	(B)	Shoulder screw	1	20	0
aRSH6645	(B)	Shoulder screw	1	17	0
aRSH6646	(B)	Spool holder	1	17	0
aRSH6647	(C)	Spring washer	1	17	0
arsh6648	(B)	Screw	1	17	0
aRSH6711	(A)	Slide cover	1	21	0
aRSH6712	(B)	Handle bar	1	21	0
RSH6713	<i>(S)</i>	<i>Pixture</i>	2	21	0
RSH6714	(E)	Rivet	2	21	0
RSH6716	(B)	Plate	2	21	0

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
RSH6811	(G)	Leatherette	1	17	0
RSH6812	(G)	Leatherette	1	17	0
RSH6813	(G)	Leatherette	1	17	0
RSH6814	(G)	Leatherette	1	17	0
aRSH6815	(B)	Leatherette	1	21	0
RSH6816	(D)	Leatherette	1	17	0
RS H6817	(B)	Name plate	1	21	0
aRSH7112K2	(C)	Charging lever	1	19	0
aRSH7115	(C)	Spring	1	19	0
aRSH7116	(A)	Hub	1	19	0
aRSH7119	(A)	Spring	1	18	0
aRSH7121	(B)	Lever	1	18	0
aRSH7122	(A)	Anchor screw	1	18	0
aRSH7123	(B)	Spring	1	18	0
aRSH7127	(B)	Spring	.1	19	0
aRSH7129		Sponge release lever	1	19	0
aRSH7131K2	(A)	Hook	1	18	0
aRSH7134	(A)	Spring	1	18	0
aRSH7137	(B)	Signal	ı.	18	0
aRSH7144K2	(A)	Pawl	· 1	18	0
aRSH7151	(A)	Secter gear	1	18	0
aRSH7153K2	(B)	Secter gear base	1	18	0
aRSH7157	(B)	Shaft	1	18	0
aRSH7161K2	(C)	Preventive lever assy.	1	18	0
.aRSH7168	(B)	Spring	1	18	0
aRSH7171	(A)	Red signal	1	18	0
RS2615	(B)	Screw	1	18	0
aRSH7173	(D)	Signal lever	1	18	0
aRSH7175	(A)	Spring	1	18	0
aRSH7176	(D)	Anchor screw	1	18	0
aRSH7177K2	(C)	Lever	1	18	
aRSH7178	(B)	Screw	1	18	0
aRSH7179	(A)	Spring	1	18	0

•

Parts No.	Description	Pcs.	Page	erm of ale
PBl.4xl.3BNi	Screw for 6118, 6132	6	21	0.
3PBl.4x2BNi	Screw for 7161K2	1	18	0
3PB1.4x3.5BNi	Screw for 6491, 6493	4	18	0
3PB1.7x1.6BNi	Screw for 7131K2	1	18	0
PB1.7x1.8BNi	Screw for 7151	2	18	0
3PB1.7x2BNi	Screw for 7144K2	1	18	0
PB1.7x2.5BNi	Screw for 6331K2, 6332K2	6	20	0
3PB1.7x2.5BN1	Screw for 6411K2	1	19	0
PB1.7x2.5Cr3	Screw for 6319K	. 4	20	0
PB1.7x3BNi	Screw for 6421, 6621K2, 66	31 7	17,19	0
3PB1.7x3BNi	Screw for 6327	2	20	0
PB1.7x4BNi	Screw for 6621K2, 6631	4	17	0
PD1.7x2BNi	Screw for 6136	2	21	0
PD1.7x2.5BNi	Screw for 6126K2, 6324, 64 6417, 7161K2	115, 12	17,18,19 20, 21	9, 0
PD1.7x3BNi	Screw for 6212, 6411K2	4	19,21	0
3PD1.7x3BNi	Screw for 6411K2	2	19	0
PD1.7x5.5BNi	Screw for 6126K2	2	21	0
PD2x4BNi	Screw for 6333, 6334, 6335 6336, 6348	5, 12	20	0
6W3x0.05 - 0.1	Washer for 6441, 6461K2	0 - 3	3 19	0
8W4x0.2	Washer for 6451, 6472K2	0 - 2	19,20	0
5W2.5x0.1	Washer for 7144K2	0 - 3	<u> </u>	0

j

)

Breakdown List for Roll Film Holder Special Assembly (aRSH)

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6111K2	(C)	Film holder frame	1	21	*
-aRSH6111	(C)	Frame, upper	1	-	×
-aRSH6112	(A)	Frame, lower	1	-	×
— RSH6113K	(C)	Spring	1	-	*
- PD1.4x4BNi		Screw	11	21	*
-aRSH6717	(B)	Lock lever	1	21	*
-aRSH6718	(B)	Screw	1	21	*
aRSH6719	(A)	Spring	1	21	*
aRSH6121K2	(A)	Latch	1	21	0
-aRSH6121	(A)	Latch	1	-	×
RSH6122	(D)	Boss	2	-	x
RSH6126K2	(D)	Latch cover	1	21	0
- RSH6126	(D)	Cover plate	1	-	×
L RSH6125	(A)	Stud	2	•	×
aRSH6211K2	(A)	Back lid	1	21	*
-aRSH6211	(A)	Back lid	1	-	x
-aRSH6141	(B)	Collar	2	-	x
-aRSH6142	(B)	Rivet	2	-	×
- RSH6216	(B)	Spring	2	-	x
- RSH6217	(B)	Guide pin	2	_	×
- Rm1.5	•	Rivet	10	_	×
- RSH6221	(A)	Memo holder	1	-	×
- RSH6222	(B)	Spring	1	-	x
- RSH6223	(A)	Plate	1	-	x
L RSH6225	(B)	Flange plate	1	-	×
aRSH6311K2	(C)	Plate holder	1	20	0
-aRSH6311	(C)	Plate	1	-	×
- RSH6313	(B)	Spring	1	-	x
∟ _{Rm1.5}		Rivet	2	-	x

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
arsh6315K2	(A)	Pressure plate	1	20	0
- aRSH6315	(A)	Plate	1	-	×
RSH6316	(E)	Guide pin	1	•	×
aRSH6331K2	(B)	Base plate, upper	1	20	*
- aRSH6331	(B)	Base plate	ı	-	x
aRSH6412-1	(A)	Pole	2	-	×
- aRSH6412-2	(A)	Pole	1	-	×
-aRSH6437	(A)	Pole	1	-	×
_ RSH6439	(A)	Hub	1	-	×
- aRSH6454	(A)	Pole	1	-	x
- aRSH6457	(B)	Anchor	2		×
-aRSH6461K	(D)	Release lever	1	-	x
-aRSH6461	(D)	Lever	1	-	×
-aRSH6462-1	(A)	Anchor	1	-	×
LaRSH6469	(G)	Pin	1	-	x
- aRSH6462-2	(A)	Anchor	1	_	×
_aRSH6475K2	(E)	Lever	1	-	x
-aRSH6475	(E)	Lever .	1	· -	×
-aRSH6478	(B)	Shaft	1	-	×
LaRSH6497	(A)	Anchor	1	-	×
-aRSH6482	(C)	Shaft	1	-	x
- aRSH6489-1	(D)	Bush	1	-	x
— aRSH6642	<i>(B)</i>	Boss	1	-	×
- aRSH7139	(A)	Pin	1	_	x
-aRSH7141	(A)	Pole	1	_	×
-aRSH7142	(C)	Pole	1	-	x
aRSH7149	(B)	Pin	1	-	×
aRSH6341K2	(C)	Roller	1	20	0
- arsh6341	(C)	Roller	1	_	x
aRSH6342	(D)	Plug	2	-	×
aRSH6347K2	(B)	Roller	1	20	0
- aRSH6347	(B)	Roller	1	-	x
_ aRSH6342	(D)	Plug	2	-	×

				•	
Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6411K2	(C)	Base plate	1	19	0
-aRSH6411	(C)	Base plate	1	-	×
-aRSH7125	(A)	Lever	1	-	×
-aRSH71 26	(A)	Pin	1	-	×
-aRSH7128	(B)	Anchor	1	-	×
-aRSH7162	(B)	Pin	1	-	x
-aRSH7174	(B)	Pin	1	-	x
RSH6419K2	(D)	Disk	. 1	17	0
— RSH6419	(D)	Disk	1	-	×
— RSH6421-1	(B)	Pin	2	-	×
RSH6421-2	(A)	Pin	1	-	x
aRSH6424K2	(A)	Winding gear, No. 1	1	19	0
-aRSH6424	(A)	Gear	1	-	x
_aRSH7111	(B)	Pin	2	-	x
aRSH6431K2	(C)	Winding stop gear	1	19	0
-aRSH6431	(C)	Gear	1	-	×
— RSH6432	(A)	Gear	1	_	x
- RSH6433	(A)	Pin	2	-	x
L RSH6434	(A)	Pin	2	-	x
aRSH6435K2	(D)	Pawl	2	19	0
- RHL1428		Pawl	2	-	х
ERSH6436	(D)	Spring	2	-	x
aRSH6451K2	(C)	Release lever	1	19	0
-aRSH6451	(C)	Stop lever	1	-	X
-aRSH6452	(C)	Hub	1	-	x
- aRSH6455	(C)	Pawl	1	-	3
-Rml.5cr		Rivet	2	-	k
ars#6465	(C)	Release lever	1	-	,
aRSH6461K2	(D)	Release plate	1	19	(
- aRSH6461	(D)	Plate	1	-	
-aRSH6462-1	(A)	Pole	1	-	;
_ aRSH6469	(C)	Pin	. 1	-	2

Parts No.		Description	Pcs.	Ref. Page	Term of Sale
aRSH6472K2	(B)	Second gear	1	20	0
-aRSH6472	(B)	Gear	1	-	×
aRSH6474	(C)	Hub	1	. -	x
_aRSH6476K2	(A)	Third gear	1	20	0
- RHL1457		Gear wheel	1	-	×
ars#6477	(A)	Gear	1	-	x
aRSH6484K2	(C)	Counter dividing device	1	18	0
- aRSH6484	(C)	Plate	1	-	×
LaRSH6486	(C)	Boss	1	-	×
_aRSH6485K2	(C)	Auxiliary dividing disc	1	18	0
-aRSH6485	(C)	Plate	1	-	×
_aRSH6487	(A)	Boss	1	-	×
_aRSH6611K2	(A)	Film spool holder	1	17	0
-aRSH6611	(A)	Plate	1	-	×
-aRSH6613	(A)	Pole	1	•••	x
Larsh6614	(A)	Pole	2	-	x
_aRSH6621K2	(C)	Top cover	1	17	0
-aRSH6621	(C)	Top cover	1	-	x
-aRSH7182	(A)	Lever	1	-	x
- aRSH7183	(B)	Plate	1	-	x
-aRSH7184	(D)	Guide ring	1	-	×
Larsh7185	(C)	Click	1	-	x
aRSH7112K2	(C)	Charging lever	1	19	0
-aRSH7112	(C)	Lever	1		×
-aRSH7113	(C)	Lever	. 1	-	x
-aRSH7114	(B)	Boss	1	-	x
-aRSH7117	(B)	Connection arm	1	-	×
L _{aRSH7118}	(B)	Boss	1	-	×
aRSH7131K2	(A)	Hook	. 1	18	0
- aRSH7131	(A)	Hook	1	-	×
LarsH7132	(A)	Hub	1	-	×

Partș No.	·	Description	Pcs.	Ref. Page	Term of Sale
aRSH7144K2	(A)	Pawl	1	18	0
— aRSH7144	(A)	Pawl Pawl	1	-	×
aRSH7145	(C)	Gear	1	-	×
aRSH7153K2	(B)	Secter gear base	1	18	0
aRSH7153	(B) ф	Plate	1	-	x
aRSH7154	(B)	Hub	1	-	x
aRSH7155	(A)	Pin	1	-	x
aRSH7161K2	(C)	Preventive lever assy.	1	18	0
— arsh7161	(C)	Lever	1	· -	×
- aRSH7166	(C)	Lever	1	-	×
-aRSH7167	(D)	Rivet	1	-	×
— aRSH7169	(A)	Anchor	1	-	×
- aRSH7138K2	(D)	Hook base	1	-	. x
-aRSH7138	(D)	Base	1	-	x
-aRSH7133	(B)	Ru b	. 1	÷	×
-aRSH7146	(A)	Rub	1	-	x
aRSH7156	(A)	Boss	1	-	×
arsh7165	(B)	Rivet	1	_	×
_aRSH7177K2	(C)	Lever	1	18	0
- aRSH7177	(C)	Lever	1	-	×
aRSH7181	(B)	Pin	1	_	×

Exclusive use for 220 Roll Film Holder (bRSH)

Parts No.	Description	Pcs.	Ref. Page	Term of Sale
bRSH6311K2	Plate holder	1	20	•
bRSH6327	T-spring base	1	20	0
bRSH6328	Name plate	1	20	0
bRSH6331K2	Base plate, upper	1	20	*
bRSH6332	Base plate, lower	1	20	o
bRSH6333	Film guide	1	20	o
bRSH6334	Film guide	1	20	0
bRSH6341K2	Roller	1	20	0
brsh6344K	Counter reller	1	20	0
ÞRSH6345	Coller	1	20	0
bRSH6471	First gear	1	20	0
bRSH6472K2	Second gear	1	20	o .
brsh6611K2	Film spool holder	1	17	o
bRSH6615	Leaf spring	1	17	0
bRSH6915K2	Pressure plate	1	20	o
bRSH6973	Second small gear	1	20	0
brsh6976K2	Third gear	1	20	0
bRSH6984K2	Counter dividing device	1	18	o
bRSH6985K2	Auxiliary dividing disc	1	18	0
bRSH6991	Film counter gear	1	18	0
bRSH6993	Expasure counter plate	1	18	0
bRSH6937	Discrimination plate	1	17	0
PCP569	Washer	2	19	0