
Trim on the outline. The top edge measures 196 mm when printed at 100%.

KEY

NON PER USO MONETARIO

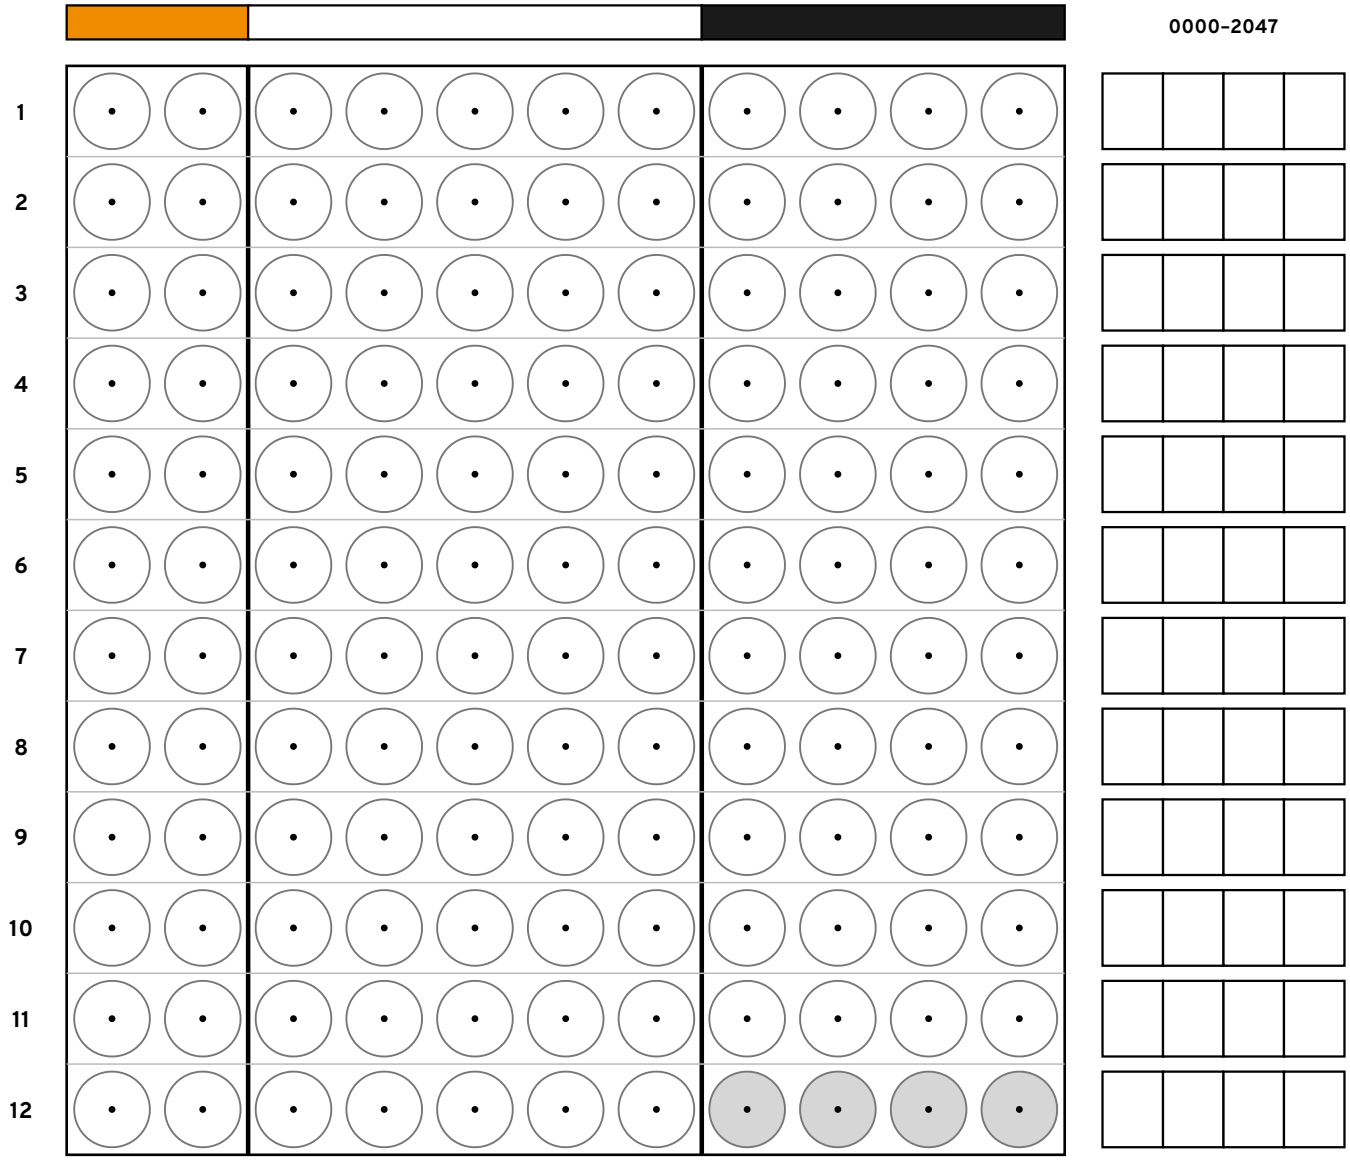

Riga 12: solo i dadi arancioni e bianchi. Le 4 celle grigie e il numero arrivano dal telefono.

Controllo 1, prima della riga 12: scrivi gli 11 numeri sul telefono e confronta i punti con le puntine.

---

1 LANCIA gli undici dadi

2 METTI ogni dado al suo posto

3 PUNTA una puntina dove ci sono i punti

4 TROVA il numero sul foglio scelto dai dadi arancioni (A–D)

5 SCRIVI le quattro cifre, poi mani sul tavolo

foglio A–D

riga 0–31

colonna 0–15

SEGNALI, SENZA PAROLE

Mani piatte
pronto

Mano alzata
aiuto

Telefono alzato,
schermo giù: telefono

Pugno sul tavolo
errore trovato

Palmo in su
puntine o penna

Trim on the outline. The top edge measures 196 mm when printed at 100%.

LOCK

1. **GUARDA** la riga sul telefono
2. **PUNTA** dove il punto è acceso
3. **SCRIVI** i due numeri
4. **TROVA** le lettere sulla carta

NON PER USO MONETARIO

	16	8	4	2	1	16	8	4	2	1	pari	00–31	00–31	bc1q
1	•	•	•	•	•	•	•	•	•	•	•			
2	•	•	•	•	•	•	•	•	•	•	•			
3	•	•	•	•	•	•	•	•	•	•	•			
4	•	•	•	•	•	•	•	•	•	•	•			
5	•	•	•	•	•	•	•	•	•	•	•			
6	•	•	•	•	•	•	•	•	•	•	•			
7	•	•	•	•	•	•	•	•	•	•	•			
8	•	•	•	•	•	•	•	•	•	•	•			
9	•	•	•	•	•	•	•	•	•	•	•			
10	•	•	•	•	•	•	•	•	•	•	•			
11	•	•	•	•	•	•	•	•	•	•	•			
12	•	•	•	•	•	•	•	•	•	•	•			
13	•	•	•	•	•	•	•	•	•	•	•			
14	•	•	•	•	•	•	•	•	•	•	•			
15	•	•	•	•	•	•	•	•	•	•	•			
16	•	•	•	•	•	•	•	•	•	•	•			
17	•	•	•	•	•	•	•	•	•	•	•			
18	•	•	•	•	•	•	•	•	•	•	•			
19	•	•	•	•	•	•	•	•	•	•	•			

Controllo 2: ogni riga ha un numero pari di puntine.

Controllo 3: bc1q, poi le lettere dalla riga 1 alla 19, è l'indirizzo sul telefono, lettera per lettera.

KEY tablet: build notes

One board, two faces. The key on the front, the lock on the back. Practice only: **non per uso monetario**.

You need

- Plywood, 12 mm, cut to **196 × 276 mm**. Soft plywood (poplar) is easiest.
- Pages 1 and 2 of this file, printed on A4 at **100%** (not "fit to page"), on paper or thin card.
- Glue: spray mount, or PVA spread thin.
- Flat drawing pins (puntine), head about 10 mm, point no longer than 10 mm. About 70 for the key and 100 for the lock, on average.
- An awl, or a drill with a 1.5 mm bit, for pilot holes.
- A fine black pen.

Make the board

1. Print pages 1 and 2. Check that the top edge of each outline measures 196 mm.
2. Trim both sheets on the outline.
3. Glue page 1 (KEY) to one face, edges flush with the board, title at the top.
4. Turn the board over **left to right**, like turning a page, not top to bottom. Glue page 2 (LOCK), edges flush, title at the top.
5. Prick a pilot hole about 4 mm deep at the centre dot of **every** cell on both faces. Do this now, before any key is made, so a hole says nothing.

> **Why left to right.** The two grids are offset by 6 mm across and 6 mm down, so a pin from the front and a pin from the back never meet inside the wood: the closest pair is 8.5 mm apart. The offset only works if both sheets sit flush with the edges and the board is turned like a page.

Use

1. **Front, the key.** One row per throw. A die showing dots is a pin. Write the row's four-digit number in the boxes. Row 12: the first seven cells from the dice; the four grey cells and the number come from LOCK.
2. **Back, the lock.** Nineteen rows from LOCK's lights. Each half-row of five is a number from 00 to 31 (weights 16 8 4 2 1); the last cell makes the row's pin count even. Write both numbers, then the two letters from the address card.
3. The address is **bc1q** followed by the letters from row 1 to row 19.

> **A pin can fall out.** A missing pin turns a 1 into a 0 and nothing shows it. The written numbers are the check: read each row's pins back and compare. That is also why a tablet like this is for practice, not for value.