Bogdan Munteanu Bogdan



LINK VIDEO : https://www.youtube.com/watch?v=vTgK9yBG79g

Retrofit reversing camera Audi A4 B9

- Autor articolDe Bogdan
- Dată articoliulie 19, 2020
- 158 de comentariila Retrofit reversing camera Audi A4 B9

I made some research to see how much it would have cost for my car to have this reversing camera from the factory and the price for this extra option is 511.70 Euro. Well, I made the retrofit for only $96, the camera and wiring are similar to OEM parts. In this article I will provide all the necessary information to make this retrofit by yourself.

Confidential C

Where did I buy the camera, what model did I choose and why

I bought the camera and the wiring from Aliexpress, from this store. Maybe you're skeptical to hear I bought it from Aliexpress, but find out that you can also find original parts and kits on Aliexpress. If you take a look on Aidu Auto Technology's store you will notice that they are specialized on selling retrofit kits and parts similar with OEM parts.


Camera's part code:

- **3V0 827 566 L** for Sedan – you can find it here
- **3V0 827 566 M** for Avant – you can find it here

Update 16.06.2024: For the A4 B9.5 facelift that has the MMI MIB3 unit, the cable for the video signal is different and you also need the adapter below. You can find it here.

Confidential C



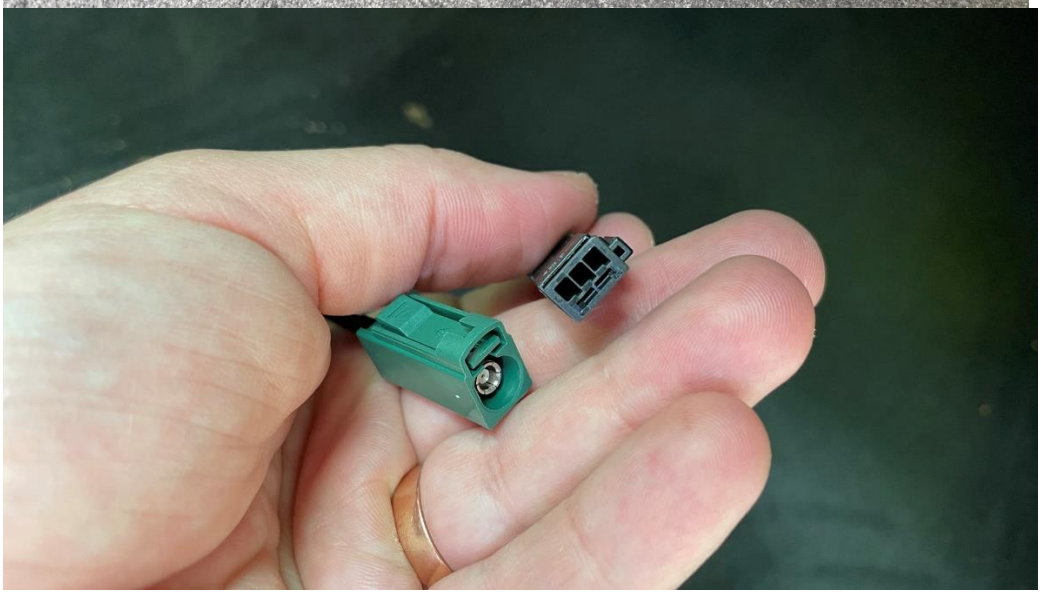

Both are Highline with guidelines that are moving according to the rotation of the steering wheel. The one for Avant also has a spray nozzle connection which connects to the existing windshield spray nozzle installation.

Confidential C





Confidential C



Well, I chose the version for the Sedan, even if I have the Avant model, simply because 2-3 months ago when I ordered the camera they didn't have listed the version for Avant. The only solution was to buy it from Ebay Germany where the cost was around 200$. Taking into consideration that I already spent 96$ on the camera, I said that I have to be crazy to spend another 100$ just to have the spray nozzle model. Moreover, I saw an OEM reversing camera on a B7 Volkswagen Passat Variant and it doesn't even have this spray nozzle, so not much of a loss really.

How did I connect the camera?

In order to work properly, the camera requires the connection of the following wires:


- **2 CAN signal wires** (for communication) – **Orange+Purple** (CAN High) and **Orange+Brown** (CAN Low)
- **2 video signal wires** – **Black** and **Transparent**
- **2 power wires** – **White** (+12V) and **Brown** (GND)

Confidential C






Confidential C

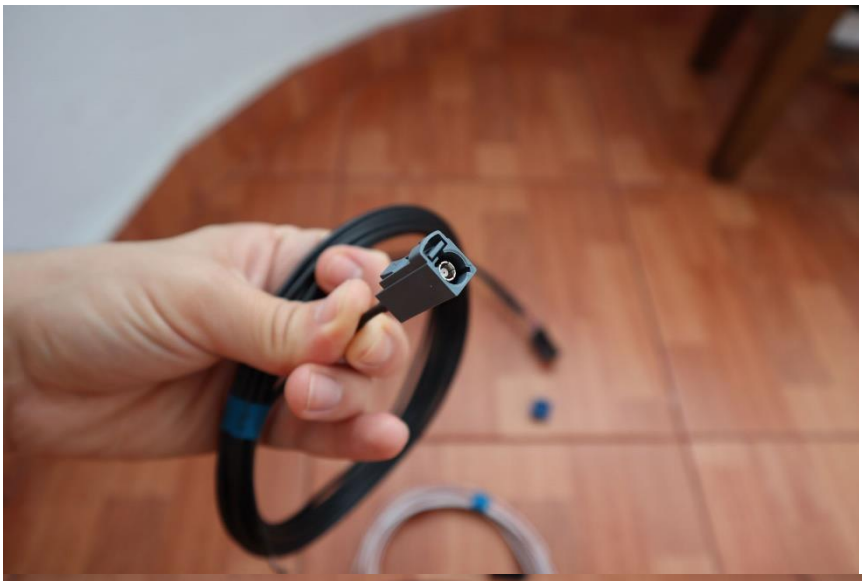







Confidential C

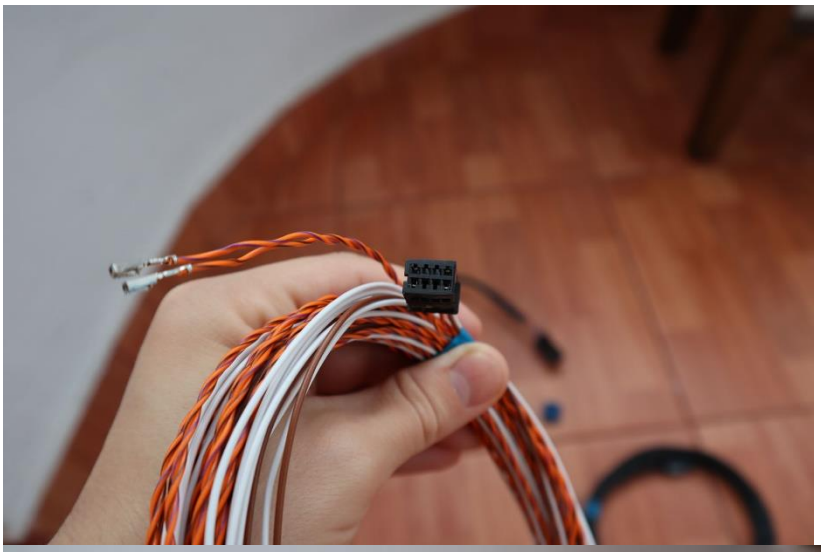


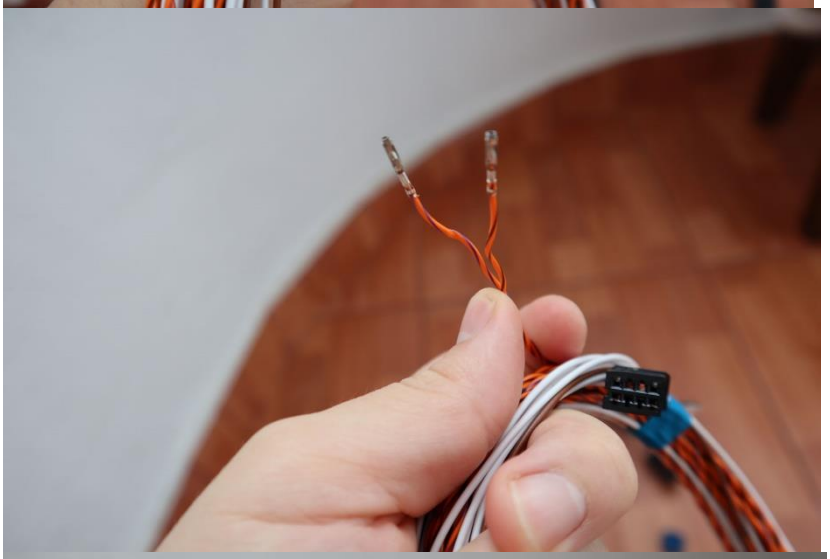

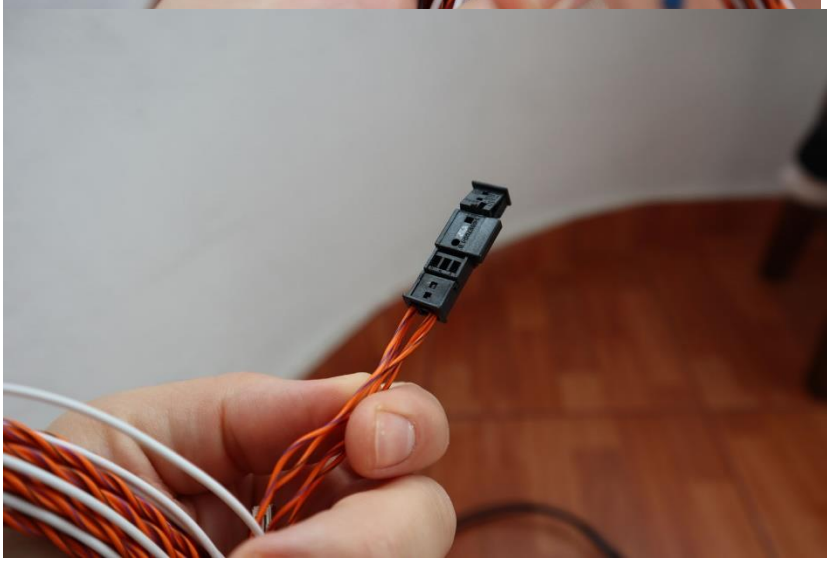

In the package you will find a cable long enough to connect them properly, but also a splitter to connect the wires to the CAN, which in the end I decided not to use (you'll see later). Basically, the retrofit looks like this:

Confidential C

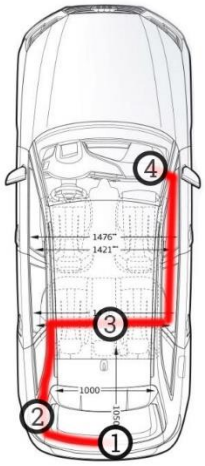

1. New trunk handle with reverse camera
2. Connect PWR and GND wires in the fuse box from luggage compartment, left side
3. Connect CAN wires under rear seat module J533
4. Connect video signal wires in quad lock connector, behind MMI, under glovebox

Required tools:

- Hex set
- Socket set
- Trim removal tool
- Fuse 10A
- Tape


Replace trunk handle with the new one

To remove the plastic that covers the tailgate, we need to remove 2 screws placed under the warning triangle. After removing them we can pull out the plastic, because there are only metal clips left. You can also remove the 2 side plastics to grab the cover easier.



Confidential C

The handle is quite difficult to remove, it has some plastic clips that must be pushed in, but not before removing the plug. The new camera handle fits in easily. Don’t forget to connect the plug in the back to operate the tailgate.

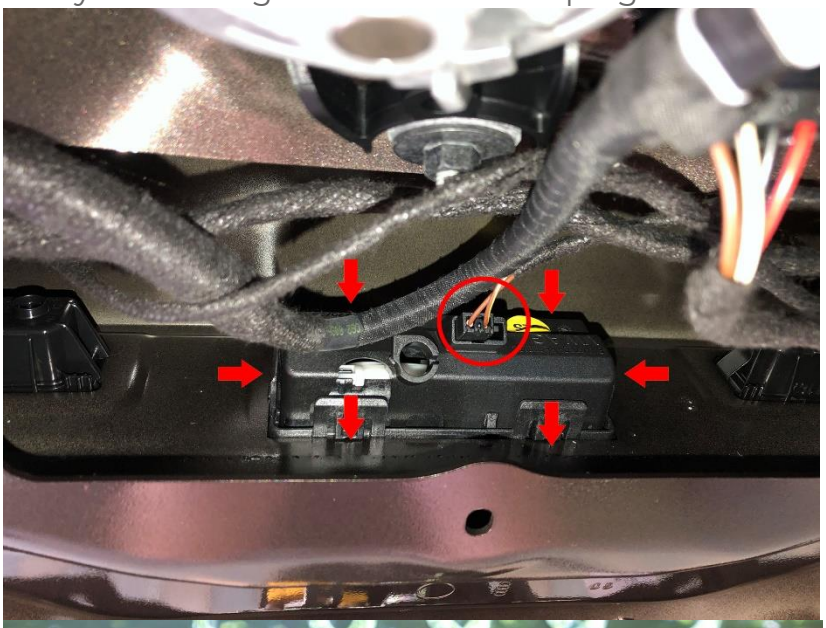



Confidential C





Confidential C



After fitting the new handle with the rear-view camera and connecting the plugs to the extension cables, we can pull the cable through the tailgate hinge, after removing the plastic protection from the hinge. **Attention!** Leave a few extra cm of cable in this area so that the tailgate does not force the cables and breaks them when you close it.

Connect power wires to the fuse panel


To reach the fuse box from the luggage compartment, the left side cover must be removed, but not all of it. Check the images below. One screw is hidden behind the bag hook, which comes out by turning the hook left and another one is in the area marked below. The grey plastic is fastened with a screw and a few metal clips.

Confidential C





Confidential C

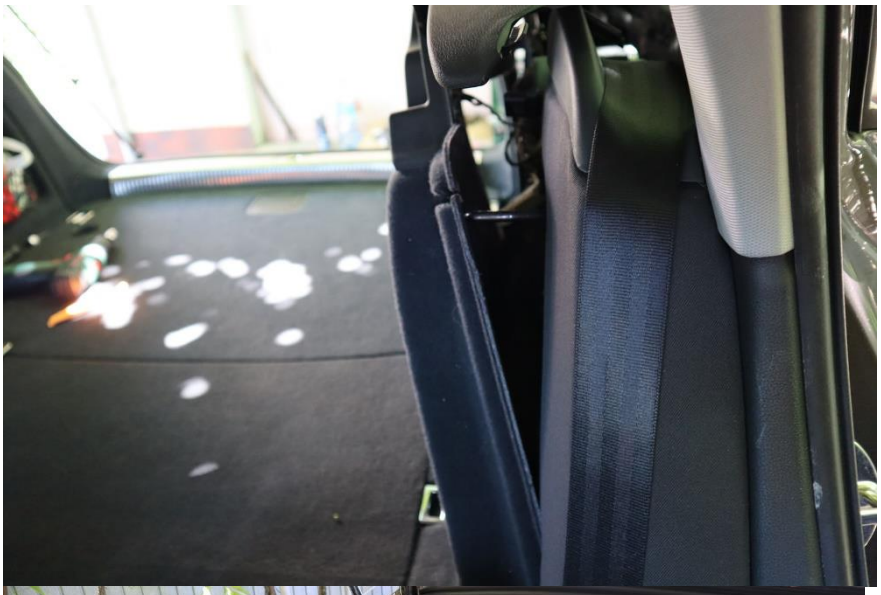






The fuse box has a screw that needs to be removed in order to remove the brown plug. The **white wire** must be connected behind the brown plug in the highest position (**13**) of the C (**brown**) plug. Push the pin firmly and after mounting a fuse (I used a 10A fuse), do some tests with a pencil tension tester to see if you have PWR in the camera's socket. The brown wire (GND) can be connected to any metal screw.

Confidential C



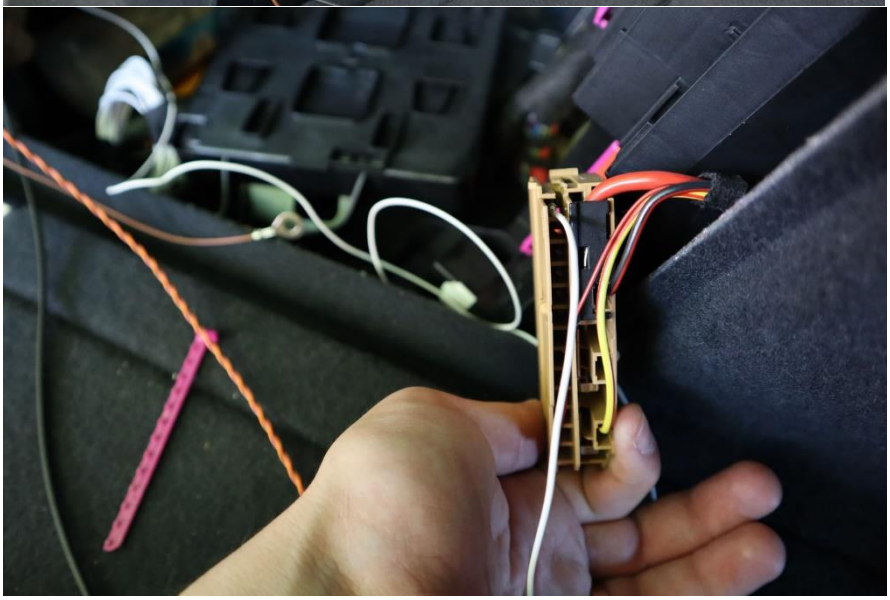

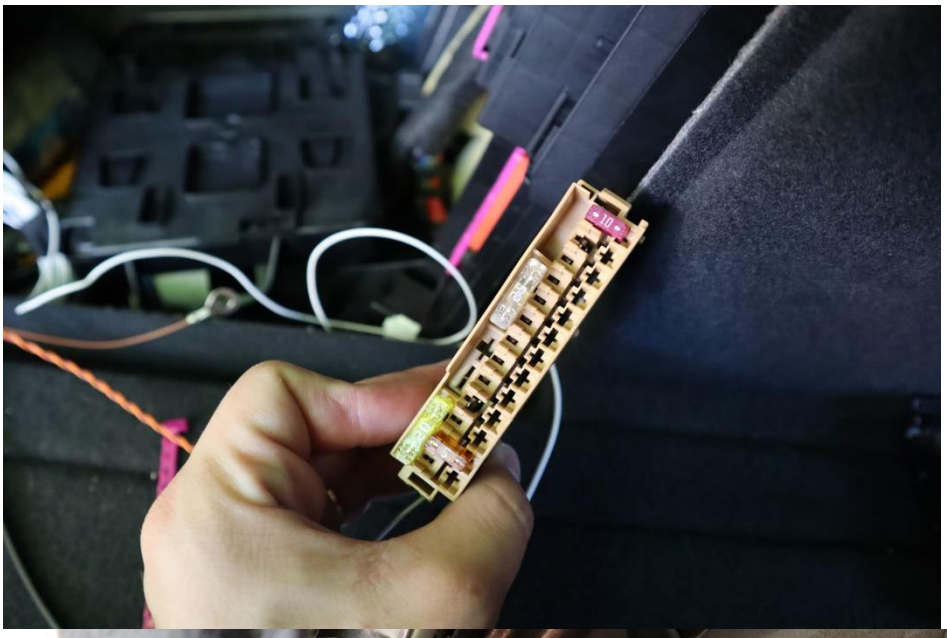

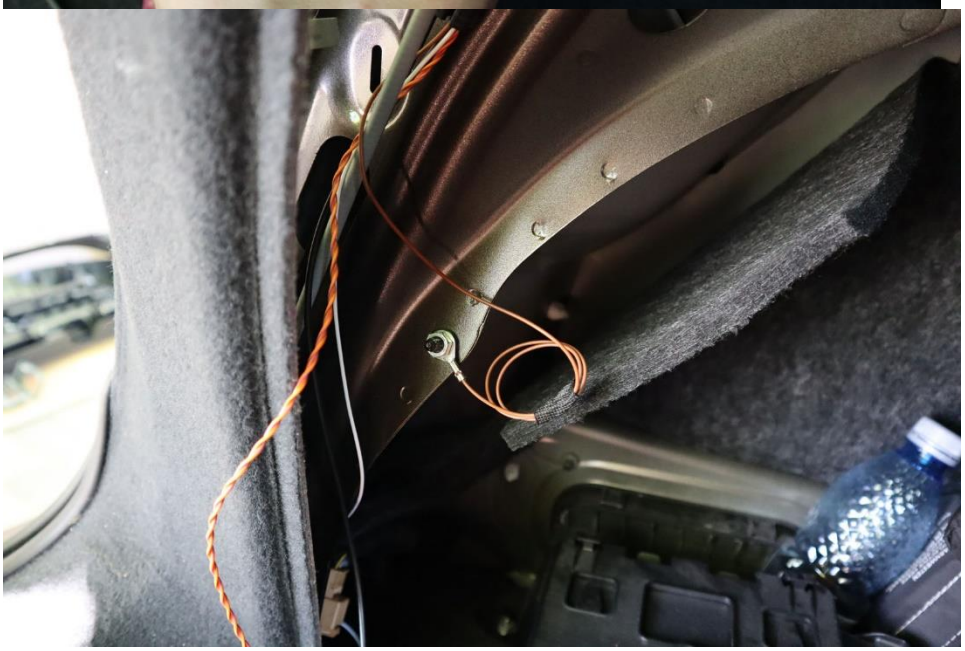

Connect CAN wires under the rear seat

CAN wires need to be connected under the rear seat in the black J533 module. The rear seat is fixed by 2 clips (pull hard). After you removed the rear seat, you need to connect the 2 orange wires to the module socket. If you have an ISOFIX system, remove those plastic caps as well, it will be easier when you put back the rear seat.

You need to connect the wires like this:

- **Orange** + **Purple** from the extension cord (**CAN High**) connects to **PIN 12** (**gray** wire in the original plug)

Confidential C

- **Orange** + **Brown** (**Can Low**) from the extension cord connects to **PIN 30** (**orange** wire in the original plug)


I cut the wires, left a little thread on top and inserted them at the same time with the original wire into the module socket. To reach PIN 30, the socket must be split in 2 parts (check the video at the end of article). These parts are sliding one into the other. Check the images:






Confidential C



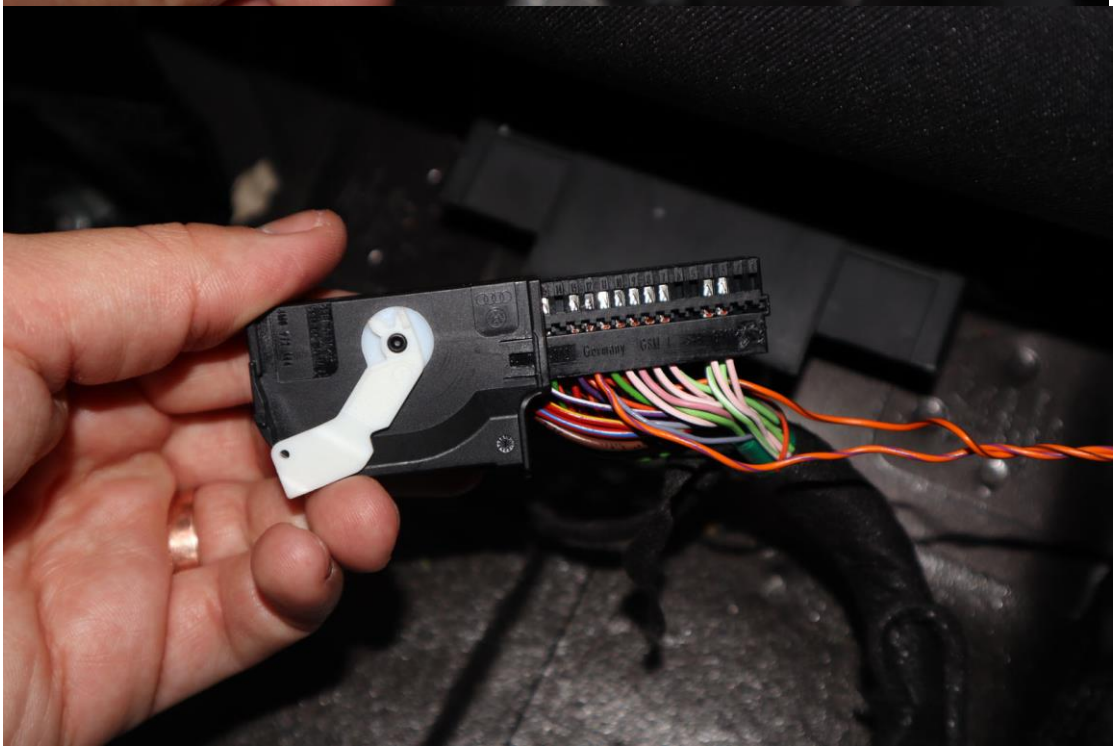

Confidential C

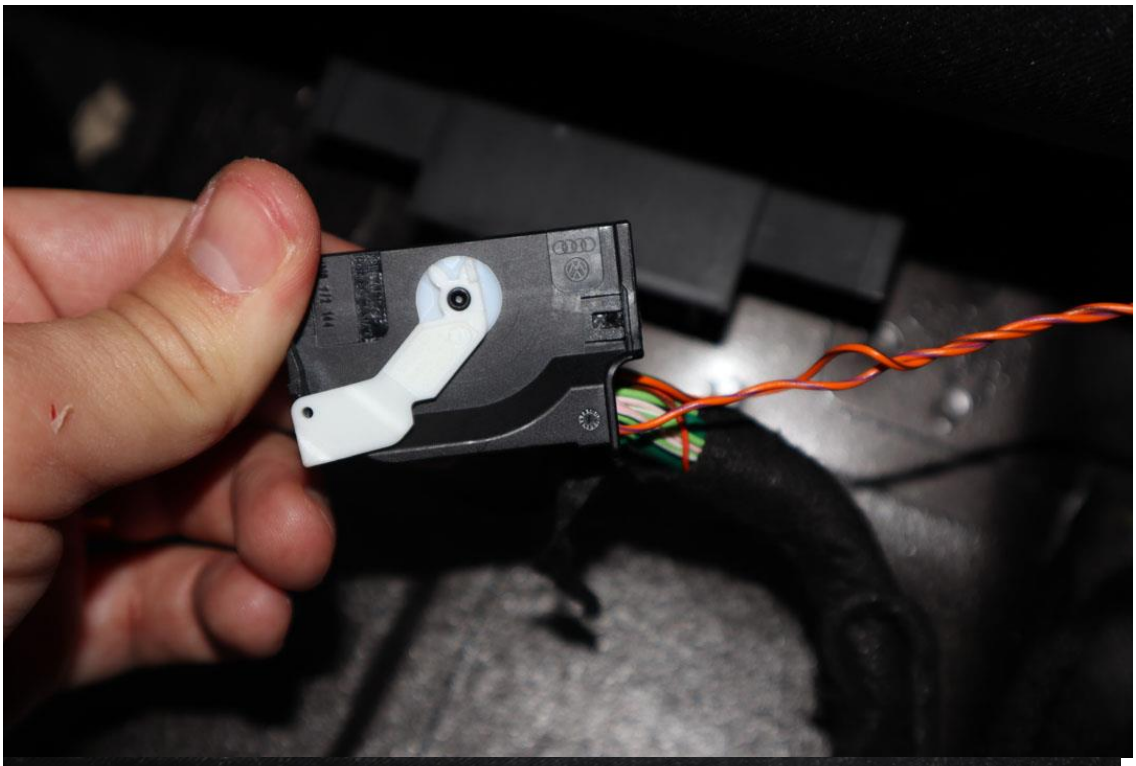



Connect the video signal wires

You can also pull the video signal wires behind the rear seat, to reach the right side of the car. I pushed the cable slightly under the threshold of the car, I did not disassemble the plastics. The glove compartment is easy to

Confidential C


remove, it has about 9 screws. One on the right side (remove the plastic cover first), 2 on the bottom and the rest inside the glove compartment.

Because the MMI unit's cable is very short, I took down the MMI unit that is held by 2 screws. I removed the Quad lock plug by sliding it out, I removed the small blue plug from the Quad lock plug and then, after carefully opening the blue plug (you can't push the cable without opening the blue plug), I connected the cables:


- **Transparent wire** on **PIN 6**
- **Black wire** on **PIN 12**




Confidential C

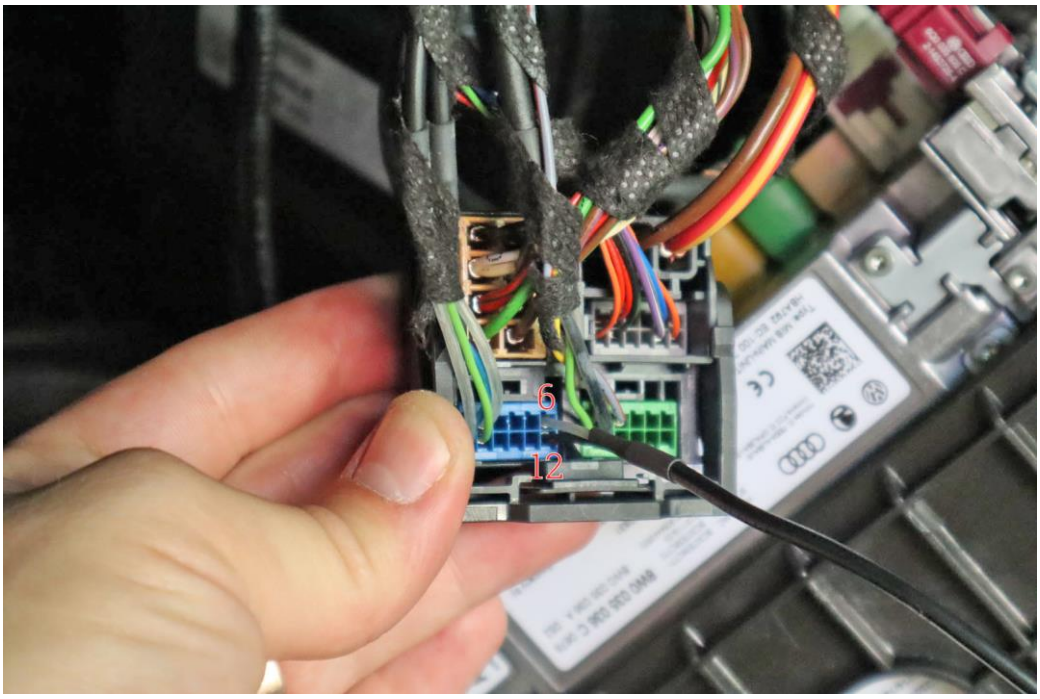


Update 16.06.2024: For the A4 B9.5 facelift that has the MMI MIB3 unit, the video signal jack is different, use the adapter and insert it into the green MMI jack, according to the pictures below.

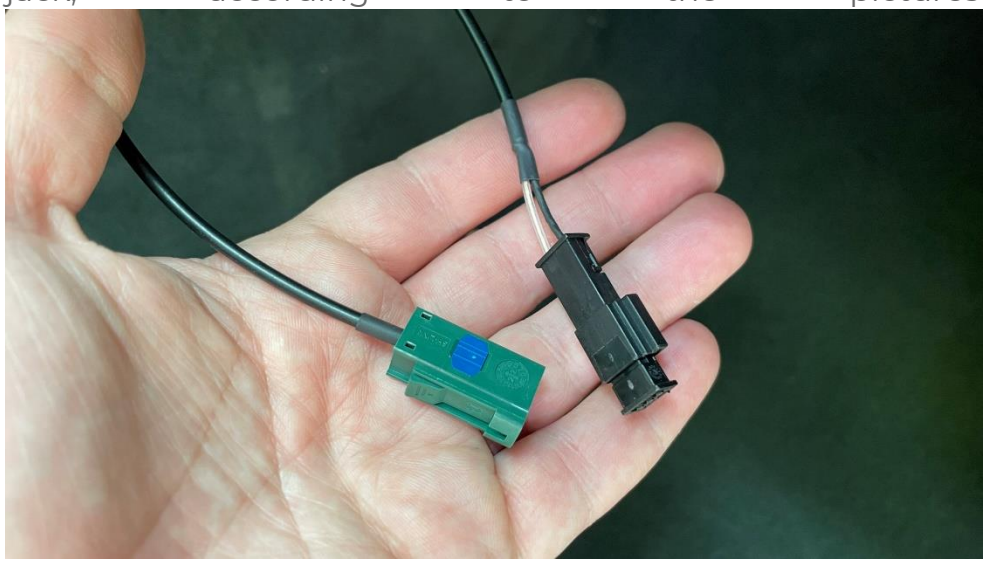

Confidential C

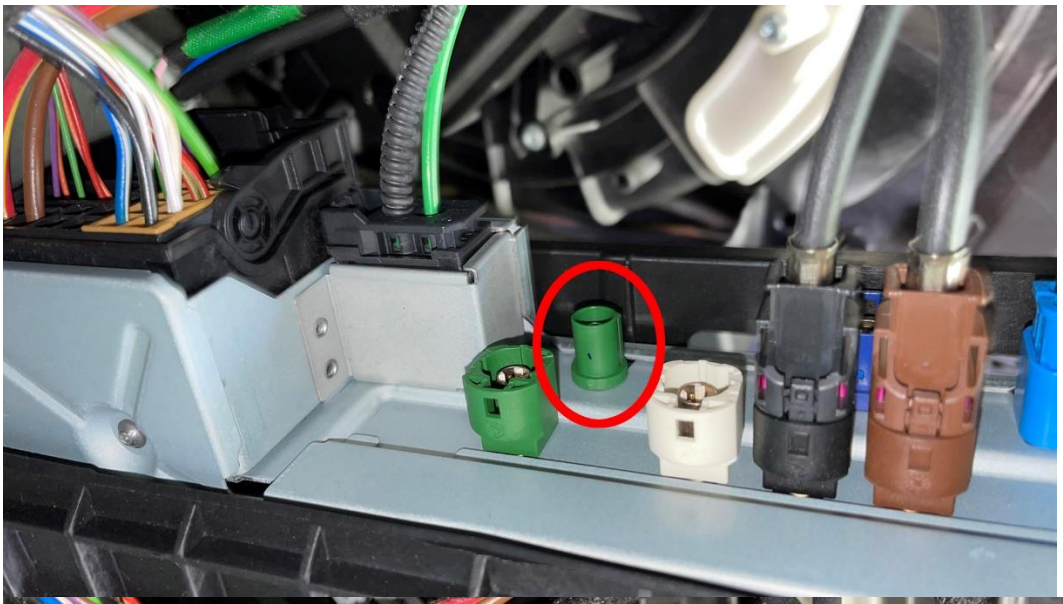

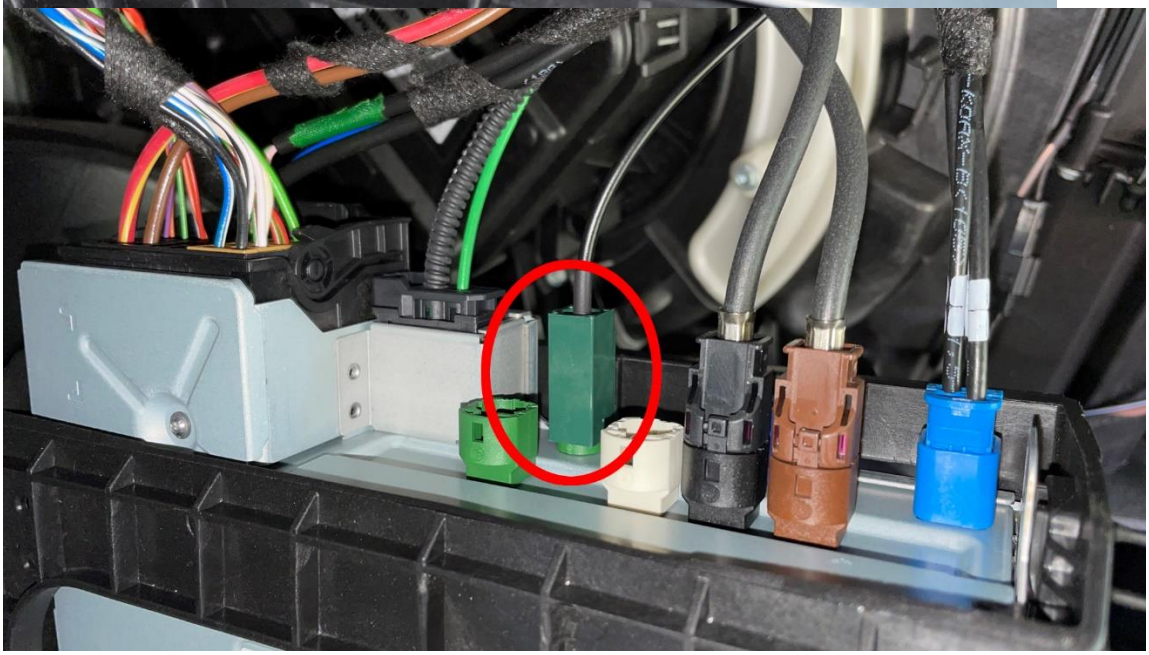


Final step: coding

Before you put everything back, I recommend you to code the camera and make sure everything works. The coding is done as follows:


Coding with OBDeleven

Module 19 Gateway


Confidential C

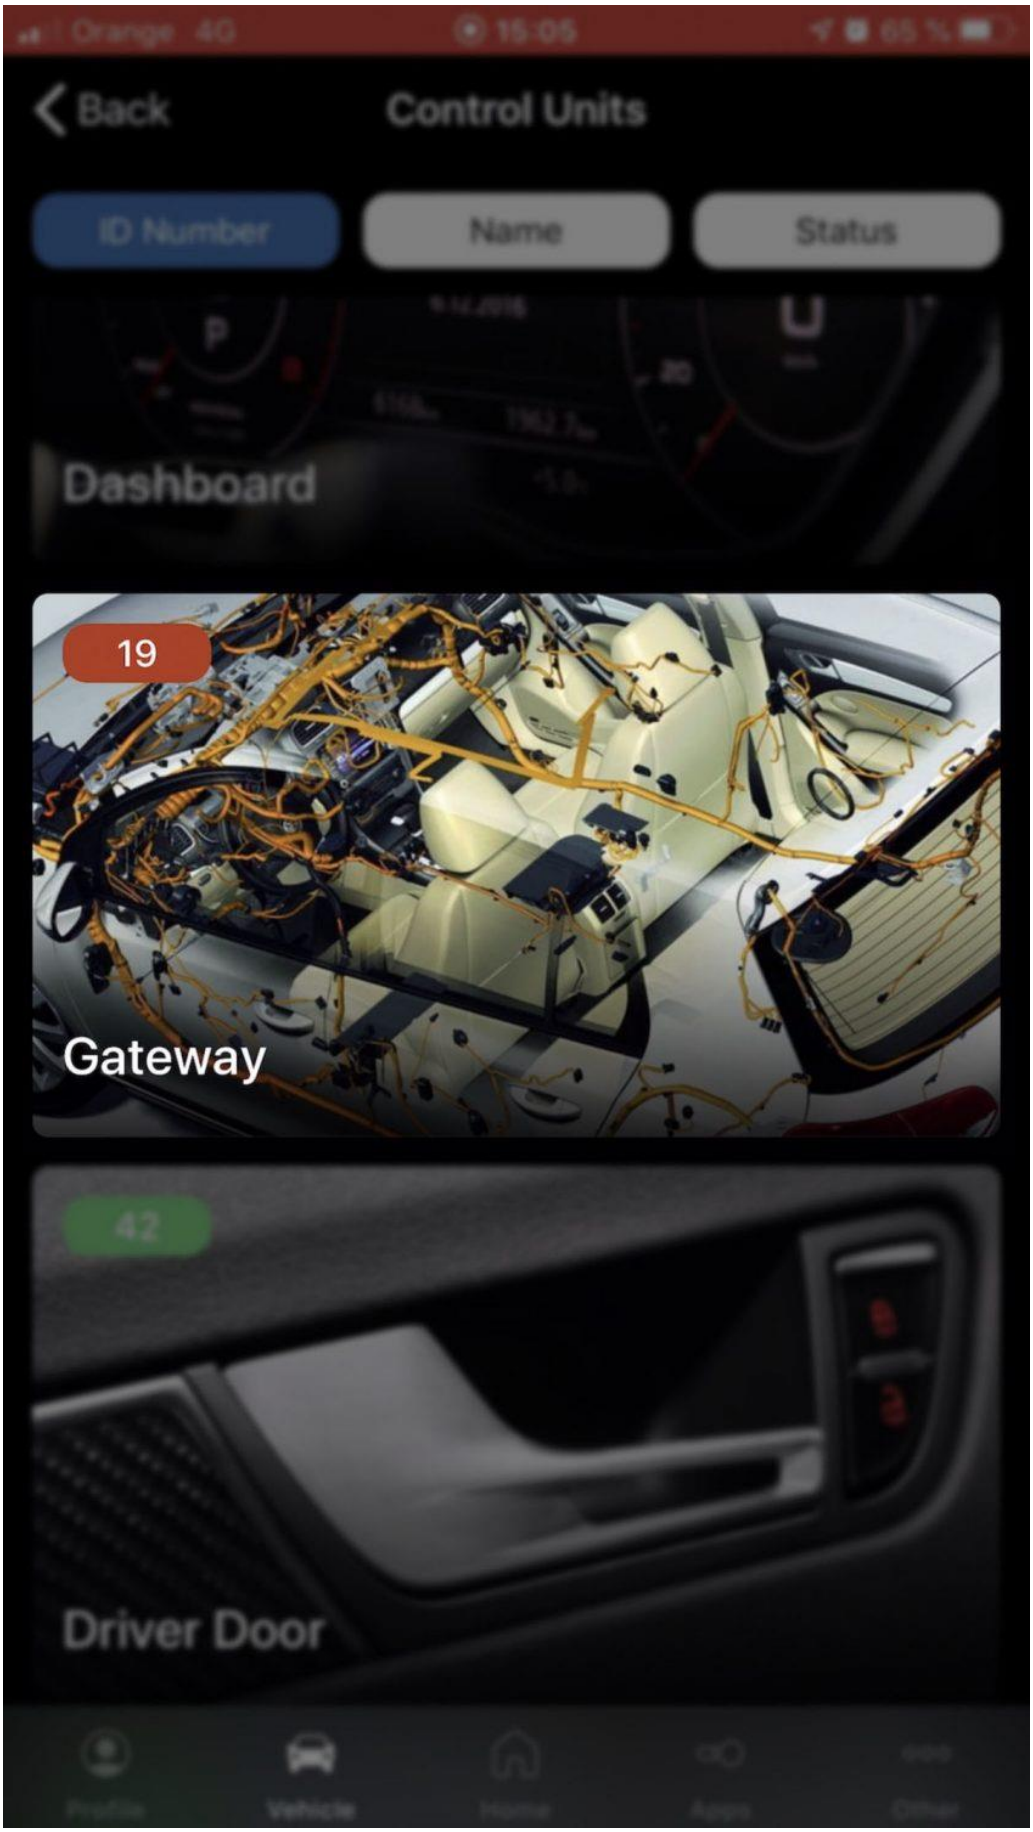


Confidential C

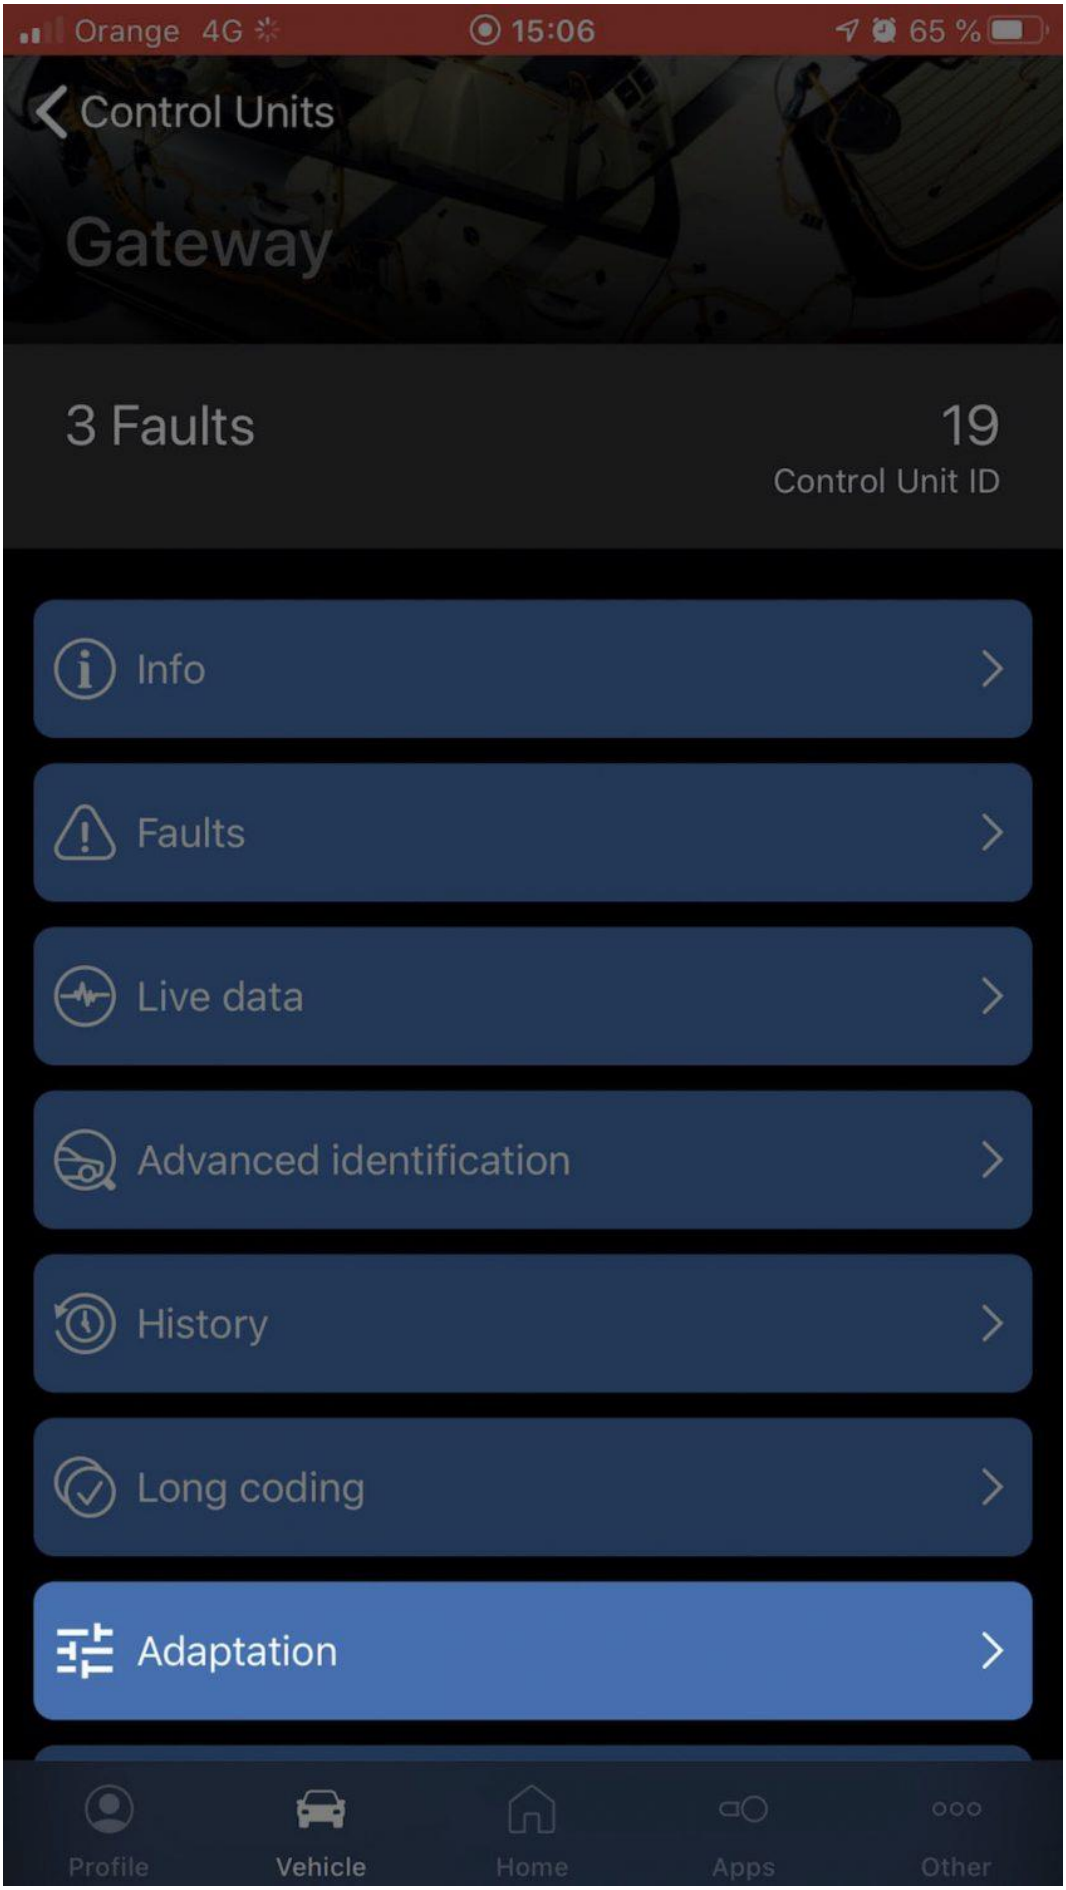

Confidential C

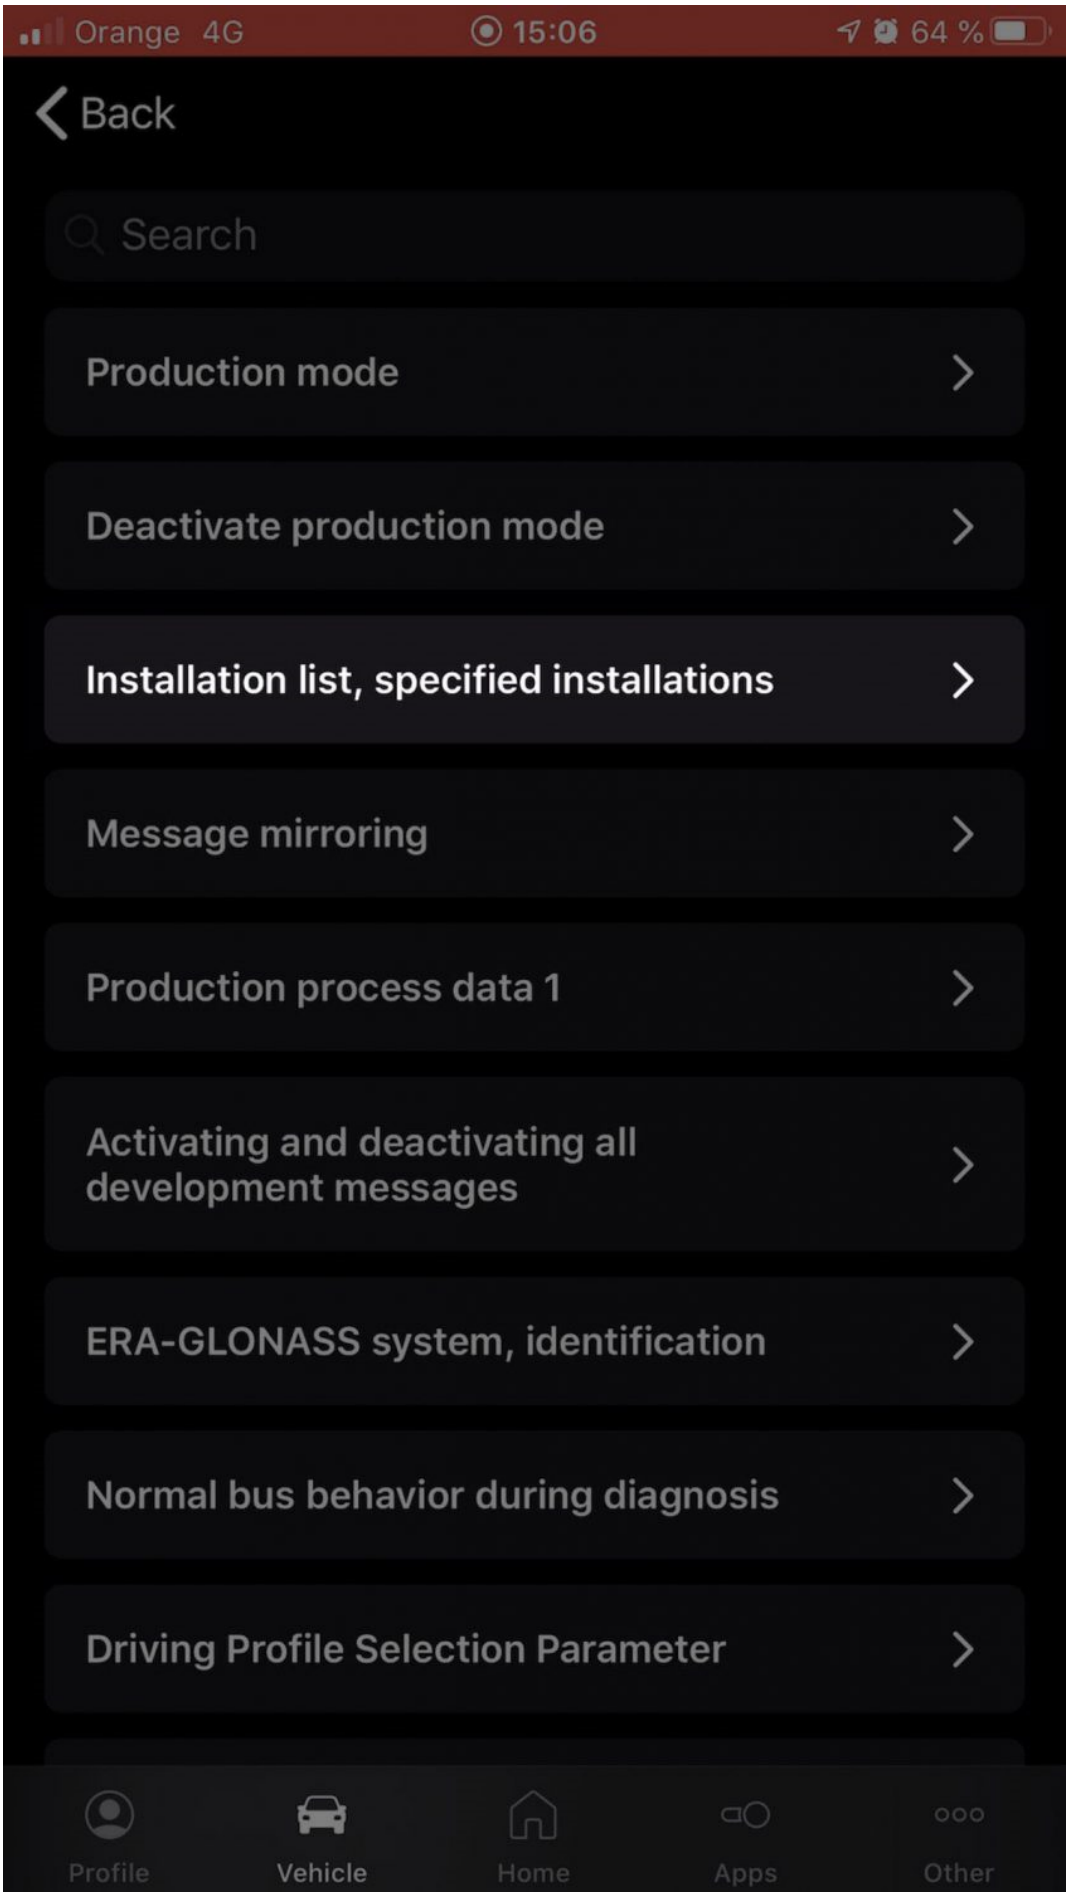

Confidential C

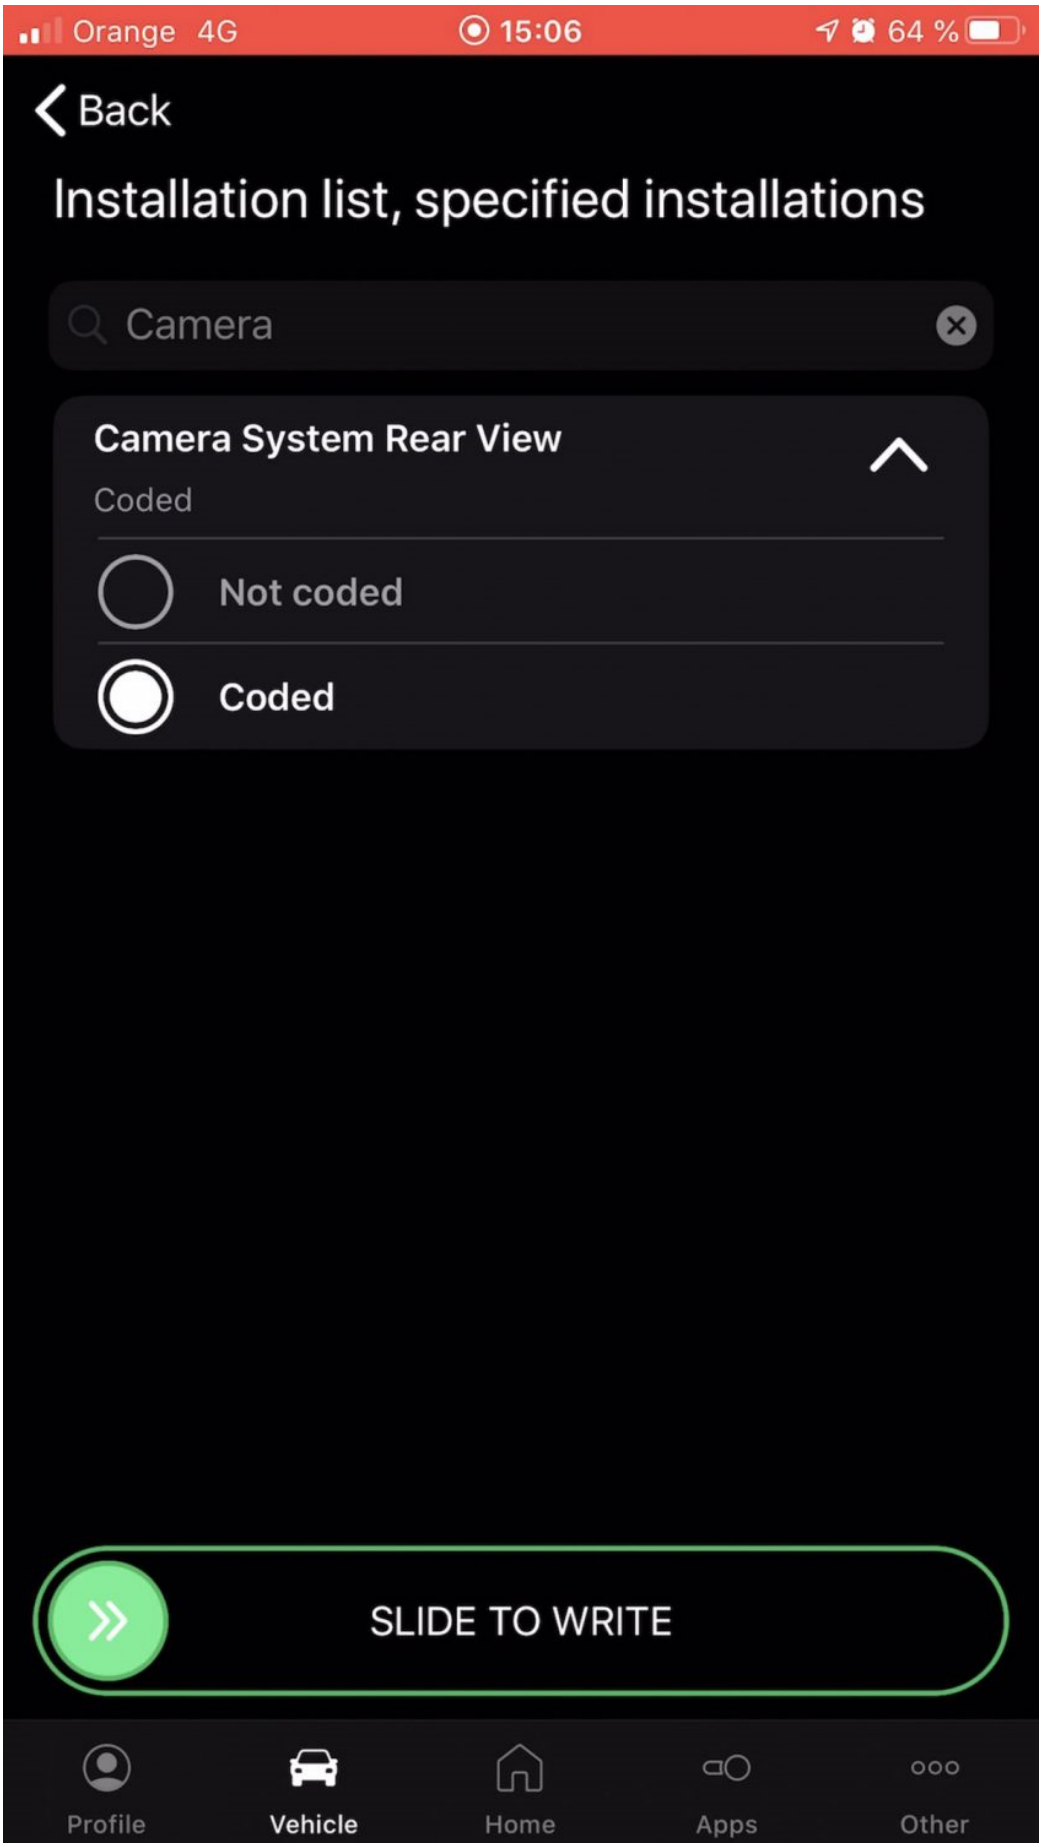


Confidential C

- Select **19 Gateway**
- Select **Adaptation**
- Select **Installation list, specified installations**
- Search „**camera**” in the list and check **Coded** and then **Slide to write**


Update 16.06.2024: For the facelift version B9.5 with MIB3 you will find **„Camera System Rear View”** instead of **„camera”**, in the same way we select **Coded** and give **Slide to Write**.

Module 09 Central Electrics


Confidential C

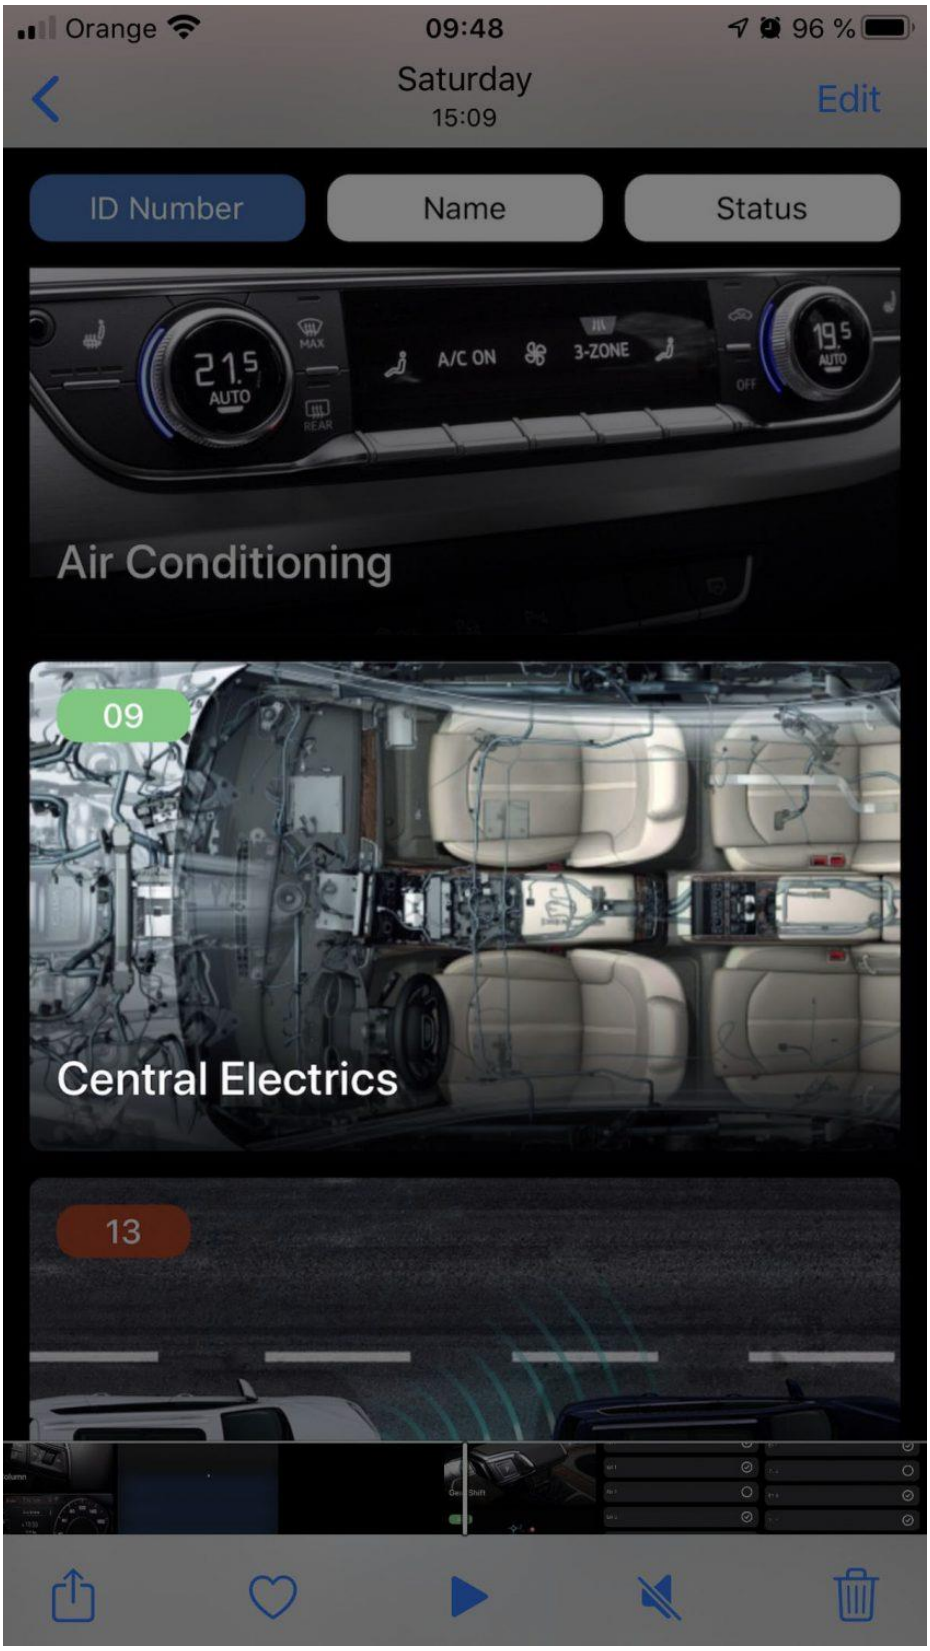


Confidential C

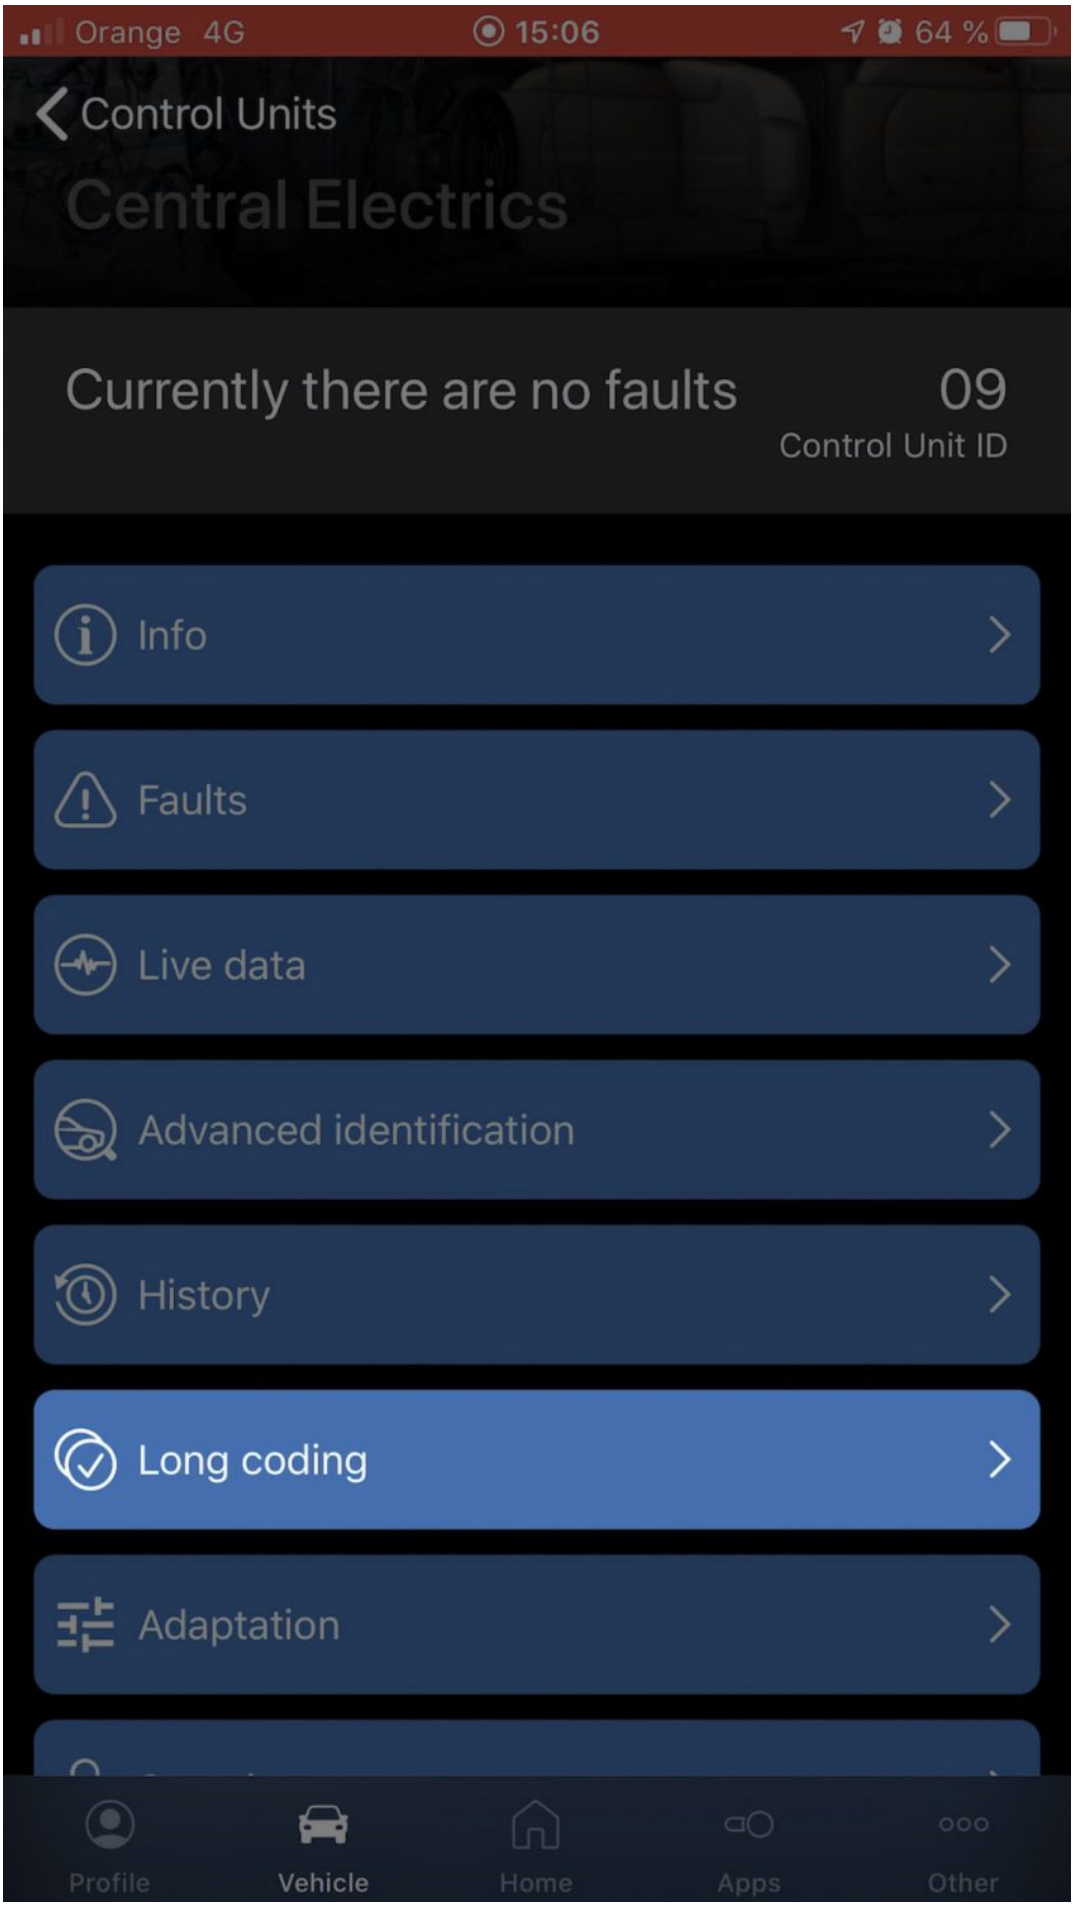

Confidential C

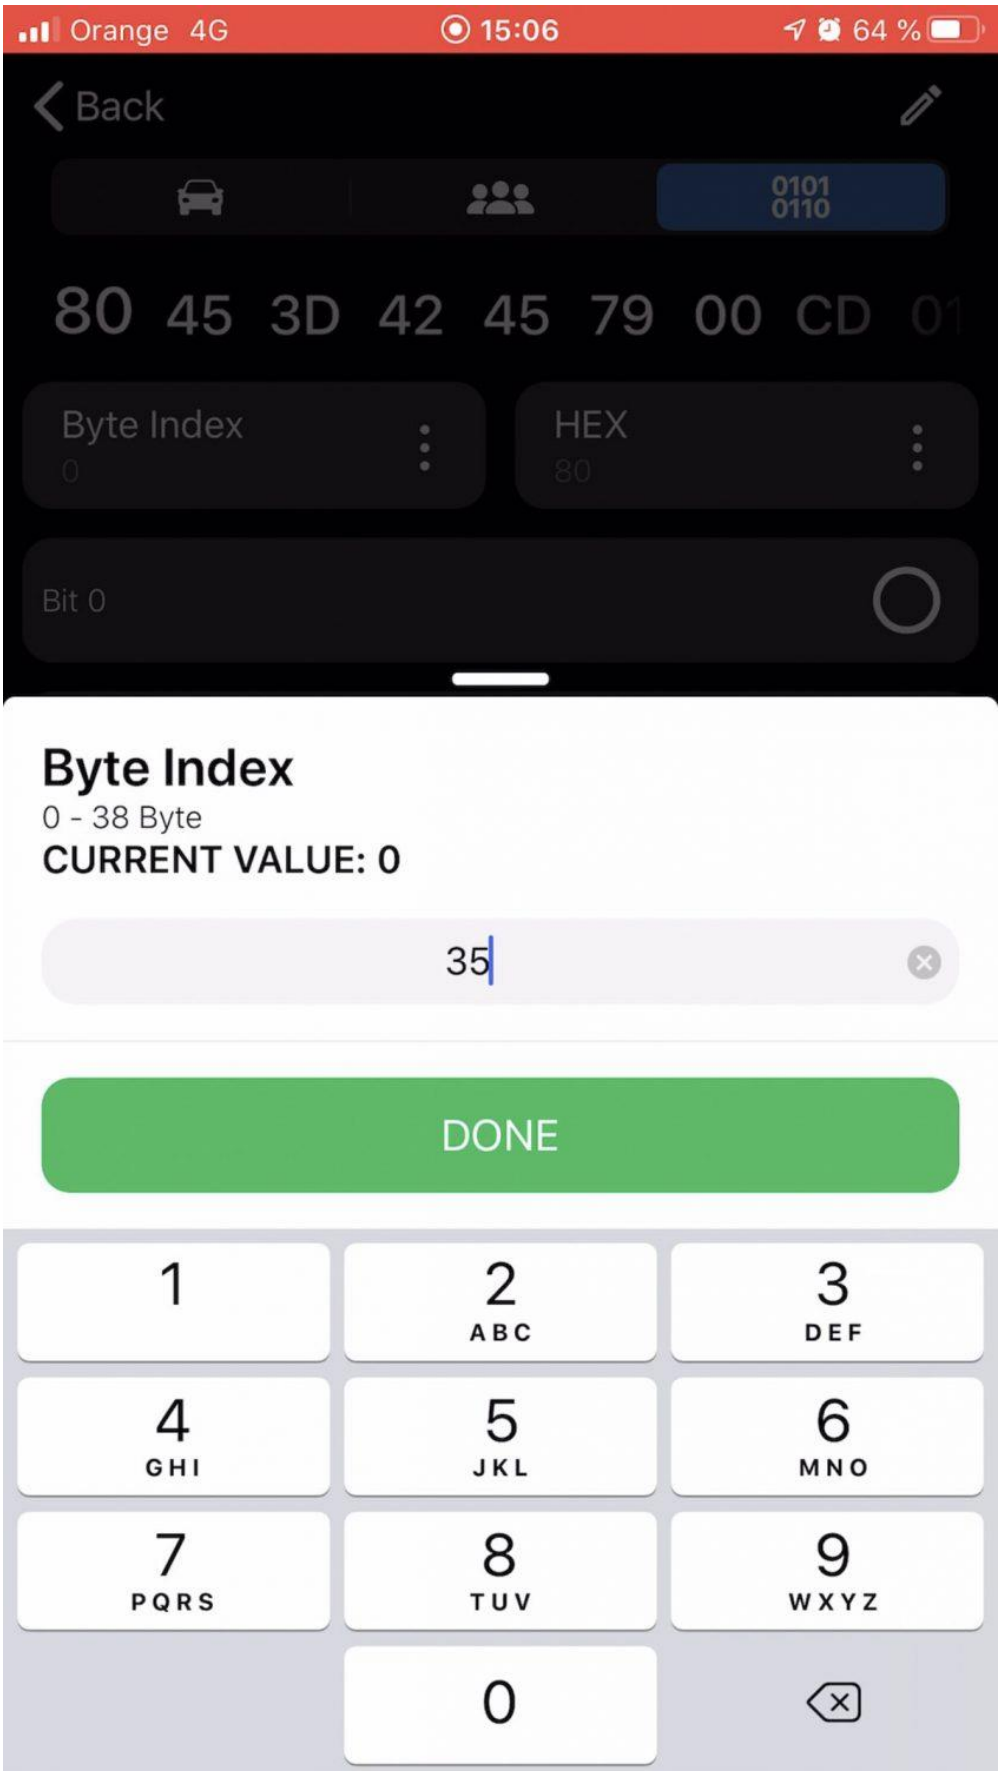

Confidential C

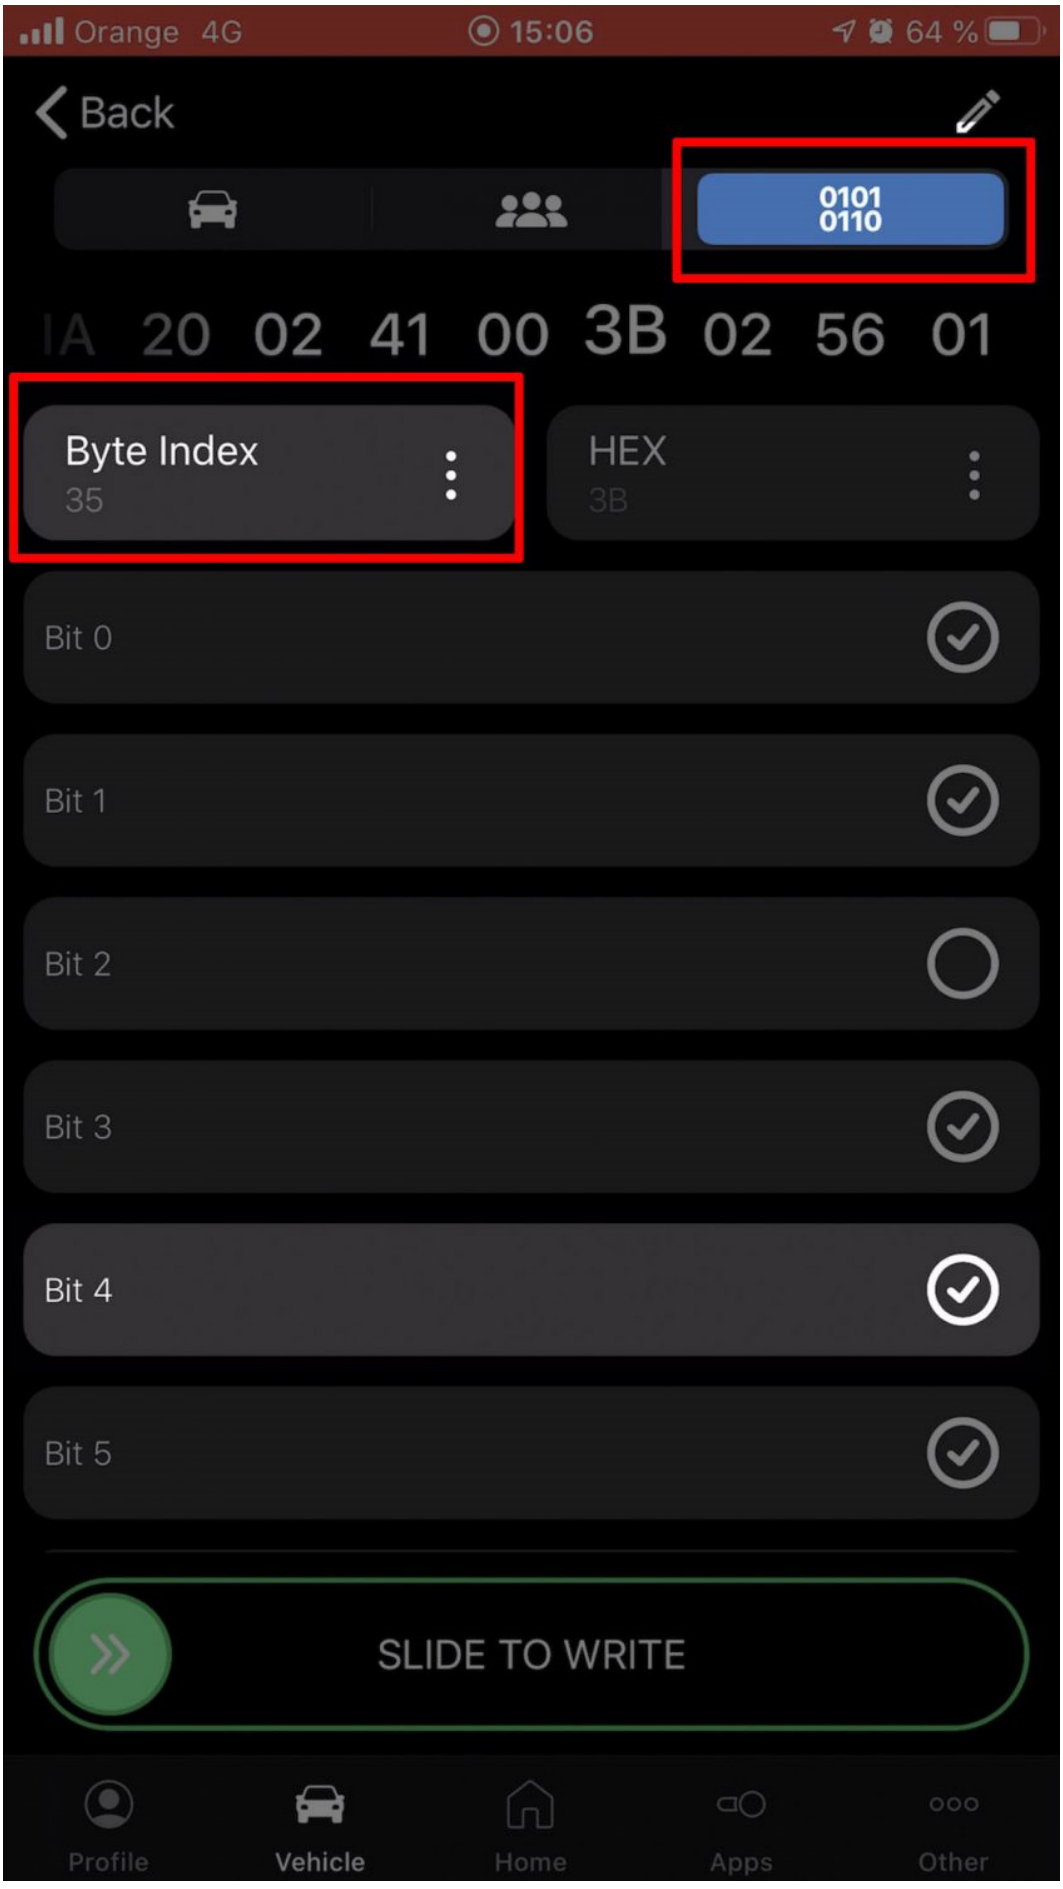


Confidential C

- Select **09 Central Electrics**
- Select **Long Coding** (**Attention!** Do a full backup of your current long coding number before any new long coding)
- Check the icon with „**01010101**" on the top right corner, select **Byte Index** and enter value **35**
- On **Byte 35** check **Bit 4** and then **Slide to write**


Update 17.05.2021: For those who have an SOS button, the coding is different. On module **09 Central Electrics** Byte 35 is missing so go to **Byte 38**, at **Bit 2-3** select **04 camera variant_rvc, installed**.

Update 16.06.2024: For the B9.5 facelift variant with MIB3 after entering Long Coding, write directly in the search bar **„camera"** and **„Camera variant"** will appear where you have to select **„Rvc installed"** and then **Slide to write**.

Confidential C

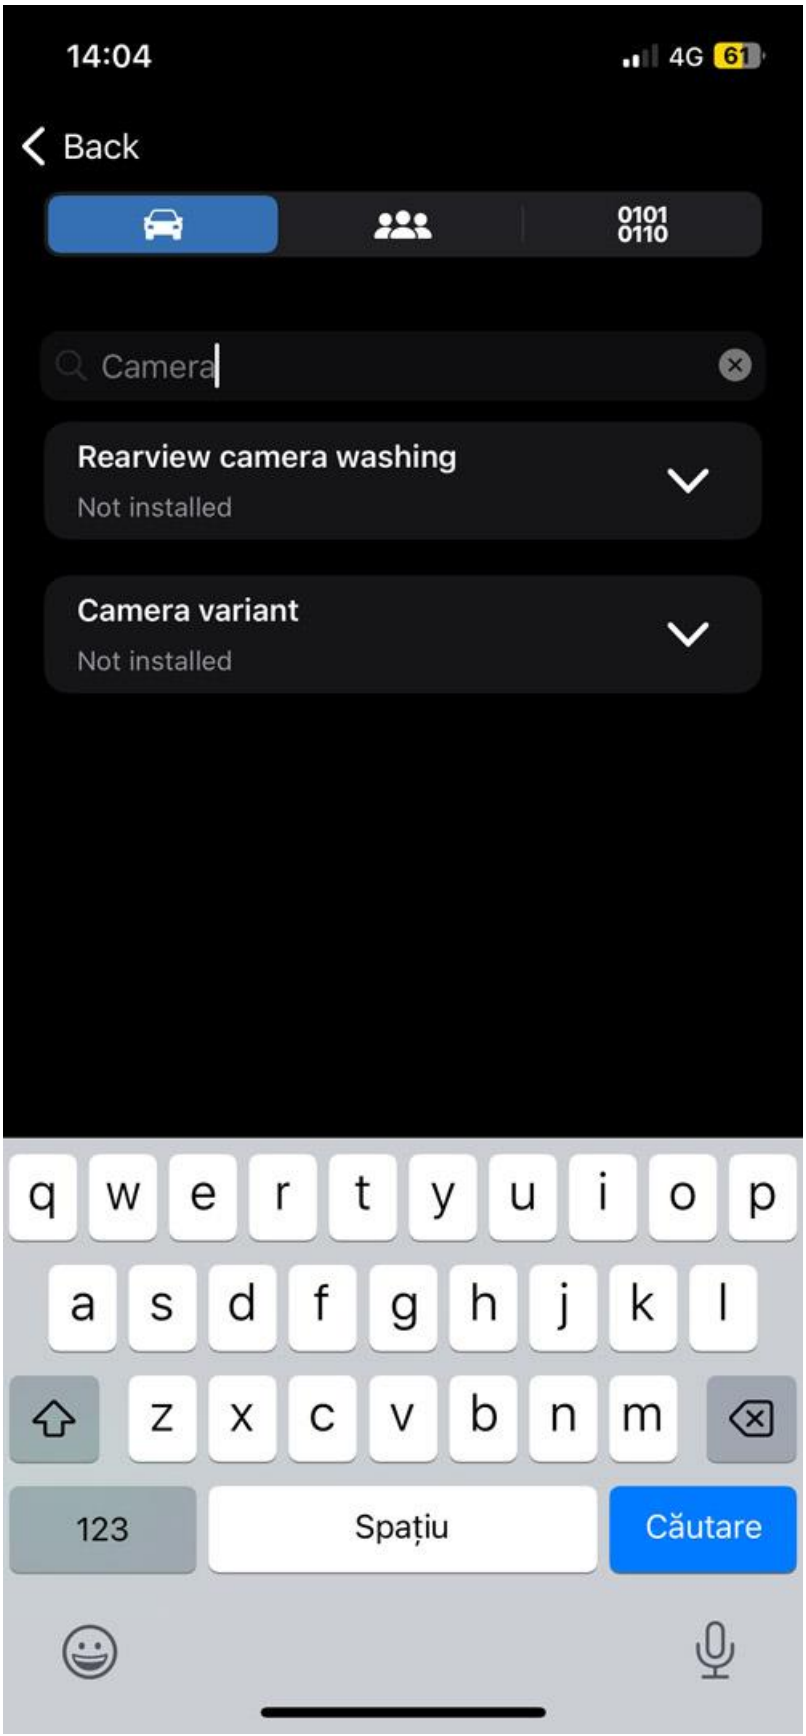

Confidential C

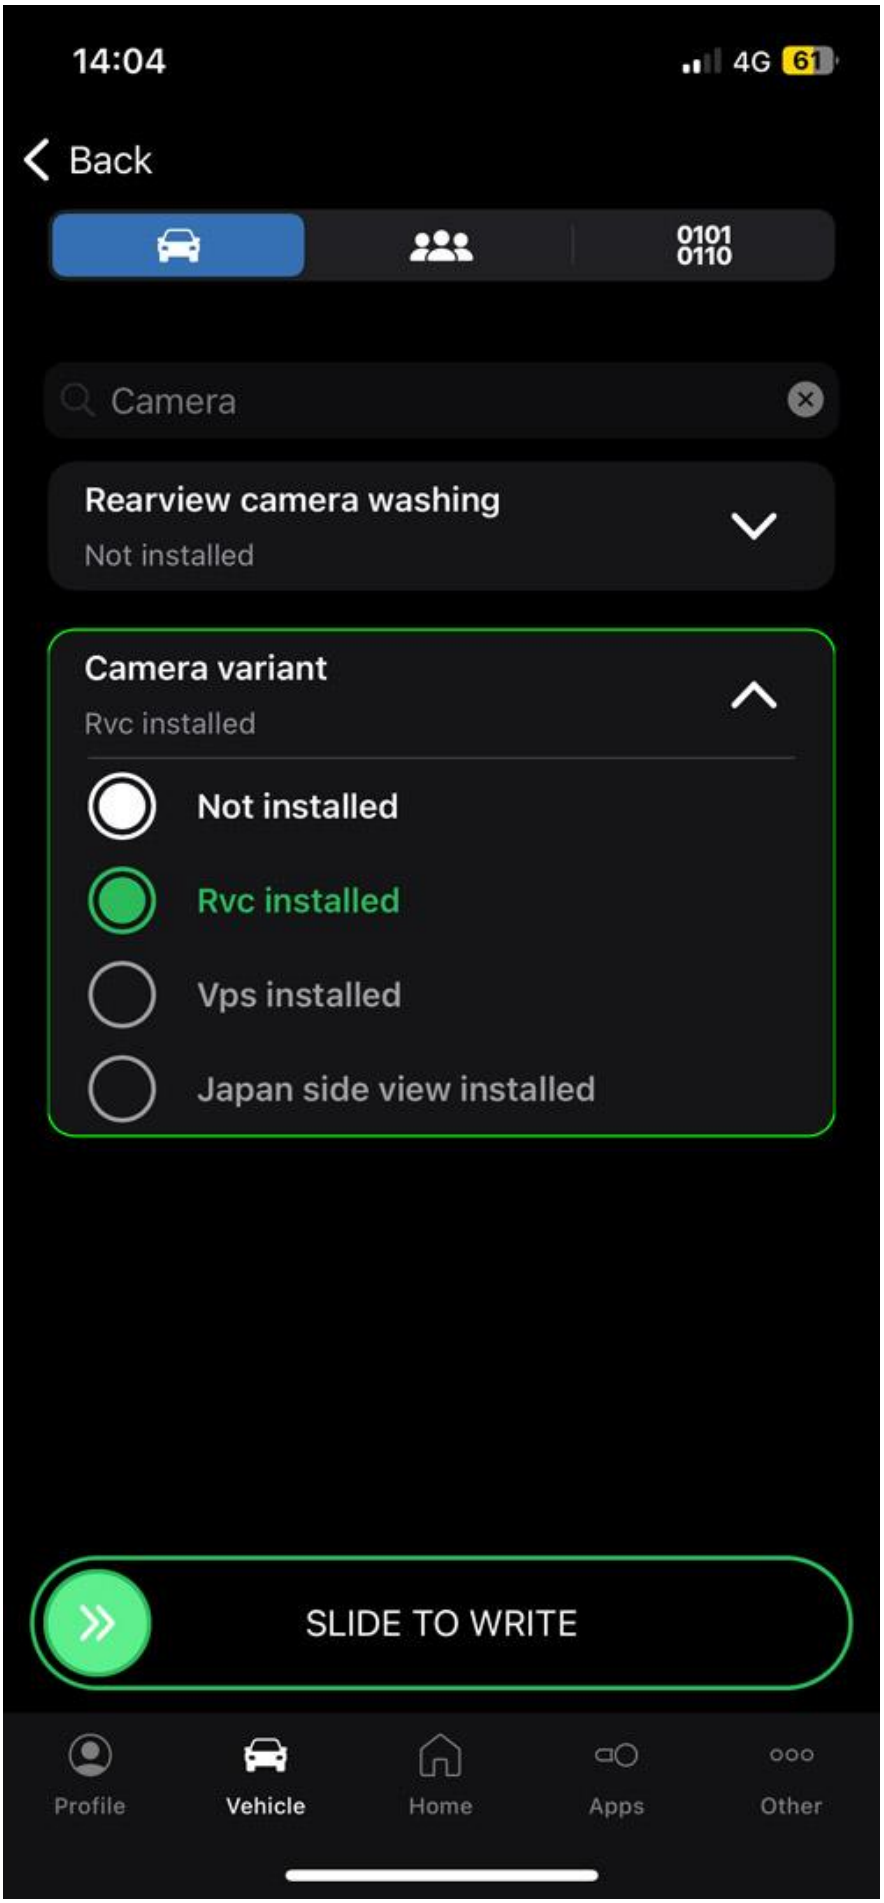


Confidential C


Module 5F Multimedia




Confidential C

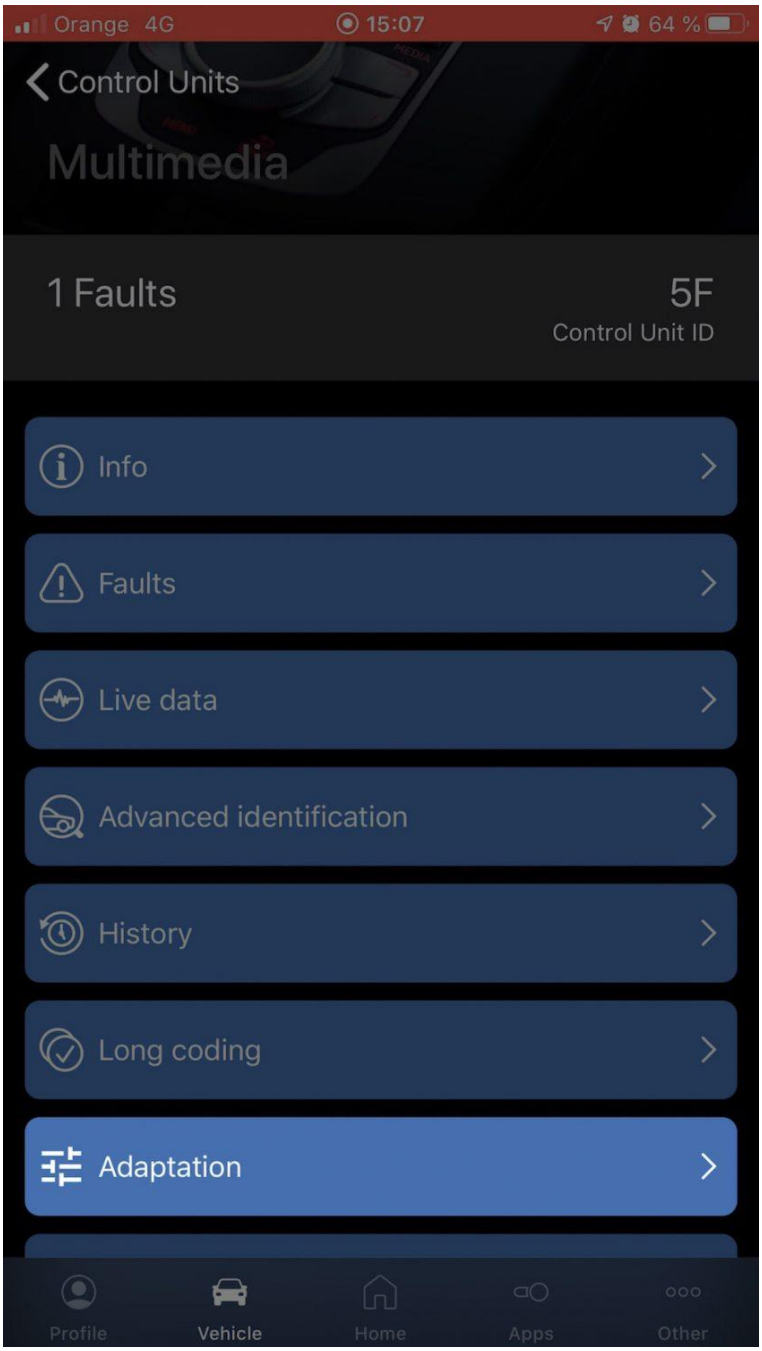


Confidential C

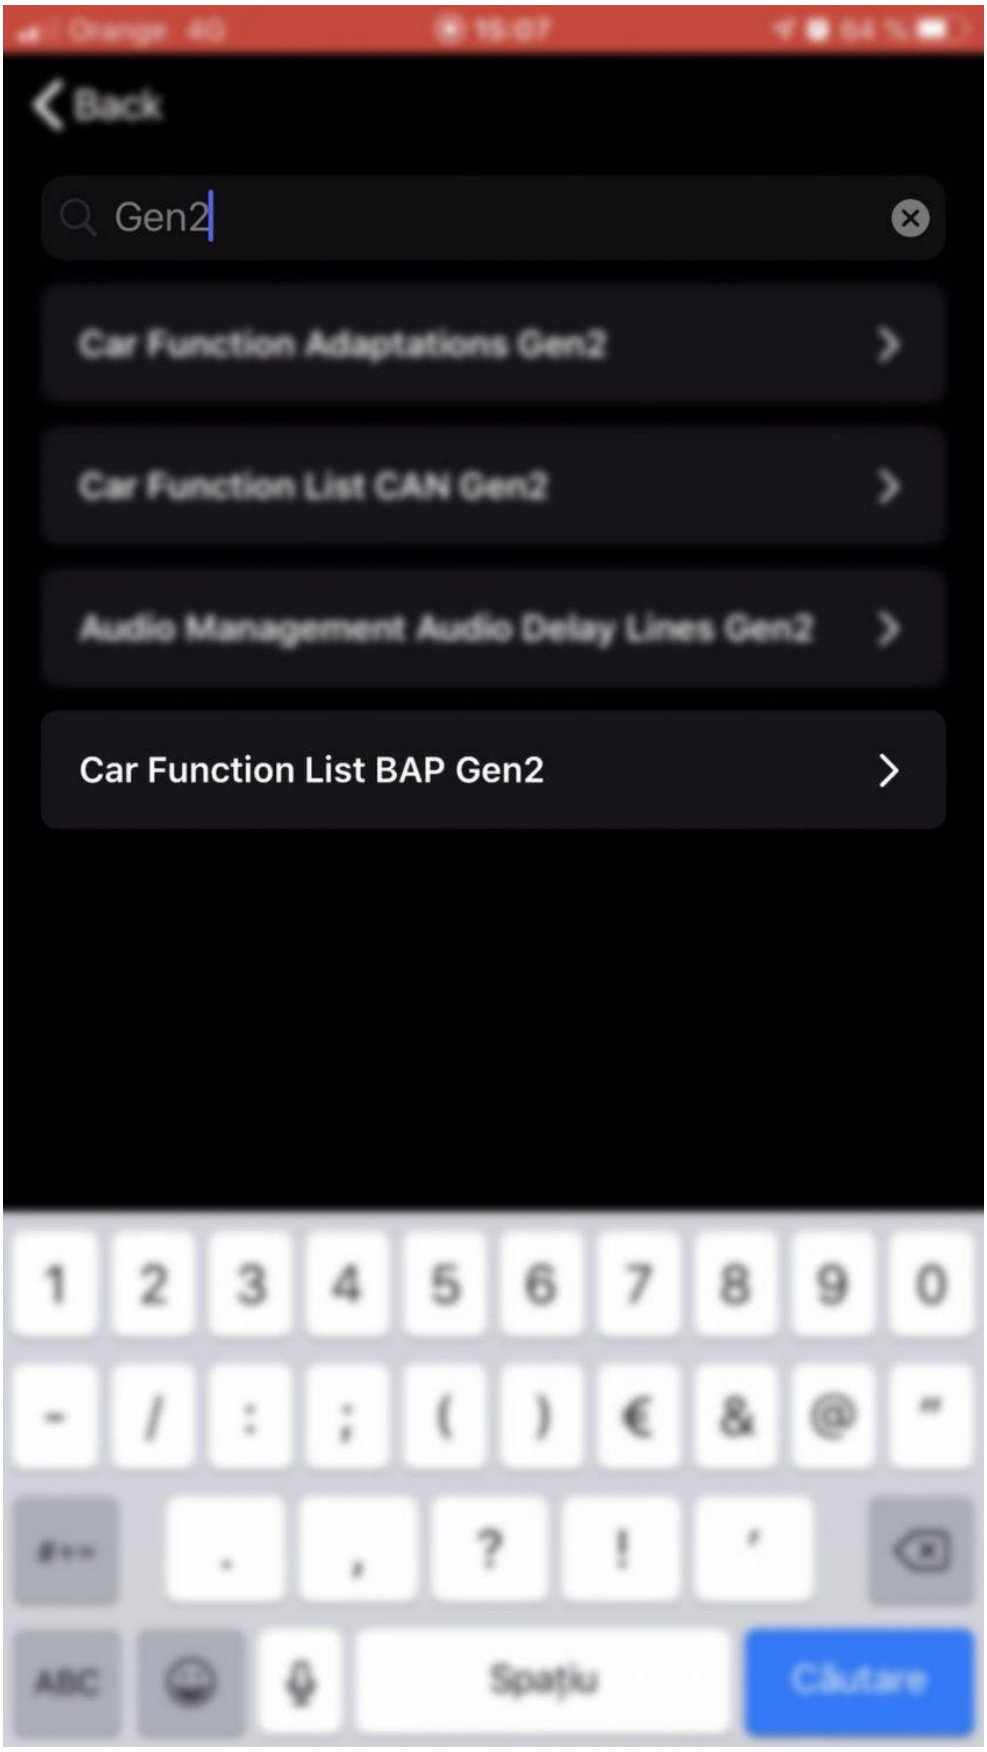

Confidential C

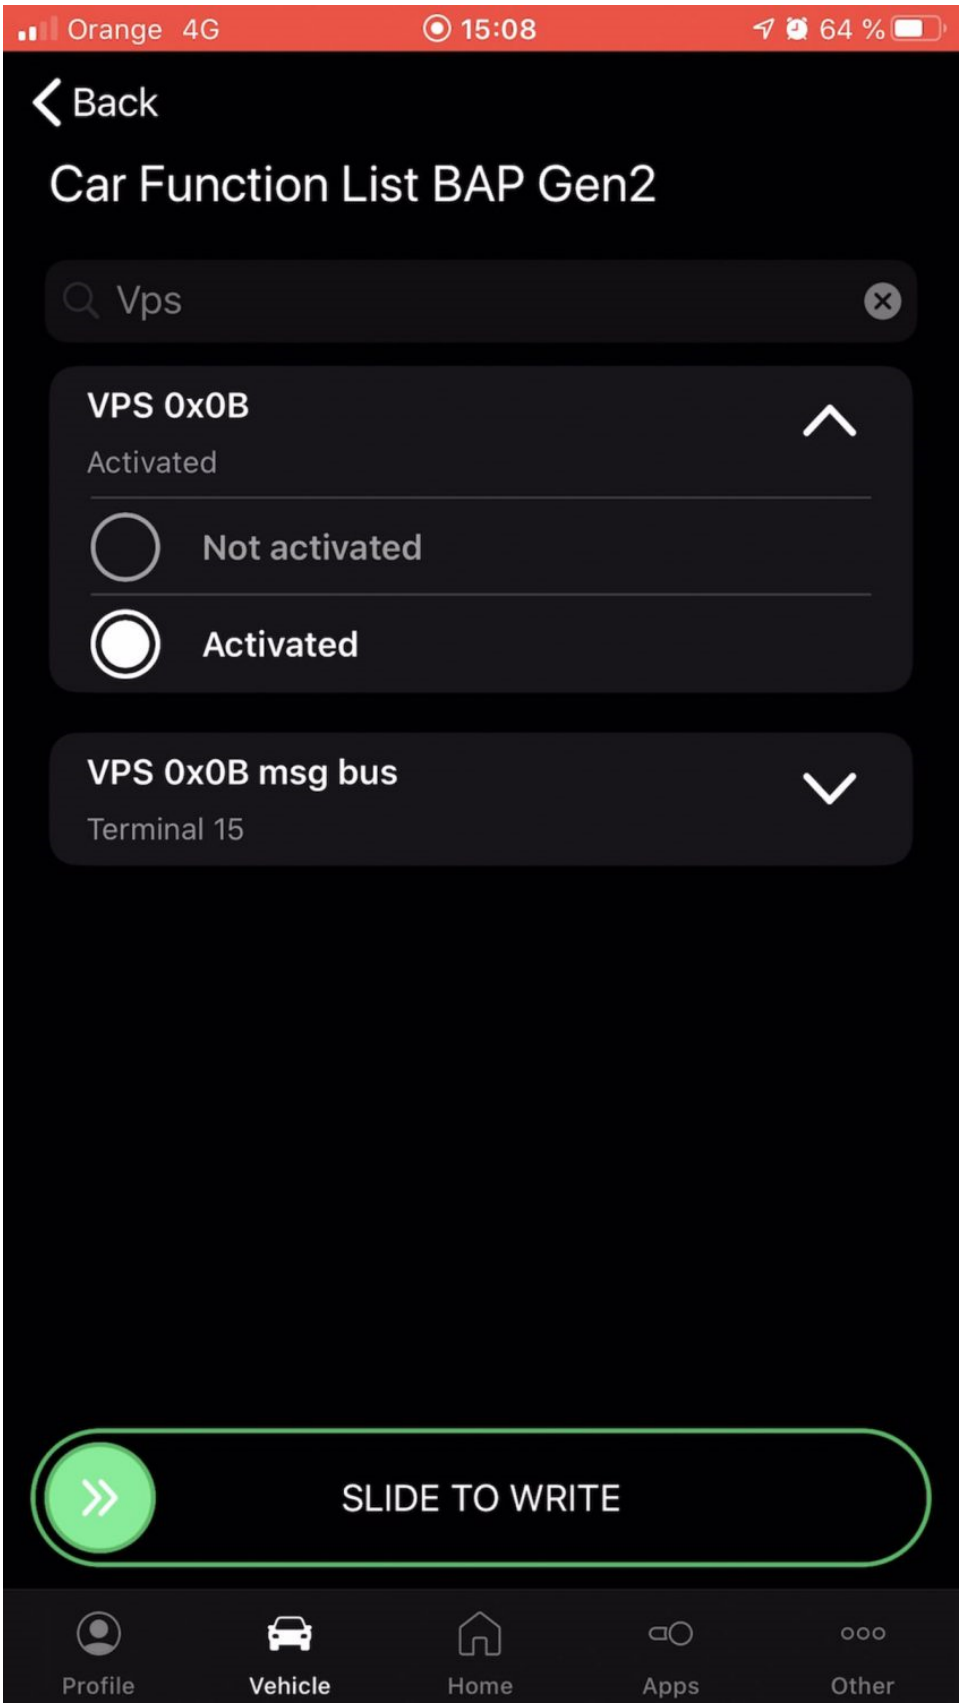

Confidential C

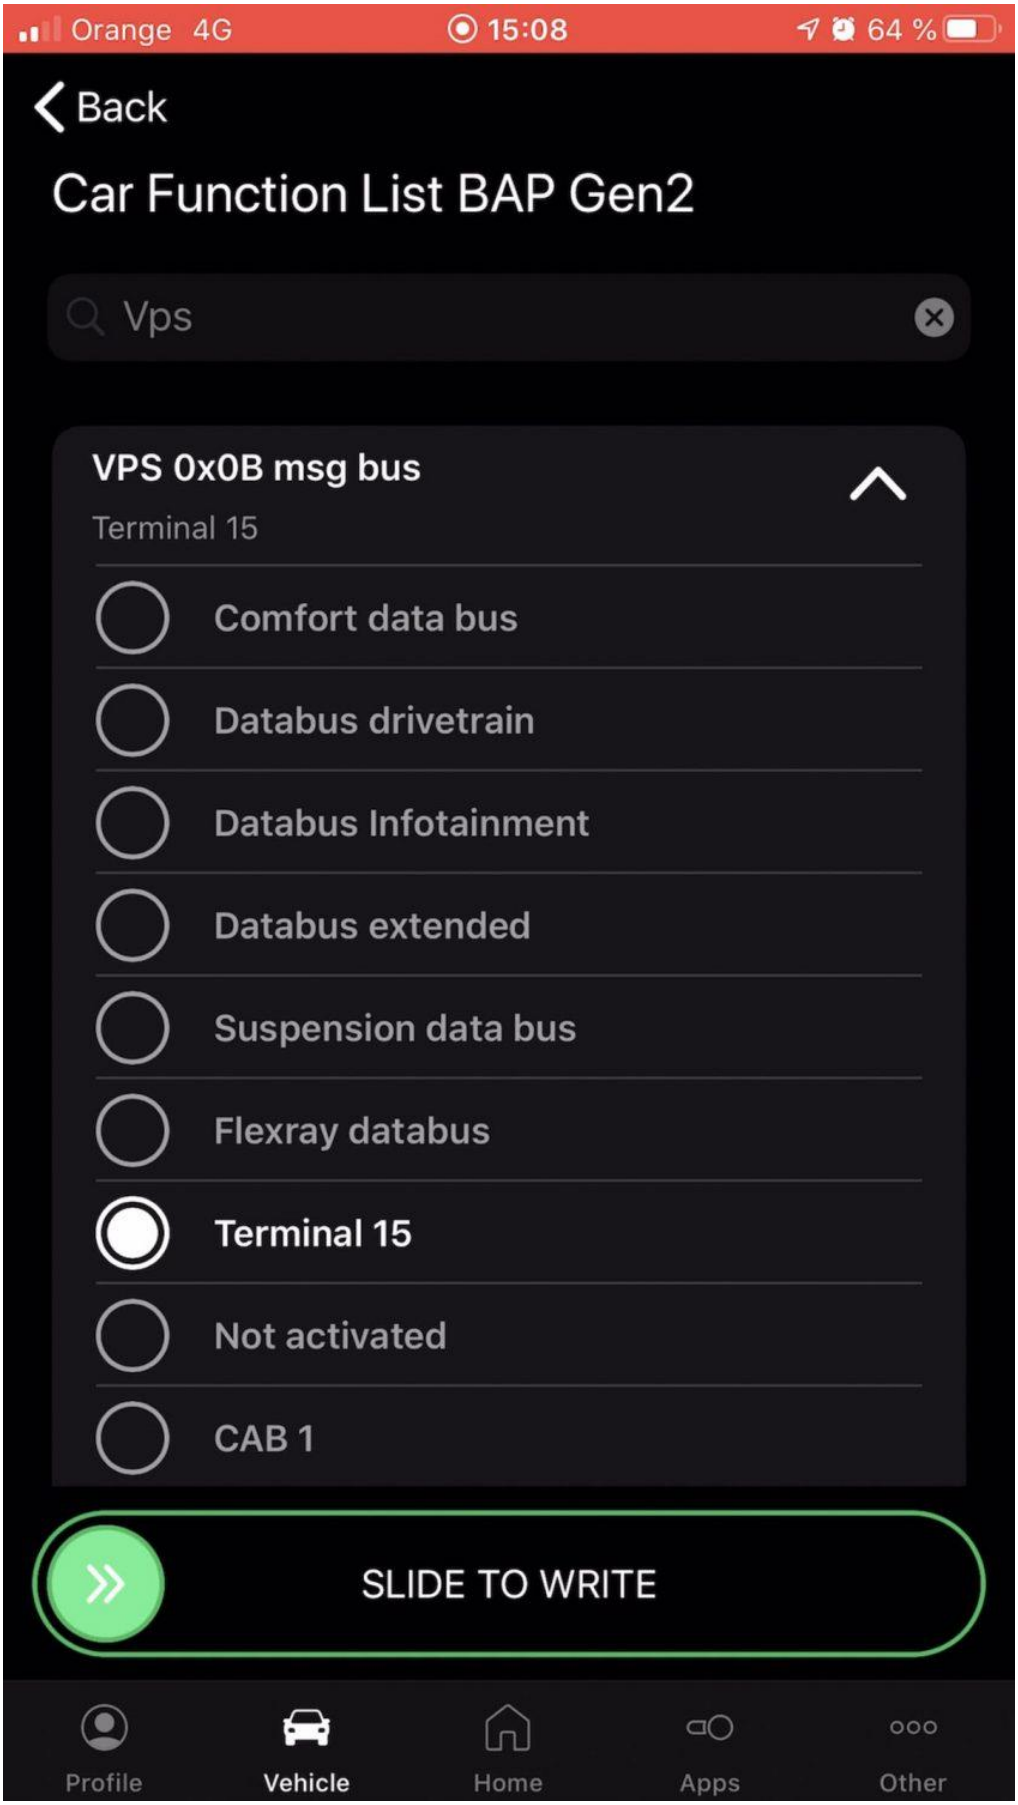


Confidential C


- Select **5F Multimedia**
- Select **Adaptation**
- Search for „**Gen2**” and select **Car function List BAP Gen2**
- Search for „**VPS**„ **activate VPS 0x0B** and on **VPS 0x0B msg bus** select **Terminal 15**
- **Slide to write**

Update 16.06.2024: For the B9.5 facelift variant with MIB3, select Adaptation, then search for **„bap”** in the search bar and select **„Vehicle function list BAP”**. After opening the list, search again in the search bar **„vps”** and activate **VPS 0x0B**, and at **VPS 0x0B msg bus** select **Terminal 15**. **Slide to write** and that’s it.


Confidential C

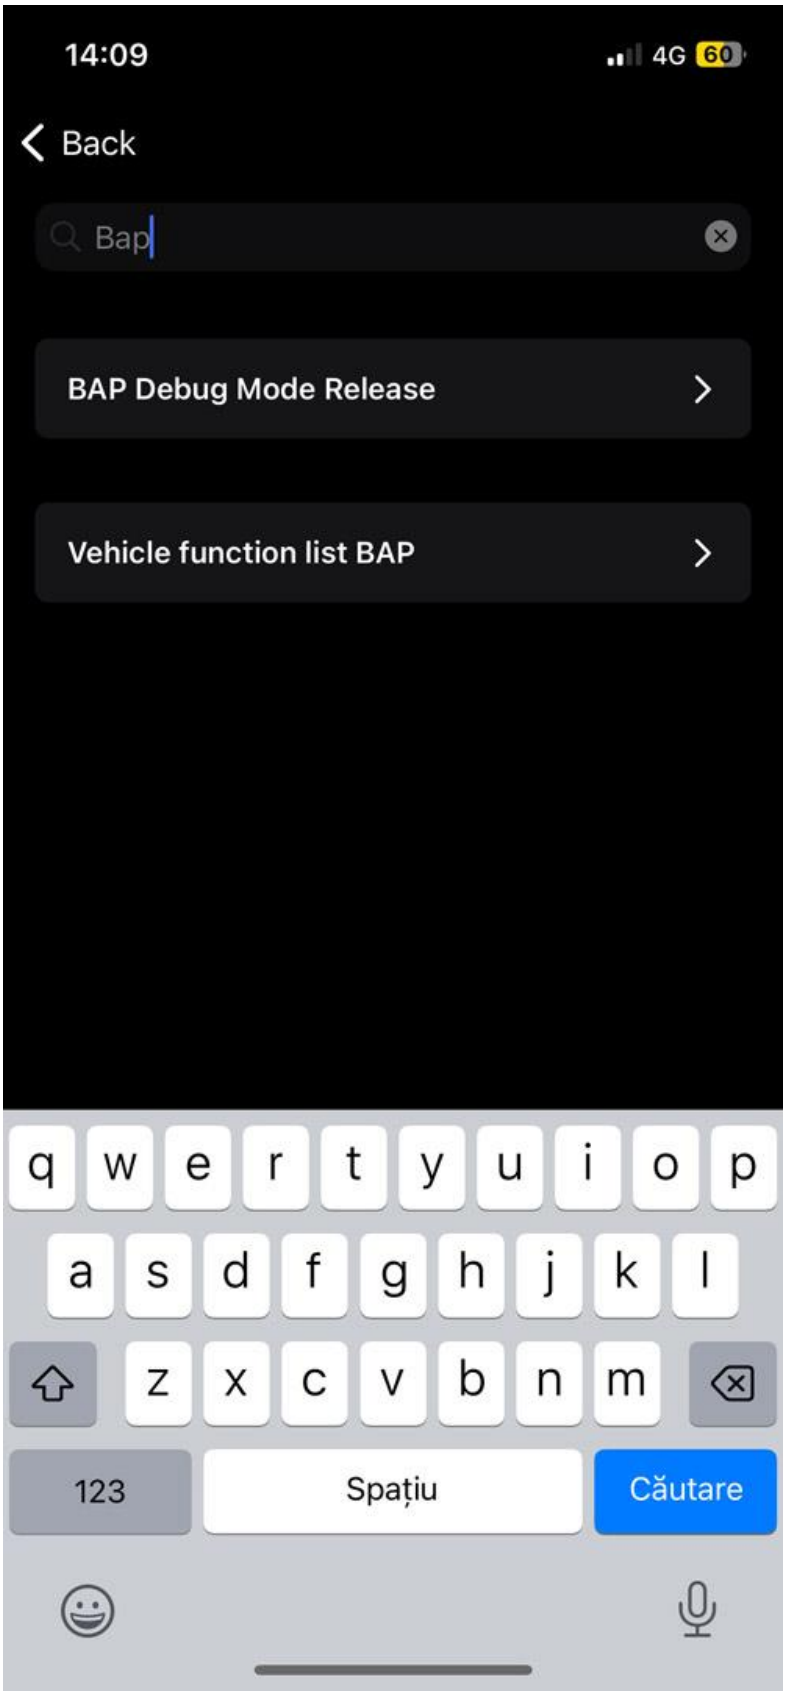

Confidential C

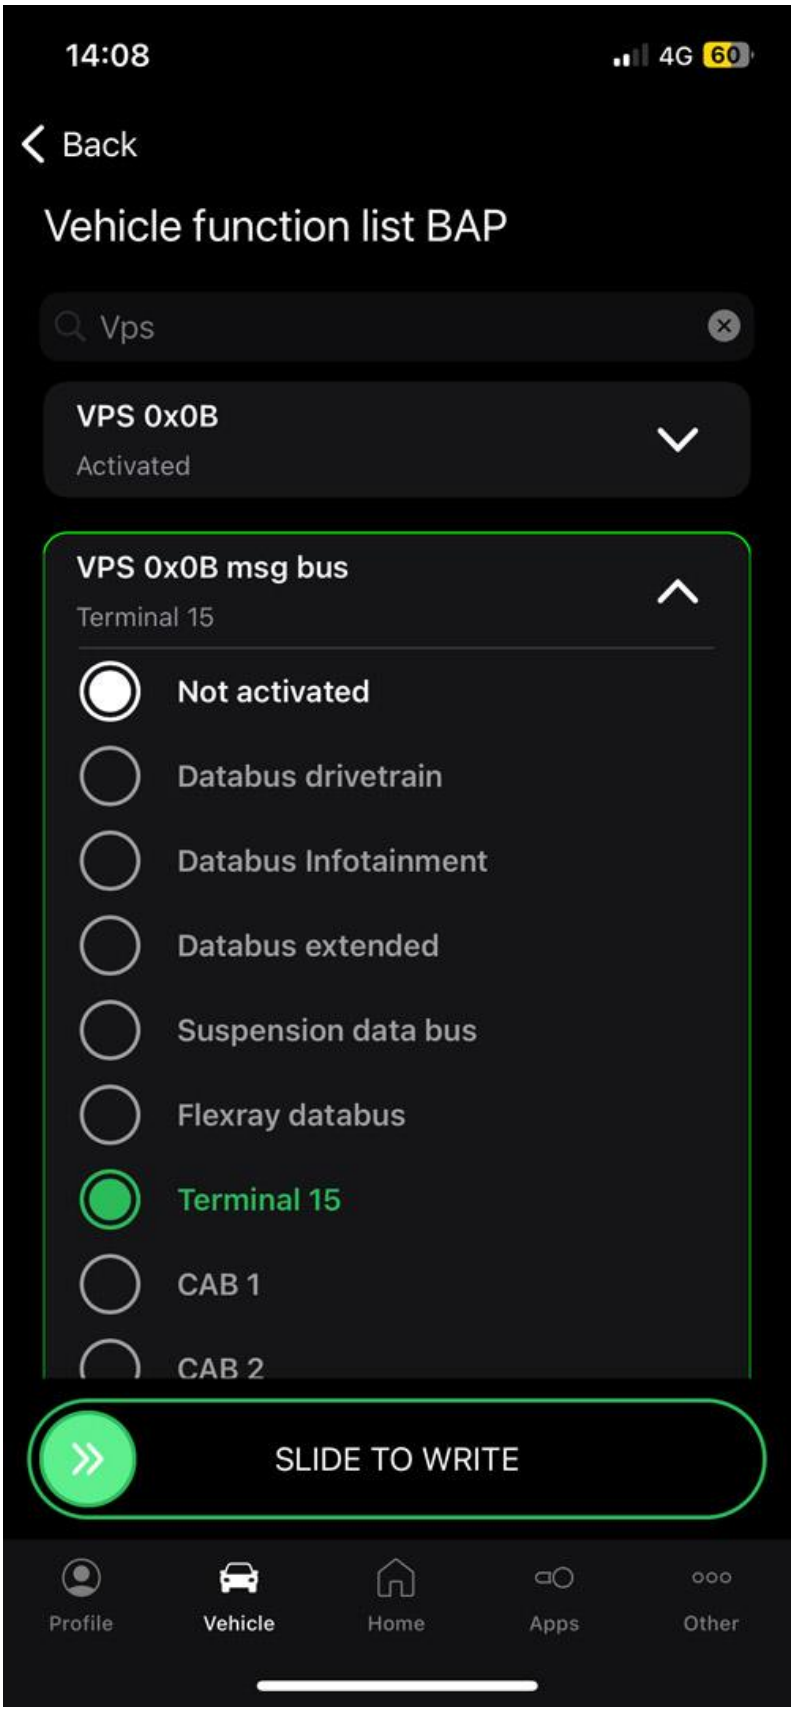

Confidential C

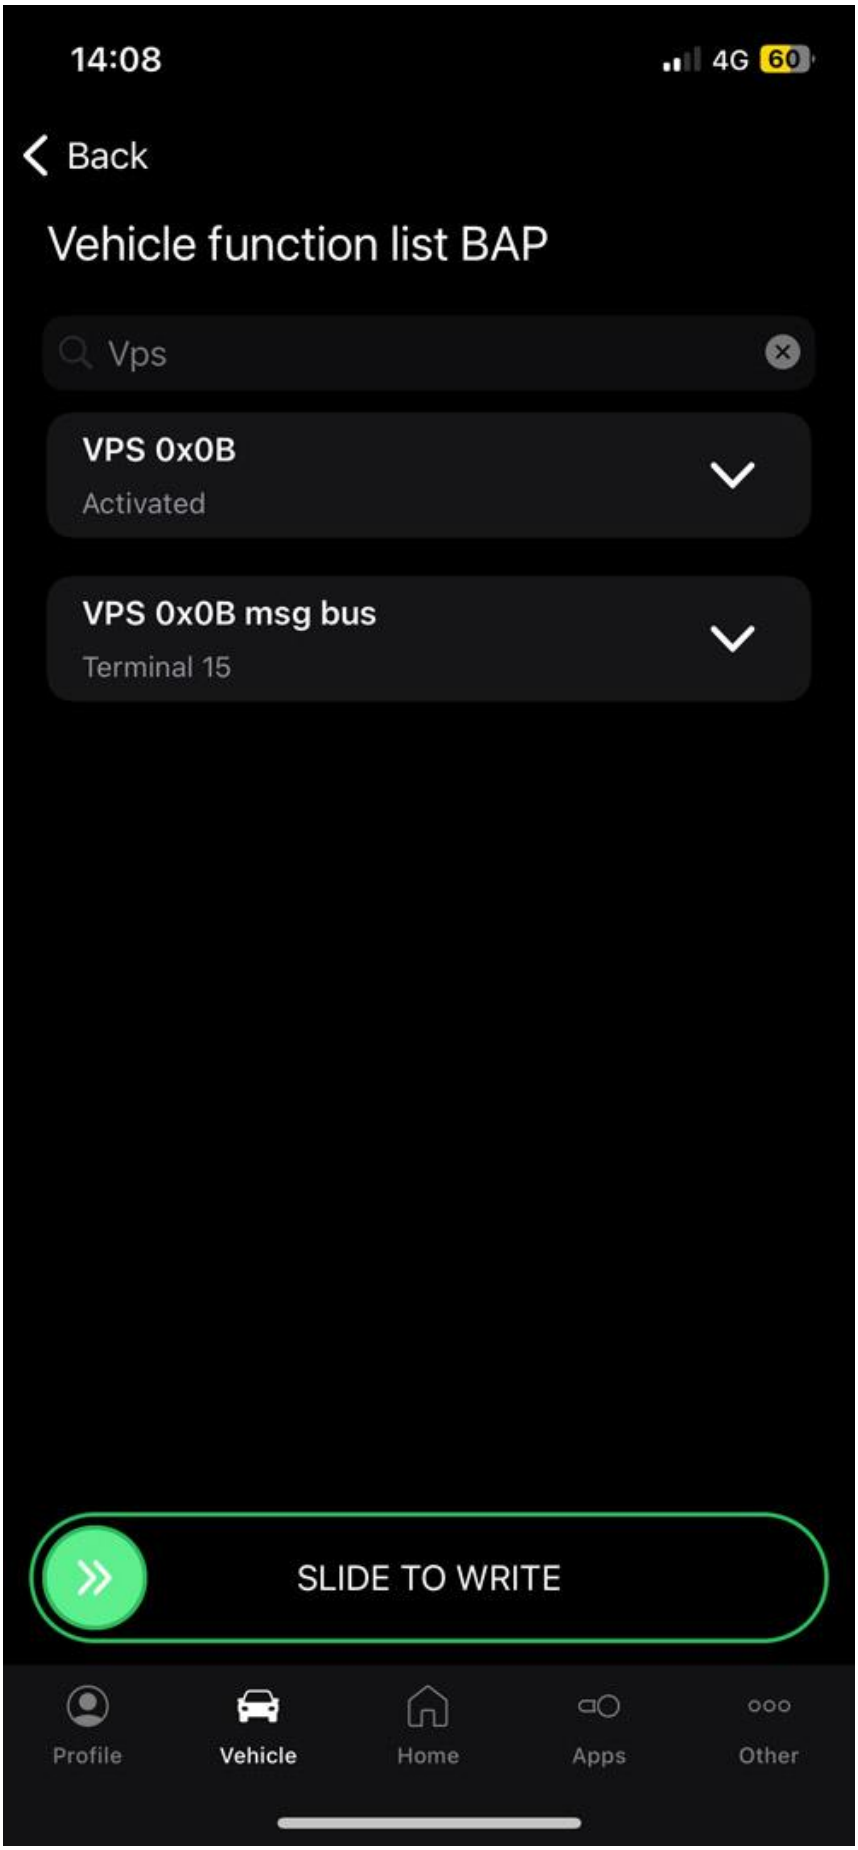

Confidential C

Module 6C Rear view camera

My camera came parameterized and pre-coded for A4 B9 and I didn't need to make any changes here, but I'll leave some instructions, maybe you'll need them. Code according to your car:

Byte 04 – Bit 0 blocked to 1 = AHK
Byte 04 – Bit 1 to 1 = Parking aid front + rear installed
Byte 04 – Bit 1 to 0 = Rear parking aid installed
Byte 04 – Bit 2 to 1 = Parking Assist installed
Byte 07 – Bit 0 to 1 = Guides across
Byte 07 – Bit 1 to 1 = Guides parallel
Byte 07 – Bit 2 on 1 = Guides Trailer
Byte 07 – Bit 3 on 1 = Guides cross
Byte 07 – Bit 4 on 1 = Guides park steering assist installed

Reset MMI

After coding, you need to **reset MMI**. Push NAV/MAP, RADIO and the central button at the same time for few seconds and release.



Confidential C

If you did everything right (fingers crossed!), the camera should start when you select reverse or when you press the parking sensor button in the center console. The result:



To reset MIB3 on A4 B9.5 facelift press and hold the volume button on the center console until the MMI unit turns on again.

Coding with VCDS

The coding with VCDS is similar, I will write the steps briefly below:

Module 19 Gateway


- Select **Installation List**
- Check **6C Rear View Camera**
- **Save**

Module 09 Central Electrics

- Select **Coding**
- Go to **Byte 35** and check **Bit 4**
- Exit and **Do it!**

Confidential C

Update 17.05.2021: For those who have an SOS button, the coding is different. On module **09 Central Electrics** Byte 35 is missing so go to **Byte 38**, at **Bit 2-3** select **04 camera variant_rvc, installed**. See the image below.

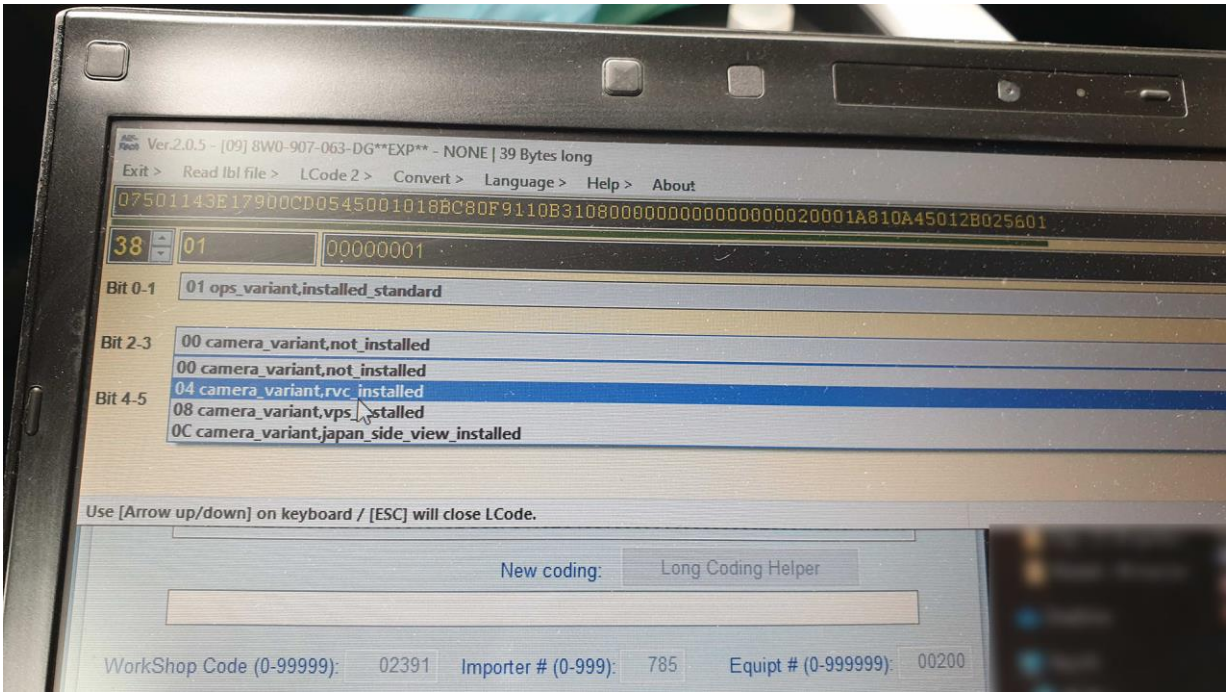

Module 5F Multimedia

- Select **Adaptation**
- Search for **VPS**
- Car_Funktion_List_BAP_Gen2_VPS set the new value **activated** and press **Do it!**
- Car_Funktion_List_BAP_Gen2_VPS_msg_bus set the new value **Terminal 15** and press **Do it!**

Also, if necessary, make the changes mentioned above on the **6C Rear View Camera** module and then **reset the MMI**.

Tips and tricks

- If you connected everything and it does not work, check if you can select the new module, 6C Rear View Camera. If you have a communication error , it means that you did not connect the CAN wires correctly or you have no power on the camera. Check that you have power in the camera socket and make sure you connected the wires to the CAN properly.
- After you're done, make a full scan and clear all errors. You will have a ton of errors on almost all modules. The only error which will still remain

Confidential C

is the one with „additional equipment installed" on Gateway module. It does not affect the car in any way.
- Leave enough cable on the tailgate hinge. I was about to break them when I closed the tailgate, luckily I hadn't fixed them permanently and had a few cm to pull the cable.

I hope I've covered just about everything you need to know if you want to do this retrofit. If you have any questions don't hesitate to write them in the comments section below.

I made also a video with instructions and even if is in Romanian I think it'll help you. I'll make sure to add some subtitles soon.

A few months ago I made another retrofit on my car, I installed the Auto Hold button. You can check it out here if you want to.

If you want to support my blog, all donations are more than welcomed 😊 Don't forget to subscribe on Youtube and Like my Facebook page.

Confidential C