

Changing background Colors in Modelsim

Do not print waveforms with a solid black background as this wastes toner. Instead follow these steps:


1. In the main Modelsim window (not the wave window) choose Tools > edit preferences

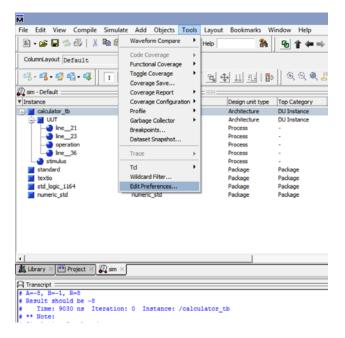


2. In the popup window choose "Wave Windows"

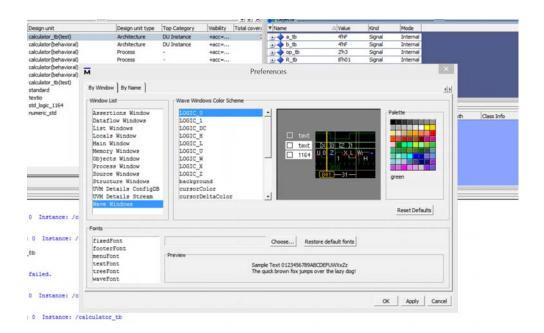

3. Scroll to the bottom and choose waveBackground and then click on the white box

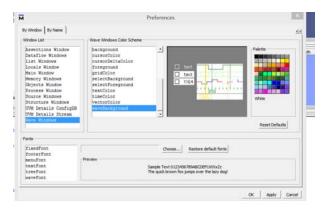

4. Choose vectorColor and then click on black box

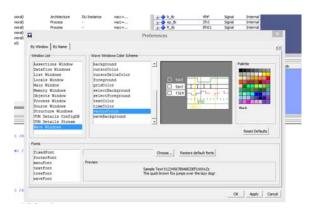

- 5. Choose textColor and then click on black box
- 6. Choose foreground and then click on black box
- 7. Choose background and then click on white box
- 8. Finally change LOGIC_0 and LOGIC_1 to black
- 9. Of course you can choose different colors if it makes it easier for you.
- 10. Click okay and examine your wave window