

About this document

Scope and purpose

This application note describes the features of low-power modes in TRAVEO™ T2G family MCUs and explains how to enter low-power modes and return to active mode.

Intended audience

This document is intended for anyone who uses the Infineon TRAVEO™ T2G MCUs for using low-power mode.

Associated part family

TRAVEO™ T2G family CYT2/CYT3/CYT4/CYT6 series.



Table of contents

Table of contents

	About this document	1
	Table of contents	2
1	Introduction	3
2	Power modes of TRAVEO™ T2G family	4
3	Power modes transition	6
3.1	Entering power modes	6
3.1.1	RESET/OFF state	7
3.1.2	Entering low-power mode	7
3.1.3	Wakeup from low-power modes	11
3.2	WDT setting during low-power modes	13
3.2.1	Features	13
3.2.2	Example of WDT wakeup operation	14
3.2.2.1	Configuration and example code	16
3.3	Cyclic wakeup operation	25
3.3.1	Usage example of cyclic wakeup	25
3.3.2	Cyclic wakeup operation	26
3.3.3	Flowchart of cyclic wakeup operation	28
3.3.3.1	Configuration and example code	28
3.3.4	Usage of smart I/O in cyclic wakeup	38
3.3.4.1	Advantage of smart I/O implementation in cyclic wakeup	39
3.3.4.2	Smart I/O configuration in cyclic wakeup	40
3.3.4.3	Sensor activation circuitry in cyclic wakeup operation	44
3.3.4.4	Configuration and example code	46
3.4	CAN wakeup operation	56
3.4.1	Configuration and example code	57
	Glossary	62
	References	64
	Other references	65
	Revision history	66
	Disclaimer	67



1 Introduction

1 Introduction

This application note describes low-power modes in TRAVEO[™] T2G family MCU. The series includes Arm[®] Cortex[®] CPUs, CAN FD, memory, and analog and digital peripheral functions in a single chip.

The CYT2 series has one Arm® Cortex®-M4F-based CPU (CM4) and Cortex®-M0+-based CPU (CM0+). The CYT4 series has two Arm® Cortex®-M7-based CPUs (CM7) and CM0+, and the CYT3 series has one CM7 and CM0+. The CYT6 series has four Arm® Cortex®-M7-based CPUs (CM7) and CM0+.

TRAVEO™ T2G family MCUs have several different power modes. These modes are intended to minimize the average power consumption in an application.

This application note explains the features of power modes and how to set up the power mode transition.

To understand the described functionality and terminology used in this application note, see the "Device power modes" chapter of the architecture reference manual.



2 Power modes of TRAVEO™ T2G family

2 Power modes of TRAVEO™ T2G family

TRAVEO™ T2G family MCUs have the following power modes:

- Active mode: All peripherals are available.
- **Sleep mode:** All peripherals except the CPU are available.
- **DeepSleep mode:** Only low-frequency peripherals are available.
- **Hibernate mode:** Device and I/O states are frozen.

Figure 1 shows the relationship between power modes and the power supply current.

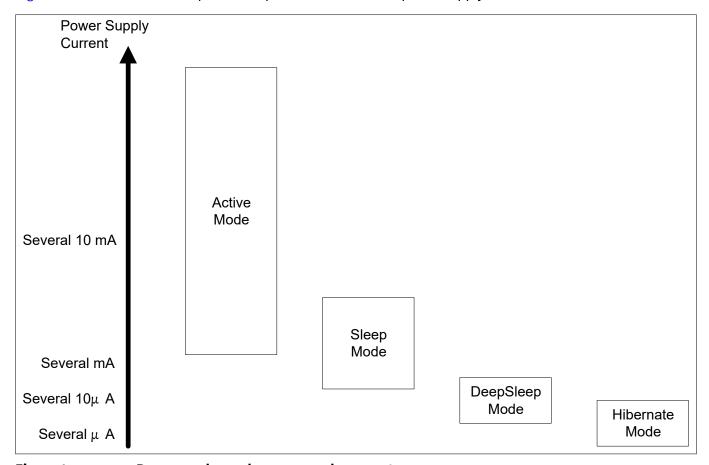


Figure 1 Power modes and power supply current

Note:

Figure 1 is only an indication of the degree of power supply currents for each mode. Actual current values depend on the clock configuration and peripheral setting in each mode. For more details on power supply current characteristics, see the datasheet.

Power consumption is reduced in the order of Active, Sleep, DeepSleep, and Hibernate modes. Each power mode optimizes power consumption for user applications.

Table 1 summarizes the states of each power mode and the entry and wakeup conditions. For more details on power modes, see the architecture reference manual.



2 Power modes of TRAVEO™ T2G family

Table 1 TRAVEO™ T2G power modes

Power mode	Description	Entry condition	Wakeup source	Wakeup action
Active	Primary mode of operation; all peripherals are available (programmable).	Wake up from Sleep/ DeepSleep modes, Hibernate reset, or any other reset.	Not applicable	Not applicable
Sleep	CPU is in Sleep mode; all other peripherals are available.			Interrupt
DeepSleep	All high-frequency clocks and peripherals are turned off. Low-frequency clock (32 kHz) and low-power analog and digital peripherals are available for operation and as wakeup sources. SRAM can be retained (configurable).	Register write from Active modes or debugger session ends.	GPIO interrupt, event generators, SCB, watchdog timer, and RTC alarms ¹⁾ and debugger	Interrupt or debug
Hibernate	GPIO states are frozen. Almost all peripherals and clocks in the device are turned off. Device resets on wakeup.	Register write from Active mode.	WAKEUP pin and RTC alarms	Hibernate reset

¹⁾ RTC (along with WCO) is supplied with VDDD and is available irrespective of the device power mode. RTC alarms can wake up the device from any power mode.

TRAVEO™ T2G family MCUs have the following features:

- Software can use power modes to optimize power consumption in an application
- Low-power DeepSleep mode with support for multiple wakeup sources and configurable amount of SRAM retention
- Ultra-low-power Hibernate mode with wakeup from I/O and RTC alarms

The power consumption in different power modes is controlled by using the following methods:

- Enabling and disabling clocks to peripherals
- Powering ON/OFF clock sources
- Powering ON/OFF peripherals and parts inside the MCUs



3 Power modes transition

3 Power modes transition

This section describes how to use low-power mode procedure using the sample driver library (SDL). The code snippets in this application note are part of SDL. See Other references for the SDL.

SDL has a configuration part and a driver part. The configuration part mainly configures the parameter values for the desired operation. The driver part configures each register based on the parameter values in the configuration part. You can configure the configuration part according to your system. In this example, CYT2B7 series is used.

3.1 Entering power modes

Figure 2 shows various states the device can be in along with possible power mode transition paths. The transitions are described in detail later in this application note.

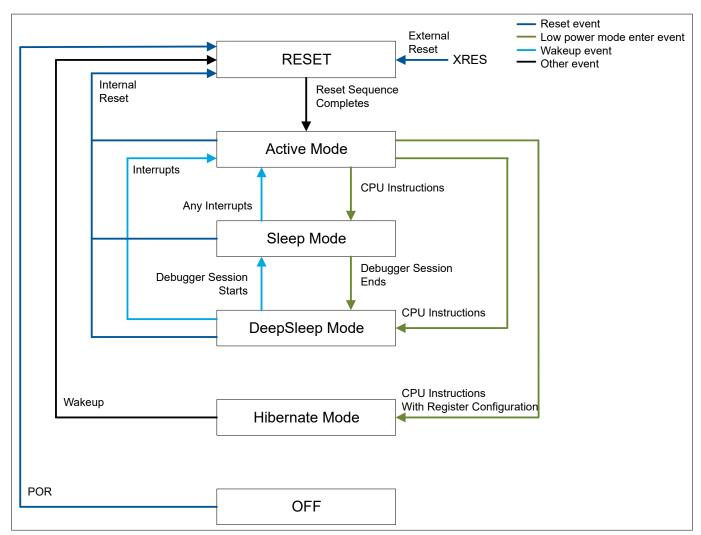


Figure 2 Power mode transitions



3 Power modes transition

3.1.1 RESET/OFF state

- OFF state:
 - Represents the state with no power applied
 - Go to RESET, when powered up above power-on reset level (POR event)
- RESET state:
 - Detected reset event: POR, external reset (XRES), or internal reset
 - Go to Active mode after reset sequence completion
 - IMO is started
 - Device will enter RESET state upon assertion of XRES in any of the power modes

3.1.2 Entering low-power mode

Table 2 shows how to enter low-power mode, and the actions in low-power modes.

Table 2 Low-power mode transitions

Active Firmware action 1. Clear the SLEEPDEEP bit [2] of the SCR register for all CPUs (For CYT2, CPUs are CM4 and CM0+. For CYT3/CYT4/CYT6, CPUs are CM7 and CM0+). 2. Optionally, set the SLEEPONEXIT bit [1] of the SCR register, if the CPU runs only on interrupts. When this bit is set, the CPU will not return to application code after the WFI/WFE instruction is executed. The CPU will wake up on any enabled interrupt or event and will enter	nitial state
Sleep/DeepSleep mode as soon as it exits the interrupt or services the event. 3. Optionally, set the SEVONPEND bit [4] of the SCR register if the application needs to wake up the CPU from any pending interrupt. If this bit is set, any interrupt that enters a pending state will wake up	



3 Power modes transition

(continued) Low-power mode transitions Table 2

Initial state	Final state	Trigge	r	Har	dware actions
Active	Pinal state DeepSleep	Firmw Perfor (LPM_	rare action m these steps to enter DeepSleep mode READY bit [5] of the PWR_CTL register I read '1' before performing these steps): Set the SLEEPDEEP bit [2] of the SCR register for all CPUs (For CYT2, CPUs are CM4 and CM0+. For CYT3/CYT4/CYT6, CPUs are CM7 and CM0+). Optionally, set the SLEEPONEXIT bit [1] of the SCR register, if the CPU runs only on interrupts. When this bit is set, the CPU will not return to application code after the WFI/WFE instruction is executed. The CPU will wake up on any enabled interrupt or event and will enter Sleep/DeepSleep mode as soon as it exits the interrupt or services the event. Optionally, set the SEVONPEND bit [4] of the SCR register if the application needs to wake up the CPU from any pending interrupt. If this bit is set, any interrupt that enters a pending state will wake up the CPU. Execute WFI/WFE instruction on all of CPUs (For CYT2, CPUs are CM4 and CM0+. For CYT3/CYT4/CYT6, CPUs are CM7 and CM0+). Executing the above sequence before the low-power mode is ready (LPM_READY==1) will transition first to Sleep mode. The device state will automatically move to DeepSleep state once LPM_READY bit is set. Make sure that any write transfer made before executing the WFI instruction is followed by the read access to the same memory location. This ensures that the write operation is successful.	1. 2. 3. 4.	CPU enters low-power mode. High-frequency clocks are shut down. I/O cells will be frozen automatically. Retention is enabled and non-retention logic is reset. Active regulator is disabled and DeepSleep regulator takes over.



3 Power modes transition

Table 2 (continued) Low-power mode transitions

Initial state	Final state	Trigge	er	Hard	dware actions
Initial state Active	-	Trigg	Set TOKEN bits [7:0] of the PWR_HIBERNATE register (optional) and PWR_HIB_DATA register to some application-specific branching data that can be used on a wakeup event from Hibernate mode. Set UNLOCK bits [8:15] of the PWR_HIBERNATE register to 0x3A for FREEZE and HIBERNATE bits of the PWR_HIBERNATE register to operate. Configure wakeup pins polarity	Hard 1. 2. 3.	CPU enters low-power mode. Both high-frequency and low-frequency clocks are shut down. Retention is enabled and non-retention logic is reset. Both Active and DeepSleep regulators are powered down. The peripherals that are
		4.	(POLARITY_HIBPIN bits [23:20]), wakeup pins mask (MASK_HIBPIN bits [27:24]) and wakeup alarm mask (MASK_HIBALARM bit [18]) in the PWR_HIBERNATE register based on the application requirement. Set FREEZE bit [17] of the PWR_HIBERNATE register to freeze the I/O pins. Set HIBERNATE bit [31] of the	5.	active in the Hibernate domain operate directly out of VDDD. I/O cells are frozen.
		6.	PWR_HIBERNATE register to enter Hibernate mode. Read the PWR_HIBERNATE register to make sure that the write has taken effect.		
		7. Note:	It is recommended to trigger Hibernate mode atomically. That means, when entering Hibernate mode, disable all the interrupts and do a write operation on the PWR_Hibernate register.		
		Note:	Make sure that any write transfer made before executing the WFI instruction is followed by the read access to the same memory location. This ensures that the write operation is successful.		



3 Power modes transition

Table 2 (continued) Low-power mode transitions

Initial state	Final state	Trigger	Hardware actions
Sleep	DeepSleep	When the debugger is not connected and DeepSleep mode is triggered, but LPM_READY==0, the device internally enters Sleep mode. The device will automatically transit to DeepSleep when LPM_READY==1. If the debugger is connected and DeepSleep mode is triggered by the firmware, the device will enter DeepSleep only when the following conditions are met: 1. LPM_READY==1 2. Debugger is disconnected	 High-frequency clocks are shut down. I/O cells will be frozen automatically. Retention is enabled and non-retention logic is reset. Active regulator is disabled and DeepSleep regulator takes over.

Figure 3 shows the software and hardware operation for the transition from Active mode to DeepSleep mode.

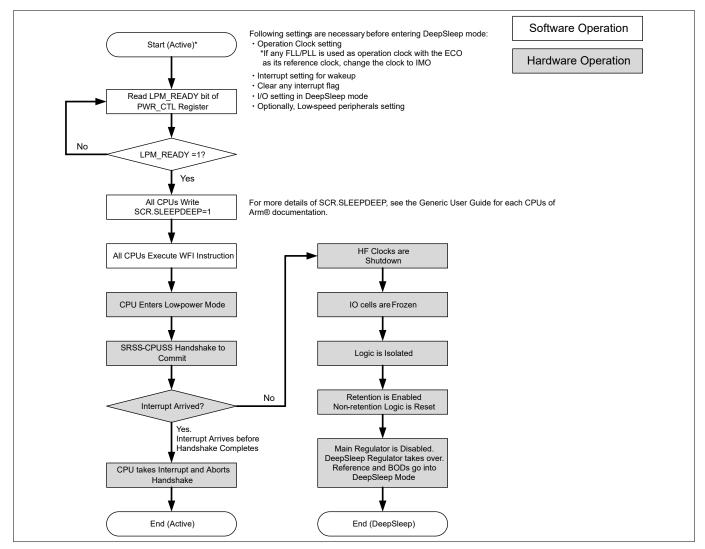


Figure 3 **Active mode to DeepSleep mode transition**

In Figure 3, the gray boxes indicate hardware operation. Therefore, processing with software is not Note: required.



3 Power modes transition

Figure 4 shows the software and hardware operation for the transition from Active mode to Hibernate mode.

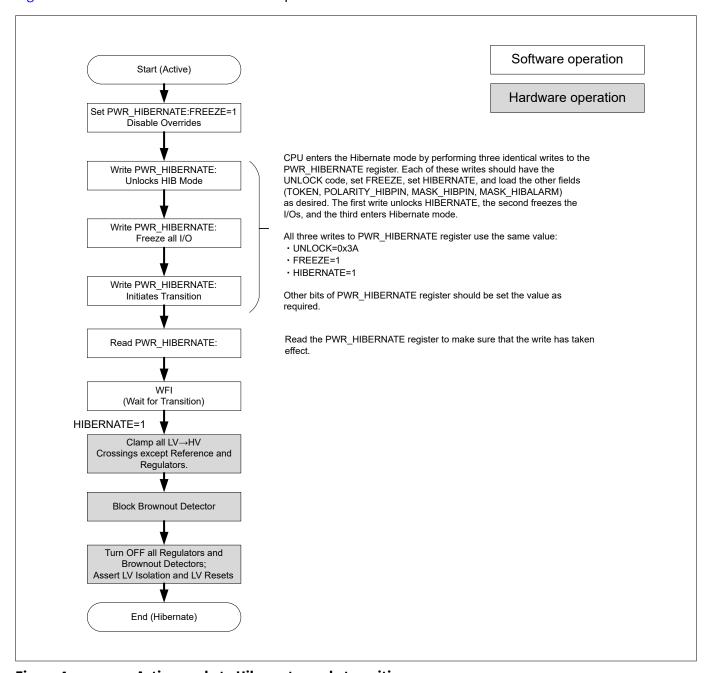


Figure 4 Active mode to Hibernate mode transition

Note: The gray boxes indicate hardware operation in Figure 4. Therefore, processing with software is not required.

3.1.3 Wakeup from low-power modes

Table 3 shows the hardware triggers for wakeup and the actions after wakeup.



3 Power modes transition

Table 3 Wakeup action

Initial state	Final state	Trigger source	Hardware action	
Sleep	Active	Any enabled interrupt in Sleep mode	CPU exits Sleep mode and executes the interrupt	
DeepSleep	Active	Any enabled interrupt in DeepSleep mode	Device returns to the configuration it had while entering DeepSleep mode. (IMO/clocks enabled, retention disabled, non-retained resets, freeze release; CPU exits low-power mode and takes interrupt)	
DeepSleep	Sleep	Debug wakeup	Retention disabled and non-retained reset Freeze release HF and LF are on CPU remains in Sleep state	
Hibernate	Active	Wakeup pins, RTC alarms	Hibernate wakeup is implemented as a transition to Active mode through reset. Low-voltage (internal Active and DeepSleep mode) regulators and references are ramped up All low-voltage logic (operating from internal regulators) is reset. IMO clock is started. Core starts execution	

Figure 5 shows the software and hardware operation for the transition from DeepSleep mode to Active mode.



3 Power modes transition

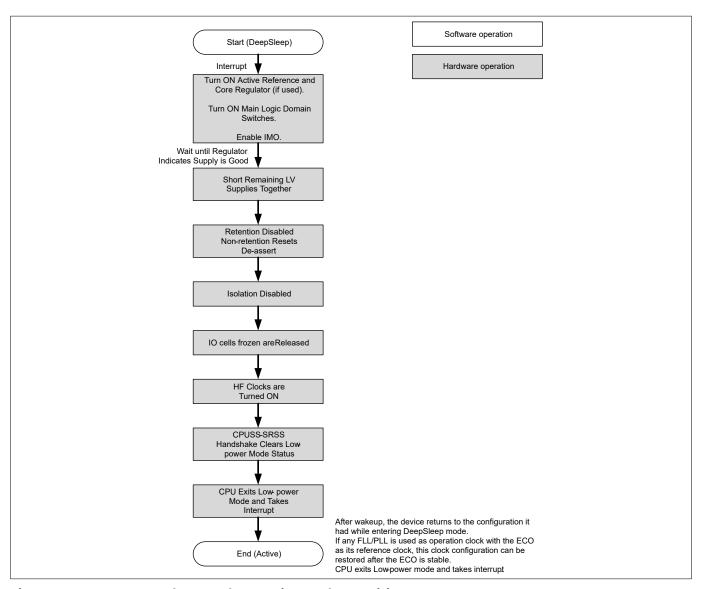


Figure 5 DeepSleep mode to Active mode transition

Minimum duration from DeepSleep command (WFI/WFE) execution to wakeup is 40 µs.

Note: The gray boxes indicate hardware operation in Figure 5. Therefore, processing with software is not required.

3.2 WDT setting during low-power modes

The watchdog timer (WDT) in TRAVEO™ T2G automatically resets the device in the event of an unexpected software execution path. In addition, the WDT can be used as an interrupt source or a wakeup source in lowpower modes. Software can select the resets or interrupts.

This section describes WDT setting and operation in low-power modes. For more details on the WDT, see the architecture reference manual.

3.2.1 **Features**

TRAVEO™ T2G supports two types of WDT: Basic WDT and multi-counter WDT (MCWDT). Table 4 shows the supported WDT settings during low-power modes.



3 Power modes transition

Table 4 List of PCLK (example of the TCPWM timer) settings parameters

Power	Basic WDT	DT MCWDT			Remarks
mode		Subcounter0	Subcounter1	Subcounter2	
Active	Reset ¹⁾ and interrupt ²⁾	Reset ¹⁾ , interrupt ²⁾	, and FAULT ³⁾	Interrupt ⁴⁾	In Active mode, the WDT can send the interrupt to the CPU.
Sleep	Reset ¹⁾ and interrupt ²⁾	Reset ¹⁾ , interrupt ²⁾	, and FAULT ³⁾	Interrupt ⁴⁾	In Sleep mode, the CPU subsystem is powered down. Therefore, the interrupt request from the WDT is directly sent to the wakeup interrupt controller (WIC), which will then wake up the CPU.
DeepSleep	Reset ¹⁾ and interrupt ²⁾	Reset ¹⁾ , interrupt ²⁾	, and FAULT ³⁾	Interrupt ⁴⁾	In DeepSleep mode, the CPU subsystem is powered down. Therefore, the interrupt request from the WDT is directly sent to the WIC, which will then wake up the CPU.
					Pauses/runs the counter is selectable during DeepSleep mode.
Hibernate	Reset ¹⁾ and interrupt ²⁾	Not supported			Can pause or run the counter; this option is selectable during Hibernate mode.
					 In Hibernate mode, any interrupt to wake up the device results in reset.

Reset occurs when the counter value reaches UPPER_LIMIT or when the counter is cleared before LOWER_LIMIT. 1)

Example of WDT wakeup operation 3.2.2

Figure 6 shows an example of the operation with Subcounter0/1 of MCWDT. In this example, Subcounter0 of MCWDT is used as a supervisor of an unexpected software execution path, and Subcounter1 of MCWDT is used

Interrupt occurs when the counter value reaches WARN_LIMIT. 2)

³⁾ The fault manager converts this to a high-priority interrupt (such as non-maskable interrupt, NMI) that gives the processor an opportunity to return to a safe state, such as halting memory writes and releasing peripherals.

Interrupt occurs when the BIT specified by MCWDT2_CTR2_CONFIG [20:16] toggles.



3 Power modes transition

as a periodic wakeup interrupt generator during low-power mode. For more details on the WDT, see the architecture reference manual.

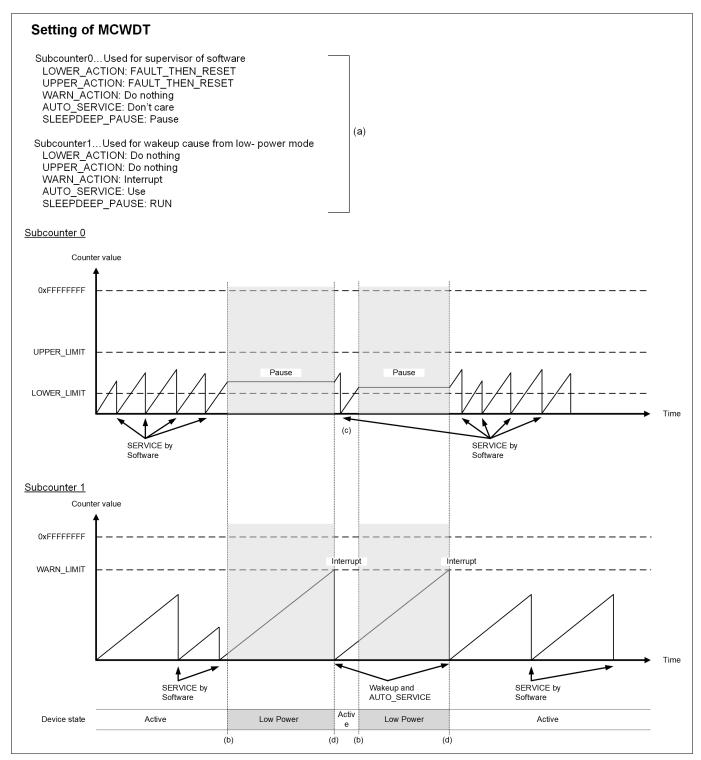


Figure 6 Example of WDT operation (wakeup cause is interrupt of WARN_LIMIT of Subcounter1)

Subcounter0 is paused during low-power mode. If MCU wakes up from low-power mode, Subcounter0 resumes counting upwards.

Subcounter1 continues counting upwards during low-power mode. If counter value reaches the setting value of "WARN_LIMIT", MCU wakes up from low-power mode. If AUTO_SERVICE setting is used, hardware resets the counter value.



3 Power modes transition

Configuration and example code 3.2.2.1

Table 5 lists the parameters and Table 6 lists the functions of the configuration part in SDL for WDT settings during low-power modes.

Table 5 List of WDT settings during low-power modes configuration parameters

Parameters	Description	Value	
.coreSelect	Select the CPU to be used for SleepDeepPause	CY_MCWDT_PAUSED_BY_NO_CORE	
.c0LowerLimit	Select the CPU to be used for SleepDeepPause	Oul	
.c0UpperLimit	Select the CPU to be used for SleepDeepPause	0xFFFFul	
.c0WarnLimit	Set the Subcounter0 warn limit (unsigned integer 32-bit)	MCWDT_TICKS_PER_SECOND	
.c0LowerAction	Set Subcounter0 lower action to "no action",		
.c0UpperAction	Set Subcounter0 upper action to "no action", "fault", or "fault then reset"	CY_MCWDT_ACTION_FAULT_THEN_RESE T	
.c0WarnAction	Set Subcounter0 warn action to "no action", or "interrupt"	CY_MCWDT_WARN_ACTION_NONE	
.c0AutoService	Configure to automatically clear MCWDT when Subcounter0 value reaches WARN_LIMIT	CY_MCWDT_DISABLE	
.c0SleepDeepPause	Enable to pause Subcounter0 when the corresponding CPU is in DeepSleep	CY_MCWDT_ENABLE	
.c0DebugRun	Set the debugger configuration. It needs		
.c1LowerLimit	Set Subcounter1 lower limit (unsigned integer 32-bit)	Oul	
.c1UpperLimit	Set Subcounter1 upper limit (unsigned integer 32-bit)	0xFFFFul	
.c1WarnLimit			
.c1LowerAction			
.c1UpperAction	Set Subcounter1 upper action to "no action", CY_MCWDT_ACTION_NONE "fault", or "fault then reset"		
.c1WarnAction	Set Subcounter1 warn action to "no action", or "interrupt"	CY_MCWDT_WARN_ACTION_INT	
.c1AutoService Configure to automatically clear MCWDT when Subcounter1 value reaches WARN_LIMIT		CY_MCWDT_ENABLE	



3 Power modes transition

Table 5 (continued) List of WDT settings during low-power modes configuration parameters

Parameters	Description	Value	
.c1SleepDeepPause Enable to pause Subcounter1 when the corresponding CPU is in DeepSleep		CY_MCWDT_DISABLE	
.c1DebugRun Set the debugger configuration (required when using debugger)		CY_MCWDT_ENABLE	
.c2ToggleBit	Select the bit to observe for a toggle	CY_MCWDT_CNT2_MONITORED_BIT15	
.c2Action	Set Subcounter2 action to "no action" or "interrupt"	CY_MCWDT_CNT2_ACTION_NONE	
.c2SleepDeepPause	Enable to pause Subcounter2 when the corresponding CPU is in DeepSleep	CY_MCWDT_ENABLE	
.c2DebugRun	Set the debugger configuration (required when using debugger)	CY_MCWDT_ENABLE	

Table 6 List of WDT settings during low-power modes configuration functions

Functions	Description	Note
Cy_MCWDT_DeInit()	De-initializes the MCWDT block, returns register values to their default state.	See Code Listing 3
Cy_MCWDT_Init()	Initializes the MCWDT block.	See Code Listing 4
Cy_MCWDT_Unlock()	Unlocks the MCWDT configuration registers.	See Code Listing 5
Cy_MCWDT_SetInterruptMask()	Writes MCWDT interrupt mask register.	See Code Listing 6
Cy_MCWDT_Enable()	Enables all specified counters.	See Code Listing 7
Cy_MCWDT_Lock()	Locks out configuration changes to all MCWDT registers.	See Code Listing 8
Cy_MCWDT_ClearWatchdog()	Clears the MC watchdog counter, to prevent a XRES device reset or fault.	See Code Listing 9
Cy_SysPm_DeepSleep()	Sets a CPU core to the DeepSleep mode	See Code Listing 10

Code Listing 1 demonstrates an example program to WDT wakeup operation in power mode transition. See the architecture reference manual and application note for GPIO and WDT.

The following description will help you understand the register notation of the driver part of SDL:

- Base signifies the pointer to the MCWDT register base address. Counters specify the Subcounter within the MCWDT.
- To improve the register setting performance, the SDL writes a complete 32-bit data to the register. Each bit field is generated and written to the register as the final 32-bit data.



3 Power modes transition

See cyip_srss_v2.h under hdr/rev_x/ip for more information on the union and structure representation of registers.

Code Listing 1 Example to WDT wakeup operation in power mode transition

```
int main(void)
    Cy_SysInt_SetSystemIrqVector(srss_interrupt_mcwdt_1_IRQn, irqMCWDT1Handler); /*Assign MCWDT
interrupt*/
    /*MCWDT configuration See (a) of Figure 6.
            See Code Listing 3, Code Listing 4, Code Listing 5, Code Listing 6, Code Listing 7,
Code Listing 8
*/
   Cy_MCWDT_DeInit(MCWDT1);
   Cy_MCWDT_Init(MCWDT1, &mcwdtConfig);
   Cy_MCWDT_Unlock(MCWDT1);
   Cy MCWDT SetInterruptMask
(MCWDT1, CY_MCWDT_CTR_Msk);
   Cy_MCWDT_Enable(MCWDT1,
                    CY MCWDT CTR Msk,
                    0ul);
   Cy_MCWDT_Lock(MCWDT1);
   /* Put the system to DeeSleep */
    /*See (b) of Figure 6. Set to the DeepSleep mode. See Code Listing 10*/
   Cy_SysPm_DeepSleep(CY_SYSPM_WAIT_FOR_INTERRUPT);
   for(;;)
        /* Clear Watchdog counter 0 */
        /*Clears the MCWD counter See (d) of Figure 6. See Code Listing 9*/
        Cy_MCWDT_ClearWatchdog(MCWDT1, CY_MCWDT_COUNTER0);
        while( tFlag == 0ul );
        tFlag = 0ul;
        /*See (b) of Figure 6. See Code Listing 10*/
        Cy_SysPm_DeepSleep(CY_SYSPM_WAIT_FOR_INTERRUPT);
    }
}
```



3 Power modes transition

Code Listing 2 MCWDT configuration

```
* \var cy_stc_mcwdt_config_t mcwdtConfig
 * \brief MCWDT configuration
 cy_stc_mcwdt_config_t mcwdtConfig = /*Configure MCWDT parameter*/
{
    .coreSelect
                    = CY_MCWDT_PAUSED_BY_NO_CORE,
                  = 0ul,
    .c0LowerLimit
    .c0UpperLimit = 0xFFFFul,
    .c0WarnLimit
                   = MCWDT_TICKS_PER_SECOND, /* 1 sec, ignored */
    .c0LowerAction = CY_MCWDT_ACTION_FAULT_THEN_RESET,
    .c0UpperAction = CY_MCWDT_ACTION_FAULT_THEN_RESET,
    .c0WarnAction = CY_MCWDT_WARN_ACTION_NONE,
    .c0AutoService = CY MCWDT DISABLE,
    .c0SleepDeepPause = CY_MCWDT_ENABLE,
    .c0DebugRun
                  = CY_MCWDT_ENABLE,
                   = 0ul,
    .c1LowerLimit
    .c1UpperLimit
                  = 0xFFFFul,
                  = MCWDT_TICKS_PER_SECOND, /* 1 sec */
    .c1WarnLimit
    .c1LowerAction = CY_MCWDT_ACTION_NONE,
    .c1UpperAction = CY_MCWDT_ACTION_NONE,
    .c1WarnAction
                   = CY_MCWDT_WARN_ACTION_INT,
    .c1AutoService = CY MCWDT ENABLE,
    .c1SleepDeepPause = CY_MCWDT_DISABLE,
    .c1DebugRun = CY_MCWDT_ENABLE,
                   = CY_MCWDT_CNT2_MONITORED_BIT15,
    .c2ToggleBit
                = CY_MCWDT_CNT2_ACTION_NONE,
    .c2Action
    .c2SleepDeepPause = CY MCWDT ENABLE,
    .c2DebugRun
                  = CY_MCWDT_ENABLE,
};
```



3 Power modes transition

Code Listing 3 Cy_MCWDT_DeInit() function

```
/* De-initializes the MCWDT block, returns register values to their default state./*
void Cy_MCWDT_DeInit(volatile stc_MCWDT_t *base)
{
   Cy_MCWDT_Unlock(base);
   // disable all counter
   for(uint32_t loop = Oul; loop < CY_MCWDT_NUM_OF_SUBCOUNTER; loop++)</pre>
        base->CTR[loop].unCTL.u32Register = Oul;
    }
   base->unCTR2 CTL.u32Register
   for(uint32_t loop = Oul; loop < CY_MCWDT_NUM_OF_SUBCOUNTER; loop++)</pre>
    {
        while(base->CTR[loop].unCTL.u32Register != 0x0ul); // wait until enabled bit become 1
        base->CTR[loop].unLOWER_LIMIT.u32Register = 0x0ul;
        base->CTR[loop].unUPPER_LIMIT.u32Register = 0x0ul;
        base->CTR[loop].unWARN_LIMIT.u32Register = 0x0ul;
        base->CTR[loop].unCONFIG.u32Register = 0x0ul;
        base->CTR[loop].unCNT.u32Register
                                                  = 0x0ul;
    }
   while(base->unCTR2_CNT.u32Register != Oul); // wait until enabled bit become 1
   base->unCPU_SELECT.u32Register = Oul;
   base->unCTR2_CONFIG.u32Register = Oul;
   base->unSERVICE.u32Register = 0x000000003ul;
   base->unINTR.u32Register
                                    = 0xFFFFFFFFul;
   base->unINTR_MASK.u32Register = Oul;
   Cy_MCWDT_Lock(base);
}
```



3 Power modes transition

Code Listing 4 Cy_MCWDT_Init() function

```
/* Initializes the MCWDT block.*/
cy_en_mcwdt_status_t Cy_MCWDT_Init(volatile stc_MCWDT_t *base, cy_stc_mcwdt_config_t const
*config)
{
    cy_en_mcwdt_status_t ret = CY_MCWDT_BAD_PARAM;
    if ((base != NULL) && (config != NULL))
        Cy MCWDT Unlock(base);
        un_MCWDT_CTR_CONFIG_t tempConfigParams
                                                    = { Oul };
        un_MCWDT_CTR2_CONFIG_t tempCNT2ConfigParams = { Oul };
        base->unCPU_SELECT.u32Register
                                                           = config->coreSelect;
        base->CTR[0].unLOWER_LIMIT.stcField.u16LOWER_LIMIT = config->c0LowerLimit;
        base->CTR[0].unUPPER_LIMIT.stcField.u16UPPER_LIMIT = config->c0UpperLimit;
        base->CTR[0].unWARN_LIMIT.stcField.u16WARN_LIMIT = config->c0WarnLimit;
        tempConfigParams.stcField.u2LOWER_ACTION
                                                           = config->c0LowerAction;
        tempConfigParams.stcField.u2UPPER_ACTION
                                                           = config->c0UpperAction;
        tempConfigParams.stcField.u1WARN_ACTION
                                                           = config->c0WarnAction;
        tempConfigParams.stcField.u1AUTO SERVICE
                                                           = config->c0AutoService;
        tempConfigParams.stcField.u1SLEEPDEEP_PAUSE
                                                           = config->c0SleepDeepPause;
        tempConfigParams.stcField.u1DEBUG_RUN
                                                           = config->c0DebugRun;
        base->CTR[0].unCONFIG.u32Register
                                                           = tempConfigParams.u32Register;
        base->CTR[1].unLOWER LIMIT.stcField.u16LOWER LIMIT = config->c1LowerLimit;
        base->CTR[1].unUPPER_LIMIT.stcField.u16UPPER_LIMIT = config->c1UpperLimit;
        base->CTR[1].unWARN_LIMIT.stcField.u16WARN_LIMIT
                                                          = config->c1WarnLimit;
        tempConfigParams.stcField.u2LOWER ACTION
                                                           = config->c1LowerAction;
        tempConfigParams.stcField.u2UPPER_ACTION
                                                           = config->c1UpperAction;
        tempConfigParams.stcField.u1WARN_ACTION
                                                           = config->c1WarnAction;
        tempConfigParams.stcField.u1AUTO SERVICE
                                                           = config->c1AutoService;
        tempConfigParams.stcField.u1SLEEPDEEP_PAUSE
                                                           = config->c1SleepDeepPause;
        tempConfigParams.stcField.u1DEBUG_RUN
                                                           = config->c1DebugRun;
        base->CTR[1].unCONFIG.u32Register
                                                           = tempConfigParams.u32Register;
        tempCNT2ConfigParams.stcField.u5BITS
                                                        = config->c2ToggleBit;
        tempCNT2ConfigParams.stcField.u1ACTION
                                                        = config->c2Action;
        tempCNT2ConfigParams.stcField.u1SLEEPDEEP_PAUSE = config->c2SleepDeepPause;
        tempCNT2ConfigParams.stcField.u1DEBUG_RUN
                                                        = config->c2DebugRun;
        base->unCTR2_CONFIG.u32Register
                                                        = tempCNT2ConfigParams.u32Register;
        Cy_MCWDT_Lock(base);
        ret = CY MCWDT SUCCESS;
    }
    return (ret);
}
```



3 Power modes transition

Code Listing 5 Cy_MCWDT_Unlock() function

```
/* Unlocks the MCWDT configuration registers.*/

STATIC_INLINE void Cy_MCWDT_Unlock(volatile stc_MCWDT_t *base)
{
    uint32_t interruptState;
    interruptState = Cy_SysLib_EnterCriticalSection();

    base->unLOCK.stcField.u2MCWDT_LOCK = CY_MCWDT_LOCK_CLR0;
    base->unLOCK.stcField.u2MCWDT_LOCK = CY_MCWDT_LOCK_CLR1;

Cy_SysLib_ExitCriticalSection(interruptState);
}
```

Code Listing 6 Cy_MCWDT_SetInterruptMask() function

```
/* Writes MCWDT interrupt mask register.*/

__STATIC_INLINE void Cy_MCWDT_SetInterruptMask(volatile stc_MCWDT_t *base, uint32_t counters)
{
    if (counters & CY_MCWDT_CTR0)
    {
        base->unINTR_MASK.stcField.u1CTR0_INT = 1ul;
    }
    if (counters & CY_MCWDT_CTR1)
    {
        base->unINTR_MASK.stcField.u1CTR1_INT = 1ul;
    }
    if (counters & CY_MCWDT_CTR2)
    {
        base->unINTR_MASK.stcField.u1CTR2_INT = 1ul;
    }
}
```



3 Power modes transition

Code Listing 7 Cy_MCWDT_Enable() function

Code Listing 8 Cy_MCWDT_Lock() function

```
/* Locks out configuration changes to all MCWDT registers. */
__STATIC_INLINE void Cy_MCWDT_Lock(volatile stc_MCWDT_t *base)
{
    uint32_t interruptState;
    interruptState = Cy_SysLib_EnterCriticalSection();
    base->unLOCK.stcField.u2MCWDT_LOCK = CY_MCWDT_LOCK_SET01;
    Cy_SysLib_ExitCriticalSection(interruptState);
}
```

Code Listing 9 Cy_MCWDT_ClearWatchdog() function

```
/* Clears the MC watchdog counter, to prevent a XRES device reset or fault. */
void Cy_MCWDT_ClearWatchdog(volatile stc_MCWDT_t *base, cy_en_mcwdtctr_t counter)
{
    Cy_MCWDT_Unlock(base);
    Cy_MCWDT_ResetCounters(base, (1u << (uint8_t)counter), 0u);
    Cy_MCWDT_Lock(base);
}</pre>
```



3 Power modes transition

Code Listing 10 Cy_SysPm_DeepSleep() function

```
/* Sets a CPU core to the DeepSleep mode */
cy_en_syspm_status_t Cy_SysPm_DeepSleep(cy_en_syspm_waitfor_t waitFor)
{
   uint32_t interruptState;
   cy_en_syspm_status_t retVal = CY_SYSPM_SUCCESS;
    /* Call the registered callback functions with
    * the CY_SYSPM_CHECK_READY parameter.
   if(Ou != currentRegisteredCallbacksNumber)
        retVal = Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_READY);
    }
    /* The device (core) can switch into the deep sleep power mode only when
    * all executed registered callback functions with the CY_SYSPM_CHECK_READY
    * parameter returned CY_SYSPM_SUCCESS.
    if(retVal == CY_SYSPM_SUCCESS)
        /* Call the registered callback functions with the CY_SYSPM_BEFORE_TRANSITION
        * parameter. The return value is ignored.
        interruptState = Cy_SysLib_EnterCriticalSection();
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_BEFORE_ENTER);
   #if(@u != CY_CPU_CORTEX_MOP)
        /* The CPU enters the deep sleep mode upon execution of WFI/WFE */
        SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
        if(waitFor != CY_SYSPM_WAIT_FOR_EVENT)
        {
            __WFI();
        }
        else
            __WFE();
        }
   #else
        /* Repeat WFI/WFE instructions if wake up was not intended.
        * Cypress Ticket #272909
        */
        do
        {
            SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
```



3 Power modes transition

```
if(waitFor != CY_SYSPM_WAIT_FOR_EVENT)
            {
                 _WFI();
            }
            else
            {
                 WFE();
        } while (0); //rmkn _FLD2VAL(CPUSS_CM4_PWR_CTL_PWR_MODE, CPUSS-
>unCM4_PWR_CTL.u32Register) == CY_SYSPM_CM4_PWR_CTL_PWR_MODE_RETAINED);
    #endif /* (Ou != CY_CPU_CORTEX_MOP) */
        Cy_SysLib_ExitCriticalSection(interruptState);
        /* Call the registered callback functions with the CY_SYSPM_AFTER_TRANSITION
          parameter. The return value is ignored.
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_AFTER_EXIT);
        }
    }
    else
        /* Execute callback functions with the CY_SYSPM_CHECK_FAIL parameter to
        * undo everything done in the callback with the CY_SYSPM_CHECK_READY
        * parameter. The return value is ignored.
        (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_FAIL);
        retVal = CY_SYSPM_FAIL;
    return retVal;
}
```

3.3 Cyclic wakeup operation

Cyclic wakeup operation is an intermittent MCU operation. For example, when the electronic control unit (ECU) is in Sleep mode, MCU cyclically enters DeepSleep mode and wakes up. This operation is intended to minimize the average power consumption in an application. This section describes an implementation example of cyclic wakeup operation by using TRAVEO™ T2G family MCUs.

3.3.1 Usage example of cyclic wakeup

Figure 7 shows an example of a user system. MCU controls the GPIO and ADC for monitoring external devices, sensors, and so on.



3 Power modes transition

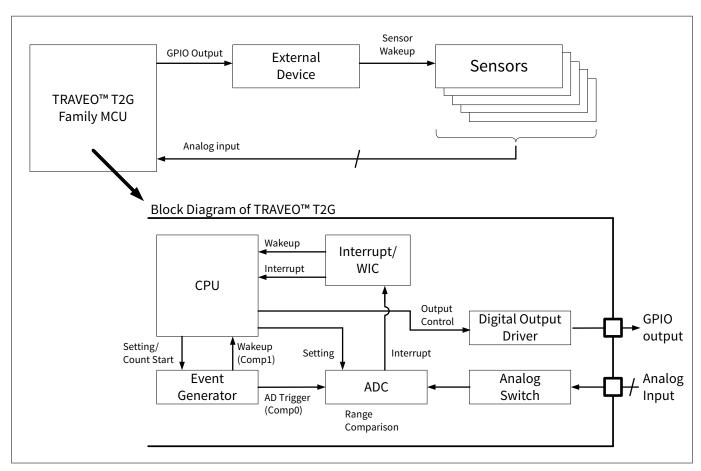


Figure 7 Block diagram of an example user system

The external device is connected to MCU via GPIO. The external device wakes up the sensor by the control signal from the MCU. The sensor outputs are connected to the ADC of the MCU.

However, the sensor generally requires a stabilization wait time to correctly output after wakeup.

Therefore, the MCU outputs the sensor wakeup signal to the external device, and activates ADC after a certain time to convert the sensor signal. For generating these two different timings, two timer interrupts (Comp0 and Comp1) of the event generator are used. In this case, Comp0 is used as a trigger for ADC activation, and Comp1 is used for CPU wakeup.

3.3.2 Cyclic wakeup operation

Figure 8 shows the concept of the cyclic wakeup operation. TRAVEO™ T2G device cyclically wakes up to check the external sensor information when the ECU enters Sleep mode.



3 Power modes transition

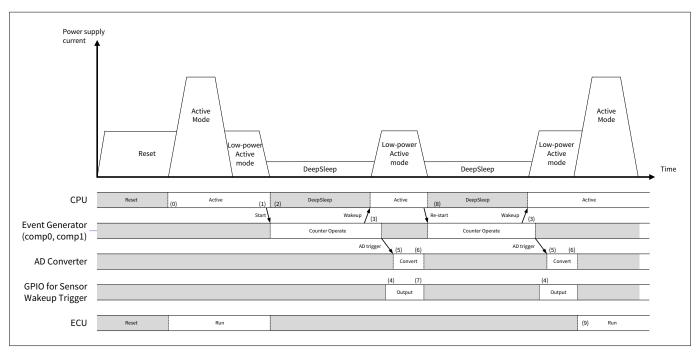


Figure 8 Cyclic wakeup operation

- (0) After a reset, TRAVEO™ T2G enters Active mode and operates the user software.
- (1) The CPU core configures and runs the event generator with the 32.768 kHz low-frequency oscillator.

(The source clock of the event generator can be selected from ILO0, ILO1, and WCO.)

- (2) TRAVEO[™] T2G enters DeepSleep mode; the CPU core goes to DeepSleep state.
- (3) If the counter value of the event generator matches Comp1, the Comp1 trigger wakes up the CPU core.
- (4) The CPU (software) controls the GPIO to output a wakeup trigger activation for external devices.
- (5) Comp0 trigger starts an ADC range comparison.
- (6) The CPU (software) observes ADC results.
- (7) The CPU (software) controls the GPIO.
- [If ADC results of range detection are in range, ECU continues to run cyclic wakeup operation.]
- (8) The CPU (software) restarts the event generator. The CPU goes back to DeepSleep mode. [Go to (2)]
- [If ADC results of range detection are out of range, ECU exits from cyclic wakeup operation.]
- (9) CPU (software) restarts the operation of the ECU system.

For more details on event generator, ADC, GPIO, and clock, see the architecture reference manual.



3 Power modes transition

Flowchart of cyclic wakeup operation 3.3.3

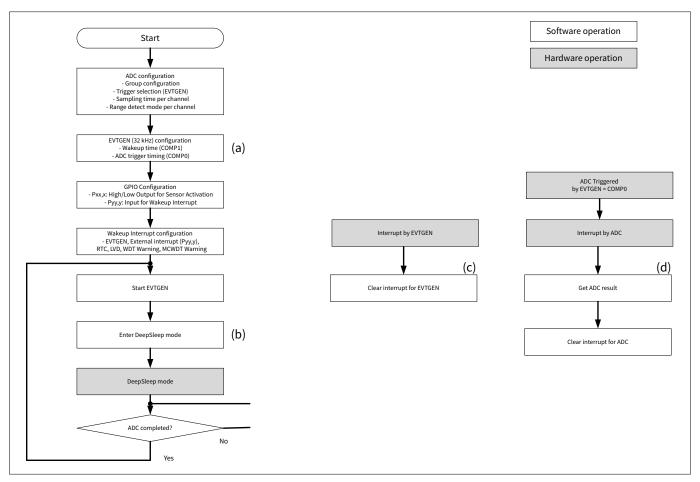


Figure 9 Flowchart of cyclic wakeup operation

The gray boxes indicate hardware operation in Figure 9. Therefore, processing with software is not Note: required.

Configuration and example code 3.3.3.1

Table 7 lists the parameters and Table 8 lists the functions of the configuration part in SDL for cyclic wakeup operation.

Table 7 List of cyclic wakeup operation configuration parameters

Parameters	Description	Value
.frequencyRef	clk_ref	8000000
.frequencyLf	clk_lf	32000
.frequencyTick	Event generator clock (clk_ref_div)	1000000 (Setting 1,000,000 Hz)
.ratioControlMode	Event generator ratio control mode	CY_EVTGEN_RATIO_CONTROL_HW
.ratioValueDynamicMode	Event generator dynamic mode	CY_EVTGEN_RATIO_DYNAMIC_MODE0



3 Power modes transition

Table 7 (continued) List of cyclic wakeup operation configuration parameters

Parameters	Description	Value
.functionalitySelection	Event generator select functionality	CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY
.triggerOutEdge	Event generator trigger	CY_EVTGEN_EDGE_SENSITIVE
.valueDeepSleepComparator	Wakes up the CPU after time 1000000 (1 sec)	
.valueActiveComparator	Triggers ADC after time	1500000 (1.5 sec)
.userlsr	Event generator struct handler	NULL

Table 8 List of cyclic wakeup operation configuration functions

Functions	Description	Remarks
AdcIntHandler()	Interrupt handler for ADC	See Code Listing 11
irqEVTGEN_sleep()	Interrupt setting for event generator	See Code Listing 11
Cy_Evtgen_ClearStructInterruptDeepSleep()	Clears the DeepSleep interrupt factor of the corresponding structure	See Code Listing 12
Cy_Evtgen_DeinitializeCompStruct()	Deinitializes the event generator structure	See Code Listing 13
Cy_Evtgen_Deinitialize()	Deinitializes the event generator	See Code Listing 14
Cy_Evtgen_Initialize()	Initializes the event generator	See Code Listing 15
Cy_Evtgen_InitializeCompStruct()	Initializes the comparator structure	See Code Listing 16
Cy_SysInt_SetSystemIrqVector()	Changes the user ISR vector for the system interrupt	See Code Listing 18
Cy_SysPm_DeepSleep()	Sets a CPU core to the DeepSleep mode	See Code Listing 17

Code Listing 11 demonstrates an example program to cyclic wakeup operation. See the architecture reference manual and application note for GPIO and ADC.



3 Power modes transition

Code Listing 11 Example of cyclic wakeup operation

```
/* Eventgenerator Configration */
const cy_stc_evtgen_config_t evtgenTestConfig =
 #else
    .frequencyRef
                          = 8000000, // clk_ref = clk_hf1
                          = 32000, // clk lf = 32,000 for silicon
    .frequencyLf
 #endif
    .frequencyTick = 1000000, // Setting 1,000,000 Hz for event generator clock
.ratioControlMode = CY_EVTGEN_RATIO_CONTROL_HW,
    .ratioValueDynamicMode = CY_EVTGEN_RATIO_DYNAMIC_MODE0,
};
const cy_stc_evtgen_struct_config_t evtgenTestStructureConfig =
    .functionalitySelection = CY EVTGEN DEEPSLEEP FUNCTIONALITY,
                            = CY_EVTGEN_EDGE_SENSITIVE,
    .triggerOutEdge
    .valueDeepSleepComparator = 1000000, // It wake CPU up after 1s.
    .valueActiveComparator = 1500000, // It triggers ADC after 1.5s.
    .userIsr = NULL,
};
/* See (d) of Figure 9. Interrupt handler for ADC */
void AdcIntHandler(void)
   cy_stc_adc_interrupt_source_t intrSource = { false };
    /* Get the result(s) */
   Cy_Adc_Channel_GetResult(&BB_POTI_ANALOG_MACRO->CH[ADC_LOGICAL_CHANNEL],
&resultBuff[resultIdx], &statusBuff[resultIdx]);
    resultIdx = (resultIdx + 1) % (sizeof(resultBuff) / sizeof(resultBuff[0]));
    /* Clear inerrupt source */
   Cy_Adc_Channel_GetInterruptMaskedStatus(&BB_POTI_ANALOG_MACRO->CH[ADC_LOGICAL_CHANNEL],
&intrSource);
    Cy_Adc_Channel_ClearInterruptStatus(&BB_POTI_ANALOG_MACRO->CH[ADC_LOGICAL_CHANNEL],
&intrSource);
    adcCompletedFlag = 1;
}
void irqEVTGEN_sleep(void)
/* See (c) of Figure 9. See Code Listing 12 */
   Cy_Evtgen_ClearStructInterruptDeepSleep(EVTGEN0,0);
}
int main(void)
{
/* Event generator configuration. See (a) of Figure 9. */
```



3 Power modes transition

```
Deinitialize peripherals
   /***************/
   Cy_Evtgen_DeinitializeCompStruct(EVTGEN0, 0); /* See Code Listing 13 */
          Cy_Evtgen_Deinitialize(EVTGEN0); /* See Code Listing 14 */
   /**************/
   /* Initialize and start Event generator
   /*************/
   Cy_Evtgen_Initialize(EVTGEN0,&evtgenTestConfig); /* See Code Listing 15 */
   /**************/
   /* Initialize comparator structure 0
   /*************/
   Cy_Evtgen_InitializeCompStruct(EVTGEN0, 0, /* See Code Listing 16 */
&evtgenTestStructureConfig, &evtgenStruct0Context);
   /* Register ADC interrupt handler and enable interrupt */
   Cy_SysInt_SetSystemIrqVector(irq_cfg_adc.sysIntSrc, AdcIntHandler);
   /* Put the system to DeeSleep */
   Cy_SysPm_DeepSleep((cy_en_syspm_waitfor_t)CY_SYSPM_WAIT_FOR_INTERRUPT);
/* See (b) of Figure 9. Set to the DeepSleep mode. See Code Listing 17 */
   for(;;)
       while(adcCompletedFlag == 0);
       adcCompletedFlag = 0;
       Cy_Evtgen_DeinitializeCompStruct(EVTGEN0, 0);
       Cy_Evtgen_InitializeCompStruct(EVTGEN0, 0, &evtgenTestStructureConfig,
&evtgenStruct0Context);
      /* Put the system to DeeSleep */
       Cy_SysPm_DeepSleep((cy_en_syspm_waitfor_t)CY_SYSPM_WAIT_FOR_INTERRUPT);
}
```

Code Listing 12 Cy_Evtgen_ClearStructInterruptDeepSleep() function

```
/* Clear DeepSleep interrupt factor of corresponding structure */
__STATIC_INLINE void Cy_Evtgen_ClearStructInterruptDeepSleep(volatile stc_EVTGEN_t *base,
uint8_t structNumber)
{
    base->unINTR_DPSLP.u32Register = ((uint32_t)1 << structNumber);

    // Dummy read. This is to wait for reflection above write operation.
    base->unINTR_DPSLP;
}
```



3 Power modes transition

Code Listing 13 Cy_Evtgen_DeinitializeCompStruct() function

```
void Cy_Evtgen_DeinitializeCompStruct(volatile stc_EVTGEN_t *base, uint8_t structNum)
{
    /* Deinitialize event generator structure */
    base->COMP_STRUCT[structNum].unCOMP_CTL.u32Register = 0;
    base->COMP_STRUCT[structNum].unCOMP0.stcField.u32INT32 = 0;
    base->COMP_STRUCT[structNum].unCOMP1.stcField.u32INT32 = 0;
    evtgenContext[structNum] = NULL;
}
```

Code Listing 14 Cy_Evtgen_Deinitialize() function

```
void Cy_Evtgen_Deinitialize(volatile stc_EVTGEN_t *base)
{
    /* Deinitialize event generator */
    base->unCTL.u32Register = 0;
    base->unREF_CLOCK_CTL.u32Register = 0;
    base->unRATIO.u32Register = 0;
    base->unRATIO_CTL.u32Register = 0;
    base->unINTR_MASK.u32Register = 0;
    base->unINTR_DPSLP_MASK.u32Register = 0;
}
```



3 Power modes transition

Code Listing 15 Cy_Evtgen_Initialize() function

```
cy_en_evtgendrv_status_t Cy_Evtgen_Initialize(volatile stc_EVTGEN_t *base, const
cy_stc_evtgen_config_t* config)
{
/* Initialize the event generator */
uint16_t refDiv;
    un_EVTGEN_RATIO_CTL_t ratioCtl;
    /* 1. Checking input parameter valid */
    if(config == NULL)
        return CY_EVTGEN_ERR;
    }
    /* 2. Initialize internal variable */
    for(uint32 t i = 0; i < EVTGEN COMP STRUCT NR; i++)</pre>
        evtgenContext[i] = NULL;
    mapUsed = 0;
    Cy_Evtgen_Enable(base);
    /* 2. Setting divider value of clk_ref */
    refDiv = config->frequencyRef / config->frequencyTick;
    if(config->frequencyRef % config->frequencyTick != 0)
    {
        return CY_EVTGEN_ERR;
    else if(refDiv > 256 || refDiv < 1)</pre>
        return CY_EVTGEN_ERR;
    else
    {
        base->unREF_CLOCK_CTL.stcField.u8INT_DIV = refDiv - 1u;
    /* 3. Setting ratio operation */
    if(config->ratioControlMode == CY_EVTGEN_RATIO_CONTROL_SW)
        /* SW controll: setting value for ratio value should be ratio between tick_ref_div and
clk_lf. */
        uint64_t temp = (uint64_t)(config->frequencyRef / refDiv) << EVTGEN_RATIO_INT16_Pos;</pre>
        temp = temp / (uint64_t)(config->frequencyLf);
        base->unRATIO.u32Register = ((uint32_t)temp) & (EVTGEN_RATIO_INT16_Msk |
EVTGEN_RATIO_FRAC8_Msk);
        base->unRATIO_CTL.stcField.u1DYNAMIC = @u;
```



3 Power modes transition

```
/* SW controll: valid bit should be set manually. */
        base->unRATIO CTL.stcField.u1VALID = 1u; /* Set VALID bit */
    }
   else
    {
        /* HW controll: */
        ratioCtl.u32Register = base->unRATIO_CTL.u32Register;
        ratioCtl.stcField.u1DYNAMIC = 1u; /* Set Dynamic bit */
        ratioCtl.stcField.u3DYNAMIC_MODE = config->ratioValueDynamicMode; /* Set Dynamic bit */
        base->unRATIO_CTL.u32Register = ratioCtl.u32Register;
        /* Waiting until valid bit is set. */
        while(base->unRATIO_CTL.stcField.u1VALID == @u);
   }
   /* Waiting until counter become ready. */
   while(base->unCOUNTER_STATUS.stcField.u1VALID == @u);
   return CY_EVTGEN_OK;
}
```



3 Power modes transition

Code Listing 16 Cy_Evtgen_InitializeCompStruct() function

```
cy_en_evtgendrv_status_t Cy_Evtgen_InitializeCompStruct(volatile stc_EVTGEN_t *base,
                                                         uint8 t structNum,
                                                         const cy_stc_evtgen_struct_config_t*
configStruct,
                                                         cy_stc_evtgen_struct_context_t* context)
{
/* Initialize a comparator structure */
un_EVTGEN_COMP_STRUCT_COMP_CTL_t compCtr;
    uint64_t tempCounterValue;
    uint32_t savedIntrStatus;
    /* Checking input parameter valid */
    if(configStruct == NULL)
    {
        return CY EVTGEN ERR;
    if(structNum >= EVTGEN_COMP_STRUCT_NR)
        return CY_EVTGEN_ERR;
    }
    if(configStruct->functionalitySelection != CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY)
        if(context == NULL)
        {
            return CY_EVTGEN_ERR;
        evtgenContext[structNum] = context;
        evtgenContext[structNum]->addValueForCOMP0 = configStruct->valueActiveComparator;
        evtgenContext[structNum]->userIsr = configStruct->userIsr;
        mapUsed |= 1 << structNum;</pre>
    }
    compCtr.u32Register = base->COMP_STRUCT[structNum].unCOMP_CTL.u32Register;
    if(configStruct->functionalitySelection == CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY)
        compCtr.stcField.u1COMP1_EN = 1u;
    }
    compCtr.stcField.u1COMP0 EN = 1u;
    compCtr.stcField.u1TR_OUT_EDGE = configStruct->triggerOutEdge;
    compCtr.stcField.u1ENABLED = 1u;
    savedIntrStatus = Cy_SysLib_EnterCriticalSection();
```



3 Power modes transition

```
tempCounterValue = (uint64_t)Cy_Evtgen_GetCounterValue(base);
                      /* Setting active comparator value */
                     base\text{-} \times COMP\_STRUCT[structNum].unCOMP0.stcField.u32INT32 = (uint32\_t)(tempCounterValue + tempCounterValue) + tempCounterValue + tempCounterValue + tempCounterValue + tempCounterValue) + tempCounterValue + tempCounterV
 (uint64_t)configStruct->valueActiveComparator);
                      /* Setting deep sleep comparator value */
                     if(configStruct->functionalitySelection == CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY)
                      {
                                            base\text{-} \times COMP\_STRUCT[structNum].unCOMP1.stcField.u32INT32 = (uint32\_t)(tempCounterValue + tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCounterValue)(tempCoun
 (uint64_t)configStruct->valueDeepSleepComparator);
                     }
                     Cy_SysLib_ExitCriticalSection(savedIntrStatus);
                     /* Setting comparator struct controll parameter */
                     base->COMP_STRUCT[structNum].unCOMP_CTL.u32Register = compCtr.u32Register;
                     Cy_Evtgen_SetInterruptMask(base, structNum);
                      if(configStruct->functionalitySelection == CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY)
                      {
                                            Cy_Evtgen_SetInterruptDeepSleepMask(base, structNum);
                     return CY_EVTGEN_OK;
}
```



3 Power modes transition

Code Listing 17 Cy_SysPm_DeepSleep() function

```
cy_en_syspm_status_t Cy_SysPm_DeepSleep(cy_en_syspm_waitfor_t waitFor)
{
    /* Sets a CPU core to the DeepSleep mode */
   uint32_t interruptState;
   cy_en_syspm_status_t retVal = CY_SYSPM_SUCCESS;
    /* Call the registered callback functions with
    * the CY SYSPM CHECK READY parameter.
    */
   if(@u != currentRegisteredCallbacksNumber)
        retVal = Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_READY);
   }
    /* The device (core) can switch into the deep sleep power mode only when
    * all executed registered callback functions with the CY_SYSPM_CHECK_READY
    * parameter returned CY_SYSPM_SUCCESS.
    */
    if(retVal == CY SYSPM SUCCESS)
        /* Call the registered callback functions with the CY_SYSPM_BEFORE_TRANSITION
        * parameter. The return value is ignored.
        */
        interruptState = Cy_SysLib_EnterCriticalSection();
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY SYSPM DEEPSLEEP, CY SYSPM BEFORE ENTER);
        }
   #if(@u != CY CPU CORTEX MOP)
        /* The CPU enters the deep sleep mode upon execution of WFI/WFE */
        SCB->SCR |= SCB SCR SLEEPDEEP Msk;
        if(waitFor != CY_SYSPM_WAIT_FOR_EVENT)
            __WFI();
        }
        else
        {
            __WFE();
        }
   #else
        /* Repeat WFI/WFE instructions if wake up was not intended.
        * Cypress Ticket #272909
        */
        do
        {
            SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
```



3 Power modes transition

```
if(waitFor != CY SYSPM WAIT FOR EVENT)
                 _WFI();
            }
            else
            {
                __WFE();
        } while (0); //rmkn _FLD2VAL(CPUSS_CM4_PWR_CTL_PWR_MODE, CPUSS-
>unCM4_PWR_CTL.u32Register) == CY_SYSPM_CM4_PWR_CTL_PWR_MODE_RETAINED);
    #endif /* (Ou != CY CPU CORTEX MOP) */
        Cy_SysLib_ExitCriticalSection(interruptState);
        /* Call the registered callback functions with the CY_SYSPM_AFTER_TRANSITION
        * parameter. The return value is ignored.
        */
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_AFTER_EXIT);
        }
    }
    else
        /* Execute callback functions with the CY_SYSPM_CHECK_FAIL parameter to
        * undo everything done in the callback with the CY_SYSPM_CHECK_READY
        * parameter. The return value is ignored.
        (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_FAIL);
        retVal = CY SYSPM FAIL;
    return retVal;
}
```

Code Listing 18 C Cy_SysInt_SetSystemIrqVector() function

```
void Cy_SysInt_SetSystemIrqVector(cy_en_intr_t sysIntSrc, cy_systemIntr_Handler userIsr)
{
    /* Changes the User ISR vector for the System Interrupt */
    if (Cy SysInt SystemIrqUserTableRamPointer != NULL)
        Cy_SysInt_SystemIrqUserTableRamPointer[sysIntSrc] = userIsr;
    }
}
```

Usage of smart I/O in cyclic wakeup 3.3.4

This section describes the role of smart I/O in reducing the LPACTIVE period in cyclic wakeup operation.



3 Power modes transition

As described in the beginning of the cyclic wakeup operation section, cyclic wakeup is intended to minimize the average power consumption in an application. This average consumption current is affected by the following:

- DeepSleep current
- LPACTIVE current
- Percentage of LPACTIVE time in one period.

DeepSleep current and LPACTIVE current mostly depend on electrical specifications of HW, while the percentage of the LPACTIVE time in one period depends on the optimization of SW. Because the current consumption during LPACTIVE (several mA) is relatively much higher than in DeepSleep (several 10μ A), from the SW point of view, reducing the LPACTIVE time plays an important factor in achieving a low average consumption current. To shorten the LPACTIVE period, use of Smart I/O is suggested.

In the flow of cyclic wakeup operation proposed in Figure 8, the MCU need to wake up and configure I/O ports to turn sensors on, and wait for the sensor's stabilization before triggering ADC conversion. If a long sensor stabilization time is required, the MCU can optionally be put in Sleep/DeepSleep again to reduce the current consumption, but this approach may make program more complex. Additionally, you should consider the transition time between different power modes.

Figure 10 shows the system configuration of this use case. GPIO is activated by smart I/O, instead of CPU as demonstrated in Figure 7.

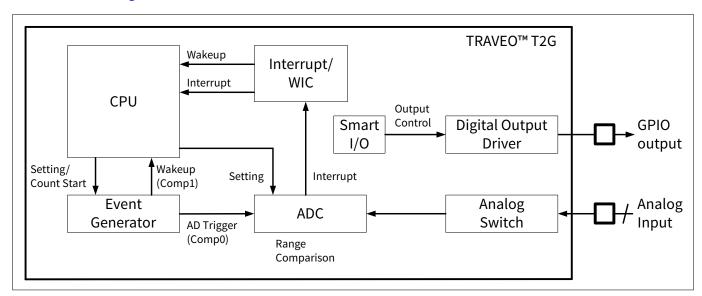


Figure 10 System configuration of cyclic wakeup with smart I/O

3.3.4.1 Advantage of smart I/O implementation in cyclic wakeup

Smart I/O can be used to manipulate I/O during DeepSleep mode. This can eliminate the unnecessary LPACTIVE time CPU spends to activate I/O especially when the CPU must wait for a long time for the sensor to stabilize.

The internal logic of smart I/O includes three-input lookup table (LUTs) and data unit (DU) among other components. DU acts as a counter with count up/down and reload function. By setting the data unit and LUTs properly, we can create a circuit that delays GPIO from outputting high with desired latency.

As shown in Figure 11, because smart I/O can operate in DeepSleep, you can use it to activate GPIO while the CPU is in DeepSleep mode.



3 Power modes transition

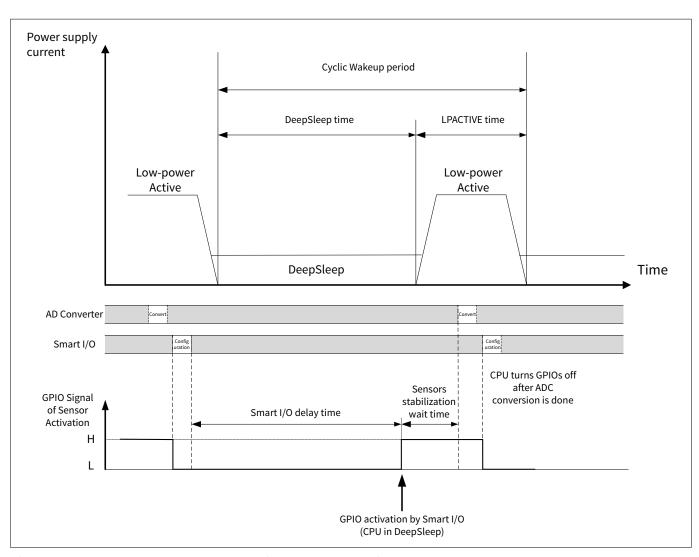


Figure 11 Smart I/O-based cyclic wakeup operation

3.3.4.2 Smart I/O configuration in cyclic wakeup

The data unit (DU) can be used as a counter to delay "H" output. However, the DU is only 8-bit counter. During DeepSleep, because the source clock of smart I/O is ILO with frequency of 32 kHz, the DU can count for maximum interval as follows:

$$\frac{2^8}{32 \times 10^3} \times 10^3 = 8 \left[ms \right]$$

Therefore, for applications that require cyclic wakeup period larger than 8 ms, you need extra bits for the counter.

Therefore, for this example, an 11-bit timer equivalent circuitry by smart I/O called "sensor activation circuitry" is implemented. An 11-bit counter equivalent circuitry can generate delay up to 32 ms. Figure 12 shows the operation of the circuitry. Here, 'DAT' is the upper limit of the DU. DAT is configured by the SMARTIO_PRTx_DATA register. A single clock pulse is output at the data unit tr_out when the count value is equal to DAT.



3 Power modes transition

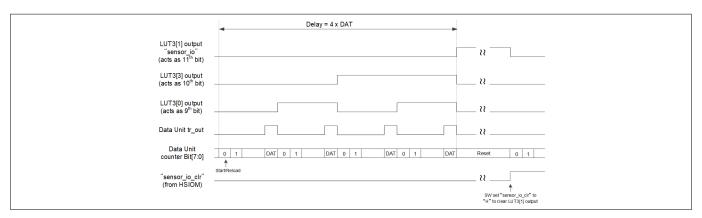


Figure 12 Operation of sensor activation circuitry

In this use case, the circuitry receives one signal from HSIOM named the "sensor_io_clr" signal, with active HIGH, which is used to clear the output of LUT3[1], i.e., the sensor activation output. The following I/O port and HSIOM signal are used:

- smartio_data[1] = sensor_io (to I/O port, i.e., external sensor activation port)
- chip_data[1] = sensor_io_clr (from HSIOM, manipulated by the CPU to clear 'sensor_io')

Figure 13 shows the connection and functional logic of each LUT3 and DU in this circuitry.

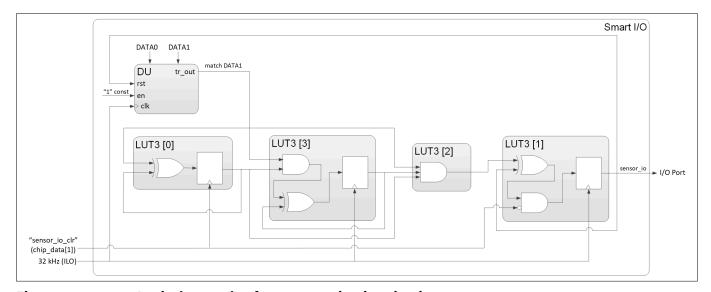


Figure 13 Logical example of a sensor activation circuitry

The data unit operates in INCR_WRAP mode. This mode increments the data by 1 from an initial value (DATA 0) until it reaches a final value (DATA 1). When the count value matches the final value, it wraps around to DATA 0. In this circuitry, the data unit carries the lower 8 bits of the 11-bit counter, LUT3[0], LUT3[1], LUT3[3] stands for the 9th, 10th, and 11th bit of the 11-bit counter. The output of LUT3[1], i.e., the 11th bit of the counter, is connected to the GPIO port to activate the external sensor. Figure 14 shows the signal path in this use case.



3 Power modes transition

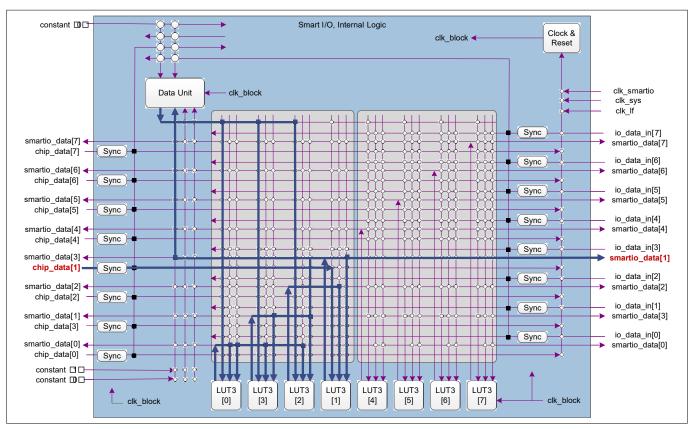


Figure 14 Signal path of sensor activation circuitry

Table 9, Table 10, Table 11, and Table 12, show the truth table of each LUT3. The bold in the table indicate an invalid pattern.

Table 9 Lookup table LUT3 [0]

Tr2_in	Tr1_in	Tr0_in	Tr_out	
LUT3[0] out	LUT3[0] out	DU tr_out		
0	0	0	0	
0	0	1	1	
0	1	0	0	
0	1	1	0	
1	0	0	0	
1	0	1	0	
1	1	0	1	
1	1	1	0	

Table 10 Lookup table LUT3 [1]

Tr2_in	Tr1_in	Tr0_in	Tr_out
LUT3[1] out	LUT3[0] out	DU tr_out	
0	0	0	0

(table continues...)



3 Power modes transition

Table 10 (continued) Lookup table LUT3 [1]

Tr2_in	Tr1_in	Tr0_in	Tr_out
LUT3[1] out	LUT3[0] out	DU tr_out	
0	0	1	0
0	1	0	1
0	1	1	0
1	0	0	1
1	0	1	0
1	1	0	1
1	1	1	0

Table 11 Lookup table LUT3 [2]

Tr2_in	Tr1_in	Tr0_in	Tr_out
LUT3[1] out	LUT3[0] out	DU tr_out	
0	0	0	0
0	0	1	0
0	1	0	0
0	1	1	0
1	0	0	0
1	0	1	0
1	1	0	0
1	1	1	1

Table 12 Lookup table LUT3 [3]

Tr0_in	Tr1_in	Tr2_in	Tr_out
LUT3[3] out	LUT3[2] out	CHIP_ DATA[0]	
0	0	0	0
0	0	1	0
0	1	0	0
0	1	1	1
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	0

The H output delayed by the sensor activation circuitry can be calculated as follows:

$$delay = 4 \times \frac{DAT1 - DAT0}{32} = \frac{DAT1 - DAT0}{8} [ms]$$



3 Power modes transition

Therefore, you can configure DAT1 and DAT0 (usually set to '0') to satisfy the sensor stabilization waiting time as in the rough estimation as follows:

$$\begin{aligned} \textit{delay} &= T_{\textit{Cyclic Wakeup period}} - T_{\textit{sensor stabilization wait}} \\ &\therefore DAT1 = 8 \times \left(T_{\textit{Cyclic Wakeup period}} - T_{\textit{sensor stabilization wait}} \right) \\ &\text{For example, if } T_{\textit{Cyclic Wakeup period}} &= 32 \text{ [ms], you can configure DAT0} = 0, \text{ DAT1} = 0 \text{xFD to make} \\ T_{\textit{sensor stabilization wait}} &\geq 300 [\mu s] \end{aligned}$$

3.3.4.3 Sensor activation circuitry in cyclic wakeup operation

Using the sensor activation circuitry constructed in the previous section, the operation of cyclic wakeup can be enhanced as shown in Figure 15.



3 Power modes transition

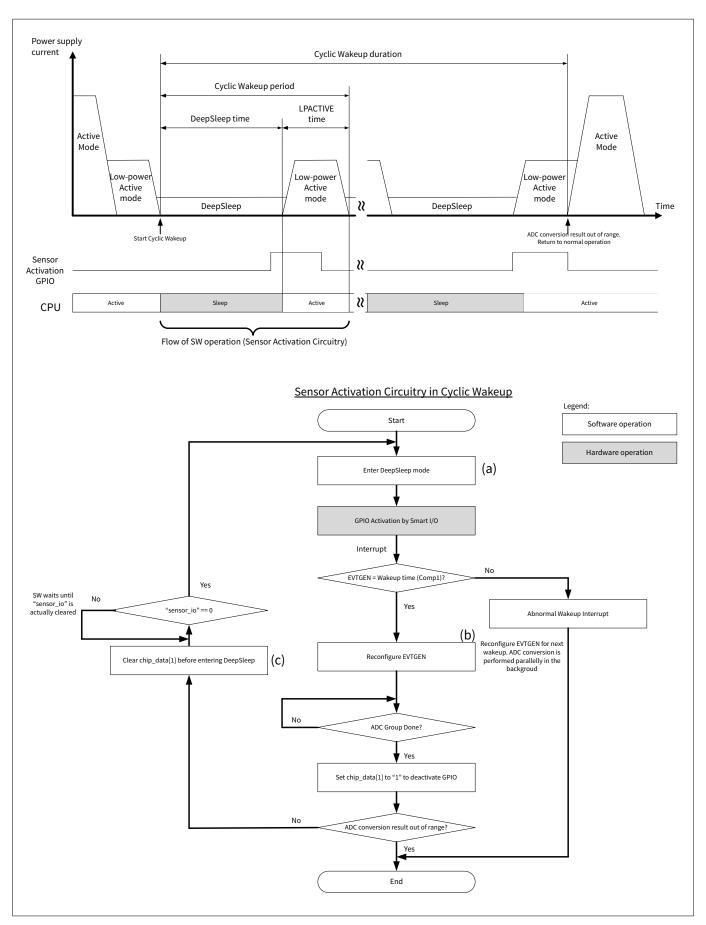


Figure 15 Cyclic wakeup operation with smart I/O usage



3 Power modes transition

Note: The gray box in the flowchart indicates a hardware operation. Therefore, processing with software is not required.

The GPIO is activated by smart I/O while the CPU is still in DeepSleep mode and the sensor's stabilization time can be satisfied just by adjusting DATO and DAT1 properly. The behavior of the GPIO is now isolated from the operation of the CPU; this makes the software flow less complex.

For example, the CPU does not need to go to Sleep mode after activating the GPIO to cut back the current consumption if a long sensor waiting time is required.

3.3.4.4 Configuration and example code

Table 13 lists the parameters and Table 14 lists the functions of the configuration part in SDL for smart I/O in cyclic wakeup.

Table 13 List of smart I/O in cyclic wakeup configuration parameters

Parameters	Description	Value
.sysIntSrc	Interrupt setting for event	evtgen_0_interrupt_dpslp_IRQn
intldx	generator	CPUIntldx4_IRQn
.isEnabled		true
.frequencyRef	clk_ref	800000ul
.frequencyLf	clk_lf	32000ul
.frequencyTick	Event generator clock (clk_ref_div)	32000ul
.ratioControlMode	Event generator ratio control mode	CY_EVTGEN_RATIO_CONTROL_SW
.ratioValueDynamicMode	Event generator dynamic mode	CY_EVTGEN_RATIO_DYNAMIC_MODE0
.functionalitySelection	Event generator select functionality	CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY
.triggerOutEdge	Event generator trigger	CY_EVTGEN_EDGE_SENSITIVE
.valueDeepSleepComparator	Initializes comparator structure	DPSLP_COMP_VAL
.valueActiveComparator	Initializes comparator structure	ACTIVE_COMP_VAL
lutCfgLut0.opcode	Configures LUT3[0] operation mode setting	CY_SMARTIO_LUTOPC_GATED_OUT
lutCfgLut0.lutMap	Configures LUT3[0] output pattern setting	0x42ul
lutCfgLut0.tr0	Configures LUT3[0] tr0 input	CY_SMARTIO_LUTTR_DU_OUT
lutCfgLut0.tr1	Configures LUT3[0] tr1 input	CY_SMARTIO_LUTTR_LUT0_OUT
lutCfgLut0.tr2	Configures LUT3[0] tr2 input	CY_SMARTIO_LUTTR_LUT0_OUT
lutCfgLut3.opcode	Configures LUT3[3] operation mode setting	CY_SMARTIO_LUTOPC_GATED_OUT
(table continues)		

(table continues...)



3 Power modes transition

Table 13 (continued) List of smart I/O in cyclic wakeup configuration parameters

Parameters	Description	Value
lutCfgLut3.lutMap	Configures LUT3[3] output pattern setting	0x78ul
lutCfgLut3.tr0	Configures LUT3[3] tr0 input	CY_SMARTIO_LUTTR_DU_OUT
lutCfgLut3.tr1	Configures LUT3[3] tr1 input	CY_SMARTIO_LUTTR_LUT0_OUT
lutCfgLut3.tr2	Configures LUT3[3] tr2 input	CY_SMARTIO_LUTTR_LUT3_OUT
lutCfgLut2.opcode	Configures LUT3[2] operation mode setting	CY_SMARTIO_LUTOPC_COMB
lutCfgLut2.lutMap	Configures LUT3[2] output pattern setting	0x80ul
lutCfgLut2.tr0	Configures LUT3[2] tr0 input	CY_SMARTIO_LUTTR_DU_OUT
lutCfgLut2.tr1	Configures LUT3[2] tr1 input	CY_SMARTIO_LUTTR_LUT0_OUT
lutCfgLut2.tr2	Configures LUT3[2] tr2 input	CY_SMARTIO_LUTTR_LUT3_OUT
lutCfgLut1.opcode	Configures LUT3[1] operation mode setting	CY_SMARTIO_LUTOPC_GATED_OUT
lutCfgLut1.lutMap	Configures LUT3[1] output pattern setting	0x54ul
lutCfgLut1.tr0	Configures LUT3[1] tr0 input	CY_SMARTIO_LUTTR_CHIP1
lutCfgLut1.tr1	Configures LUT3[1] tr1 input	CY_SMARTIO_LUTTR_LUT1_OUT
lutCfgLut1.tr2	Configures LUT3[1] tr2 input	CY_SMARTIO_LUTTR_LUT2_OUT
lutCfgDu.tr0	Configures DU input trigger 0 source selection	CY_SMARTIO_DUTR_LUT1_OUT
lutCfgDu.tr1	Configures DU input trigger 1 source selection	CY_SMARTIO_DUTR_ONE
lutCfgDu.data0	DU input DATA0 source selection	CY_SMARTIO_DUDATA_ZERO
lutCfgDu.data1	DU input DATA1 source selection	CY_SMARTIO_DUDATA_DATAREG
lutCfgDu.opcode	DU opcode	CY_SMARTIO_DUOPC_INCR_WRAP
lutCfgDu.size	DU width size is 8	CY_SMARTIO_DUSIZE_8
lutCfgDu.dataReg	DU DATA register value	0xFCul

Table 14 List of smart I/O in cyclic wakeup configuration functions

Functions	Description	Remarks
CyclicWakeUp_SystemUpdate()	SystemUpdate for cyclic wakeup	See Code Listing 21
CyclicWakeUp_Operation()	Cyclic wakeup function	See Code Listing 22
Init_SmartIO()	Smart I/O module initialization	See Code Listing 23
Cy_SmartIO_Enable()	Enables smart I/O	See Code Listing 24
/table continues \		

(table continues...)



3 Power modes transition

Table 14 (continued) List of smart I/O in cyclic wakeup configuration functions

Functions	Description	Remarks
Init_SmartIO_Cfg()	Configures smart I/O	See Code Listing 25
Cy_SmartIO_Deinit()	Resets the smart I/O to default values	See Code Listing 26
Cy_GPIO_Inv()	Sets a pin output logic state to the inverse of the current output logic state	See Code Listing 27

Code Listing 19 demonstrates an example program to smart I/O in cyclic wakeup operation. See the architecture reference manual and application note for GPIO, ADC, and smart I/O.

Code Listing 19 Example of usage of smart I/O in cyclic wakeup operation

```
int main(void)
{

cyclicWakeUp_SystemUpdate();  /* SystemUpdate for Cyclic wakeup See Code Listing 21 */

Init_SmartIO();  /* Smart IO module initialization See Code Listing 23 */

Cy_SmartIO_Enable(SMART_IO_PORT);  /* Configures Smart I/O See Code Listing 24 */

while(1 /*g_flagContinueCWK*/){
    Cy_GPIO_Inv(DPSLP_IDC_PRT, DPSLP_IDC_PIN);  /* See Code Listing 27 */
    CyclicWakeUp_Operation();  /* Cyclic WakeUp function. See (a) of Figure 15. See Code
Listing 22 */
}

for(;;)
{
    Cy_GPIO_Inv(DPSLP_IDC_PRT, DPSLP_IDC_PIN);
    for(uint32_t idx = 0ul; idx < 1000000ul; idx++ ){}
}
</pre>
```



3 Power modes transition

Code Listing 20 Event generator configuration

```
* \var cy_stc_evtgen_config_t evtgenConfig
 * \brief Evtgen configuration
/* Eventgenerator Configuration */
const cy_stc_evtgen_config_t evtgenConfig =
    .frequencyRef
                          = 8000000ul, /**< clk_ref = clk_hf1 = CLK_PATH2 (IMO) -> 8,000,000
for silicon */
    .frequencyLf
                          = 32000ul,
                                        /**< clk_lf = 32,000 for silicon */
                          = 32000ul,
                                        /**< Setting 1,000,000 Hz for event generator clock
    .frequencyTick
(clk_ref_div) */
    .ratioControlMode = CY_EVTGEN_RATIO_CONTROL_SW,
    .ratioValueDynamicMode = CY_EVTGEN_RATIO_DYNAMIC_MODE0,
};
/**
 * \var cy_stc_evtgen_struct_config_t evtgenStructureConfig
 * \brief Evtgen structure configuration
const cy_stc_evtgen_struct_config_t evtgenStructureConfig =
    .functionalitySelection = CY_EVTGEN_DEEPSLEEP_FUNCTIONALITY,
                             = CY_EVTGEN_EDGE_SENSITIVE,
    .triggerOutEdge
    .valueDeepSleepComparator = DPSLP_COMP_VAL, /**< In active functionality, this value is</pre>
used for making period of interrupts/triggers */
                                         /**< 32,000 / 1,000,000 (clk_ref_div) = 32[ms] */
    .valueActiveComparator
                             = ACTIVE_COMP_VAL, /**< In active functionality, this value is
used for making period of interrupts/triggers */
                                        /**< 40,000 / 1,000,000 (clk_ref_div) = 4[ms] */
};
```



3 Power modes transition

Code Listing 21 CyclicWakeUp_SystemUpdate() function

```
/* SystemUpdate for Cyclic wakeup */
void CyclicWakeUp_SystemUpdate(void)
{
   SRSS->unPWR_CTL2.stcField.u1LINREG_DIS = Oul;
   SRSS->unPWR_CTL2.stcField.u1BGREF_LPMODE = 1ul;
   /******************/
   /* Clock Setthings */
   /****************/
          FLL disabling
                              ***/
   /* Disable Fll */
   SRSS->unCLK_FLL_CONFIG.stcField.u1FLL_ENABLE = Oul; /* 0 = disable */
   SRSS->unCLK FLL CONFIG4.stcField.u1CCO ENABLE = Oul; /* O = disable */
   /***** Setting wait state for ROM ********/
   CPUSS->unROM CTL.stcField.u2SLOW WS = @ul;
   CPUSS->unROM_CTL.stcField.u2FAST_WS = @ul;
   /***** Setting wait state for RAM ********/
   CPUSS->unRAM0_CTL0.stcField.u2SLOW_WS = 0ul;
   CPUSS->unRAM0_CTL0.stcField.u2FAST_WS = 0ul;
   #if defined (CPUSS_RAMC1_PRESENT) && (CPUSS_RAMC1_PRESENT == 1UL)
   CPUSS->unRAM1 CTL0.stcField.u2SLOW WS = Oul;
   CPUSS->unRAM1_CTL0.stcField.u2FAST_WS = Oul;
   #endif /* defined (CPUSS_RAMC1_PRESENT) && (CPUSS_RAMC1_PRESENT == 1UL) */
   #if defined (CPUSS RAMC2 PRESENT) && (CPUSS RAMC2 PRESENT == 1UL)
   CPUSS->unRAM2_CTL0.stcField.u2SLOW_WS = Oul;
   CPUSS->unRAM2 CTL0.stcField.u2FAST WS = Oul;
   #endif /* defined (CPUSS_RAMC2_PRESENT) && (CPUSS_RAMC2_PRESENT == 1UL) */
   /***** Setting wait state for FLASH ********/
   FLASHC->unFLASH_CTL.stcField.u4MAIN_WS = Oul;
          Set clock LF source
   SRSS->unCLK_SELECT.stcField.u3LFCLK_SEL = CY_SYSCLK_LFCLK_IN_IL00;
   /***************/
            Deinitialize peripherals
   /*************/
   Cy_Evtgen_DeinitializeCompStruct(EVTGEN0, EVTGEN_COMP_STRUCT_N0);
   Cy_Evtgen_Deinitialize(EVTGEN0);
   /**************/
   /* Initialize and start Event generator
   /**************/
   Cy_Evtgen_Initialize(EVTGEN0,&evtgenConfig);
```



3 Power modes transition



3 Power modes transition

Code Listing 22 CyclicWakeUp_Operation() function

```
/* Cyclic WakeUp function */
void CyclicWakeUp_Operation(void)
{
    /* confirm that output of LUT1 has been cleared */
   while((LUT1_OUT_LED_PORT->unIN.u32Register >> (LUT1_OUT_LED_PIN)) & CY_GPIO_IN_MASK){};
    /* clear chip_data_out[1] before entering deepsleep*/
    LUT1_OUT_LED_PORT->unOUT_CLR.u32Register = CY_GPIO_OUT_MASK << LUT1_OUT_LED_PIN;</pre>
                                                                                        /* See
(c) of Figure 15. */
    /* Put the system to DeepSleep */
        /* put mcu in deepsleep */
        SCB->SCR |= SCB SCR SLEEPDEEP Msk;
          SCB->SCR; /* dummy read +/
//
        WaitCoreCycle(1ul);
        __WFI(); /* See (a) of Figure 15. Set to the DeepSleep mode */
        /* Start ADC by software trigger*/
        Cy_Adc_Channel_SoftwareTrigger(&CYCLIC ADC POT MACRO-
>CH[ADC_GROUP_FIRST_LOGICAL_CHANNEL]);
        /* Clear evtgen deepsleep interrput */
        Cy_Evtgen_ClearStructInterruptDeepSleep(EVTGEN0,EVTGEN_COMP_STRUCT_N0);
        NVIC_ClearPendingIRQ(irq_cfg_evtgen_dpslp.intIdx);
    }
    /* Reconfigure the event generator for the next wake-up */
    /* See (b) of Figure 15. */
        g_EvtgenCompareValue = (uint32_t)(g_EvtgenCompareValue + DPSLP_COMP_VAL);
        /* Disable deep sleep comparator */
        EVTGENO->COMP STRUCT[EVTGEN COMP STRUCT NO].unCOMP CTL.stcField.u1COMP1 EN = 0ul;
        /* Setting deep sleep comparator value */
        EVTGEN0->COMP_STRUCT[EVTGEN_COMP_STRUCT_NO].unCOMP1.stcField.u32INT32 =
g_EvtgenCompareValue;
        /* Enable deep sleep comparator */
        EVTGENO->COMP_STRUCT[EVTGEN_COMP_STRUCT_NO].unCOMP_CTL.stcField.u1COMP1_EN = 1ul;
    }
    /* wait for ADC completion */
   while(!CYCLIC_ADC_POT_MACRO->CH[ADC_GROUP_LAST_LOGICAL_CHANNEL].unINTR.stcField.u1GRP_DONE)
{};
    /* set chip_data_out[1] to clear lut1_trout */
    LUT1_OUT_LED_PORT->unOUT_SET.u32Register = CY_GPIO_OUT_MASK << LUT1_OUT_LED_PIN;
    /* In this sample software, only check range comparison result for first ADC channel */
```



3 Power modes transition

```
if(CYCLIC_ADC_POT_MACRO->CH[ADC_GROUP_FIRST_LOGICAL_CHANNEL].unINTR.stcField.u1CH_RANGE ==
1ul) {
        g_flagContinueCWK = false;
    }

    for (uint8_t ch = ADC_GROUP_FIRST_LOGICAL_CHANNEL; ch < (ADC_GROUP_FIRST_LOGICAL_CHANNEL +
ADC_GROUP_NUMBER_OF_CHANNELS); ch++)
    {
            /* Clear interrupt source */
            CYCLIC_ADC_POT_MACRO->CH[ch].unINTR.u32Register = 0xFFFFFFFFul;
        }
}
```

Code Listing 23 Init_SmartIO() function

Code Listing 24 Cy_SmartIO_Enable() function

```
/* Enable Smart I/O */
void Cy_SmartIO_Enable(volatile stc_SMARTIO_PRT_t* base)
{
    un_SMARTIO_PRT_CTL_t workCTL = base->unCTL;
    workCTL.stcField.u1ENABLED = CY_SMARTIO_ENABLE;
    workCTL.stcField.u1PIPELINE_EN = CY_SMARTIO_DISABLE;
    base->unCTL.u32Register = workCTL.u32Register;
}
```



3 Power modes transition

Code Listing 25 Init_SmartIO_Cfg() function

```
cy_en_smartio_status_t Init_SmartIO_Cfg(void)
   /* Configures Smart I/O */
   /* Configure smart io to output H in deepsleep
    * Using data unit and LUTO,1,2,3 to create a 11bit counter
    * Data uint acts as lower 8 bit, count up from 0 to value written in DATA, reset to 0 at
overflow
    * LUTO acts as 9th bit, LUT3 acts as 10th bit and LUT 1 act as 11th bit
    * output of LUT1 is smart io output, i.e. P15.1 or TP202 on the CPU board
   */
   cy_stc_smartio_ducfg_t lutCfgDu;
   cy_stc_smartio_lutcfg_t lutCfgLut0;
   cy_stc_smartio_lutcfg_t lutCfgLut1;
   cy_stc_smartio_lutcfg_t lutCfgLut2;
   cy_stc_smartio_lutcfg_t lutCfgLut3;
   cy_stc_smartio_config_t smart_io_cfg;
   cy_en_smartio_status_t retStatus = (cy_en_smartio_status_t)0xFF;
   /* initialize the Smart IO structure */
   memset(&lutCfgDu, 0, sizeof(cy_stc_smartio_ducfg_t));
   memset(&lutCfgLut0, 0, sizeof(cy stc smartio lutcfg t));
   memset(&lutCfgLut1, 0, sizeof(cy_stc_smartio_lutcfg_t));
   memset(&lutCfgLut2, 0, sizeof(cy_stc_smartio_lutcfg_t));
   memset(&lutCfgLut3, 0, sizeof(cy_stc_smartio_lutcfg_t));
   memset(&smart_io_cfg, 0, sizeof(cy_stc_smartio_config_t));
   /* Active clock source is selected */
   smart_io_cfg.clkSrc = (cy_en_smartio_clksrc_t)CY_SMARTIO_CLK_LFCLK;
   /* Bypass channel mask is 11111100 for Pin0 and Pin1 */
   smart_io_cfg.bypassMask = SMARTIO_BYPASS_CH_MASK;
   smart_io_cfg.hldOvr = true;
   /* Configure LUT3 [0] */
   lutCfgLut0.opcode = CY_SMARTIO_LUTOPC_GATED_OUT;
   lutCfgLut0.lutMap = 0x42ul;
   lutCfgLut0.tr0 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_DU_OUT;
   lutCfgLut0.tr1 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT0_OUT;
   lutCfgLut0.tr2 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT0_OUT;
   smart_io_cfg.lutCfg[0] = &lutCfgLut0;
   /* Configure LUT3 [3] */
   lutCfgLut3.opcode = CY_SMARTIO_LUTOPC_GATED_OUT;
```



3 Power modes transition

```
lutCfgLut3.lutMap = 0x78ul;
   lutCfgLut3.tr0 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_DU_OUT;
   lutCfgLut3.tr1 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT0_OUT;
   lutCfgLut3.tr2 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT3_OUT;
   smart_io_cfg.lutCfg[3] = &lutCfgLut3;
   /* Configure LUT3 [2] */
   lutCfgLut2.opcode = CY_SMARTIO_LUTOPC_COMB;
   lutCfgLut2.lutMap = 0x80ul;
   lutCfgLut2.tr0 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_DU_OUT;
   lutCfgLut2.tr1 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT0_OUT;
   lutCfgLut2.tr2 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT3_OUT;
   smart_io_cfg.lutCfg[2] = &lutCfgLut2;
   /* Configure LUT3 [1] */
   lutCfgLut1.opcode = CY_SMARTIO_LUTOPC_GATED_OUT;
   lutCfgLut1.lutMap = 0x54ul;
   lutCfgLut1.tr0 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_CHIP1;
   lutCfgLut1.tr1 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT1_OUT;
   lutCfgLut1.tr2 = (cy_en_smartio_luttr_t)CY_SMARTIO_LUTTR_LUT2_OUT;
   smart_io_cfg.lutCfg[1] = &lutCfgLut1;
   /* Data Unit (DU) configuration structure */
   /* Configure DU */
   lutCfgDu.tr0 = CY_SMARTIO_DUTR_LUT1_OUT, /*CY_SMARTIO_DUTR_DU_OUT;*/ /**< DU input</pre>
trigger 0 source selection */
   lutCfgDu.data0 = CY SMARTIO DUDATA ZERO; /**< DU input DATA0 source selection */</pre>
   lutCfgDu.data1 = CY_SMARTIO_DUDATA_DATAREG;    /**< DU input DATA1 source selection */</pre>
   lutCfgDu.opcode = CY_SMARTIO_DUOPC_INCR_WRAP; /**< DU op-code */</pre>
   lutCfgDu.size = CY SMARTIO DUSIZE 8; /**< DU operation bit size */</pre>
   lutCfgDu.dataReg = 0xFCul;
                                       /**< DU DATA register value */
   smart_io_cfg.duCfg = &lutCfgDu;
}
```



3 Power modes transition

Code Listing 26 Cy_SmartIO_Deinit() function

```
void Cy_SmartIO_Deinit(volatile stc_SMARTIO_PRT_t* base)
    un_SMARTIO_PRT_CTL_t workCTL= {.u32Register = 0ul};
   workCTL.stcField.u1ENABLED
                                   = CY_SMARTIO_DISABLE;
                                                           /* Resets the Smart I/O to default
values */
   workCTL.stcField.u1PIPELINE_EN = CY_SMARTIO_ENABLE;
   workCTL.stcField.u5CLOCK SRC = CY SMARTIO CLK GATED;
   workCTL.stcField.u8BYPASS
                                   = CY_SMARTIO_CHANNEL_ALL;
    base->unCTL.u32Register
                                   = workCTL.u32Register;
   base->unSYNC_CTL.u32Register = CY_SMARTIO_DEINIT;
    for(uint8 t idx = CY SMARTIO LUTMIN; idx < CY SMARTIO LUTMAX; idx++)</pre>
        base->unLUT_SEL[idx].u32Register = CY_SMARTIO_DEINIT;
        base->unLUT_CTL[idx].u32Register = CY_SMARTIO_DEINIT;
    }
    base->unDU SEL.u32Register = CY SMARTIO DEINIT;
   base->unDU_CTL.u32Register = CY_SMARTIO_DEINIT;
    base->unDATA.u32Register = CY_SMARTIO_DEINIT;
}
```

Code Listing 27 Cy_GPIO_Inv() function

3.4 CAN wakeup operation

As long as there is any communication on the CAN bus, the ECU is awake. If CAN communication occurs while the ECU is in low-power mode, ECU must wake up from low-power mode. This section describes an implementation example of the CAN wakeup operation by using TRAVEO™ T2G family MCUs.

TRAVEO™ T2G family MCUs have the following pins for wakeup:

Up to 10 pins to wake up from Hibernate mode

See the datasheet for the supported number of pins that can wake up the device from Hibernate mode.

GPIO pins to wake up from DeepSleep mode

See the datasheet for the supported number of GPIO that can wake up the device from DeepSleep mode.

The CAN block cannot detect a wakeup condition when the MCU is DeepSleep or Hibernate mode. To support CAN wakeup, the MCU should use the function of GPIO interrupt or WAKEUP pin. It is not mandatory to change the HSIOM configuration of CAN_RX to GPIO before going into DeepSleep and reconfigure the same pin to CAN_RX after wakeup. However, the Interrupt configuration for GPIO is mandatory.

Figure 16 shows the example of CAN wakeup from DeepSleep.



3 Power modes transition

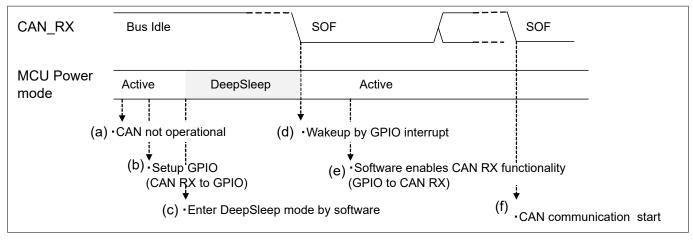


Figure 16 CAN wakeup from DeepSleep mode

The software sets the I/O port and GPIO interrupt before the MCU enters low-power mode. The CAN receive functionality is disabled. After that, when the MCU detects a wakeup signal while in low-power mode, the MCU wakes up from low-power mode. After that, software enables the CAN receive functionality and CAN communication starts. For more details on CAN and GPIO, see architecture reference manual.

3.4.1 Configuration and example code

Table 15 lists the functions of the configuration part in SDL for CAN wakeup operation. In this example, the GPIO and CAN RX pins are common.

Table 15 List of CAN wakeup operation configuration functions

Functions	Description	Remarks
GpioIntHandler()	Handler for GPIO interrupts	See Code Listing 30
Cy_GPIO_Pin_Init()	Initialize all pin configuration setting for the pin	See Code Listing 30
Cy_SysPm_DeepSleep()	Puts the system to DeepSleep	See Code Listing 31

Code Listing 28 demonstrates an example program to CAN wakeup operation. See the architecture reference manual and application note for CAN.



3 Power modes transition

Code Listing 28 Example to CAN wakeup operation

```
int main(void)
/* Wakeup by GPIO interrupt. See (d) of Figure 16. See Code Listing 29 */
   Cy_SysInt_SetSystemIrqVector(gpio_irq_cfg.sysIntSrc, GpioIntHandler);
   for(;;)
            /* Stop CAN */
            /* CAN Clock stop request */
            /* Stop CANFD. See (a) of Figure 16. */
            CY_CANFD_UNIT->unCTL.stcField.u8STOP_REQ = CY_CANFD_STOP_REQ_BIT;
            while(CY_CANFD_UNIT->unSTATUS.stcField.u8STOP_ACK != CY_CANFD_STOP_REQ_BIT);
            /* Change CAN Rx Port to GPIO */
            /* Change CAN RX to GPIO. See (b) of Figure 16. See Code Listing 30 */
            Cy_GPIO_Pin_Init(CY_CANFD0_RX_PORT, CY_CANFD0_RX_PIN, &user_button_port_pin_cfg);
            /* Put the system to DeepSleep */
            /* Enter DeepSleep mode. See (c) of Figure 16. See Code Listing 31 */
            Cy_SysPm_DeepSleep(CY SYSPM WAIT FOR INTERRUPT);
            /* Change GPIO to CAN Rx Port */
            /* Change GPIO to CAN RX. See (e) of Figure 16. See Code Listing 30 */
            Cy_GPIO_Pin_Init(can_pin_cfg[0].portReg, can_pin_cfg[0].pinNum,
&can_pin_cfg[0].cfg);
            /* CAN Clock start request */
            CY_CANFD_UNIT->unCTL.stcField.u8STOP_REQ = 0x00ul;
            while(CY_CANFD_UNIT->unSTATUS.stcField.u8STOP_ACK != 0x00ul);
            /* Start CAN */
            CY_CANFD_TYPE->M_TTCAN.unCCCR.stcField.u1INIT = Oul;
            /* Start CANFD. See (f) of Figure 16 */
            while(CY_CANFD_TYPE->M_TTCAN.unCCCR.stcField.u1INIT != 0ul);
       }
   }
}
```



3 Power modes transition

Code Listing 29 GpioIntHandler() function

```
/* Handler for GPIO interrupts */
void GpioIntHandler(void)
{
    uint32_t intStatus;

    /* If falling edge detected */
    intStatus = Cy_GPIO_GetInterruptStatusMasked(CY_CANFD0_RX_PORT, CY_CANFD0_RX_PIN);
    if (intStatus != 0ul)
    {
        Cy_GPIO_ClearInterrupt(CY_CANFD0_RX_PORT, CY_CANFD0_RX_PIN);
    }
}
```

Code Listing 30 Cy_GPIO_Init() function

```
cy_en_gpio_status_t Cy_GPIO_Pin_Init(volatile stc_GPIO_PRT_t *base, uint32_t pinNum, const
cy_stc_gpio_pin_config_t *config)
    /* Initialize all pin configuration setting for the pin */
    cy_en_gpio_status_t status = CY_GPIO_SUCCESS;
    if((NULL != base) && (NULL != config))
        Cy_GPIO_Write(base, pinNum, config->outVal);
        Cy_GPIO_SetHSIOM(base, pinNum, config->hsiom);
        Cy_GPIO_SetVtrip(base, pinNum, config->vtrip);
        Cy_GPIO_SetSlewRate(base, pinNum, config->slewRate);
        Cy_GPIO_SetDriveSel(base, pinNum, config->driveSel);
        Cy_GPIO_SetDrivemode(base, pinNum, config->driveMode);
        Cy_GPIO_SetInterruptEdge(base, pinNum, config->intEdge);
        Cy_GPIO_ClearInterrupt(base, pinNum);
        Cy_GPIO_SetInterruptMask(base, pinNum, config->intMask);
    else
    {
        status = CY_GPIO_BAD_PARAM;
    return(status);
}
```



3 Power modes transition

Code Listing 31 Cy_SysPm_DeepSleep() function

```
/* Sets a CPU core to the DeepSleep mode */
cy_en_syspm_status_t Cy_SysPm_DeepSleep(cy_en_syspm_waitfor_t waitFor)
{
   uint32_t interruptState;
   cy_en_syspm_status_t retVal = CY_SYSPM_SUCCESS;
    /* Call the registered callback functions with
    * the CY_SYSPM_CHECK_READY parameter.
   if(Ou != currentRegisteredCallbacksNumber)
        retVal = Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_READY);
    }
    /* The device (core) can switch into the deep sleep power mode only when
    * all executed registered callback functions with the CY_SYSPM_CHECK_READY
    * parameter returned CY_SYSPM_SUCCESS.
    if(retVal == CY_SYSPM_SUCCESS)
        /* Call the registered callback functions with the CY_SYSPM_BEFORE_TRANSITION
        * parameter. The return value is ignored.
        interruptState = Cy_SysLib_EnterCriticalSection();
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_BEFORE_ENTER);
   #if(@u != CY_CPU_CORTEX_MOP)
        /* The CPU enters the deep sleep mode upon execution of WFI/WFE */
        SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
        if(waitFor != CY_SYSPM_WAIT_FOR_EVENT)
        {
            __WFI();
        }
        else
            __WFE();
        }
   #else
        /* Repeat WFI/WFE instructions if wake up was not intended.
        * Cypress Ticket #272909
        */
        do
        {
            SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
```



3 Power modes transition

```
if(waitFor != CY_SYSPM_WAIT_FOR_EVENT)
            {
                __WFI();
            }
            else
            {
                __WFE();
        } while (0); //rmkn _FLD2VAL(CPUSS_CM4_PWR_CTL_PWR_MODE, CPUSS-
>unCM4_PWR_CTL.u32Register) == CY_SYSPM_CM4_PWR_CTL_PWR_MODE_RETAINED);
   #endif /* (Ou != CY_CPU_CORTEX_MOP) */
        Cy_SysLib_ExitCriticalSection(interruptState);
        /* Call the registered callback functions with the CY_SYSPM_AFTER_TRANSITION
        * parameter. The return value is ignored.
        if(Ou != currentRegisteredCallbacksNumber)
            (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_AFTER_EXIT);
        }
   }
   else
        /* Execute callback functions with the CY_SYSPM_CHECK_FAIL parameter to
        * undo everything done in the callback with the CY_SYSPM_CHECK_READY
        * parameter. The return value is ignored.
        (void) Cy_SysPm_ExecuteCallback(CY_SYSPM_DEEPSLEEP, CY_SYSPM_CHECK_FAIL);
        retVal = CY_SYSPM_FAIL;
   return retVal;
}
```



Glossary

Glossary

Table 16 Glossary

manual for details. Basic WDT Basic watchdog timer. See the "Watchdog Timer" chapter of the architecture reference manual for details. BOD Brown-out detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. CPUSS CPU subsystem. See the "CPU subsystem" section of the architecture reference manual for details. ECO External crystal oscillator. See the "Clocking system" chapter of the architecture reference manual for details. EVTGEN Event generator. See the "Event generator" chapter of the architecture reference manual for details. FILL Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Clocking system" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	Terms	Description	
reference manual for details. BOD Brown-out detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. CPUSS CPU subsystem. See the "CPU subsystem" section of the architecture reference manual for details. ECO External crystal oscillator. See the "Clocking system" chapter of the architecture reference manual for details. EVTGEN Event generator. See the "Event generator" chapter of the architecture reference manual for details. FILL Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LVS supplies Low-voltage supplies. LVD Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	ADC	Analog-to-digital converter. See the "SAR ADC" chapter of the architecture reference manual for details.	
architecture reference manual for details. CPUSS CPU subsystem. See the "CPU subsystem" section of the architecture reference manual for details. ECO External crystal oscillator. See the "Clocking system" chapter of the architecture reference manual for details. EVTGEN Event generator. See the "Event generator" chapter of the architecture reference manual for details. Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Clocking system" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	Basic WDT		
manual for details. ECO External crystal oscillator. See the "Clocking system" chapter of the architecture reference manual for details. EVTGEN Event generator. See the "Event generator" chapter of the architecture reference manual for details. FILL Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	BOD		
reference manual for details. EVTGEN Event generator. See the "Event generator" chapter of the architecture reference manual for details. FLL Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	CPUSS		
manual for details. FLL Frequency-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	ECO	· · · · · · · · · · · · · · · · · · ·	
reference manual for details. GPIO General-purpose input/output. See the "I/O system" chapter of the architecture reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	EVTGEN	Event generator. See the "Event generator" chapter of the architecture reference manual for details.	
reference manual for details. HF High-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	FLL		
reference manual for details. ILO Internal low-speed oscillators. See the "Clocking system" chapter of the architectore reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architectore reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	GPIO		
reference manual for details. IMO Internal main oscillator. See the "Clocking system" chapter of the architecture reference manual for details. LF Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	HF		
reference manual for details. Low-frequency clock. See the "Clocking system" chapter of the architecture reference manual for details LOW-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	ILO	Internal low-speed oscillators. See the "Clocking system" chapter of the architecture reference manual for details.	
LPACTIVE Low-power active. See the "Device power modes" chapter of the architecture reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	IMO		
reference manual for details. LV supplies Low-voltage supplies. LVD Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	LF		
Low-voltage detection. See the "Power supply and monitoring" chapter of the architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	LPACTIVE		
Architecture reference manual for details. MCWDT Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details. Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	LV supplies	Low-voltage supplies.	
Pending interrupt Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details. PLL Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	LVD		
PLL Phase-locked loop. See the "Clocking system" chapter of the architecture referer manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	MCWDT	Multi-counter watchdog timer. See the "Watchdog timer" chapter of the architecture reference manual for details.	
manual for details. POR Power-on reset. See the "Reset system" chapter of the architecture reference	Pending interrupt	Interrupt of pending state. See the "Interrupts" chapter of the architecture reference manual for details.	
	PLL	Phase-locked loop. See the "Clocking system" chapter of the architecture reference manual for details.	
manual for details.	POR	Power-on reset. See the "Reset system" chapter of the architecture reference manual for details.	

(table continues...)



Glossary

Table 16 (continued) Glossary

Terms	Description	
RTC	Real-time clock. See the "Real-time clock" chapter of the architecture reference manual for details.	
SCB	Serial communication block. See the "Serial communication block (SCB)" chapter of the architecture reference manual for details.	
SRSS	System resources subsystem. See the "System resources subsystem" section of the architecture reference manual for details.	
VDDD	Digital power supply.	
WCO	Watch crystal oscillator. See the "Clocking system" chapter of the architecture reference manual for details.	
WDT	Watchdog timer reset. See the "Watchdog timer" chapter of the architecture reference manual for details.	
WFE	Wait for event instruction	
WFI	Wait for interrupt instruction	
WIC	Wakeup interrupt controller. See the "Interrupts" chapter of the architecture reference manual for details.	
XRES	External reset I/O pin. See the "Reset system" chapter of the architecture reference manual for details.	



References

References

The following are the TRAVEO™ T2G family series datasheets and technical reference manuals. Contact Technical Support to obtain these documents.

1. Device datasheets:

- CYT2B6 datasheet 32-bit Arm[®] Cortex[®]-M4F microcontroller TRAVEO™ T2G family
- CYT2B7 datasheet 32-bit Arm[®] Cortex[®]-M4F microcontroller TRAVEO[™] T2G family
- CYT2B9 datasheet 32-bit Arm[®] Cortex[®]-M4F microcontroller TRAVEO[™] T2G family
- CYT2BL datasheet 32-bit Arm[®] Cortex[®]-M4F microcontroller TRAVEO[™] T2G family
- CYT3BB/4BB datasheet 32-bit Arm® Cortex®-M7 microcontroller TRAVEO™ T2G family
- CYT4BF datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO™ T2G family
- CYT6BJ datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-33466)
- CYT3DL datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family
- CYT4DN datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO™ T2G family
- CYT4EN datasheet 32-bit Arm[®] Cortex[®]-M7 microcontroller TRAVEO[™] T2G family (Doc No. 002-30842)
- CYT2CL datasheet 32-bit Arm[®] Cortex[®]-M4F microcontroller TRAVEO™ T2G family

2. Technical reference manuals:

- Body controller entry family
 - TRAVEO™ T2G automotive body controller entry family architecture reference manual
 - TRAVEO™ T2G automotive body controller entry registers reference manual for CYT2B7
 - TRAVEO™ T2G automotive body controller entry registers reference manual for CYT2B9
 - TRAVEO™ T2G automotive body controller entry registers reference manual for CYT2BL (Doc No. 002-29852)
- Body controller high family
 - TRAVEO™ T2G automotive body controller high family architecture reference manual
 - TRAVEO™ T2G automotive body controller high registers reference manual for CYT3BB/4BB
 - TRAVEO™ T2G automotive body controller high registers reference manual for CYT4BF
 - TRAVEO™ T2G automotive body controller high registers reference manual for CYT6BJ (Doc No. 002-36068)
- Cluster 2D family
 - TRAVEO™ T2G automotive cluster 2D architecture reference manual
 - TRAVEO™ T2G automotive cluster 2D registers reference manual for CYT3DL
 - TRAVEO™ T2G automotive cluster 2D registers reference manual for CYT4DN
 - TRAVEO™ T2G automotive cluster 2D registers reference manual for CYT4EN (Doc No. 002-35181)
- Cluster entry family
 - TRAVEO™ T2G automotive cluster entry family architecture reference manual
 - TRAVEO™ T2G automotive cluster entry registers reference manual for CYT2CL

3. Application notes:

- AN220193 GPIO usage setup in TRAVEO™ T2G family
- AN219944 Using the watchdog timer in TRAVEO™ T2G family MCUs
- AN219755 Using a SAR ADC in TRAVEO™ T2G automotive microcontrollers
- AN220203 Smart I/O usage setup in TRAVEO™ T2G family
- AN220278 How to use CAN FD in TRAVEO[™] T2G family



Other references

Other references

A sample driver library (SDL) including startup as sample software to access various peripherals is provided. SDL also serves as a reference to customers, for drivers that are not covered by the official AUTOSAR products. The SDL cannot be used for production purposes as it does not qualify to any automotive standards. The code snippets in this application note are part of the SDL. Contact Technical Support to obtain the SDL.



Revision history

Revision history

Document version	Date of release	Description of changes
**	2019-02-28	New application note.
*A	2019-11-05	Updated Associated Part Family as "Traveo™ II Family CYT2B/CYT4B/ CYT4D Series".
		Added target part numbers "CYT4D Series" related information in all instances across the document.
		Updated Power Modes Transition:
		Added "CAN wakeup operation".
*B	2020-03-12	Updated associated part family as "TRAVEO™ T2G family CYT2/CYT3/CYT4 series".
		Changed target part numbers from "CYT2B/CYT4B/CYT4D series" to "CYT2/CYT4 Series" in all instances across the document.
		Added target part numbers "CYT3 Series" related information in all instances across the document.
*C	2020-12-03	Updated power modes transition:
		Updated cyclic wakeup Operation:
		Added "Usage of smart I/O in cyclic wakeup".
*D	2021-04-19	Updated to Infineon template.
*E	2021-10-21	Added example of SDL code and description in all instances.
*F	2023-11-13	Template update; no content update.
*G	2024-12-17	Added support to CYT6BJ
		Updated References section
*H	2025-09-01	Updated Wakeup from low-power modes

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2025-09-01 Published by Infineon Technologies AG 81726 Munich, Germany

© 2025 Infineon Technologies AG All Rights Reserved.

Do you have a question about any aspect of this document?

 ${\bf Email: erratum@infineon.com}$

Document reference IFX-dgq1681442014347

Important notice

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.