
Loader Communication Specifications for LG Display ToE CC-Link Type Ver 0.8

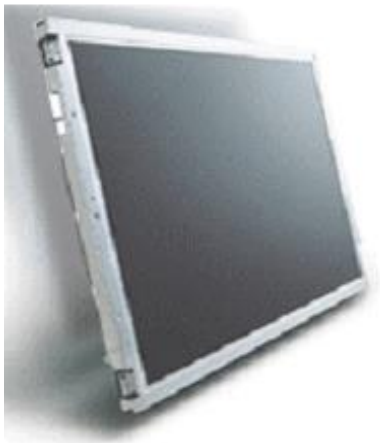

E C S

LG CNS

1. From ToE Ver 0.1 to Ver 0.2

국	신호	Contents	Description
34		Port CST LIFT SENSOR	"Port CST 들림감지센서" Add
63		Robot Action Enable	"Equipment #4" Add

2. From ToE Ver 0.2 to Ver 0.3

국	신호	Contents	Description
11		11.Robot #3(Robostar)	"Robostar I/O Map" Add

3. From ToE Ver 0.3 to Ver 0.4

국	신호	Contents	Description
1		1.Robot #1(Hyundai)	"Hyundai I/O Map" Add
6		6.Robot #2 (Hyundai_TRF)	"Hyundai (TRF) I/O Map" Add
6		6.Robot #2(Yaskawa-XRC)	"Yaskawa-XRC I/O Map" Add

4. From ToE Ver 0.4 to Ver 0.5

국	신호	Contents	Description
6		6.Robot #2 (Hyundai_TRF)	"Hyundai (TRF) I/O Map" V1.0 Add
39		39.IONIZER	"SIGNAL TOWER RED/YELLOW/GREEN" Add

5. From ToE Ver 0.5 to Ver 0.6

국	신호	Contents	Description
17		16.Ionizer Error	"Ionizer Error Port 7~8" Delete
38		35.PORT	"Port I/O Port 7,8" Delete
57~60		45.Mapping	"Mapping In Port 7~8" Delete
61~62		61.ALIGN STAGE	"Align Stage In/Out" Delete
57~62		57.Buffer In TRF(CLIC)	"Buffer Sensor Input(TRF(CLIC))" Add

6. From ToE Ver 0.6 to Ver 0.7

국	신호	Contents	Description
16		16.Ionizer Error	"Ionizer Error Port 6" Delete
34		34.PORT CST LIFT	"Port #6 CST 들림 감지 센서" Delete
37		35.PORT	"Port I/O Port 6" Delete
39		39.IONIZER	"Port #6 Ionizer" Delete
41		41.STK IF	"STK Interlock Input(Port #6)" Delete
43		41.STK IF	"STK Interlock Output(Port #6)" Delete
44		41.STK IF	"STK Interlock Input(Port #6)" Delete
55~56		45.Mapping	"Mapping In Port 6" Delete
55~62		55.Buffer In TRF(CLIC)	"Buffer Sensor Input(TRF(CLIC))" Add

MASTER STATION ECS Q80BD-J61BT11N		Intelligent Device
		Normal Station
		예약국

1국 Intelligent Device Robot 1 (Hyundai)	5국 예약국	6국 Intelligent Device Robot 2 (Yaskawa)	10국 예약국	11국 Intelligent Device Robot 3 (Robostar)	15국 예약국
16국 Ionizer Error Port 1~5	17국 예약국	18국 예약국	19국 Loader TPD	20국 Robot,공통 I/O Robot 1,2	21국 Robot,공통 I/O Robot 3
22국 Interlock In EQP 1,2	23국 Interlock Out EQP 1	24국 Interlock Out EQP 2	25국 Interlock In EQP 3,4	26국 Interlock Out EQP 3	27국 Interlock Out EQP 4
28국 Interlock In EQP 5,6	29국 Interlock Out EQP 5	30국 Interlock Out EQP 6	31국 Interlock In EQP 7,8	32국 Interlock Out EQP 7	33국 Interlock Out EQP 8
34국 Port CST LIFT SENSOR	35국 Port I/O Port 1,2	36국 Port I/O Port 3,4	37국 Port I/O Port 5,6	38국 예약국	39국 Ionizer I/O Port 1~5
40국 예약국	41국 STK Interlock In Port 1~5	42국 STK Interlock Out Port 1~4	43국 STK Interlock Out Port 5	44국 STK Interlock In (ULD) Port 1~5	45국 Mapping In Port 1
46국 Mapping In Port 1	47국 Mapping In Port 2	48국 Mapping In Port 2	49국 Mapping In Port 3	50국 Mapping In Port 3	51국 Mapping In Port 4
52국 Mapping In Port 4	53국 Mapping In Port 5	54국 Mapping In Port 5	55국 Buffer In TRF(CLIC)	56국 Buffer In TRF(CLIC)	57국 Buffer In TRF(CLIC)
58국 Buffer In TRF(CLIC)	59국 Buffer In TRF(CLIC)	60국 Buffer In TRF(CLIC)	61국 Buffer In TRF(CLIC)	62국 Buffer In TRF(CLIC)	63국 RAE&Buffer In Loader
64국 RAE&Buffer In Unloader					

CC-LINK2.0 Double, 224 Points (14칸) / 32 Words

국번	마스터영역						Remote Station Points	리모트국 I/O(TB)				리모트국 레지스터		리모트국 형식	용도
	X		Y		Ww	Wr		입력		출력		Ww	Wr		
	Start	End	Start	End				Start	End	Start	End				
1	X000	X00F	Y000	Y00F	Ww000	Wr000	224	X000		Y000		Ww000	Wr000	Intelligent Device	Robot 1 (Hyundai)
	X0D0	X0DF	Y0D0	Y0DF	Ww01F	Wr01F			X0DF		Y0DF	Ww01F	Wr01F		
5	X0E0	X0EF	Y0E0	Y0EF			32								예약국
	X0F0	X0FF	Y0F0	Y0FF											
6	X100	X10F	Y100	Y10F	Ww020	Wr020	224	X000		Y000		Ww000	Wr000	Intelligent Device	Robot 2 (Hyundai_TRF)
	X1D0	X1DF	Y1D0	Y1DF	Ww03F	Wr03F			X07F		Y07F	Ww00F	Wr00F		
10	X1E0	X1EF	Y1E0	Y1EF	Ww040	Wr040	32								예약국
	X1F0	X1FF	Y1F0	Y1FF	Ww047	Wr047									
6	X100	X10F	Y100	Y10F	Ww020	Wr020	128	X000		Y000		Ww000	Wr000	Intelligent Device	Robot 2 (Hyundai_TRF) Ver.1 Single Type
	X170	X17F	Y170	Y17F	Ww02F	Wr02F			X07F		Y07F	Ww00F	Wr00F		
10	X180	X18F	Y180	Y18F	Ww030	Wr034	128								예약국
	X1F0	X1FF	Y1F0	Y1FF	Ww047	Wr047									
6	X100	X10F	Y100	Y10F	Ww020	Wr020	128	X000		Y000		Ww000	Wr000	Intelligent Device	Robot 2 (Yaskawa-XRC) Ver.1 Single Type
	X170	X17F	Y170	Y17F	Ww02F	Wr02F			X07F		Y07F	Ww00F	Wr00F		
10	X180	X18F	Y180	Y18F	Ww030	Wr034	128								예약국
	X1F0	X1FF	Y1F0	Y1FF	Ww047	Wr047									
11	X200	X20F	Y200	Y20F	Ww048	Wr048	224	X000		Y000		Ww000	Wr000	Intelligent Device	Robot 3 (Robostar)
	X2D0	X2DF	Y2D0	Y2DF	Ww067	Wr067			X0DF		Y0DF	Ww01F	Wr01F		
15	X2E0	X2EF	Y2E0	Y2EF	Ww068	Wr068	32								예약국
	X2F0	X2FF	Y2F0	Y2FF	Ww06B	Wr06B									
16	X300	X30F	Y300	Y30F	Ww06C	Wr06C	32	TB08						Remote I/O	Ionier Error Port 1 ~ 5
	X310	X31F	Y310	Y31F	Ww06F	Wr06F			TB39						
17	X320	X32F	Y320	Y32F	Ww070	Wr070	32								예약국
	X330	X33F	Y330	Y33F	Ww073	Wr073									
18	X340	X34F	Y340	Y34F	Ww074	Wr074	32								예약국
	X350	X35F	Y350	Y35F	Ww077	Wr077									
19	X360	X36F	Y360	Y36F	Ww078	Wr078	32	TB08	TB23			Ww000	Wr000	Remote I/O	Loader TPD
	X370	X37F	Y370	Y37F	Ww07B	Wr07B				TB24	TB39	Ww003	Wr003		
20	X380	X38F	Y380	Y38F	Ww07C	Wr07C	32	TB08	TB23					Remote I/O	Robot,공통 I/O Robot 1,2
	X390	X39F	Y390	Y39F	Ww07F	Wr07F				TB24	TB39				
21	X3A0	X3AF	Y3A0	Y3AF	Ww080	Wr080	32	TB08	TB23					Remote I/O	Robot,공통 I/O Robot 3
	X3B0	X3BF	Y3B0	Y3BF	Ww083	Wr083				TB24	TB39				
22	X3C0	X3CF	Y3C0	Y3CF	Ww084	Wr084	32	TB08						Remote I/O	Interlock In EQP 1,2
	X3D0	X3DF	Y3D0	Y3DF	Ww087	Wr087			TB39						
23	X3E0	X3EF	Y3E0	Y3EF	Ww088	Wr088	32			TB08	TB23			Remote I/O	Interlock Out EQP 1
	X3F0	X3FF	Y3F0	Y3FF	Ww08B	Wr08B									
24	X400	X40F	Y400	Y40F	Ww08C	Wr08C	32			TB08	TB23			Remote I/O	Interlock Out EQP 2
	X410	X41F	Y410	Y41F	Ww08F	Wr08F									
25	X420	X42F	Y420	Y42F	Ww090	Wr090	32	TB08						Remote I/O	Interlock In EQP 3,4
	X430	X43F	Y430	Y43F	Ww093	Wr093			TB39						
26	X440	X44F	Y440	Y44F	Ww094	Wr094	32			TB08	TB23			Remote I/O	Interlock Out EQP 3
	X450	X45F	Y450	Y45F	Ww097	Wr097									
27	X460	X46F	Y460	Y46F	Ww098	Wr098	32			TB08	TB23			Remote I/O	Interlock Out EQP 4
	X470	X47F	Y470	Y47F	Ww09B	Wr09B									
28	X480	X48F	Y480	Y48F	Ww09C	Wr09C	32	TB08						Remote I/O	Interlock In EQP 5,6
	X490	X49F	Y490	Y49F	Ww09F	Wr09F			TB39						
29	X4A0	X4AF	Y4A0	Y4AF	Ww0A0	Wr0A0	32			TB08	TB23			Remote I/O	Interlock Out EQP 5
	X4B0	X4BF	Y4B0	Y4BF	Ww0A3	Wr0A3									
30	X4C0	X4CF	Y4C0	Y4CF	Ww0A4	Wr0A4	32			TB08	TB23			Remote I/O	Interlock Out EQP 6
	X4D0	X4DF	Y4D0	Y4DF	Ww0A7	Wr0A7									
31	X4E0	X4EF	Y4E0	Y4EF	Ww0A8	Wr0A8	32	TB08						Remote I/O	Interlock In EQP 7,8
	X4F0	X4FF	Y4F0	Y4FF	Ww0AB	Wr0AB			TB39						
32	X500	X50F	Y500	Y50F	Ww0AC	Wr0AC	32			TB08	TB23			Remote I/O	Interlock Out EQP 7
	X510	X51F	Y510	Y51F	Ww0AF	Wr0AF									
33	X520	X52F	Y520	Y52F	Ww0B0	Wr0B0	32			TB08	TB23			Remote I/O	Interlock Out EQP 8
	X530	X53F	Y530	Y53F	Ww0B3	Wr0B3									
34	X540	X54F	Y540	Y54F	Ww0B4	Wr0B4	32	TB08						Remote I/O	PORT CST LIFT
	X550	X55F	Y550	Y55F	Ww0B7	Wr0B7			TB39						

국번	마스터영역						Remote Station Points	리모트국 I/O(TB)				리모트국 레지스터		리모트국 형식	용도
	X		Y		Ww	Wr		입력		출력		Ww	Wr		
	Start	End	Start	End				Start	End	Start	End				
35	X560	X56F	Y560	Y56F	Ww0B8	Wr0B8	32	TB08	TB23					Remote I/O	Port I/O
	X570	X57F	Y570	Y57F	Ww0BB	Wr0BB				TB24	TB39				Port 1,2
36	X580	X58F	Y580	Y58F	Ww0BC	Wr0BC	32	TB08	TB23					Remote I/O	Port I/O
	X590	X59F	Y590	Y59F	Ww0BF	Wr0BF				TB24	TB39				Port 3,4
37	X5A0	X5AF	Y5A0	Y5AF	Ww0C0	Wr0C0	32	TB08	TB23					Remote I/O	Port I/O
	X5B0	X5BF	Y5B0	Y5BF	Ww0C3	Wr0C3				TB24	TB39				Port 5
38	X5C0	X5CF	Y5C0	Y5CF	Ww0C4	Wr0C4	32								예약국
	X5D0	X5DF	Y5D0	Y5DF	Ww0C7	Wr0C7									
39	X5E0	X5EF	Y5E0	Y5EF	Ww0C8	Wr0C8	32	TB08	TB23					Remote I/O	Ionizer I/O
	X5F0	X5FF	Y5F0	Y5FF	Ww0CB	Wr0CB				TB24	TB39				Port 1~5
40	X600	X60F	Y600	Y60F	Ww0CC	Wr0CC	32								예약국
	X610	X61F	Y610	Y61F	Ww0CF	Wr0CF									
41	X620	X62F	Y620	Y62F	Ww0D0	Wr0D0	32	TB08						Remote I/O	STK Interlock In
	X630	X63F	Y630	Y63F	Ww0D3	Wr0D3			TB39						Port 1~5
42	X640	X64F	Y640	Y64F	Ww0D4	Wr0D4	32			TB08	TB23			Remote I/O	STK Interlock Out
	X650	X65F	Y650	Y65F	Ww0D7	Wr0D7									Port 1~4
43	X660	X66F	Y660	Y66F	Ww0D8	Wr0D8	32			TB08	TB23			Remote I/O	STK Interlock Out
	X670	X67F	Y670	Y67F	Ww0DB	Wr0DB									Port 5
44	X680	X68F	Y680	Y68F	Ww0DC	Wr0DC	32	TB08						Remote I/O	STK Interlock In
	X690	X69F	Y690	Y69F	Ww0DF	Wr0DF			TB39						(ULD) Port 1~5
45	X6A0	X6AF	Y6A0	Y6AF	Ww0E0	Wr0E0	32	X000						Remote I/O	Mapping In
	X6B0	X6BF	Y6B0	Y6BF	Ww0E3	Wr0E3			X01F						Port 1
46	X6C0	X6CF	Y6C0	Y6CF	Ww0E4	Wr0E4	32	X000						Remote I/O	Mapping In
	X6D0	X6DF	Y6D0	Y6DF	Ww0E7	Wr0E7			X01F						Port 1
47	X6E0	X6EF	Y6E0	Y6EF	Ww0E8	Wr0E8	32	X000						Remote I/O	Mapping In
	X6F0	X6FF	Y6F0	Y6FF	Ww0EB	Wr0EB			X01F						Port 2
48	X700	X70F	Y700	Y70F	Ww0EC	Wr0EC	32	X000						Remote I/O	Mapping In
	X710	X71F	Y710	Y71F	Ww0EF	Wr0EF			X01F						Port 2
49	X720	X72F	Y720	Y72F	Ww0F0	Wr0F0	32	X000						Remote I/O	Mapping In
	X730	X73F	Y730	Y73F	Ww0F3	Wr0F3			X01F						Port 3
50	X740	X74F	Y740	Y74F	Ww0F4	Wr0F4	32	X000						Remote I/O	Mapping In
	X750	X75F	Y750	Y75F	Ww0F7	Wr0F7			X01F						Port 3
51	X760	X76F	Y760	Y76F	Ww0F8	Wr0F8	32	X000						Remote I/O	Mapping In
	X770	X77F	Y770	Y77F	Ww0FB	Wr0FB			X01F						Port 4
52	X780	X78F	Y780	Y78F	Ww0FC	Wr0FC	32	X000						Remote I/O	Mapping In
	X790	X79F	Y790	Y79F	Ww0FF	Wr0FF			X01F						Port 4
53	X7A0	X7AF	Y7A0	Y7AF	Ww100	Wr100	32	X000						Remote I/O	Mapping In
	X7B0	X7BF	Y7B0	Y7BF	Ww103	Wr103			X01F						Port 5
54	X7C0	X7CF	Y7C0	Y7CF	Ww104	Wr104	32	X000						Remote I/O	Mapping In
	X7D0	X7DF	Y7D0	Y7DF	Ww107	Wr107			X01F						Port 5
55	X7E0	X7EF	Y7E0	Y7EF	Ww108	Wr108	32	X000						Remote I/O	Buffer In
	X7F0	X7FF	Y7F0	Y7FF	Ww10B	Wr10B			X01F						TRF(CLIC)
56	X800	X80F	Y800	Y80F	Ww10C	Wr10C	32	X000						Remote I/O	Buffer In
	X810	X81F	Y810	Y81F	Ww10F	Wr10F			X01F						TRF(CLIC)
57	X820	X82F	Y820	Y82F	Ww110	Wr110	32	TB08						Remote I/O	Buffer In
	X830	X83F	Y830	Y83F	Ww113	Wr113			TB39						TRF(CLIC)
58	X840	X84F	Y840	Y84F	Ww114	Wr114	32	TB08						Remote I/O	Buffer In
	X850	X85F	Y850	Y85F	Ww117	Wr117			TB39						TRF(CLIC)
59	X860	X86F	Y860	Y86F	Ww118	Wr118	32	TB08						Remote I/O	Buffer In
	X870	X87F	Y870	Y87F	Ww11B	Wr11B			TB39						TRF(CLIC)
60	X880	X88F	Y880	Y88F	Ww11C	Wr11C	32	TB08						Remote I/O	Buffer In
	X890	X89F	Y890	Y89F	Ww11F	Wr11F			TB39						TRF(CLIC)
61	X8A0	X8AF	Y8A0	Y8AF	Ww120	Wr120	32	TB08						Remote I/O	Buffer In
	X8B0	X8BF	Y8B0	Y8BF	Ww123	Wr123			TB39						TRF(CLIC)
62	X8C0	X8CF	Y8C0	Y8CF	Ww124	Wr124	32	TB08						Remote I/O	Buffer In
	X8D0	X8DF	Y8D0	Y8DF	Ww127	Wr127			TB39						TRF(CLIC)
63	X8E0	X8EF	Y8E0	Y8EF	Ww128	Wr128	32	TB08						Remote I/O	EQP RAE
	X8F0	X8FF	Y8F0	Y8FF	Ww12B	Wr12B			TB39						Buffer In(LD)
64	X900	X90F	Y900	Y90F	Ww12C	Wr12C	32	TB08						Remote I/O	EQP RAE
	X910	X91F	Y910	Y91F	Ww12F	Wr12F			TB39						Buffer In(ULD)

Station No.	1
Station Type	Intelligent Device
용 도	Robot #1 (Hyundai 기준)

입력		Name	출력		Name
Master	Remote		Master	Remote	
X000	X000	RUNNING	Y000	Y000	
X001	X001	SERVO ON	Y001	Y001	EXTERNAL RESET
X002	X002	ROBOT 에러	Y002	Y002	ALARM/ERROR RESET
X003	X003	ROBOT READY OK	Y003	Y003	EXTERNAL START
X004	X004	REMOTE MODE	Y004	Y004	EXTERNAL HOLD (B접점)
X005	X005	TEACH MODE	Y005	Y005	
X006	X006	PLAYBACK MODE	Y006	Y006	
X007	X007	COMMAND READY OK	Y007	Y007	MAIN PROGRAM CALL
X008	X008	작업원점	Y008	Y008	
X009	X009	ARM 원점(L/R)	Y009	Y009	REMOTE MODE
X00A	X00A		Y00A	Y00A	TEACH MODE
X00B	X00B		Y00B	Y00B	PLAYBACK MODE
X00C	X00C		Y00C	Y00C	
X00D	X00D		Y00D	Y00D	
X00E	X00E	비상정지	Y00E	Y00E	SIMULATION MODE
X00F	X00F	HOLD 중	Y00F	Y00F	흡착무효(무효:1)
X010	X010	COMMAND 실행완료	Y010	Y010	COMMAND START
X011	X011	LOADING COMPLETE	Y011	Y011	COMMAND 일치
X012	X012	UNLOADING COMPLETE	Y012	Y012	저온/고온 구분(1:고온)
X013	X013	상핸드 ALIGNMENT COMPLETE	Y013	Y013	COMMAND 불일치
X014	X014	COMMAND 일치요구	Y014	Y014	
X015	X015	COMMAND 실행 중	Y015	Y015	GLASS 검출무효(무효:1)
X016	X016	COMMAND 이상 CODE STROBE	Y016	Y016	COMMAND 이상코드 ACK
X017	X017	ROBOT 이상 CODE STROBE	Y017	Y017	
X018	X018	실행중 COMMAND 1	Y018	Y018	COMMNAD MOTION 1
X019	X019	실행중 COMMAND 2	Y019	Y019	COMMNAD MOTION 2
X01A	X01A	실행중 COMMAND 4	Y01A	Y01A	COMMNAD MOTION 4
X01B	X01B	실행중 COMMAND 8	Y01B	Y01B	COMMNAD MOTION 8
X01C	X01C	실행중 COMMAND 16	Y01C	Y01C	COMMNAD MOTION 16
X01D	X01D	실행중 COMMAND 32	Y01D	Y01D	COMMNAD MOTION 32
X01E	X01E	실행중 COMMAND 64	Y01E	Y01E	COMMNAD MOTION 64
X01F	X01F	실행중 COMMAND 128	Y01F	Y01F	COMMNAD MOTION 128
X020	X020	ROBOT HAND(상:0,하:1)	Y020	Y020	ROBOT HAND(상:0,하:1)
X021	X021	1st TARGET(단:0,다:1)	Y021	Y021	1st TARGET(단:0,다:1)
X022	X022	1st CST CODE(30 단)	Y022	Y022	1st CST CODE(30 단)
X023	X023	1st CST CODE(RESERVE)	Y023	Y023	1st CST CODE(RESERVE)
X024	X024	2nd TARGET(단:0,다:1)	Y024	Y024	2nd TARGET(단:0,다:1)
X025	X025	2nd CST CODE(30 단)	Y025	Y025	2nd CST CODE(30 단)
X026	X026	2nd CST CODE(RESERVE)	Y026	Y026	2nd CST CODE(RESERVE)
X027	X027	3rd TARGET(단:0,다:1)	Y027	Y027	3rd TARGET(단:0,다:1)
X028	X028	3rd CST CODE(30 단)	Y028	Y028	3rd CST CODE(30 단)
X029	X029	3rd CST CODE(RESERVE)	Y029	Y029	3rd CST CODE(RESERVE)
X02A	X02A	FORWARD POSITION 복귀 완료	Y02A	Y02A	
X02B	X02B	Extended Hand Down Start	Y02B	Y02B	
X02C	X02C	WAIT POSITION COMPLETE ON	Y02C	Y02C	WAIT POSITION COMPLETE ACK
X02D	X02D	ROBOT 경고발생	Y02D	Y02D	더블핸드
X02E	X02E	Unloading/Loading 1 차완료 (0.5")	Y02E	Y02E	ROBOT SPEED INPUT
X02F	X02F	장비측 핸드 진입 요청	Y02F	Y02F	장비측 핸드 진입 OK
X030	X030	GLASS 두께확인 1	Y030	Y030	Glass 두께지정 1
X031	X031	GLASS 두께확인 2	Y031	Y031	Glass 두께지정 2
X032	X032	GLASS 두께확인 4	Y032	Y032	Glass 두께지정 4
X033	X033		Y033	Y033	
X034	X034		Y034	Y034	
X035	X035		Y035	Y035	
X036	X036		Y036	Y036	
X037	X037		Y037	Y037	
Wr000	Wr000	1st POSITION MOTION (STAGE, SLOT NO)	Ww000	Ww000	1st POSITION MOTION (STAGE, SLOT NO)
Wr001	Wr001	2nd POSITION MOTION (STAGE, SLOT NO)	Ww001	Ww001	2nd POSITION MOTION (STAGE, SLOT NO)
Wr002	Wr002	3rd POSITION MOTION (STAGE, SLOT NO)	Ww002	Ww002	3rd POSITION MOTION (STAGE, SLOT NO)
Wr003	Wr003	로봇이상코드	Ww003	Ww003	
Wr004	Wr004		Ww004	Ww004	
Wr005	Wr005		Ww005	Ww005	
Wr006	Wr006		Ww006	Ww006	
Wr007	Wr007		Ww007	Ww007	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X038	X038	GLASS SIZE 1	Y038	Y038	GLASS SIZE 1
X039	X039	GLASS SIZE 2	Y039	Y039	GLASS SIZE 2
X03A	X03A	GLASS SIZE 4	Y03A	Y03A	GLASS SIZE 4
X03B	X03B	GLASS SIZE 8	Y03B	Y03B	GLASS SIZE 8
X03C	X03C	GLASS SIZE 16	Y03C	Y03C	GLASS SIZE 16
X03D	X03D	GLASS SIZE 32	Y03D	Y03D	GLASS SIZE 32
X03E	X03E	GLASS SIZE 64	Y03E	Y03E	GLASS SIZE 64
X03F	X03F	GLASS SIZE 128	Y03F	Y03F	GLASS SIZE 128
X040	X040	COMMAND 이상코드 1	Y040	Y040	VACCUM 흡착면(상면:0)
X041	X041	COMMAND 이상코드 2	Y041	Y041	
X042	X042	COMMAND 이상코드 4	Y042	Y042	
X043	X043	COMMAND 이상코드 8	Y043	Y043	
X044	X044	COMMAND 이상코드 16	Y044	Y044	
X045	X045	COMMAND 이상코드 32	Y045	Y045	
X046	X046	COMMAND 이상코드 64	Y046	Y046	
X047	X047	COMMAND 이상코드 128	Y047	Y047	
X048	X048	ROBOT MOVING 중	Y048	Y048	Command Complete ACK
X049	X049	ROBOT LOCK 유효	Y049	Y049	Loading Complete ACK
X04A	X04A	필드버스 이상	Y04A	Y04A	Unloading Complete ACK
X04B	X04B	배터리 전압 저하	Y04B	Y04B	
X04C	X04C	로봇 조작 에러	Y04C	Y04C	
X04D	X04D	그리스부족 사전 경고	Y04D	Y04D	
X04E	X04E	부하율 초과 경고	Y04E	Y04E	
X04F	X04F	라이트 커튼 동작 에러 (B 접점)	Y04F	Y04F	
X050	X050	하핸드 ALIGNMENT COMPLETE	Y050	Y050	
X051	X051	Upper Hand Home Position	Y051	Y051	
X052	X052	Lower Hand Home Position	Y052	Y052	
X053	X053		Y053	Y053	
X054	X054		Y054	Y054	
X055	X055	1st CST Code(2^2)	Y055	Y055	1st CST Code(2^2)
X056	X056	2nd CST Code(2^2)	Y056	Y056	2nd CST Code(2^2)
X057	X057	3rd CST Code(2^2)	Y057	Y057	3rd CST Code(2^2)
X058	X058		Y058	Y058	
X059	X059		Y059	Y059	
X05A	X05A	동작 실행 중 Upper Sub Position Bit 1	Y05A	Y05A	Upper Sub Position Bit 1
X05B	X05B	동작 실행 중 Upper Sub Position Bit 2	Y05B	Y05B	Upper Sub Position Bit 2
X05C	X05C	동작 실행 중 Upper Sub Position Bit 3	Y05C	Y05C	Upper Sub Position Bit 3
X05D	X05D	동작 실행 중 Lower Sub Position Bit 1	Y05D	Y05D	Lower Sub Position Bit 1
X05E	X05E	동작 실행 중 Lower Sub Position Bit 2	Y05E	Y05E	Lower Sub Position Bit 2
X05F	X05F	동작 실행 중 Lower Sub Position Bit 3	Y05F	Y05F	Lower Sub Position Bit 3
X060	X060	PLAYBACK 속도(%)	Y060	Y060	PLAYBACK 속도설정(OPTION)
X061	X061		Y061	Y061	
X062	X062		Y062	Y062	
X063	X063		Y063	Y063	
X064	X064		Y064	Y064	
X065	X065		Y065	Y065	
X066	X066		Y066	Y066	
X067	X067		Y067	Y067	
X068	X068	Upper Hand Front Glass OK	Y068	Y068	
X069	X069	Upper Hand Front VAC ON	Y069	Y069	
X06A	X06A	Upper Hand Rear Glass OK	Y06A	Y06A	
X06B	X06B	Upper Hand Rear VAC ON	Y06B	Y06B	
X06C	X06C	Lower Hand Front Glass OK	Y06C	Y06C	
X06D	X06D	Lower Hand Front VAC ON	Y06D	Y06D	
X06E	X06E	Lower Hand Rear Glass OK	Y06E	Y06E	
X06F	X06F	Lower Hand Rear VAC ON	Y06F	Y06F	
Wr008	Wr008	하핸드 좌(8bit)-1/우(8bit)-2 흡착 압력(0~100kpa)	Ww008	Ww008	
Wr009	Wr009	상핸드 좌(8bit)-3/우(8bit)-4 흡착 압력(0~100kpa)	Ww009	Ww009	
Wr00A	Wr00A	하핸드(8bit)-1/상핸드(8bit) 흡착 ON 소요시간	Ww00A	Ww00A	
Wr00B	Wr00B	1-Axis ~ 6-Axis 이동중 (0~5-bit)	Ww00B	Ww00B	
Wr00C	Wr00C	제어기 내부 온도(8bit)-1	Ww00C	Ww00C	
Wr00D	Wr00D	1(X), 2(TH) 축 부하율 (x200%)	Ww00D	Ww00D	
Wr00E	Wr00E	3(Z1), 4(Z2) 축 부하율 (x200%)	Ww00E	Ww00E	
Wr00F	Wr00F	5(L), 6(R) 축 부하율 (x200%)	Ww00F	Ww00F	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X070	X070		Y070	Y070	
X071	X071		Y071	Y071	
X072	X072		Y072	Y072	
X073	X073		Y073	Y073	
X074	X074		Y074	Y074	
X075	X075		Y075	Y075	
X076	X076		Y076	Y076	
X077	X077		Y077	Y077	
X078	X078		Y078	Y078	
X079	X079		Y079	Y079	
X07A	X07A		Y07A	Y07A	
X07B	X07B		Y07B	Y07B	
X07C	X07C		Y07C	Y07C	
X07D	X07D		Y07D	Y07D	
X07E	X07E		Y07E	Y07E	
X07F	X07F		Y07F	Y07F	
X080	X080		Y080	Y080	
X081	X081		Y081	Y081	
X082	X082		Y082	Y082	
X083	X083		Y083	Y083	
X084	X084		Y084	Y084	
X085	X085		Y085	Y085	
X086	X086		Y086	Y086	
X087	X087		Y087	Y087	
X088	X088		Y088	Y088	
X089	X089		Y089	Y089	
X08A	X08A		Y08A	Y08A	
X08B	X08B		Y08B	Y08B	
X08C	X08C		Y08C	Y08C	
X08D	X08D		Y08D	Y08D	
X08E	X08E		Y08E	Y08E	
X08F	X08F		Y08F	Y08F	
X090	X090		Y090	Y090	
X091	X091		Y091	Y091	
X092	X092		Y092	Y092	
X093	X093		Y093	Y093	
X094	X094		Y094	Y094	
X095	X095		Y095	Y095	
X096	X096		Y096	Y096	
X097	X097		Y097	Y097	
X098	X098		Y098	Y098	
X099	X099		Y099	Y099	
X09A	X09A		Y09A	Y09A	
X09B	X09B		Y09B	Y09B	
X09C	X09C		Y09C	Y09C	
X09D	X09D		Y09D	Y09D	
X09E	X09E		Y09E	Y09E	
X09F	X09F		Y09F	Y09F	
X0A0	X0A0		Y0A0	Y0A0	
X0A1	X0A1		Y0A1	Y0A1	
X0A2	X0A2		Y0A2	Y0A2	
X0A3	X0A3		Y0A3	Y0A3	
X0A4	X0A4		Y0A4	Y0A4	
X0A5	X0A5		Y0A5	Y0A5	
X0A6	X0A6		Y0A6	Y0A6	
X0A7	X0A7		Y0A7	Y0A7	
Wr010	Wr010		Ww010	Ww010	
Wr011	Wr011		Ww011	Ww011	
Wr012	Wr012		Ww012	Ww012	
Wr013	Wr013		Ww013	Ww013	
Wr014	Wr014		Ww014	Ww014	Single Stage #1~#15 Hand Extend I/L Setting (0~15-bit)
Wr015	Wr015		Ww015	Ww015	Multi Stage #1~#15 Hand Extend I/L Setting (0~15-bit)
Wr016	Wr016		Ww016	Ww016	
Wr017	Wr017		Ww017	Ww017	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X0A8	X0A8		Y0A8	Y070	
X0A9	X0A9		Y0A9	Y0A9	
X0AA	X0AA		Y0AA	Y0AA	
X0AB	X0AB		Y0AB	Y0AB	
X0AC	X0AC		Y0AC	Y0AC	
X0AD	X0AD		Y0AD	Y0AD	
X0AE	X0AE		Y0AE	Y0AE	
X0AF	X0AF		Y0AF	Y0AF	
X0B0	X0B0		Y0B0	Y0B0	
X0B1	X0B1		Y0B1	Y0B1	
X0B2	X0B2		Y0B2	Y0B2	
X0B3	X0B3		Y0B3	Y0B3	
X0B4	X0B4		Y0B4	Y0B4	
X0B5	X0B5		Y0B5	Y0B5	
X0B6	X0B6		Y0B6	Y0B6	
X0B7	X0B7		Y0B7	Y0B7	
X0B8	X0B8		Y0B8	Y0B8	
X0B9	X0B9		Y0B9	Y0B9	
X0BA	X0BA		Y0BA	Y0BA	
X0BB	X0BB		Y0BB	Y0BB	
X0BC	X0BC		Y0BC	Y0BC	
X0BD	X0BD		Y0BD	Y0BD	
X0BE	X0BE		Y0BE	Y0BE	
X0BF	X0BF		Y0BF	Y0BF	
X0C0	X0C0		Y0C0	Y0C0	
X0C1	X0C1		Y0C1	Y0C1	
X0C2	X0C2		Y0C2	Y0C2	
X0C3	X0C3		Y0C3	Y0C3	
X0C4	X0C4		Y0C4	Y0C4	
X0C5	X0C5		Y0C5	Y0C5	
X0C6	X0C6		Y0C6	Y0C6	
X0C7	X0C7		Y0C7	Y0C7	
X0C8	X0C8		Y0C8	Y0C8	
X0C9	X0C9		Y0C9	Y0C9	
X0CA	X0CA		Y0CA	Y0CA	
X0CB	X0CB		Y0CB	Y0CB	
X0CC	X0CC		Y0CC	Y0CC	
X0CD	X0CD		Y0CD	Y0CD	
X0CE	X0CE		Y0CE	Y0CE	
X0CF	X0CF		Y0CF	Y0CF	
X0D0	X0D0		Y0D0	Y0D0	
X0D1	X0D1		Y0D1	Y0D1	
X0D2	X0D2		Y0D2	Y0D2	
X0D3	X0D3		Y0D3	Y0D3	
X0D4	X0D4		Y0D4	Y0D4	
X0D5	X0D5		Y0D5	Y0D5	
X0D6	X0D6		Y0D6	Y0D6	
X0D7	X0D7		Y0D7	Y0D7	
X0D8	X0D8		Y0D8	Y0D8	
X0D9	X0D9		Y0D9	Y0D9	
X0DA	X0DA		Y0DA	Y0DA	
X0DB	X0DB		Y0DB	Y0DB	
X0DC	X0DC		Y0DC	Y0DC	
X0DD	X0DD		Y0DD	Y0DD	
X0DE	X0DE		Y0DE	Y0DE	
X0DF	X0DF		Y0DF	Y0DF	
Wr018	Wr018		Ww018	Ww018	
Wr019	Wr019		Ww019	Ww019	
Wr01A	Wr01A		Ww01A	Ww01A	
Wr01B	Wr01B		Ww01B	Ww01B	
Wr01C	Wr01C		Ww01C	Ww01C	
Wr01D	Wr01D		Ww01D	Ww01D	
Wr01E	Wr01E		Ww01E	Ww01E	
Wr01F	Wr01F		Ww01F	Ww01F	

CC-LINK2.0 Double, 224 Points (14칸) / 32 Words

Station No.	6
Station Type	Intelligent Device
용 도	Robot #2 (Hyundai 기준)

입력		Name	출력		Name
Master	Remote		Master	Remote	
X100	X000	RUNNING	Y100	Y000	
X101	X001	SERVO ON	Y101	Y001	EXTERNAL RESET
X102	X002	ROBOT 에러	Y102	Y002	ALARM/ERROR RESET
X103	X003	ROBOT READY OK	Y103	Y003	EXTERNAL START
X104	X004	REMOTE MODE	Y104	Y004	EXTERNAL HOLD (B접점)
X105	X005	TEACH MODE	Y105	Y005	
X106	X006	PLAYBACK MODE	Y106	Y006	
X107	X007	COMMAND READY OK	Y107	Y007	MAIN PROGRAM CALL
X108	X008	작업원점	Y108	Y008	
X109	X009	ARM 원점(L/R)	Y109	Y009	REMOTE MODE
X10A	X00A	R HAND GLASS ok	Y10A	Y00A	TEACH MODE
X10B	X00B	L HAND GLASS ok	Y10B	Y00B	PLAYBACK MODE
X10C	X00C	R HAND 흡착 ON	Y10C	Y00C	
X10D	X00D	L HAND 흡착 ON	Y10D	Y00D	
X10E	X00E	비상정지	Y10E	Y00E	SIMULATION MODE
X10F	X00F	HOLD 중	Y10F	Y00F	흡착무효(무효:1)
X110	X010	COMMAND 실행완료	Y110	Y010	COMMAND START
X111	X011	LOADING COMPLETE	Y111	Y011	COMMAND 일치
X112	X012	UNLOADING COMPLETE	Y112	Y012	저온/고온 구분(1:고온)
X113	X013	상핸드 ALIGNMENT COMPLETE	Y113	Y013	COMMAND 불일치
X114	X014	COMMAND 일치요구	Y114	Y014	
X115	X015	COMMAND 실행 중	Y115	Y015	GLASS 검출무효(무효:1)
X116	X016	COMMAND 이상 CODE STROBE	Y116	Y016	COMMAND 이상코드 ACK
X117	X017	ROBOT 이상 CODE STROBE	Y117	Y017	
X118	X018	실행중 COMMAND 1	Y118	Y018	COMMNAD MOTION 1
X119	X019	실행중 COMMAND 2	Y119	Y019	COMMNAD MOTION 2
X11A	X01A	실행중 COMMAND 4	Y11A	Y01A	COMMNAD MOTION 4
X11B	X01B	실행중 COMMAND 8	Y11B	Y01B	COMMNAD MOTION 8
X11C	X01C	실행중 COMMAND 16	Y11C	Y01C	COMMNAD MOTION 16
X11D	X01D	실행중 COMMAND 32	Y11D	Y01D	COMMNAD MOTION 32
X11E	X01E	실행중 COMMAND 64	Y11E	Y01E	COMMNAD MOTION 64
X11F	X01F	실행중 COMMAND 128	Y11F	Y01F	COMMNAD MOTION 128
X120	X020	ROBOT HAND(상:0,하:1)	Y120	Y020	ROBOT HAND(상:0,하:1)
X121	X021	1st TARGET(단:0,다:1)	Y121	Y021	1st TARGET(단:0,다:1)
X122	X022	1st CST CODE(30 단)	Y122	Y022	1st CST CODE(30 단)
X123	X023	1st CST CODE(RESERVE)	Y123	Y023	1st CST CODE(RESERVE)
X124	X024	2nd TARGET(단:0,다:1)	Y124	Y024	2nd TARGET(단:0,다:1)
X125	X025	2nd CST CODE(30 단)	Y125	Y025	2nd CST CODE(30 단)
X126	X026	2nd CST CODE(RESERVE)	Y126	Y026	2nd CST CODE(RESERVE)
X127	X027	3rd TARGET(단:0,다:1)	Y127	Y027	3rd TARGET(단:0,다:1)
X128	X028	3rd CST CODE(30 단)	Y128	Y028	3rd CST CODE(30 단)
X129	X029	3rd CST CODE(RESERVE)	Y129	Y029	3rd CST CODE(RESERVE)
X12A	X02A	FORWARD POSITION 복귀 완료	Y12A	Y02A	
X12B	X02B	Extended Hand Down Start	Y12B	Y02B	
X12C	X02C	WAIT POSITION COMPLETE ON	Y12C	Y02C	WAIT POSITION COMPLETE ACK
X12D	X02D	ROBOT 경고발생	Y12D	Y02D	더블핸드
X12E	X02E	Unloading/Loading 1 차완료 (0.5")	Y12E	Y02E	ROBOT SPEED INPUT
X12F	X02F	장비측 핸드 진입 요청	Y12F	Y02F	장비측 핸드 진입 OK
X130	X030	GLASS 두께확인 1	Y130	Y030	Glass 두께지정 1
X131	X031	GLASS 두께확인 2	Y131	Y031	Glass 두께지정 2
X132	X032	GLASS 두께확인 4	Y132	Y032	Glass 두께지정 4
X133	X033		Y133	Y033	
X134	X034		Y134	Y034	
X135	X035		Y135	Y035	
X136	X036		Y136	Y036	
X137	X037		Y137	Y037	
Wr020	Wr000	1st POSITION MOTION (STAGE, SLOT NO)	Ww020	Ww000	1st POSITION MOTION (STAGE, SLOT NO)
Wr021	Wr001	2nd POSITION MOTION (STAGE, SLOT NO)	Ww021	Ww001	2nd POSITION MOTION (STAGE, SLOT NO)
Wr022	Wr002	3rd POSITION MOTION (STAGE, SLOT NO)	Ww022	Ww002	3rd POSITION MOTION (STAGE, SLOT NO)
Wr023	Wr003	로봇이상코드	Ww023	Ww003	
Wr024	Wr004		Ww024	Ww004	
Wr025	Wr005		Ww025	Ww005	
Wr026	Wr006		Ww026	Ww006	
Wr027	Wr007		Ww027	Ww007	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X138	X038	GLASS SIZE 1	Y138	Y038	GLASS SIZE 1
X139	X039	GLASS SIZE 2	Y139	Y039	GLASS SIZE 2
X13A	X03A	GLASS SIZE 4	Y13A	Y03A	GLASS SIZE 4
X13B	X03B	GLASS SIZE 8	Y13B	Y03B	GLASS SIZE 8
X13C	X03C	GLASS SIZE 16	Y13C	Y03C	GLASS SIZE 16
X13D	X03D	GLASS SIZE 32	Y13D	Y03D	GLASS SIZE 32
X13E	X03E	GLASS SIZE 64	Y13E	Y03E	GLASS SIZE 64
X13F	X03F	GLASS SIZE 128	Y13F	Y03F	GLASS SIZE 128
X140	X040	COMMAND 이상코드 1	Y140	Y040	VACCUM 흡착면(상면:0)
X141	X041	COMMAND 이상코드 2	Y141	Y041	
X142	X042	COMMAND 이상코드 4	Y142	Y042	
X143	X043	COMMAND 이상코드 8	Y143	Y043	
X144	X044	COMMAND 이상코드 16	Y144	Y044	
X145	X045	COMMAND 이상코드 32	Y145	Y045	
X146	X046	COMMAND 이상코드 64	Y146	Y046	
X147	X047	COMMAND 이상코드 128	Y147	Y047	
X148	X048	ROBOT MOVING 중	Y148	Y048	Command Complete ACK
X149	X049	ROBOT LOCK 유효	Y149	Y049	Loading Complete ACK
X14A	X04A	필드버스 이상	Y14A	Y04A	Unloading Complete ACK
X14B	X04B	배터리 전압 저하	Y14B	Y04B	
X14C	X04C	로봇 조작 에러	Y14C	Y04C	
X14D	X04D	그리스부족 사전 경고	Y14D	Y04D	
X14E	X04E	부하율 초과 경고	Y14E	Y04E	
X14F	X04F	라이트 커튼 동작 에러 (B 접점)	Y14F	Y04F	
X150	X050	하핸드 ALIGNMENT COMPLETE	Y150	Y050	
X151	X051	Upper Hand Home Position	Y151	Y051	
X152	X052	Lower Hand Home Position	Y152	Y052	
X153	X053		Y153	Y053	
X154	X054		Y154	Y054	
X155	X055	1st CST Code(2^2)	Y155	Y055	1st CST Code(2^2)
X156	X056	2nd CST Code(2^2)	Y156	Y056	2nd CST Code(2^2)
X157	X057	3rd CST Code(2^2)	Y157	Y057	3rd CST Code(2^2)
X158	X058		Y158	Y058	
X159	X059		Y159	Y059	
X15A	X05A	동작 실행 중 Upper Sub Position Bit 1	Y15A	Y05A	Upper Sub Position Bit 1
X15B	X05B	동작 실행 중 Upper Sub Position Bit 2	Y15B	Y05B	Upper Sub Position Bit 2
X15C	X05C	동작 실행 중 Upper Sub Position Bit 3	Y15C	Y05C	Upper Sub Position Bit 3
X15D	X05D	동작 실행 중 Lower Sub Position Bit 1	Y15D	Y05D	Lower Sub Position Bit 1
X15E	X05E	동작 실행 중 Lower Sub Position Bit 2	Y15E	Y05E	Lower Sub Position Bit 2
X15F	X05F	동작 실행 중 Lower Sub Position Bit 3	Y15F	Y05F	Lower Sub Position Bit 3
X160	X060	PLAYBACK 속도(%)	Y160	Y060	PLAYBACK 속도설정(OPTION)
X161	X061		Y161	Y061	
X162	X062		Y162	Y062	
X163	X063		Y163	Y063	
X164	X064		Y164	Y064	
X165	X065		Y165	Y065	
X166	X066		Y166	Y066	
X167	X067		Y167	Y067	
X168	X068	Upper Hand Front Glass OK	Y168	Y068	
X169	X069	Upper Hand Front VAC ON	Y169	Y069	
X16A	X06A	Upper Hand Rear Glass OK	Y16A	Y06A	
X16B	X06B	Upper Hand Rear VAC ON	Y16B	Y06B	
X16C	X06C	Lower Hand Front Glass OK	Y16C	Y06C	
X16D	X06D	Lower Hand Front VAC ON	Y16D	Y06D	
X16E	X06E	Lower Hand Rear Glass OK	Y16E	Y06E	
X16F	X06F	Lower Hand Rear VAC ON	Y16F	Y06F	
Wr028	Wr008	하핸드 좌(8bit)-1/우(8bit)-2 흡착 압력(0~100kpa)	Ww028	Ww008	
Wr029	Wr009	상핸드 좌(8bit)-3/우(8bit)-4 흡착 압력(0~100kpa)	Ww029	Ww009	
Wr02A	Wr00A	하핸드(8bit)-1/상핸드(8bit) 흡착 ON 소요시간	Ww02A	Ww00A	
Wr02B	Wr00B	1-Axis ~ 6-Axis 이동중 (0~5-bit)	Ww02B	Ww00B	
Wr02C	Wr00C	제어기 내부 온도(8bit)-1	Ww02C	Ww00C	
Wr02D	Wr00D	1(X), 2(TH) 축 부하율 (x200%)	Ww02D	Ww00D	
Wr02E	Wr00E	3(Z1), 4(Z2) 축 부하율 (x200%)	Ww02E	Ww00E	
Wr02F	Wr00F	5(L), 6(R) 축 부하율 (x200%)	Ww02F	Ww00F	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X170	X070		Y170	Y070	
X171	X071		Y171	Y071	
X172	X072		Y172	Y072	
X173	X073		Y173	Y073	
X174	X074		Y174	Y074	
X175	X075		Y175	Y075	
X176	X076		Y176	Y076	
X177	X077		Y177	Y077	
X178	X078		Y178	Y078	
X179	X079		Y179	Y079	
X17A	X07A		Y17A	Y07A	
X17B	X07B		Y17B	Y07B	
X17C	X07C		Y17C	Y07C	
X17D	X07D		Y17D	Y07D	
X17E	X07E		Y17E	Y07E	
X17F	X07F		Y17F	Y07F	
X180	X080		Y180	Y080	
X181	X081		Y181	Y081	
X182	X082		Y182	Y082	
X183	X083		Y183	Y083	
X184	X084		Y184	Y084	
X185	X085		Y185	Y085	
X186	X086		Y186	Y086	
X187	X087		Y187	Y087	
X188	X088		Y188	Y088	
X189	X089		Y189	Y089	
X18A	X08A		Y18A	Y08A	
X18B	X08B		Y18B	Y08B	
X18C	X08C		Y18C	Y08C	
X18D	X08D		Y18D	Y08D	
X18E	X08E		Y18E	Y08E	
X18F	X08F		Y18F	Y08F	
X190	X090		Y190	Y090	
X191	X091		Y191	Y091	
X192	X092		Y192	Y092	
X193	X093		Y193	Y093	
X194	X094		Y194	Y094	
X195	X095		Y195	Y095	
X196	X096		Y196	Y096	
X197	X097		Y197	Y097	
X198	X098		Y198	Y098	
X199	X099		Y199	Y099	
X19A	X09A		Y19A	Y09A	
X19B	X09B		Y19B	Y09B	
X19C	X09C		Y19C	Y09C	
X19D	X09D		Y19D	Y09D	
X19E	X09E		Y19E	Y09E	
X19F	X09F		Y19F	Y09F	
X1A0	X0A0		Y1A0	Y0A0	
X1A1	X0A1		Y1A1	Y0A1	
X1A2	X0A2		Y1A2	Y0A2	
X1A3	X0A3		Y1A3	Y0A3	
X1A4	X0A4		Y1A4	Y0A4	
X1A5	X0A5		Y1A5	Y0A5	
X1A6	X0A6		Y1A6	Y0A6	
X1A7	X0A7		Y1A7	Y0A7	
Wr030	Wr010		Ww030	Ww010	
Wr031	Wr011		Ww031	Ww011	
Wr032	Wr012		Ww032	Ww012	
Wr033	Wr013		Ww033	Ww013	
Wr034	Wr014		Ww034	Ww014	Single Stage #1~#15 Hand Extend I/L Setting (0~15-bit)
Wr035	Wr015		Ww035	Ww015	Multi Stage #1~#15 Hand Extend I/L Setting (0~15-bit)
Wr036	Wr016		Ww036	Ww016	
Wr037	Wr017		Ww037	Ww017	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X1A8	X0A8		Y1A8	Y070	
X1A9	X0A9		Y1A9	Y0A9	
X1AA	X0AA		Y1AA	Y0AA	
X1AB	X0AB		Y1AB	Y0AB	
X1AC	X0AC		Y1AC	Y0AC	
X1AD	X0AD		Y1AD	Y0AD	
X1AE	X0AE		Y1AE	Y0AE	
X1AF	X0AF		Y1AF	Y0AF	
X1B0	X0B0		Y1B0	Y0B0	
X1B1	X0B1		Y1B1	Y0B1	
X1B2	X0B2		Y1B2	Y0B2	
X1B3	X0B3		Y1B3	Y0B3	
X1B4	X0B4		Y1B4	Y0B4	
X1B5	X0B5		Y1B5	Y0B5	
X1B6	X0B6		Y1B6	Y0B6	
X1B7	X0B7		Y1B7	Y0B7	
X1B8	X0B8		Y1B8	Y0B8	
X1B9	X0B9		Y1B9	Y0B9	
X1BA	X0BA		Y1BA	Y0BA	
X1BB	X0BB		Y1BB	Y0BB	
X1BC	X0BC		Y1BC	Y0BC	
X1BD	X0BD		Y1BD	Y0BD	
X1BE	X0BE		Y1BE	Y0BE	
X1BF	X0BF		Y1BF	Y0BF	
X1C0	X0C0		Y1C0	Y0C0	
X1C1	X0C1		Y1C1	Y0C1	
X1C2	X0C2		Y1C2	Y0C2	
X1C3	X0C3		Y1C3	Y0C3	
X1C4	X0C4		Y1C4	Y0C4	
X1C5	X0C5		Y1C5	Y0C5	
X1C6	X0C6		Y1C6	Y0C6	
X1C7	X0C7		Y1C7	Y0C7	
X1C8	X0C8		Y1C8	Y0C8	
X1C9	X0C9		Y1C9	Y0C9	
X1CA	X0CA		Y1CA	Y0CA	
X1CB	X0CB		Y1CB	Y0CB	
X1CC	X0CC		Y1CC	Y0CC	
X1CD	X0CD		Y1CD	Y0CD	
X1CE	X0CE		Y1CE	Y0CE	
X1CF	X0CF		Y1CF	Y0CF	
X1D0	X0D0		Y1D0	Y0D0	
X1D1	X0D1		Y1D1	Y0D1	
X1D2	X0D2		Y1D2	Y0D2	
X1D3	X0D3		Y1D3	Y0D3	
X1D4	X0D4		Y1D4	Y0D4	
X1D5	X0D5		Y1D5	Y0D5	
X1D6	X0D6		Y1D6	Y0D6	
X1D7	X0D7		Y1D7	Y0D7	
X1D8	X0D8		Y1D8	Y0D8	
X1D9	X0D9		Y1D9	Y0D9	
X1DA	X0DA		Y1DA	Y0DA	
X1DB	X0DB		Y1DB	Y0DB	
X1DC	X0DC		Y1DC	Y0DC	
X1DD	X0DD		Y1DD	Y0DD	
X1DE	X0DE		Y1DE	Y0DE	
X1DF	X0DF		Y1DF	Y0DF	
Wr038	Wr018		Ww038	Ww018	
Wr039	Wr019		Ww039	Ww019	
Wr03A	Wr01A		Ww03A	Ww01A	
Wr03B	Wr01B		Ww03B	Ww01B	
Wr03C	Wr01C		Ww03C	Ww01C	
Wr03D	Wr01D		Ww03D	Ww01D	
Wr03E	Wr01E		Ww03E	Ww01E	
Wr03F	Wr01F		Ww03F	Ww01F	

CC-LINK2.0 Single, 128 Points (14칸) / 16 Words

Station No.	6
Station Type	Intelligent Device
용 도	Robot #2 (Hyundai 재활용 기준)

입력		Name	출력		Name
Master	Remote		Master	Remote	
X100	X000	Running	Y100	Y000	
X101	X001	Servo ON	Y101	Y001	External Reset
X102	X002	Alarm/Error	Y102	Y002	Alarm/Error Reset
X103	X003	Robot Ready OK	Y103	Y003	External Start
X104	X004	Remote Mode	Y104	Y004	External Hold
X105	X005	Teach Mode	Y105	Y005	EXTERNAL SERVO ON
X106	X006	Playback Mode	Y106	Y006	
X107	X007	Main Prog. Ready OK (Command Ready)	Y107	Y007	Main Prog. Call
X108	X008	작업원점	Y108	Y008	
X109	X009	Arm 원점(L/R)	Y109	Y009	Remote Mode
X10A	X00A	R HAND GLASS ok	Y10A	Y00A	Teach Mode
X10B	X00B	L HAND GLASS ok	Y10B	Y00B	Playback Mode
X10C	X00C	R HAND 흡착 ON	Y10C	Y00C	
X10D	X00D	L HAND 흡착 ON	Y10D	Y00D	
X10E	X00E	비상정지	Y10E	Y00E	
X10F	X00F	Holding	Y10F	Y00F	흡착확인무효
X110	X010	COMMAND 실행완료	Y110	Y010	동작 Command START
X111	X011	LOADING COMPLETE	Y111	Y011	Command 일치
X112	X012	UNLOADING COMPLETE	Y112	Y012	Command 완료 Ack
X113	X013	ALIGNMENT COMPLETE	Y113	Y013	Command 불일치
X114	X014	COMMAND 일치요구	Y114	Y014	
X115	X015	COMMAND 실행중	Y115	Y015	GLASS 검출무효
X116	X016	이상 CODE STROBE	Y116	Y016	이상코드 ACK
X117	X017	Robot 이상 CODE STROBE	Y117	Y017	
X118	X018	실행중 COMMAND 1	Y118	Y018	COMMNAD MOTION 1
X119	X019	실행중 COMMAND 2	Y119	Y019	COMMNAD MOTION 2
X11A	X01A	실행중 COMMAND 4	Y11A	Y01A	COMMNAD MOTION 4
X11B	X01B	실행중 COMMAND 8	Y11B	Y01B	COMMNAD MOTION 8
X11C	X01C	실행중 COMMAND 16	Y11C	Y01C	COMMNAD MOTION 16
X11D	X01D	실행중 COMMAND 32	Y11D	Y01D	COMMNAD MOTION 32
X11E	X01E	실행중 COMMAND 64	Y11E	Y01E	COMMNAD MOTION 64
X11F	X01F		Y11F	Y01F	
Wr020	Wr000	1st POS MOTION	Ww020	Ww000	1st POS MOTION
Wr021	Wr001	2nd POS MOTION	Ww021	Ww001	2nd POS MOTION
Wr022	Wr002	3rd POS MOTION	Ww022	Ww002	3rd POS MOTION
Wr023	Wr003	Robot 이상 Code	Ww023	Ww003	Robot 속도(1~100)

입력		Name	출력		Name
Master	Remote		Master	Remote	
X120	X020	ROBOT ARM(상:0,하:1)	Y120	Y020	ROBOT ARM(상:0,하:1)
X121	X021	1st TARGET(단:0,다:1)	Y121	Y021	1st TARGET(단:0,다:1)
X122	X022	1st CST CODE(20 단)	Y122	Y022	1st CST CODE(20 단)
X123	X023	1st CST CODE(RESERVE)	Y123	Y023	1st CST CODE(RESERVE)
X124	X024	2nd TARGET(단:0,다:1)	Y124	Y024	2nd TARGET(단:0,다:1)
X125	X025	2nd CST CODE(20 단)	Y125	Y025	2nd CST CODE(20 단)
X126	X026	2nd CST CODE(RESERVE)	Y126	Y026	2nd CST CODE(RESERVE)
X127	X027	3rd TARGET(단:0,다:1)	Y127	Y027	3rd TARGET(단:0,다:1)
X128	X028	3rd CST CODE(20 단)	Y128	Y028	3rd CST CODE(20 단)
X129	X029	3rd CST CODE(RESERVE)	Y129	Y029	3rd CST CODE(RESERVE)
X12A	X02A	Forward Wait Position 복귀 완료	Y12A	Y02A	
X12B	X02B		Y12B	Y02B	
X12C	X02C		Y12C	Y02C	
X12D	X02D		Y12D	Y02D	
X12E	X02E		Y12E	Y02E	
X12F	X02F		Y12F	Y02F	
X130	X030	Glass 두께확인 1	Y130	Y030	Glass 두께지정 1
X131	X031	Glass 두께확인 2	Y131	Y031	Glass 두께지정 2
X132	X032	Glass 두께확인 4	Y132	Y032	Glass 두께지정 4
X133	X033		Y133	Y033	
X134	X034		Y134	Y034	
X135	X035		Y135	Y035	
X136	X036		Y136	Y036	
X137	X037		Y137	Y037	
X138	X038	GLASS SIZE 1(1/3 size)	Y138	Y038	GLASS SIZE 1(1/3 size)
X139	X039	GLASS SIZE 2(1/2 size)	Y139	Y039	GLASS SIZE 2(1/2 size)
X13A	X03A	GLASS SIZE 4(2/3 size)	Y13A	Y03A	GLASS SIZE 4(2/3 size)
X13B	X03B	GLASS SIZE 8(1/1 size)	Y13B	Y03B	GLASS SIZE 8(1/1 size)
X13C	X03C		Y13C	Y03C	
X13D	X03D		Y13D	Y03D	
X13E	X03E		Y13E	Y03E	
X13F	X03F		Y13F	Y03F	
Wr024	Wr004		Ww024	Ww004	
Wr025	Wr005		Ww025	Ww005	
Wr026	Wr006		Ww026	Ww006	
Wr027	Wr007		Ww027	Ww007	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X140	X040	이상코드 1	Y140	Y040	
X141	X041	이상코드 2	Y141	Y041	
X142	X042	이상코드 4	Y142	Y042	
X143	X043	이상코드 8	Y143	Y043	
X144	X044	이상코드 16	Y144	Y044	
X145	X045	이상코드 32	Y145	Y045	
X146	X046	이상코드 64	Y146	Y046	
X147	X047		Y147	Y047	
X148	X048	원점복귀동작중	Y148	Y048	
X149	X049		Y149	Y049	
X14A	X04A		Y14A	Y04A	
X14B	X04B		Y14B	Y04B	
X14C	X04C		Y14C	Y04C	
X14D	X04D		Y14D	Y04D	
X14E	X04E		Y14E	Y04E	
X14F	X04F		Y14F	Y04F	
X150	X050	로봇이상 1	Y150	Y050	
X151	X051	로봇이상 2	Y151	Y051	
X152	X052	로봇이상 4	Y152	Y052	
X153	X053	로봇이상 8	Y153	Y053	
X154	X054	로봇이상 16	Y154	Y054	
X155	X055	로봇이상 32	Y155	Y055	
X156	X056	로봇이상 64	Y156	Y056	
X157	X057	로보이상 128	Y157	Y057	
X158	X058		Y158	Y058	
X159	X059		Y159	Y059	
X15A	X05A		Y15A	Y05A	
X15B	X05B		Y15B	Y05B	
X15C	X05C		Y15C	Y05C	
X15D	X05D		Y15D	Y05D	
X15E	X05E		Y15E	Y05E	
X15F	X05F		Y15F	Y05F	
Wr028	Wr008		Ww028	Ww008	
Wr029	Wr009		Ww029	Ww009	
Wr02A	Wr00A		Ww02A	Ww00A	
Wr02B	Wr00B		Ww02B	Ww00B	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X160	X060		Y160	Y060	
X161	X061		Y161	Y061	
X162	X062		Y162	Y062	
X163	X063		Y163	Y063	
X164	X064		Y164	Y064	
X165	X065		Y165	Y065	
X166	X066		Y166	Y066	
X167	X067		Y167	Y067	
X168	X068		Y168	Y068	
X169	X069		Y169	Y069	
X16A	X06A		Y16A	Y06A	
X16B	X06B		Y16B	Y06B	
X16C	X06C		Y16C	Y06C	
X16D	X06D		Y16D	Y06D	
X16E	X06E		Y16E	Y06E	
X16F	X06F		Y16F	Y06F	
X170	X070		Y170	Y070	
X171	X071		Y171	Y071	
X172	X072		Y172	Y072	
X173	X073		Y173	Y073	
X174	X074		Y174	Y074	
X175	X075		Y175	Y075	
X176	X076		Y176	Y076	
X177	X077		Y177	Y077	
X178	X078		Y178	Y078	
X179	X079		Y179	Y079	
X17A	X07A		Y17A	Y07A	
X17B	X07B		Y17B	Y07B	
X17C	X07C		Y17C	Y07C	
X17D	X07D		Y17D	Y07D	
X17E	X07E		Y17E	Y07E	
X17F	X07F		Y17F	Y07F	
Wr02C	Wr00C		Ww02C	Ww00C	
Wr02D	Wr00D		Ww02D	Ww00D	
Wr02E	Wr00E		Ww02E	Ww00E	
Wr02F	Wr00F		Ww02F	Ww00F	

Station No.		6			
Station Type		Intelligent Device			
용 도		Robot #2 (XRC Yaskawa 기준)			
입력		Name	출력		Name
Master	Remote		Master	Remote	
X100	X000	Running	Y100	Y000	
X101	X001	Servo ON	Y101	Y001	
X102	X002	Alarm/Error 발생 中	Y102	Y002	Alarm/Error Reset
X103	X003	Remote Mode	Y103	Y003	External Start
X104	X004	Teach Mode	Y104	Y004	
X105	X005	Play Mode	Y105	Y005	Remote Mode Select
X106	X006	Holding	Y106	Y006	Teach Mode Select
X107	X007	Top Master Job	Y107	Y007	Master Job Call
X108	X008	작업 원점	Y108	Y008	Play Mode Select
X109	X009	Arm 원점 (L/R)	Y109	Y009	
X10A	X00A	R Hand Glass OK	Y10A	Y00A	
X10B	X00B	L Hand Glass OK	Y10B	Y00B	
X10C	X00C	R Hand 흡착 ON	Y10C	Y00C	
X10D	X00D	L Hand 흡착 ON	Y10D	Y00D	
X10E	X00E	비상 정지	Y10E	Y00E	
X10F	X00F	Teach Lock on	Y10F	Y00F	
X110	X010	작업 완료 출력	Y110	Y010	동작 Command Start
X111	X011	Loading Complete	Y111	Y011	단(#1,#2) Shutter 인터락
X112	X012	Unloading Complete	Y112	Y012	단(#3,#4) Shutter 인터락
X113	X013		Y113	Y013	
X114	X014	단/다 Stage 확인	Y114	Y014	단/다 Stage 선택
X115	X015	Command 실행 中	Y115	Y015	Glass 검출 무효
X116	X016	이상코드 Strobe	Y116	Y016	이상코드 ACK
X117	X017	상/하 Hand 확인	Y117	Y017	상/하 Hand 지정
X118	X018	실행 中 Command 1	Y118	Y018	Command 지정 1
X119	X019	실행 中 Command 2	Y119	Y019	Command 지정 2
X11A	X01A	실행 中 Command 4	Y11A	Y01A	Command 지정 4
X11B	X01B	실행 中 Command 8	Y11B	Y01B	Command 지정 8
X11C	X01C	실행 中 Command 16	Y11C	Y01C	Command 지정 16
X11D	X01D		Y11D	Y01D	
X11E	X01E		Y11E	Y01E	
X11F	X01F		Y11F	Y01F	
Wr020	Wr000		Ww020	Ww000	
Wr021	Wr001		Ww021	Ww001	
Wr022	Wr002		Ww022	Ww002	
Wr023	Wr003		Ww023	Ww003	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X120	X020	실행 中 Address 1	Y120	Y020	Address 지정 1
X121	X021	실행 中 Address 2	Y121	Y021	Address 지정 2
X122	X022	실행 中 Address 4	Y122	Y022	Address 지정 4
X123	X023	실행 中 Address 8	Y123	Y023	Address 지정 8
X124	X024	실행 中 Address 16	Y124	Y024	Address 지정 16
X125	X025		Y125	Y025	
X126	X026		Y126	Y026	
X127	X027		Y127	Y027	
X128	X028	실행 中 위치 코드 1	Y128	Y028	위치 코드 1
X129	X029	실행 中 위치 코드 2	Y129	Y029	위치 코드 2
X12A	X02A	실행 中 위치 코드 4	Y12A	Y02A	위치 코드 4
X12B	X02B		Y12B	Y02B	
X12C	X02C		Y12C	Y02C	
X12D	X02D		Y12D	Y02D	
X12E	X02E		Y12E	Y02E	
X12F	X02F		Y12F	Y02F	
X130	X030	Glass 두께 확인 1	Y130	Y030	Glass 두께 지정 1
X131	X031	Glass 두께 확인 2	Y131	Y031	Glass 두께 지정 2
X132	X032	Glass 두께 확인 4	Y132	Y032	Glass 두께 지정 4
X133	X033		Y133	Y033	
X134	X034		Y134	Y034	
X135	X035		Y135	Y035	
X136	X036		Y136	Y036	
X137	X037		Y137	Y037	
X138	X038		Y138	Y038	
X139	X039		Y139	Y039	
X13A	X03A		Y13A	Y03A	
X13B	X03B		Y13B	Y03B	
X13C	X03C		Y13C	Y03C	
X13D	X03D		Y13D	Y03D	
X13E	X03E		Y13E	Y03E	
X13F	X03F		Y13F	Y03F	
Wr024	Wr004		Ww024	Ww004	
Wr025	Wr005		Ww025	Ww005	
Wr026	Wr006		Ww026	Ww006	
Wr027	Wr007		Ww027	Ww007	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X140	X040	이상 코드 1	Y140	Y040	
X141	X041	이상 코드 2	Y141	Y041	
X142	X042	이상 코드 4	Y142	Y042	
X143	X043	이상 코드 8	Y143	Y043	
X144	X044	이상 코드 16	Y144	Y044	
X145	X045		Y145	Y045	
X146	X046		Y146	Y046	
X147	X047		Y147	Y047	
X148	X048		Y148	Y048	
X149	X049		Y149	Y049	
X14A	X04A		Y14A	Y04A	
X14B	X04B		Y14B	Y04B	
X14C	X04C		Y14C	Y04C	
X14D	X04D		Y14D	Y04D	
X14E	X04E		Y14E	Y04E	
X14F	X04F		Y14F	Y04F	
X150	X050		Y150	Y050	
X151	X051		Y151	Y051	
X152	X052		Y152	Y052	
X153	X053		Y153	Y053	
X154	X054		Y154	Y054	
X155	X055		Y155	Y055	
X156	X056		Y156	Y056	
X157	X057		Y157	Y057	
X158	X058		Y158	Y058	
X159	X059		Y159	Y059	
X15A	X05A		Y15A	Y05A	
X15B	X05B		Y15B	Y05B	
X15C	X05C		Y15C	Y05C	
X15D	X05D		Y15D	Y05D	
X15E	X05E		Y15E	Y05E	
X15F	X05F		Y15F	Y05F	
Wr028	Wr008		Ww028	Ww008	
Wr029	Wr009		Ww029	Ww009	
Wr02A	Wr00A		Ww02A	Ww00A	
Wr02B	Wr00B		Ww02B	Ww00B	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X160	X060		Y160	Y060	
X161	X061		Y161	Y061	
X162	X062		Y162	Y062	
X163	X063		Y163	Y063	
X164	X064		Y164	Y064	
X165	X065		Y165	Y065	
X166	X066		Y166	Y066	
X167	X067		Y167	Y067	
X168	X068		Y168	Y068	
X169	X069		Y169	Y069	
X16A	X06A		Y16A	Y06A	
X16B	X06B		Y16B	Y06B	
X16C	X06C		Y16C	Y06C	
X16D	X06D		Y16D	Y06D	
X16E	X06E		Y16E	Y06E	
X16F	X06F		Y16F	Y06F	
X170	X070		Y170	Y070	
X171	X071		Y171	Y071	
X172	X072		Y172	Y072	
X173	X073		Y173	Y073	
X174	X074		Y174	Y074	
X175	X075		Y175	Y075	
X176	X076		Y176	Y076	
X177	X077		Y177	Y077	
X178	X078		Y178	Y078	
X179	X079		Y179	Y079	
X17A	X07A		Y17A	Y07A	
X17B	X07B		Y17B	Y07B	
X17C	X07C		Y17C	Y07C	
X17D	X07D		Y17D	Y07D	
X17E	X07E		Y17E	Y07E	
X17F	X07F		Y17F	Y07F	
Wr02C	Wr00C		Ww02C	Ww00C	
Wr02D	Wr00D		Ww02D	Ww00D	
Wr02E	Wr00E		Ww02E	Ww00E	
Wr02F	Wr00F		Ww02F	Ww00F	

Station No.	11
Station Type	Intelligent Device
용 도	Robot #3 (Robostar)

입력		Name	출력		Name
Master	Remote		Master	Remote	
X200	X000	상 Hand 상면 (Upper Position) Front 흡착 On	Y200	Y000	
X201	X001	상 Hand 상면 (Upper Position) Back 흡착 On	Y201	Y001	
X202	X002	하 Hand 상면 (Upper Position) Front 흡착 On	Y202	Y002	
X203	X003	하 Hand 상면 (Upper Position) Back 흡착 On	Y203	Y003	
X204	X004	상 Hand 상면 (Upper Position) Front Glass 검출	Y204	Y004	
X205	X005	상 Hand 상면 (Upper Position) Back Glass 검출	Y205	Y005	
X206	X006	하 Hand 상면 (Upper Position) Front Glass 검출	Y206	Y006	
X207	X007	하 Hand 상면 (Upper Position) Back Glass 검출	Y207	Y007	
X208	X008	상 Hand 상면 (Upper Position) 흡착 On	Y208	Y008	
X209	X009	하 Hand 상면 (Upper Position) 흡착 On	Y209	Y009	
X20A	X00A	Spare	Y20A	Y00A	
X20B	X00B	Spare	Y20B	Y00B	
X20C	X00C	상 Hand 상면 (Upper Position) Glass 검출	Y20C	Y00C	
X20D	X00D	하 Hand 상면 (Upper Position) Glass 검출	Y20D	Y00D	
X20E	X00E	Spare	Y20E	Y00E	
X20F	X00F	Spare	Y20F	Y00F	
X210	X010	Spare	Y210	Y010	
X211	X011	Spare	Y211	Y011	
X212	X012	Spare	Y212	Y012	
X213	X013	Spare	Y213	Y013	
X214	X014	Spare	Y214	Y014	
X215	X015	Spare	Y215	Y015	
X216	X016	Spare	Y216	Y016	
X217	X017	GLASS 전달 요청	Y217	Y017	GLASS 전달
X218	X018	RETURN Override 1	Y218	Y018	Override 1
X219	X019	RETURN Override 2	Y219	Y019	Override 2
X21A	X01A	RETURN Override 4	Y21A	Y01A	Override 4
X21B	X01B	RETURN Override 8	Y21B	Y01B	Override 8
X21C	X01C	RETURN Override 16	Y21C	Y01C	Override 16
X21D	X01D	RETURN Override 32	Y21D	Y01D	Override 32
X21E	X01E	RETURN Override 64	Y21E	Y01E	Override 64
X21F	X01F		Y21F	Y01F	
X220	X020	ROBOT 1축 MOVING 중	Y220	Y020	
X221	X021	ROBOT 2축 MOVING 중	Y221	Y021	
X222	X022	ROBOT 3축 MOVING 중	Y222	Y022	
X223	X023	ROBOT 4축 MOVING 중	Y223	Y023	
X224	X024	ROBOT 5축 MOVING 중	Y224	Y024	
X225	X025	ROBOT 6축 MOVING 중	Y225	Y025	
X226	X026	하 HAND ALIGNMENT 완료	Y226	Y026	
X227	X027	상 HAND ALIGNMENT 완료	Y227	Y027	
X228	X028	RETURN Upper Sub Position 1	Y228	Y028	Upper Sub Position 1
X229	X029	RETURN Upper Sub Position 2	Y229	Y029	Upper Sub Position 2
X22A	X02A	RETURN Upper Sub Position 4	Y22A	Y02A	Upper Sub Position 4
X22B	X02B	RETURN Lower Sub Position 1	Y22B	Y02B	Lower Sub Position 1
X22C	X02C	RETURN Lower Sub Position 2	Y22C	Y02C	Lower Sub Position 2
X22D	X02D	RETURN Lower Sub Position 4	Y22D	Y02D	Lower Sub Position 4
X22E	X02E	배터리 전압 저하	Y22E	Y02E	Spare
X22F	X02F	핸드 진입요청	Y22F	Y02F	핸드 진입요청 응답
X230	X030	RETURN COMMAND 1	Y230	Y030	COMMAND 1
X231	X031	RETURN COMMAND 2	Y231	Y031	COMMAND 2
X232	X032	RETURN COMMAND 4	Y232	Y032	COMMAND 4
X233	X033	RETURN COMMAND 8	Y233	Y033	COMMAND 8
X234	X034	RETURN COMMAND 16	Y234	Y034	COMMAND 16
X235	X035	RETURN COMMAND 32	Y235	Y035	COMMAND 32
X236	X036	RETURN COMMAND 64	Y236	Y036	COMMAND 64
X237	X037	Spare	Y237	Y037	
Wr048	Wr000	Return 1st POSITION MOTION	Ww048	Ww000	1st POSITION MOTION (STAGE, SLOT NO)
Wr049	Wr001	Return 2nd POSITION MOTION	Ww049	Ww001	2nd POSITION MOTION (STAGE, SLOT NO)
Wr04A	Wr002	Return 3rd POSITION MOTION	Ww04A	Ww002	3rd POSITION MOTION (STAGE, SLOT NO)
Wr04B	Wr003	로봇이상코드 (SYSTEM)	Ww04B	Ww003	
Wr04C	Wr004	1(X), 2(TH) 축 부하율 (x200%)	Ww04C	Ww004	
Wr04D	Wr005	3(Z1), 4(Z2) 축 부하율 (x200%)	Ww04D	Ww005	
Wr04E	Wr006	5(L), 6(R) 축 부하율 (x200%)	Ww04E	Ww006	
Wr04F	Wr007	TH ALIGN, 주행 ALIGN 보정값	Ww04F	Ww007	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X238	X038	RETURN GLSS size data 1	Y238	Y038	GLSS size data 1
X239	X039	RETURN GLSS size data 2	Y239	Y039	GLSS size data 2
X23A	X03A	RETURN GLSS size data 4	Y23A	Y03A	GLSS size data 4
X23B	X03B	RETURN GLSS size data 8	Y23B	Y03B	GLSS size data 8
X23C	X03C	RETURN GLSS size data 16	Y23C	Y03C	GLSS size data 16
X23D	X03D	RETURN GLSS size data 32	Y23D	Y03D	GLSS size data 32
X23E	X03E	Spare	Y23E	Y03E	Spare
X23F	X03F	Spare	Y23F	Y03F	Spare
X240	X040	RETURN GLSS Think data 1	Y240	Y040	GLSS Think data 1
X241	X041	RETURN GLSS Think data 2	Y241	Y041	GLSS Think data 2
X242	X042	RETURN GLSS Think data 4	Y242	Y042	GLSS Think data 4
X243	X043	Spare	Y243	Y043	Spare
X244	X044	RETURN 1st 반송 구분 (단:0,다:1)	Y244	Y044	1st 반송 구분 (단:0,다:1)
X245	X045	RETURN 1st CST code 1 (30 단)	Y245	Y045	1st CST code 1 (30 단)
X246	X046	RETURN 1st CST code 2 (RESERVE)	Y246	Y046	1st CST code 2 (RESERVE)
X247	X047	Spare	Y247	Y047	Spare
X248	X048	RETURN 2nd 반송구분 (단:0,다:1)	Y248	Y048	2nd 반송구분 (단:0,다:1)
X249	X049	RETURN 2nd CST code 1 (30 단)	Y249	Y049	2nd CST code 1 (30 단)
X24A	X04A	RETURN 2nd CST code 2 (RESERVE)	Y24A	Y04A	2nd CST code 2 (RESERVE)
X24B	X04B	Spare	Y24B	Y04B	Spare
X24C	X04C	RETURN 3rd 반송 구분 (단:0,다:1)	Y24C	Y04C	3rd 반송 구분 (단:0,다:1)
X24D	X04D	RETURN 3rd CST code 1 (30 단)	Y24D	Y04D	3rd CST code 1 (30 단)
X24E	X04E	RETURN 3rd CST code 2 (RESERVE)	Y24E	Y04E	3rd CST code 2 (RESERVE)
X24F	X04F	Spare	Y24F	Y04F	Spare
X250	X050	COMMAND ALARM CODE 1	Y250	Y050	SERVO ON
X251	X051	COMMAND ALARM CODE 2	Y251	Y051	EXTERNAL START
X252	X052	COMMAND ALARM CODE 4	Y252	Y052	COMMAND 기동
X253	X053	COMMAND ALARM CODE 8	Y253	Y053	ROBOT 원점 복귀
X254	X054	COMMAND ALARM CODE 16	Y254	Y054	VACUUM Position
X255	X055	COMMAND ALARM CODE 32	Y255	Y055	ROBOT HAND (상:0,하:1)
X256	X056	COMMAND ALARM CODE 64	Y256	Y056	ROBOT HOLD
X257	X057	ALARM STROB	Y257	Y057	ROBOT HOLD 해제
X258	X058	SERVO ON 中	Y258	Y058	ALARM RESET
X259	X059	RETURN 반송 핸드 (상:0,하:1)	Y259	Y059	비상정지
X25A	X05A	RETURN DUAL HAND	Y25A	Y05A	이상코드 ACK
X25B	X05B	Command 정상 완료	Y25B	Y05B	Spare
X25C	X05C	HAND 원점	Y25C	Y05C	DUAL HAND
X25D	X05D	ROBOT HOME 위치	Y25D	Y05D	REMOTE MODE
X25E	X05E	ROBOT HOLD 中	Y25E	Y05E	TEACH MODE
X25F	X05F	비상정지 (EMO 줄력 中)	Y25F	Y05F	PROGRAM JOB SELECT
X260	X060	RETURN REMOTE MODE	Y260	Y060	COMMAND 일치 응답
X261	X061	RETURN TEACH MODE	Y261	Y061	COMMAND 불일치 응답
X262	X062	RETURN VACUUM POSITION	Y262	Y062	COMMAND 완료 ACK
X263	X063	COMMAND 일치 확인요청	Y263	Y063	Spare
X264	X064	RETURN SIMULATION MODE	Y264	Y064	SIMULATION MODE
X265	X065	COMMAND READY	Y265	Y065	GLASS 검출 무효
X266	X066	ROBOT 동작 中	Y266	Y066	
X267	X067	DRAIN 동작 실행 중	Y267	Y067	
X268	X068	Forward Position 복귀 완료	Y268	Y068	
X269	X069	수납완료	Y269	Y069	
X26A	X06A	취출완료	Y26A	Y06A	
X26B	X06B	COMMAND ALARM Strobe (JOB ALARM)	Y26B	Y06B	
X26C	X06C	ROBOT ALARM Strobe (SYSTEM ALARM)	Y26C	Y06C	
X26D	X06D	PSEL Complete (MASTER JOB Complete)	Y26D	Y06D	
X26E	X06E	PROGRAM RUN (MASTER JOB 구동중)	Y26E	Y06E	
X26F	X06F	PROGRAM READY (MASTER JOB READY)	Y26F	Y06F	
Wr050	Wr008	1축 누적거리(rev)	Ww050	Ww008	
Wr051	Wr009	2축 누적거리(Km)	Ww051	Ww009	
Wr052	Wr00A	3축 누적거리(Km)	Ww052	Ww00A	
Wr053	Wr00B	4축 누적거리(Km)	Ww053	Ww00B	
Wr054	Wr00C	5축 누적거리(Km)	Ww054	Ww00C	
Wr055	Wr00D	6축 누적거리(Km)	Ww055	Ww00D	
Wr056	Wr00E	하핸드 좌(8bit)-1/우(8bit)-2 흡착 압력(0~100kpa)	Ww056	Ww00E	
Wr057	Wr00F	상핸드 좌(8bit)-3/우(8bit)-4 흡착 압력(0~100kpa)	Ww057	Ww00F	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X270	X070		Y270	Y070	
X271	X071		Y271	Y071	
X272	X072		Y272	Y072	
X273	X073		Y273	Y073	
X274	X074		Y274	Y074	
X275	X075		Y275	Y075	
X276	X076		Y276	Y076	
X277	X077		Y277	Y077	
X278	X078		Y278	Y078	
X279	X079		Y279	Y079	
X27A	X07A		Y27A	Y07A	
X27B	X07B		Y27B	Y07B	
X27C	X07C		Y27C	Y07C	
X27D	X07D		Y27D	Y07D	
X27E	X07E		Y27E	Y07E	
X27F	X07F		Y27F	Y07F	
X280	X080		Y280	Y080	
X281	X081		Y281	Y081	
X282	X082		Y282	Y082	
X283	X083		Y283	Y083	
X284	X084		Y284	Y084	
X285	X085		Y285	Y085	
X286	X086		Y286	Y086	
X287	X087		Y287	Y087	
X288	X088		Y288	Y088	
X289	X089		Y289	Y089	
X28A	X08A		Y28A	Y08A	
X28B	X08B		Y28B	Y08B	
X28C	X08C		Y28C	Y08C	
X28D	X08D		Y28D	Y08D	
X28E	X08E		Y28E	Y08E	
X28F	X08F		Y28F	Y08F	
X290	X090		Y290	Y090	
X291	X091		Y291	Y091	
X292	X092		Y292	Y092	
X293	X093		Y293	Y093	
X294	X094		Y294	Y094	
X295	X095		Y295	Y095	
X296	X096		Y296	Y096	
X297	X097		Y297	Y097	
X298	X098		Y298	Y098	
X299	X099		Y299	Y099	
X29A	X09A		Y29A	Y09A	
X29B	X09B		Y29B	Y09B	
X29C	X09C		Y29C	Y09C	
X29D	X09D		Y29D	Y09D	
X29E	X09E		Y29E	Y09E	
X29F	X09F		Y29F	Y09F	
X2A0	X0A0		Y2A0	Y0A0	
X2A1	X0A1		Y2A1	Y0A1	
X2A2	X0A2		Y2A2	Y0A2	
X2A3	X0A3		Y2A3	Y0A3	
X2A4	X0A4		Y2A4	Y0A4	
X2A5	X0A5		Y2A5	Y0A5	
X2A6	X0A6		Y2A6	Y0A6	
X2A7	X0A7		Y2A7	Y0A7	
Wr058	Wr010		Ww058	Ww010	
Wr059	Wr011		Ww059	Ww011	
Wr05A	Wr012		Ww05A	Ww012	
Wr05B	Wr013		Ww05B	Ww013	
Wr05C	Wr014		Ww05C	Ww014	
Wr05D	Wr015		Ww05D	Ww015	
Wr05E	Wr016		Ww05E	Ww016	
Wr05F	Wr017		Ww05F	Ww017	

입력		Name	출력		Name
Master	Remote		Master	Remote	
X2A8	X0A8		Y2A8	Y070	
X2A9	X0A9		Y2A9	Y0A9	
X2AA	X0AA		Y2AA	Y0AA	
X2AB	X0AB		Y2AB	Y0AB	
X2AC	X0AC		Y2AC	Y0AC	
X2AD	X0AD		Y2AD	Y0AD	
X2AE	X0AE		Y2AE	Y0AE	
X2AF	X0AF		Y2AF	Y0AF	
X2B0	X0B0		Y2B0	Y0B0	
X2B1	X0B1		Y2B1	Y0B1	
X2B2	X0B2		Y2B2	Y0B2	
X2B3	X0B3		Y2B3	Y0B3	
X2B4	X0B4		Y2B4	Y0B4	
X2B5	X0B5		Y2B5	Y0B5	
X2B6	X0B6		Y2B6	Y0B6	
X2B7	X0B7		Y2B7	Y0B7	
X2B8	X0B8		Y2B8	Y0B8	
X2B9	X0B9		Y2B9	Y0B9	
X2BA	X0BA		Y2BA	Y0BA	
X2BB	X0BB		Y2BB	Y0BB	
X2BC	X0BC		Y2BC	Y0BC	
X2BD	X0BD		Y2BD	Y0BD	
X2BE	X0BE		Y2BE	Y0BE	
X2BF	X0BF		Y2BF	Y0BF	
X2C0	X0C0		Y2C0	Y0C0	
X2C1	X0C1		Y2C1	Y0C1	
X2C2	X0C2		Y2C2	Y0C2	
X2C3	X0C3		Y2C3	Y0C3	
X2C4	X0C4		Y2C4	Y0C4	
X2C5	X0C5		Y2C5	Y0C5	
X2C6	X0C6		Y2C6	Y0C6	
X2C7	X0C7		Y2C7	Y0C7	
X2C8	X0C8		Y2C8	Y0C8	
X2C9	X0C9		Y2C9	Y0C9	
X2CA	X0CA		Y2CA	Y0CA	
X2CB	X0CB		Y2CB	Y0CB	
X2CC	X0CC		Y2CC	Y0CC	
X2CD	X0CD		Y2CD	Y0CD	
X2CE	X0CE		Y2CE	Y0CE	
X2CF	X0CF		Y2CF	Y0CF	
X2D0	X0D0		Y2D0	Y0D0	
X2D1	X0D1		Y2D1	Y0D1	
X2D2	X0D2		Y2D2	Y0D2	
X2D3	X0D3		Y2D3	Y0D3	
X2D4	X0D4		Y2D4	Y0D4	
X2D5	X0D5		Y2D5	Y0D5	
X2D6	X0D6		Y2D6	Y0D6	
X2D7	X0D7		Y2D7	Y0D7	
X2D8	X0D8		Y2D8	Y0D8	
X2D9	X0D9		Y2D9	Y0D9	
X2DA	X0DA		Y2DA	Y0DA	
X2DB	X0DB		Y2DB	Y0DB	
X2DC	X0DC		Y2DC	Y0DC	
X2DD	X0DD		Y2DD	Y0DD	
X2DE	X0DE		Y2DE	Y0DE	
X2DF	X0DF		Y2DF	Y0DF	
Wr060	Wr018		Ww060	Ww018	
Wr061	Wr019		Ww061	Ww019	
Wr062	Wr01A		Ww062	Ww01A	
Wr063	Wr01B		Ww063	Ww01B	
Wr064	Wr01C		Ww064	Ww01C	
Wr065	Wr01D		Ww065	Ww01D	
Wr066	Wr01E		Ww066	Ww01E	
Wr067	Wr01F		Ww067	Ww01F	

Station No.			16		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Port #1 ~ #5 Ionizer Error		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X300	Port 1-1 Ionizer Error Report		Ionier 고전압 발생 저하 Error Report
	TB09	X301	Port 1-2 Ionizer Error Report		
	TB10	X302	Port 2-1 Ionizer Error Report		
	TB11	X303	Port 2-2 Ionizer Error Report		
	TB12	X304	Port 3-1 Ionizer Error Report		
	TB13	X305	Port 3-2 Ionizer Error Report		
	TB14	X306	Port 4-1 Ionizer Error Report		
	TB15	X307	Port 4-2 Ionizer Error Report		
	TB16	X308	Port 5-1 Ionizer Error Report		
	TB17	X309	Port 5-2 Ionizer Error Report		
	TB18	X30A			
	TB19	X30B			
	TB20	X30C	Spare		
	TB21	X30D	EQP #1 L/L X-Ray Ionizer State On		EQP #1 X-Ray Ionizer State
	TB22	X30E	EQP #1 L/L X-Ray Ionizer Plasma State On		
	TB23	X30F	EQP #1 L/L X-Ray Ionizer Voltage State On		
	TB24	X310	Port 1-1 Ionizer Error Report		Ionizer 방전 Tip Clean 주기 도달 Report
	TB25	X311	Port 1-2 Ionizer Error Report		
	TB26	X312	Port 2-1 Ionizer Error Report		
	TB27	X313	Port 2-2 Ionizer Error Report		
	TB28	X314	Port 3-1 Ionizer Error Report		
	TB29	X315	Port 3-2 Ionizer Error Report		
	TB30	X316	Port 4-1 Ionizer Error Report		
	TB31	X317	Port 4-2 Ionizer Error Report		
	TB32	X318	Port 5-1 Ionizer Error Report		
	TB33	X319	Port 5-2 Ionizer Error Report		
	TB34	X31A			
	TB35	X31B			
	TB36	X31C	Spare		
	TB37	X31D	EQP #2 L/L X-Ray Ionizer State On		EQP #2 X-Ray Ionizer State
	TB38	X31E	EQP #2 L/L X-Ray Ionizer Plasma State On		
	TB39	X31F	EQP #2 L/L X-Ray Ionizer Voltage State On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			19		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Loader TPD Input		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X360			Loader
	TB09	X361			
	TB10	X362			
	TB11	X363			
	TB12	X364			
	TB13	X365			
	TB14	X366			
	TB15	X367			
	TB16	X368			
	TB17	X369			
	TB18	X36A			
	TB19	X36B			
	TB20	X36C			
	TB21	X36D			
	TB22	X36E			
	TB23	X36F			
	TB24	X370			
	TB25	X371			
	TB26	X372			
	TB27	X373			
	TB28	X374			
	TB29	X375			
	TB30	X376			
	TB31	X377			
	TB32	X378			
	TB33	X379			
	TB34	X37A			
	TB35	X37B			
	TB36	X37C			
	TB37	X37D			
	TB38	X37E			
	TB39	X37F			
	Wr000	Wr078	유량 압력값 CDA		
	Wr001	Wr079	유량 압력값 IONIZER 1 ~ 4		
	Wr002	Wr07A	유량 압력값 IONIZER 5 ~ 8		
	Wr003	Wr07B			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			20		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Robot, 공통 In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X380	비상정지	b	Robot 1
	TB09	X381	EFU Down		
	TB10	X382	Maint Interlock		
	TB11	X383	DOOR-SENSOR (Safety Relay)	b	
	TB12	X384	EQP #1 비상정지	b	
	TB13	X385	EQP #2 비상정지	b	
	TB14	X386	EQP #3 비상정지	b	
	TB15	X387	EQP #4 비상정지	b	
	TB16	X388	비상정지	b	Robot 2
	TB17	X389			
	TB18	X38A			
	TB19	X38B	DOOR-SENSOR (Safety Relay)	b	
	TB20	X38C	EQP #1 비상정지	b	
	TB21	X38D	EQP #2 비상정지	b	
	TB22	X38E	EQP #3 비상정지	b	
	TB23	X38F	EQP #4 비상정지	b	
출력	TB24	Y390	Robot 외부 Servo On		Robot 1
	TB25	Y391	Robot 외부 비상정지 (EMS 케이블)	b	
	TB26	Y392	Robot 외부 Hold (사용안함)	b	
	TB27	Y393	Robot 외부 Safety Plug (EMS 케이블)	b	
	TB28	Y394	Door Lock 해제		
	TB29	Y395	EMO Safety Relay Reset(Inline Loader)		
	TB30	Y396	Door Lock Safety Relay Reset(Inline Loader)		
	TB31	Y397	Robot 외부 Servo On		Robot 2
	TB32	Y398	Robot 외부 비상정지 (EMS 케이블)	b	
	TB33	Y399	Robot 외부 Hold(사용안함)	b	
	TB34	Y39A	Robot 외부 Safety Plug (EMS 케이블)	b	
	TB35	Y39B	Door Lock 해제		
	TB36	Y39C	EMO Safety Relay Reset(Inline Loader)		
	TB37	Y39D	Door Lock Safety Relay Reset(Inline Loader)		
	TB38	Y39E	Buzzer On		
	TB39	Y39F	Melody On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			21		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Robot, 공통 In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X3A0	비상정지	b	Robot 3
	TB09	X3A1			
	TB10	X3A2			
	TB11	X3A3	DOOR-SENSOR (Safety Relay)	b	
	TB12	X3A4	EQP #1 비상정지	b	
	TB13	X3A5	EQP #2 비상정지	b	
	TB14	X3A6	EQP #3 비상정지	b	
	TB15	X3A7	EQP #4 비상정지	b	
	TB16	X3A8	EQP #1 X-Ray Ionizer Down Report	b	X-Ray Ionizer Down Report
	TB17	X3A9	EQP #2 X-Ray Ionizer Down Report	b	
	TB18	X3AA	EQP #3 X-Ray Ionizer Down Report	b	
	TB19	X3AB	EQP #4 X-Ray Ionizer Down Report	b	
	TB20	X3AC	EQP #5 X-Ray Ionizer Down Report	b	
	TB21	X3AD	EQP #6 X-Ray Ionizer Down Report	b	
	TB22	X3AE			
	TB23	X3AF			
출력	TB24	Y3B0	Robot 외부 Servo On		Robot 3
	TB25	Y3B1	Robot 외부 비상정지 (EMS 케이블)	b	
	TB26	Y3B2	Robot 외부 Hold (사용안함)	b	
	TB27	Y3B3	Robot 외부 Safety Plug (EMS 케이블)	b	
	TB28	Y3B4	Door Lock 해제		
	TB29	Y3B5	EMO Safety Relay Reset(Inline Loader)		
	TB30	Y3B6	Door Lock Safety Relay Reset(Inline Loader)		
	TB31	Y3B7			
	TB32	Y3B8			
	TB33	Y3B9			
	TB34	Y3BA			
	TB35	Y3BB			
	TB36	Y3BC			
	TB37	Y3BD			
	TB38	Y3BE			
	TB39	Y3BF			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			22		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #1,2 Interlock Input		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X3C0	Normal Status_SIG OUT #1(Pin #19)		Equipment #1
	TB09	X3C1	Unload Enable_SIG OUT #2(Pin #20)		
	TB10	X3C2	Load Enable_SIG OUT #3(Pin #21)		
	TB11	X3C3	Exchange Enable_SIG OUT #4(Pin #22)		
	TB12	X3C4	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB13	X3C5	Stage Description #1_SIG OUT #6(Pin #24)		
	TB14	X3C6	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB15	X3C7	Stage Description #3_SIG OUT #8(Pin #26)		
	TB16	X3C8	Stage Description #4_SIG OUT #9(Pin #28)		
	TB17	X3C9	Unload Confirm(Pin #29)		
	TB18	X3CA	Spare_SIG OUT #11(Pin #30)		
	TB19	X3CB	Spare_SIG OUT #12(Pin #31)		
	TB20	X3CC	Spare_SIG OUT #13(Pin #32)		
	TB21	X3CD	Robot Action Enable #1(Pin #34)		
	TB22	X3CE	Robot Action Enable #2(Pin #35)		
	TB23	X3CF	Robot Action Enable #3(Pin #36)		
	TB24	X3D0	Normal Status_SIG OUT #1(Pin #19)		Equipment #2
	TB25	X3D1	Unload Enable_SIG OUT #2(Pin #20)		
	TB26	X3D2	Load Enable_SIG OUT #3(Pin #21)		
	TB27	X3D3	Exchange Enable_SIG OUT #4(Pin #22)		
	TB28	X3D4	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB29	X3D5	Stage Description #1_SIG OUT #6(Pin #24)		
	TB30	X3D6	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB31	X3D7	Stage Description #3_SIG OUT #8(Pin #26)		
	TB32	X3D8	Stage Description #4_SIG OUT #9(Pin #28)		
	TB33	X3D9	Unload Confirm(Pin #29)		
	TB34	X3DA	Spare_SIG OUT #11(Pin #30)		
	TB35	X3DB	Spare_SIG OUT #12(Pin #31)		
	TB36	X3DC	Spare_SIG OUT #13(Pin #32)		
	TB37	X3DD	Robot Action Enable #1(Pin #34)		
	TB38	X3DE	Robot Action Enable #2(Pin #35)		
	TB39	X3DF	Robot Action Enable #3(Pin #36)		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			23		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #1 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y3E0	Normal Status_SIG IN #1(Pin #1)		Equipment #1
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y3E1	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y3E2	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y3E3	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y3E4	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y3E5	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y3E6	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y3E7	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y3E8	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y3E9	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y3EA	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y3EB	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y3EC	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y3ED	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y3EE	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y3EF	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			24		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #2 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y400	Normal Status_SIG IN #1(Pin #1)		Equipment #2
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y401	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y402	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y403	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y404	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y405	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y406	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y407	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y408	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y409	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y40A	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y40B	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y40C	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y40D	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y40E	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y40F	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			25		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #3,4 Interlock Input		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X420	Normal Status_SIG OUT #1(Pin #19)		Equipment #3
	TB09	X421	Unload Enable_SIG OUT #2(Pin #20)		
	TB10	X422	Load Enable_SIG OUT #3(Pin #21)		
	TB11	X423	Exchange Enable_SIG OUT #4(Pin #22)		
	TB12	X424	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB13	X425	Stage Description #1_SIG OUT #6(Pin #24)		
	TB14	X426	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB15	X427	Stage Description #3_SIG OUT #8(Pin #26)		
	TB16	X428	Stage Description #4_SIG OUT #9(Pin #28)		
	TB17	X429	Unload Confirm(Pin #29)		
	TB18	X42A	Spare_SIG OUT #11(Pin #30)		
	TB19	X42B	Spare_SIG OUT #12(Pin #31)		
	TB20	X42C	Spare_SIG OUT #13(Pin #32)		
	TB21	X42D	Robot Action Enable #1(Pin #34)		
	TB22	X42E	Robot Action Enable #2(Pin #35)		
	TB23	X42F	Robot Action Enable #3(Pin #36)		
	TB24	X430	Normal Status_SIG OUT #1(Pin #19)		Equipment #4
	TB25	X431	Unload Enable_SIG OUT #2(Pin #20)		
	TB26	X432	Load Enable_SIG OUT #3(Pin #21)		
	TB27	X433	Exchange Enable_SIG OUT #4(Pin #22)		
	TB28	X434	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB29	X435	Stage Description #1_SIG OUT #6(Pin #24)		
	TB30	X436	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB31	X437	Stage Description #3_SIG OUT #8(Pin #26)		
	TB32	X438	Stage Description #4_SIG OUT #9(Pin #28)		
	TB33	X439	Unload Confirm(Pin #29)		
	TB34	X43A	Spare_SIG OUT #11(Pin #30)		
	TB35	X43B	Spare_SIG OUT #12(Pin #31)		
	TB36	X43C	Spare_SIG OUT #13(Pin #32)		
	TB37	X43D	Robot Action Enable #1(Pin #34)		
	TB38	X43E	Robot Action Enable #2(Pin #35)		
	TB39	X43F	Robot Action Enable #3(Pin #36)		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			26		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #3 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y440	Normal Status_SIG IN #1(Pin #1)		Equipment #3
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y441	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y442	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y443	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y444	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y445	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y446	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y447	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y448	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y449	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y44A	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y44B	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y44C	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y44D	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y44E	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y44F	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			27		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #4 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y460	Normal Status_SIG IN #1(Pin #1)		Equipment #4
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y461	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y462	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y463	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y464	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y465	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y466	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y467	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y468	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y469	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y46A	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y46B	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y46C	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y46D	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y46E	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y46F	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			28		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #5,6 Interlock Input		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X480	Normal Status_SIG OUT #1(Pin #19)		Equipment #5
	TB09	X481	Unload Enable_SIG OUT #2(Pin #20)		
	TB10	X482	Load Enable_SIG OUT #3(Pin #21)		
	TB11	X483	Exchange Enable_SIG OUT #4(Pin #22)		
	TB12	X484	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB13	X485	Stage Description #1_SIG OUT #6(Pin #24)		
	TB14	X486	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB15	X487	Stage Description #3_SIG OUT #8(Pin #26)		
	TB16	X488	Stage Description #4_SIG OUT #9(Pin #28)		
	TB17	X489	Unload Confirm(Pin #29)		
	TB18	X48A	Spare_SIG OUT #11(Pin #30)		
	TB19	X48B	Spare_SIG OUT #12(Pin #31)		
	TB20	X48C	Spare_SIG OUT #13(Pin #32)		
	TB21	X48D	Robot Action Enable #1(Pin #34)		
	TB22	X48E	Robot Action Enable #2(Pin #35)		
	TB23	X48F	Robot Action Enable #3(Pin #36)		
	TB24	X490	Normal Status_SIG OUT #1(Pin #19)		Equipment #6
	TB25	X491	Unload Enable_SIG OUT #2(Pin #20)		
	TB26	X492	Load Enable_SIG OUT #3(Pin #21)		
	TB27	X493	Exchange Enable_SIG OUT #4(Pin #22)		
	TB28	X494	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB29	X495	Stage Description #1_SIG OUT #6(Pin #24)		
	TB30	X496	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB31	X497	Stage Description #3_SIG OUT #8(Pin #26)		
	TB32	X498	Stage Description #4_SIG OUT #9(Pin #28)		
	TB33	X499	Unload Confirm(Pin #29)		
	TB34	X49A	Spare_SIG OUT #11(Pin #30)		
	TB35	X49B	Spare_SIG OUT #12(Pin #31)		
	TB36	X49C	Spare_SIG OUT #13(Pin #32)		
	TB37	X49D	Robot Action Enable #1(Pin #34)		
	TB38	X49E	Robot Action Enable #2(Pin #35)		
	TB39	X49F	Robot Action Enable #3(Pin #36)		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			29		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #5 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y4A0	Normal Status_SIG IN #1(Pin #1)		Equipment #5
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y4A1	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y4A2	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y4A3	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y4A4	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y4A5	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y4A6	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y4A7	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y4A8	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y4A9	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y4AA	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y4AB	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y4AC	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y4AD	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y4AE	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y4AF	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			30		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #6 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y4C0	Normal Status_SIG IN #1(Pin #1)		Equipment #6
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y4C1	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y4C2	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y4C3	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y4C4	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y4C5	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y4C6	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y4C7	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y4C8	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y4C9	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y4CA	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y4CB	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y4CC	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y4CD	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y4CE	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y4CF	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			31		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #7,8 Interlock Input		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X4E0	Normal Status_SIG OUT #1(Pin #19)		Equipment #7
	TB09	X4E1	Unload Enable_SIG OUT #2(Pin #20)		
	TB10	X4E2	Load Enable_SIG OUT #3(Pin #21)		
	TB11	X4E3	Exchange Enable_SIG OUT #4(Pin #22)		
	TB12	X4E4	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB13	X4E5	Stage Description #1_SIG OUT #6(Pin #24)		
	TB14	X4E6	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB15	X4E7	Stage Description #3_SIG OUT #8(Pin #26)		
	TB16	X4E8	Stage Description #4_SIG OUT #9(Pin #28)		
	TB17	X4E9	Unload Confirm(Pin #29)		
	TB18	X4EA	Spare_SIG OUT #11(Pin #30)		
	TB19	X4EB	Spare_SIG OUT #12(Pin #31)		
	TB20	X4EC	Spare_SIG OUT #13(Pin #32)		
	TB21	X4ED	Robot Action Enable #1(Pin #34)		
	TB22	X4EE	Robot Action Enable #2(Pin #35)		
	TB23	X4EF	Robot Action Enable #3(Pin #36)		
	TB24	X4F0	Normal Status_SIG OUT #1(Pin #19)		Equipment #8
	TB25	X4F1	Unload Enable_SIG OUT #2(Pin #20)		
	TB26	X4F2	Load Enable_SIG OUT #3(Pin #21)		
	TB27	X4F3	Exchange Enable_SIG OUT #4(Pin #22)		
	TB28	X4F4	Pin Action Busy_SIG OUT #5(Pin #23)		
	TB29	X4F5	Stage Description #1_SIG OUT #6(Pin #24)		
	TB30	X4F6	Stage Descriotion #2_SIG OUT #7(Pin #25)		
	TB31	X4F7	Stage Description #3_SIG OUT #8(Pin #26)		
	TB32	X4F8	Stage Description #4_SIG OUT #9(Pin #28)		
	TB33	X4F9	Unload Confirm(Pin #29)		
	TB34	X4FA	Spare_SIG OUT #11(Pin #30)		
	TB35	X4FB	Spare_SIG OUT #12(Pin #31)		
	TB36	X4FC	Spare_SIG OUT #13(Pin #32)		
	TB37	X4FD	Robot Action Enable #1(Pin #34)		
	TB38	X4FE	Robot Action Enable #2(Pin #35)		
	TB39	X4FF	Robot Action Enable #3(Pin #36)		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			32		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #7 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y500	Normal Status_SIG IN #1(Pin #1)		Equipment #7
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y501	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y502	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y503	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y504	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y505	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y506	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y507	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y508	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y509	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y50A	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y50B	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y50C	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y50D	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y50E	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y50F	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			33		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			Equipment #8 Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y520	Normal Status_SIG IN #1(Pin #1)		Equipment #8
	TB09	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB10	Y521	Unload Ready_SIG IN #2(Pin #2)		
	TB11	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB12	Y522	Load Ready_SIG IN #3(Pin #3)		
	TB13	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB14	Y523	Exchange Ready_SIG IN #4(Pin #4)		
	TB15	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB16	Y524	Robot Busy_SIG IN #5(Pin #5)		
	TB17	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB18	Y525	Robot End_SIG IN #6(Pin #6)		
	TB19	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB20	Y526	Next Glass Exist_SIG IN #7(Pin #7)		
	TB21	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB22	Y527	Pin Action Request_SIG IN #8(Pin #8)		
	TB23	COM B	Common SIG IN #1 ~ #8(Pin #9)		
	TB24	Y528	Stage Description #1_SIG IN #9(Pin #10)		
	TB25	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB26	Y529	Stage Description #2_SIG IN #10(Pin #11)		
	TB27	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB28	Y52A	Stage Description #3_SIG IN #11(Pin #12)		
	TB29	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB30	Y52B	Stage Description #4_SIG IN #12(Pin #13)		
	TB31	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB32	Y52C	Unload Complete_SIG IN #13(Pin #14)		
	TB33	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB34	Y52D	Load Complete_SIG IN #14(Pin #15)		
	TB35	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB36	Y52E	Spare_SIG IN #15(Pin #16)		
	TB37	COM B	Common SIG IN #9 ~ #16(Pin #18)		
	TB38	Y52F	Spare_SIG IN #16(Pin #17)		
	TB39	COM B	Common SIG IN #9 ~ #16(Pin #18)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			34		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Port CST LIFT SENSOR		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X540	Port #1 CST 들림 감지 센서	b	
	TB09	X541	Port #2 CST 들림 감지 센서	b	
	TB10	X542	Port #3 CST 들림 감지 센서	b	
	TB11	X543	Port #4 CST 들림 감지 센서	b	
	TB12	X544	Port #5 CST 들림 감지 센서	b	
	TB13	X545			
	TB14	X546			
	TB15	X547			
	TB16	X548			
	TB17	X549			
	TB18	X54A			
	TB19	X54B			
	TB20	X54C			
	TB21	X54D			
	TB22	X54E			
	TB23	X54F			
	TB24	X550			
	TB25	X551			
	TB26	X552			
	TB27	X553			
	TB28	X554			
	TB29	X555			
	TB30	X556			
	TB31	X557			
	TB32	X558			
	TB33	X559			
	TB34	X55A			
	TB35	X55B			
	TB36	X55C			
	TB37	X55D			
	TB38	X55E			
	TB39	X55F			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			35		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Port #1,2 In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X560	CST 감지 센서(전)		Port #1
	TB09	X561	CST 감지 센서(후)		
	TB10	X562	Clapm 1-1 전진		
	TB11	X563	Clapm 1-1 후진		
	TB12	X564	Clapm 1-2 전진		
	TB13	X565	Clapm 1-2 후진		
	TB14	X566	Clapm 2-1 전진		
	TB15	X567	Clapm 2-1 후진		
	TB16	X568	CST 감지 센서(전)		Port #2
	TB17	X569	CST 감지 센서(후)		
	TB18	X56A	Clapm 1-1 전진		
	TB19	X56B	Clapm 1-1 후진		
	TB20	X56C	Clapm 1-2 전진		
	TB21	X56D	Clapm 1-2 후진		
	TB22	X56E	Clapm 2-1 전진		
	TB23	X56F	Clapm 2-1 후진		
출력	TB24	Y570	Clamp 1 전진		Port #1
	TB25	Y571	Clamp 1 후진		
	TB26	Y572	Clamp 2 전진		
	TB27	Y573	Clamp 2 후진		
	TB28	Y574	Floating 풀림 (풀림 On , 잠김 Off)		
	TB29	Y575	Floating 잠김 (풀림 Off , 잠김 On)		
	TB30	Y576			
	TB31	Y577	Ionizer CDA 공급 On		
	TB32	Y578	Clamp 1 전진		Port #2
	TB33	Y579	Clamp 1 후진		
	TB34	Y57A	Clamp 2 전진		
	TB35	Y57B	Clamp 2 후진		
	TB36	Y57C	Floating 풀림 (풀림 On , 잠김 Off)		
	TB37	Y57D	Floating 잠김 (풀림 Off , 잠김 On)		
	TB38	Y57E			
	TB39	Y57F	Ionizer CDA 공급 On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			36		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Port #3,4 In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X580	CST 감지 센서(전)		Port #3
	TB09	X581	CST 감지 센서(후)		
	TB10	X582	Clapm 1-1 전진		
	TB11	X583	Clapm 1-1 후진		
	TB12	X584	Clapm 1-2 전진		
	TB13	X585	Clapm 1-2 후진		
	TB14	X586	Clapm 2-1 전진		
	TB15	X587	Clapm 2-1 후진		
	TB16	X588	CST 감지 센서(전)		Port #4
	TB17	X589	CST 감지 센서(후)		
	TB18	X58A	Clapm 1-1 전진		
	TB19	X58B	Clapm 1-1 후진		
	TB20	X58C	Clapm 1-2 전진		
	TB21	X58D	Clapm 1-2 후진		
	TB22	X58E	Clapm 2-1 전진		
	TB23	X58F	Clapm 2-1 후진		
출력	TB24	Y590	Clamp 1 전진		Port #3
	TB25	Y591	Clamp 1 후진		
	TB26	Y592	Clamp 2 전진		
	TB27	Y593	Clamp 2 후진		
	TB28	Y594	Floating 풀림 (풀림 On , 잠김 Off)		
	TB29	Y595	Floating 잠김 (풀림 Off , 잠김 On)		
	TB30	Y596			
	TB31	Y597	Ionizer CDA 공급 On		
	TB32	Y598	Clamp 1 전진		Port #4
	TB33	Y599	Clamp 1 후진		
	TB34	Y59A	Clamp 2 전진		
	TB35	Y59B	Clamp 2 후진		
	TB36	Y59C	Floating 풀림 (풀림 On , 잠김 Off)		
	TB37	Y59D	Floating 잠김 (풀림 Off , 잠김 On)		
	TB38	Y59E			
	TB39	Y59F	Ionizer CDA 공급 On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			37		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Port #5 In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X5A0	CST 감지 센서(전)		Port #5
	TB09	X5A1	CST 감지 센서(후)		
	TB10	X5A2	Clapm 1-1 전진		
	TB11	X5A3	Clapm 1-1 후진		
	TB12	X5A4	Clapm 1-2 전진		
	TB13	X5A5	Clapm 1-2 후진		
	TB14	X5A6	Clapm 2-1 전진		
	TB15	X5A7	Clapm 2-1 후진		
	TB16	X5A8			
	TB17	X5A9			
	TB18	X5AA			
	TB19	X5AB			
	TB20	X5AC			
	TB21	X5AD			
	TB22	X5AE			
	TB23	X5AF			
출력	TB24	Y5B0	Clamp 1 전진		Port #5
	TB25	Y5B1	Clamp 1 후진		
	TB26	Y5B2	Clamp 2 전진		
	TB27	Y5B3	Clamp 2 후진		
	TB28	Y5B4	Floating 풀림 (풀림 On , 잠김 Off)		
	TB29	Y5B5	Floating 잠김 (풀림 Off , 잠김 On)		
	TB30	Y5B6			
	TB31	Y5B7	Ionizer CDA 공급 On		
	TB32	Y5B8			
	TB33	Y5B9			
	TB34	Y5BA			
	TB35	Y5BB			
	TB36	Y5BC			
	TB37	Y5BD			
	TB38	Y5BE			
	TB39	Y5BF			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			39		
Station Type			Remote I/O(AJ65SBTB1-32DT1)		
용 도			Port #1 ~ #5 Ionizer In/Out		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X5E0	Port #1-1 Ionizer State On		Port #1 ~ #5 Ionizer State
	TB09	X5E1	Port #1-2 Ionizer State On		
	TB10	X5E2	Port #2-1 Ionizer State On		
	TB11	X5E3	Port #2-2 Ionizer State On		
	TB12	X5E4	Port #3-1 Ionizer State On		
	TB13	X5E5	Port #3-2 Ionizer State On		
	TB14	X5E6	Port #4-1 Ionizer State On		
	TB15	X5E7	Port #4-2 Ionizer State On		
	TB16	X5E8	Port #5-1 Ionizer State On		
	TB17	X5E9	Port #5-2 Ionizer State On		
	TB18	X5EA			
	TB19	X5EB			
	TB20	X5EC	X-Ray Ionizer Light Alarm		X-Ray Ionizer Alarm
	TB21	X5ED	X-Ray Ionizer Heavy Alarm		
	TB22	X5EE	Special Ionizer #1 State On (EQP #1)		Special Ionizer State
	TB23	X5EF	Special Ionizer #2 State On (EQP #2)		
출력	TB24	Y5F0	Port #1 Ionizer Remote Control On	B	Port #1 ~ #5 Ionizer Remote Control
	TB25	Y5F1	Port #2 Ionizer Remote Control On	B	
	TB26	Y5F2	Port #3 Ionizer Remote Control On	B	
	TB27	Y5F3	Port #4 Ionizer Remote Control On	B	
	TB28	Y5F4	Port #5 Ionizer Remote Control On	B	
	TB29	Y5F5			
	TB30	Y5F6	EQP #1 L/L X-Ray Ionizer Remote Control On	B	X-Ray Ionizer Remote Control
	TB31	Y5F7	EQP #2 L/L X-Ray Ionizer Remote Control On	B	
	TB32	Y5F8	SIGNAL TOWER RED		Signal Tower
	TB33	Y5F9	SIGNAL TOWER YELLOW		
	TB34	Y5FA	SIGNAL TOWER GREEN		
	TB35	Y5FB	X-Ray Ionizer CDA On		X-Ray Ionizer CDA
	TB36	Y5FC			
	TB37	Y5FD			
	TB38	Y5FE	Special Ionizer #1 Remote Control On (EQP #1)	B	Special Output
	TB39	Y5FF	Special Ionizer #2 Remote Control On (EQP #2)	B	
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			41		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			STK Interface(Port #1 ~ #5) Interlock Input (Loader)		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X620	Port #1 STK TR_REQ(Pin #3)		STK Interlock Input (Port #1 ~ #4)
	TB09	X621	Port #1 STK Complete(Pin #5)		
	TB10	X622	Port #2 STK TR_REQ(Pin #8)		
	TB11	X623	Port #2 STK Complete(Pin #10)		
	TB12	X624	Port #3 STK TR_REQ(Pin #13)		
	TB13	X625	Port #3 STK Complete(Pin #15)		
	TB14	X626	Port #4 STK TR_REQ(Pin #18)		
	TB15	X627	Port #4 STK Complete(Pin #20)		
	TB16	X628	Port #1 ~ #4 STK Busy(Pin #21)		
	TB17	X629			
	TB18	X62A	Port #5 STK TR_REQ(Pin #3)		STK Interlock Input (Port #5)
	TB19	X62B	Port #5 STK Complete(Pin #5)		
	TB20	X62C			
	TB21	X62D			
	TB22	X62E			
	TB23	X62F			
	TB24	X630			
	TB25	X631			
	TB26	X632	Port #5 STK Busy(Pin #21)		
	TB27	X633			
	TB28	X634			
	TB29	X635			
	TB30	X636			
	TB31	X637			
	TB32	X638			
	TB33	X639			
	TB34	X63A			
	TB35	X63B			
	TB36	X63C			
	TB37	X63D			
	TB38	X63E			
	TB39	X63F			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			42		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			STK Interface(Port #1 ~ #4) Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y640	Port #1 STK LOAD_REQ(Pin #1)		STK Interlock Output (Port #1 ~ #4)
	TB09	COM B	Common Port #1 ~ #4(Pin #25)		
	TB10	Y641	Port #1 STK UNLOAD_REQ(Pin #2)		
	TB11	COM B	Common Port #1 ~ #4(Pin #25)		
	TB12	Y642	Port #1 STK READY(Pin #4)		
	TB13	COM B	Common Port #1 ~ #4(Pin #25)		
	TB14	Y643	Port #2 STK LOAD_REQ(Pin #6)		
	TB15	COM B	Common Port #1 ~ #4(Pin #25)		
	TB16	Y644	Port #2 STK UNLOAD_REQ(Pin #7)		
	TB17	COM B	Common Port #1 ~ #4(Pin #25)		
	TB18	Y645	Port #2 STK READY(Pin #9)		
	TB19	COM B	Common Port #1 ~ #4(Pin #25)		
	TB20	Y646	Spare		
	TB21	COM B			
	TB22	Y647	Spare		
	TB23	COM B			
	TB24	Y648	Port #3 STK LOAD_REQ(Pin #11)		
	TB25	COM B	Common Port #1 ~ #4(Pin #25)		
	TB26	Y649	Port #3 STK UNLOAD_REQ(Pin #112)		
	TB27	COM B	Common Port #1 ~ #4(Pin #25)		
	TB28	Y64A	Port #3 STK READY(Pin #14)		
	TB29	COM B	Common Port #1 ~ #4(Pin #25)		
	TB30	Y64B	Port #4 STK LOAD_REQ(Pin #16)		
	TB31	COM B	Common Port #1 ~ #4(Pin #25)		
	TB32	Y64C	Port #4 STK UNLOAD_REQ(Pin #17)		
	TB33	COM B	Common Port #1 ~ #4(Pin #25)		
	TB34	Y64D	Port #4 STK READY(Pin #19)		
	TB35	COM B	Common Port #1 ~ #4(Pin #25)		
	TB36	Y64E	Spare		
	TB37	COM B			
	TB38	Y64F	Port Occupy(Pin #22)		
	TB39	COM B	Common Port #1 ~ #4(Pin #25)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			43		
Station Type			Remote I/O(AJ65SBTB2N-16R)		
용 도			STK Interface(Port #5) Interlock Output		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
출력	TB08	Y660	Port #5 STK LOAD_REQ(Pin #1)		STK Interlock Output (Port #5)
	TB09	COM B	Common Port #5 ~ #6(Pin #25)		
	TB10	Y661	Port #5 STK UNLOAD_REQ(Pin #2)		
	TB11	COM B	Common Port #5 ~ #6(Pin #25)		
	TB12	Y662	Port #5 STK READY(Pin #4)		
	TB13	COM B	Common Port #5 ~ #6(Pin #25)		
	TB14	Y663			
	TB15	COM B			
	TB16	Y664			
	TB17	COM B			
	TB18	Y665			
	TB19	COM B			
	TB20	Y666	Spare		
	TB21	COM B			
	TB22	Y667	Spare		
	TB23	COM B			
	TB24	Y668			
	TB25	COM B			
	TB26	Y669			
	TB27	COM B			
	TB28	Y66A			
	TB29	COM B			
	TB30	Y66B			
	TB31	COM B			
	TB32	Y66C			
	TB33	COM B			
	TB34	Y66D			
	TB35	COM B			
	TB36	Y66E			
	TB37	COM B			
	TB38	Y66F	Port Occupy(Pin #22)		
	TB39	COM B	Common Port #5(Pin #25)		
COM	TB40	COM A	DC 24V		
	TB41	COM B	DC 0V		

Station No.			44		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			STK Interface(Port #1 ~ #5) Interlock Input (Unloader)		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X680	Port #1 STK TR_REQ(Pin #3)		STK Interlock Input (Port #1 ~ #4)
	TB09	X681	Port #1 STK Complete(Pin #5)		
	TB10	X682	Port #2 STK TR_REQ(Pin #8)		
	TB11	X683	Port #2 STK Complete(Pin #10)		
	TB12	X684	Port #3 STK TR_REQ(Pin #13)		
	TB13	X685	Port #3 STK Complete(Pin #15)		
	TB14	X686	Port #4 STK TR_REQ(Pin #18)		
	TB15	X687	Port #4 STK Complete(Pin #20)		
	TB16	X688	Port #1 ~ #4 STK Busy(Pin #21)		
	TB17	X689			
	TB18	X68A	Port #5 STK TR_REQ(Pin #3)		STK Interlock Input (Port #5)
	TB19	X68B	Port #5 STK Complete(Pin #5)		
	TB20	X68C			
	TB21	X68D			
	TB22	X68E			
	TB23	X68F			
	TB24	X690			
	TB25	X691			
	TB26	X692	Port #5 STK Busy(Pin #21)		
	TB27	X693			
	TB28	X694			
	TB29	X695			
	TB30	X696			
	TB31	X697			
	TB32	X698			
	TB33	X699			
	TB34	X69A			
	TB35	X69B			
	TB36	X69C			
	TB37	X69D			
	TB38	X69E			
	TB39	X69F			
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.	45
Station Type	Remote I/O
용 도	Port #1 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X6A0	X000	Slot #1 Glass 감지	Y6A0	Y000	
X6A1	X001	Slot #2 Glass 감지	Y6A1	Y001	
X6A2	X002	Slot #3 Glass 감지	Y6A2	Y002	
X6A3	X003	Slot #4 Glass 감지	Y6A3	Y003	
X6A4	X004	Slot #5 Glass 감지	Y6A4	Y004	
X6A5	X005	Slot #6 Glass 감지	Y6A5	Y005	
X6A6	X006	Slot #7 Glass 감지	Y6A6	Y006	
X6A7	X007	Slot #8 Glass 감지	Y6A7	Y007	
X6A8	X008	Slot #9 Glass 감지	Y6A8	Y008	
X6A9	X009	Slot #10 Glass 감지	Y6A9	Y009	
X6AA	X00A	Slot #11 Glass 감지	Y6AA	Y00A	
X6AB	X00B	Slot #12 Glass 감지	Y6AB	Y00B	
X6AC	X00C	Slot #13 Glass 감지	Y6AC	Y00C	
X6AD	X00D	Slot #14 Glass 감지	Y6AD	Y00D	
X6AE	X00E	Slot #15 Glass 감지	Y6AE	Y00E	
X6AF	X00F	Slot #16 Glass 감지	Y6AF	Y00F	
X6B0	X010	Slot #17 Glass 감지	Y6B0	Y010	
X6B1	X011	Slot #18 Glass 감지	Y6B1	Y011	
X6B2	X012	Slot #19 Glass 감지	Y6B2	Y012	
X6B3	X013	Slot #20 Glass 감지	Y6B3	Y013	
X6B4	X014	Slot #21 Glass 감지	Y6B4	Y014	
X6B5	X015	Slot #22 Glass 감지	Y6B5	Y015	
X6B6	X016	Slot #23 Glass 감지	Y6B6	Y016	
X6B7	X017	Slot #24 Glass 감지	Y6B7	Y017	
X6B8	X018	Slot #25 Glass 감지	Y6B8	Y018	
X6B9	X019	Slot #26 Glass 감지	Y6B9	Y019	
X6BA	X01A	Slot #27 Glass 감지	Y6BA	Y01A	
X6BB	X01B	Slot #28 Glass 감지	Y6BB	Y01B	
X6BC	X01C	Slot #29 Glass 감지	Y6BC	Y01C	
X6BD	X01D	Slot #30 Glass 감지	Y6BD	Y01D	
X6BE	X01E		Y6BE	Y01E	
X6BF	X01F		Y6BF	Y01F	

Station No.	46
Station Type	Remote I/O
용 도	Port #1 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X6C0	X000	Slot #31 Glass 감지	Y6C0	Y000	
X6C1	X001	Slot #32 Glass 감지	Y6C1	Y001	
X6C2	X002	Slot #33 Glass 감지	Y6C2	Y002	
X6C3	X003	Slot #34 Glass 감지	Y6C3	Y003	
X6C4	X004	Slot #35 Glass 감지	Y6C4	Y004	
X6C5	X005	Slot #36 Glass 감지	Y6C5	Y005	
X6C6	X006	Slot #37 Glass 감지	Y6C6	Y006	
X6C7	X007	Slot #38 Glass 감지	Y6C7	Y007	
X6C8	X008	Slot #39 Glass 감지	Y6C8	Y008	
X6C9	X009	Slot #40 Glass 감지	Y6C9	Y009	
X6CA	X00A	Slot #41 Glass 감지	Y6CA	Y00A	
X6CB	X00B	Slot #42 Glass 감지	Y6CB	Y00B	
X6CC	X00C	Slot #43 Glass 감지	Y6CC	Y00C	
X6CD	X00D	Slot #44 Glass 감지	Y6CD	Y00D	
X6CE	X00E	Slot #45 Glass 감지	Y6CE	Y00E	
X6CF	X00F	Slot #46 Glass 감지	Y6CF	Y00F	
X6D0	X010	Slot #47 Glass 감지	Y6D0	Y010	
X6D1	X011	Slot #48 Glass 감지	Y6D1	Y011	
X6D2	X012	Slot #49 Glass 감지	Y6D2	Y012	
X6D3	X013	Slot #50 Glass 감지	Y6D3	Y013	
X6D4	X014	Slot #51 Glass 감지	Y6D4	Y014	
X6D5	X015	Slot #52 Glass 감지	Y6D5	Y015	
X6D6	X016	Slot #53 Glass 감지	Y6D6	Y016	
X6D7	X017	Slot #54 Glass 감지	Y6D7	Y017	
X6D8	X018	Slot #55 Glass 감지	Y6D8	Y018	
X6D9	X019	Slot #56 Glass 감지	Y6D9	Y019	
X6DA	X01A	Slot #57 Glass 감지	Y6DA	Y01A	
X6DB	X01B	Slot #58 Glass 감지	Y6DB	Y01B	
X6DC	X01C	Slot #59 Glass 감지	Y6DC	Y01C	
X6DD	X01D	Slot #60 Glass 감지	Y6DD	Y01D	
X6DE	X01E		Y6DE	Y01E	
X6DF	X01F		Y6DF	Y01F	

Station No.	47
Station Type	Remote I/O
용 도	Port #2 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X6E0	X000	Slot #1 Glass 감지	Y6E0	Y000	
X6E1	X001	Slot #2 Glass 감지	Y6E1	Y001	
X6E2	X002	Slot #3 Glass 감지	Y6E2	Y002	
X6E3	X003	Slot #4 Glass 감지	Y6E3	Y003	
X6E4	X004	Slot #5 Glass 감지	Y6E4	Y004	
X6E5	X005	Slot #6 Glass 감지	Y6E5	Y005	
X6E6	X006	Slot #7 Glass 감지	Y6E6	Y006	
X6E7	X007	Slot #8 Glass 감지	Y6E7	Y007	
X6E8	X008	Slot #9 Glass 감지	Y6E8	Y008	
X6E9	X009	Slot #10 Glass 감지	Y6E9	Y009	
X6EA	X00A	Slot #11 Glass 감지	Y6EA	Y00A	
X6EB	X00B	Slot #12 Glass 감지	Y6EB	Y00B	
X6EC	X00C	Slot #13 Glass 감지	Y6EC	Y00C	
X6ED	X00D	Slot #14 Glass 감지	Y6ED	Y00D	
X6EE	X00E	Slot #15 Glass 감지	Y6EE	Y00E	
X6EF	X00F	Slot #16 Glass 감지	Y6EF	Y00F	
X6F0	X010	Slot #17 Glass 감지	Y6F0	Y010	
X6F1	X011	Slot #18 Glass 감지	Y6F1	Y011	
X6F2	X012	Slot #19 Glass 감지	Y6F2	Y012	
X6F3	X013	Slot #20 Glass 감지	Y6F3	Y013	
X6F4	X014	Slot #21 Glass 감지	Y6F4	Y014	
X6F5	X015	Slot #22 Glass 감지	Y6F5	Y015	
X6F6	X016	Slot #23 Glass 감지	Y6F6	Y016	
X6F7	X017	Slot #24 Glass 감지	Y6F7	Y017	
X6F8	X018	Slot #25 Glass 감지	Y6F8	Y018	
X6F9	X019	Slot #26 Glass 감지	Y6F9	Y019	
X6FA	X01A	Slot #27 Glass 감지	Y6FA	Y01A	
X6FB	X01B	Slot #28 Glass 감지	Y6FB	Y01B	
X6FC	X01C	Slot #29 Glass 감지	Y6FC	Y01C	
X6FD	X01D	Slot #30 Glass 감지	Y6FD	Y01D	
X6FE	X01E		Y6FE	Y01E	
X6FF	X01F		Y6FF	Y01F	

Station No.	48
Station Type	Remote I/O
용 도	Port #2 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X700	X000	Slot #31 Glass 감지	Y700	Y000	
X701	X001	Slot #32 Glass 감지	Y701	Y001	
X702	X002	Slot #33 Glass 감지	Y702	Y002	
X703	X003	Slot #34 Glass 감지	Y703	Y003	
X704	X004	Slot #35 Glass 감지	Y704	Y004	
X705	X005	Slot #36 Glass 감지	Y705	Y005	
X706	X006	Slot #37 Glass 감지	Y706	Y006	
X707	X007	Slot #38 Glass 감지	Y707	Y007	
X708	X008	Slot #39 Glass 감지	Y708	Y008	
X709	X009	Slot #40 Glass 감지	Y709	Y009	
X70A	X00A	Slot #41 Glass 감지	Y70A	Y00A	
X70B	X00B	Slot #42 Glass 감지	Y70B	Y00B	
X70C	X00C	Slot #43 Glass 감지	Y70C	Y00C	
X70D	X00D	Slot #44 Glass 감지	Y70D	Y00D	
X70E	X00E	Slot #45 Glass 감지	Y70E	Y00E	
X70F	X00F	Slot #46 Glass 감지	Y70F	Y00F	
X710	X010	Slot #47 Glass 감지	Y710	Y010	
X711	X011	Slot #48 Glass 감지	Y711	Y011	
X712	X012	Slot #49 Glass 감지	Y712	Y012	
X713	X013	Slot #50 Glass 감지	Y713	Y013	
X714	X014	Slot #51 Glass 감지	Y714	Y014	
X715	X015	Slot #52 Glass 감지	Y715	Y015	
X716	X016	Slot #53 Glass 감지	Y716	Y016	
X717	X017	Slot #54 Glass 감지	Y717	Y017	
X718	X018	Slot #55 Glass 감지	Y718	Y018	
X719	X019	Slot #56 Glass 감지	Y719	Y019	
X71A	X01A	Slot #57 Glass 감지	Y71A	Y01A	
X71B	X01B	Slot #58 Glass 감지	Y71B	Y01B	
X71C	X01C	Slot #59 Glass 감지	Y71C	Y01C	
X71D	X01D	Slot #60 Glass 감지	Y71D	Y01D	
X71E	X01E		Y71E	Y01E	
X71F	X01F		Y71F	Y01F	

Station No.	49
Station Type	Remote I/O
용 도	Port #3 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X720	X000	Slot #1 Glass 감지	Y720	Y000	
X721	X001	Slot #2 Glass 감지	Y721	Y001	
X722	X002	Slot #3 Glass 감지	Y722	Y002	
X723	X003	Slot #4 Glass 감지	Y723	Y003	
X724	X004	Slot #5 Glass 감지	Y724	Y004	
X725	X005	Slot #6 Glass 감지	Y725	Y005	
X726	X006	Slot #7 Glass 감지	Y726	Y006	
X727	X007	Slot #8 Glass 감지	Y727	Y007	
X728	X008	Slot #9 Glass 감지	Y728	Y008	
X729	X009	Slot #10 Glass 감지	Y729	Y009	
X72A	X00A	Slot #11 Glass 감지	Y72A	Y00A	
X72B	X00B	Slot #12 Glass 감지	Y72B	Y00B	
X72C	X00C	Slot #13 Glass 감지	Y72C	Y00C	
X72D	X00D	Slot #14 Glass 감지	Y72D	Y00D	
X72E	X00E	Slot #15 Glass 감지	Y72E	Y00E	
X72F	X00F	Slot #16 Glass 감지	Y72F	Y00F	
X730	X010	Slot #17 Glass 감지	Y730	Y010	
X731	X011	Slot #18 Glass 감지	Y731	Y011	
X732	X012	Slot #19 Glass 감지	Y732	Y012	
X733	X013	Slot #20 Glass 감지	Y733	Y013	
X734	X014	Slot #21 Glass 감지	Y734	Y014	
X735	X015	Slot #22 Glass 감지	Y735	Y015	
X736	X016	Slot #23 Glass 감지	Y736	Y016	
X737	X017	Slot #24 Glass 감지	Y737	Y017	
X738	X018	Slot #25 Glass 감지	Y738	Y018	
X739	X019	Slot #26 Glass 감지	Y739	Y019	
X73A	X01A	Slot #27 Glass 감지	Y73A	Y01A	
X73B	X01B	Slot #28 Glass 감지	Y73B	Y01B	
X73C	X01C	Slot #29 Glass 감지	Y73C	Y01C	
X73D	X01D	Slot #30 Glass 감지	Y73D	Y01D	
X73E	X01E		Y73E	Y01E	
X73F	X01F		Y73F	Y01F	

Station No.	50
Station Type	Remote I/O
용 도	Port #3 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X740	X000	Slot #31 Glass 감지	Y740	Y000	
X741	X001	Slot #32 Glass 감지	Y741	Y001	
X742	X002	Slot #33 Glass 감지	Y742	Y002	
X743	X003	Slot #34 Glass 감지	Y743	Y003	
X744	X004	Slot #35 Glass 감지	Y744	Y004	
X745	X005	Slot #36 Glass 감지	Y745	Y005	
X746	X006	Slot #37 Glass 감지	Y746	Y006	
X747	X007	Slot #38 Glass 감지	Y747	Y007	
X748	X008	Slot #39 Glass 감지	Y748	Y008	
X749	X009	Slot #40 Glass 감지	Y749	Y009	
X74A	X00A	Slot #41 Glass 감지	Y74A	Y00A	
X74B	X00B	Slot #42 Glass 감지	Y74B	Y00B	
X74C	X00C	Slot #43 Glass 감지	Y74C	Y00C	
X74D	X00D	Slot #44 Glass 감지	Y74D	Y00D	
X74E	X00E	Slot #45 Glass 감지	Y74E	Y00E	
X74F	X00F	Slot #46 Glass 감지	Y74F	Y00F	
X750	X010	Slot #47 Glass 감지	Y750	Y010	
X751	X011	Slot #48 Glass 감지	Y751	Y011	
X752	X012	Slot #49 Glass 감지	Y752	Y012	
X753	X013	Slot #50 Glass 감지	Y753	Y013	
X754	X014	Slot #51 Glass 감지	Y754	Y014	
X755	X015	Slot #52 Glass 감지	Y755	Y015	
X756	X016	Slot #53 Glass 감지	Y756	Y016	
X757	X017	Slot #54 Glass 감지	Y757	Y017	
X758	X018	Slot #55 Glass 감지	Y758	Y018	
X759	X019	Slot #56 Glass 감지	Y759	Y019	
X75A	X01A	Slot #57 Glass 감지	Y75A	Y01A	
X75B	X01B	Slot #58 Glass 감지	Y75B	Y01B	
X75C	X01C	Slot #59 Glass 감지	Y75C	Y01C	
X75D	X01D	Slot #60 Glass 감지	Y75D	Y01D	
X75E	X01E		Y75E	Y01E	
X75F	X01F		Y75F	Y01F	

Station No.	51
Station Type	Remote I/O
용 도	Port #4 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X760	X000	Slot #1 Glass 감지	Y760	Y000	
X761	X001	Slot #2 Glass 감지	Y761	Y001	
X762	X002	Slot #3 Glass 감지	Y762	Y002	
X763	X003	Slot #4 Glass 감지	Y763	Y003	
X764	X004	Slot #5 Glass 감지	Y764	Y004	
X765	X005	Slot #6 Glass 감지	Y765	Y005	
X766	X006	Slot #7 Glass 감지	Y766	Y006	
X767	X007	Slot #8 Glass 감지	Y767	Y007	
X768	X008	Slot #9 Glass 감지	Y768	Y008	
X769	X009	Slot #10 Glass 감지	Y769	Y009	
X76A	X00A	Slot #11 Glass 감지	Y76A	Y00A	
X76B	X00B	Slot #12 Glass 감지	Y76B	Y00B	
X76C	X00C	Slot #13 Glass 감지	Y76C	Y00C	
X76D	X00D	Slot #14 Glass 감지	Y76D	Y00D	
X76E	X00E	Slot #15 Glass 감지	Y76E	Y00E	
X76F	X00F	Slot #16 Glass 감지	Y76F	Y00F	
X770	X010	Slot #17 Glass 감지	Y770	Y010	
X771	X011	Slot #18 Glass 감지	Y771	Y011	
X772	X012	Slot #19 Glass 감지	Y772	Y012	
X773	X013	Slot #20 Glass 감지	Y773	Y013	
X774	X014	Slot #21 Glass 감지	Y774	Y014	
X775	X015	Slot #22 Glass 감지	Y775	Y015	
X776	X016	Slot #23 Glass 감지	Y776	Y016	
X777	X017	Slot #24 Glass 감지	Y777	Y017	
X778	X018	Slot #25 Glass 감지	Y778	Y018	
X779	X019	Slot #26 Glass 감지	Y779	Y019	
X77A	X01A	Slot #27 Glass 감지	Y77A	Y01A	
X77B	X01B	Slot #28 Glass 감지	Y77B	Y01B	
X77C	X01C	Slot #29 Glass 감지	Y77C	Y01C	
X77D	X01D	Slot #30 Glass 감지	Y77D	Y01D	
X77E	X01E		Y77E	Y01E	
X77F	X01F		Y77F	Y01F	

Station No.	52
Station Type	Remote I/O
용 도	Port #4 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X780	X000	Slot #31 Glass 감지	Y780	Y000	
X781	X001	Slot #32 Glass 감지	Y781	Y001	
X782	X002	Slot #33 Glass 감지	Y782	Y002	
X783	X003	Slot #34 Glass 감지	Y783	Y003	
X784	X004	Slot #35 Glass 감지	Y784	Y004	
X785	X005	Slot #36 Glass 감지	Y785	Y005	
X786	X006	Slot #37 Glass 감지	Y786	Y006	
X787	X007	Slot #38 Glass 감지	Y787	Y007	
X788	X008	Slot #39 Glass 감지	Y788	Y008	
X789	X009	Slot #40 Glass 감지	Y789	Y009	
X78A	X00A	Slot #41 Glass 감지	Y78A	Y00A	
X78B	X00B	Slot #42 Glass 감지	Y78B	Y00B	
X78C	X00C	Slot #43 Glass 감지	Y78C	Y00C	
X78D	X00D	Slot #44 Glass 감지	Y78D	Y00D	
X78E	X00E	Slot #45 Glass 감지	Y78E	Y00E	
X78F	X00F	Slot #46 Glass 감지	Y78F	Y00F	
X790	X010	Slot #47 Glass 감지	Y790	Y010	
X791	X011	Slot #48 Glass 감지	Y791	Y011	
X792	X012	Slot #49 Glass 감지	Y792	Y012	
X793	X013	Slot #50 Glass 감지	Y793	Y013	
X794	X014	Slot #51 Glass 감지	Y794	Y014	
X795	X015	Slot #52 Glass 감지	Y795	Y015	
X796	X016	Slot #53 Glass 감지	Y796	Y016	
X797	X017	Slot #54 Glass 감지	Y797	Y017	
X798	X018	Slot #55 Glass 감지	Y798	Y018	
X799	X019	Slot #56 Glass 감지	Y799	Y019	
X79A	X01A	Slot #57 Glass 감지	Y79A	Y01A	
X79B	X01B	Slot #58 Glass 감지	Y79B	Y01B	
X79C	X01C	Slot #59 Glass 감지	Y79C	Y01C	
X79D	X01D	Slot #60 Glass 감지	Y79D	Y01D	
X79E	X01E		Y79E	Y01E	
X79F	X01F		Y79F	Y01F	

Station No.	53
Station Type	Remote I/O
용 도	Port #5 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X7A0	X000	Slot #1 Glass 감지	Y7A0	Y000	
X7A1	X001	Slot #2 Glass 감지	Y7A1	Y001	
X7A2	X002	Slot #3 Glass 감지	Y7A2	Y002	
X7A3	X003	Slot #4 Glass 감지	Y7A3	Y003	
X7A4	X004	Slot #5 Glass 감지	Y7A4	Y004	
X7A5	X005	Slot #6 Glass 감지	Y7A5	Y005	
X7A6	X006	Slot #7 Glass 감지	Y7A6	Y006	
X7A7	X007	Slot #8 Glass 감지	Y7A7	Y007	
X7A8	X008	Slot #9 Glass 감지	Y7A8	Y008	
X7A9	X009	Slot #10 Glass 감지	Y7A9	Y009	
X7AA	X00A	Slot #11 Glass 감지	Y7AA	Y00A	
X7AB	X00B	Slot #12 Glass 감지	Y7AB	Y00B	
X7AC	X00C	Slot #13 Glass 감지	Y7AC	Y00C	
X7AD	X00D	Slot #14 Glass 감지	Y7AD	Y00D	
X7AE	X00E	Slot #15 Glass 감지	Y7AE	Y00E	
X7AF	X00F	Slot #16 Glass 감지	Y7AF	Y00F	
X7B0	X010	Slot #17 Glass 감지	Y7B0	Y010	
X7B1	X011	Slot #18 Glass 감지	Y7B1	Y011	
X7B2	X012	Slot #19 Glass 감지	Y7B2	Y012	
X7B3	X013	Slot #20 Glass 감지	Y7B3	Y013	
X7B4	X014	Slot #21 Glass 감지	Y7B4	Y014	
X7B5	X015	Slot #22 Glass 감지	Y7B5	Y015	
X7B6	X016	Slot #23 Glass 감지	Y7B6	Y016	
X7B7	X017	Slot #24 Glass 감지	Y7B7	Y017	
X7B8	X018	Slot #25 Glass 감지	Y7B8	Y018	
X7B9	X019	Slot #26 Glass 감지	Y7B9	Y019	
X7BA	X01A	Slot #27 Glass 감지	Y7BA	Y01A	
X7BB	X01B	Slot #28 Glass 감지	Y7BB	Y01B	
X7BC	X01C	Slot #29 Glass 감지	Y7BC	Y01C	
X7BD	X01D	Slot #30 Glass 감지	Y7BD	Y01D	
X7BE	X01E		Y7BE	Y01E	
X7BF	X01F		Y7BF	Y01F	

Station No.	54
Station Type	Remote I/O
용 도	Port #5 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X7C0	X000	Slot #31 Glass 감지	Y7C0	Y000	
X7C1	X001	Slot #32 Glass 감지	Y7C1	Y001	
X7C2	X002	Slot #33 Glass 감지	Y7C2	Y002	
X7C3	X003	Slot #34 Glass 감지	Y7C3	Y003	
X7C4	X004	Slot #35 Glass 감지	Y7C4	Y004	
X7C5	X005	Slot #36 Glass 감지	Y7C5	Y005	
X7C6	X006	Slot #37 Glass 감지	Y7C6	Y006	
X7C7	X007	Slot #38 Glass 감지	Y7C7	Y007	
X7C8	X008	Slot #39 Glass 감지	Y7C8	Y008	
X7C9	X009	Slot #40 Glass 감지	Y7C9	Y009	
X7CA	X00A	Slot #41 Glass 감지	Y7CA	Y00A	
X7CB	X00B	Slot #42 Glass 감지	Y7CB	Y00B	
X7CC	X00C	Slot #43 Glass 감지	Y7CC	Y00C	
X7CD	X00D	Slot #44 Glass 감지	Y7CD	Y00D	
X7CE	X00E	Slot #45 Glass 감지	Y7CE	Y00E	
X7CF	X00F	Slot #46 Glass 감지	Y7CF	Y00F	
X7D0	X010	Slot #47 Glass 감지	Y7D0	Y010	
X7D1	X011	Slot #48 Glass 감지	Y7D1	Y011	
X7D2	X012	Slot #49 Glass 감지	Y7D2	Y012	
X7D3	X013	Slot #50 Glass 감지	Y7D3	Y013	
X7D4	X014	Slot #51 Glass 감지	Y7D4	Y014	
X7D5	X015	Slot #52 Glass 감지	Y7D5	Y015	
X7D6	X016	Slot #53 Glass 감지	Y7D6	Y016	
X7D7	X017	Slot #54 Glass 감지	Y7D7	Y017	
X7D8	X018	Slot #55 Glass 감지	Y7D8	Y018	
X7D9	X019	Slot #56 Glass 감지	Y7D9	Y019	
X7DA	X01A	Slot #57 Glass 감지	Y7DA	Y01A	
X7DB	X01B	Slot #58 Glass 감지	Y7DB	Y01B	
X7DC	X01C	Slot #59 Glass 감지	Y7DC	Y01C	
X7DD	X01D	Slot #60 Glass 감지	Y7DD	Y01D	
X7DE	X01E		Y7DE	Y01E	
X7DF	X01F		Y7DF	Y01F	

Station No.	55
Station Type	Remote I/O
용 도	Buffer #1 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X7E0	X000	Slot #1 Glass 감지	Y7E0	Y000	
X7E1	X001	Slot #2 Glass 감지	Y7E1	Y001	
X7E2	X002	Slot #3 Glass 감지	Y7E2	Y002	
X7E3	X003	Slot #4 Glass 감지	Y7E3	Y003	
X7E4	X004	Slot #5 Glass 감지	Y7E4	Y004	
X7E5	X005	Slot #6 Glass 감지	Y7E5	Y005	
X7E6	X006	Slot #7 Glass 감지	Y7E6	Y006	
X7E7	X007	Slot #8 Glass 감지	Y7E7	Y007	
X7E8	X008	Slot #9 Glass 감지	Y7E8	Y008	
X7E9	X009	Slot #10 Glass 감지	Y7E9	Y009	
X7EA	X00A	Slot #11 Glass 감지	Y7EA	Y00A	
X7EB	X00B	Slot #12 Glass 감지	Y7EB	Y00B	
X7EC	X00C	Slot #13 Glass 감지	Y7EC	Y00C	
X7ED	X00D	Slot #14 Glass 감지	Y7ED	Y00D	
X7EE	X00E	Slot #15 Glass 감지	Y7EE	Y00E	
X7EF	X00F	Slot #16 Glass 감지	Y7EF	Y00F	
X7F0	X010	Slot #17 Glass 감지	Y7F0	Y010	
X7F1	X011	Slot #18 Glass 감지	Y7F1	Y011	
X7F2	X012	Slot #19 Glass 감지	Y7F2	Y012	
X7F3	X013	Slot #20 Glass 감지	Y7F3	Y013	
X7F4	X014	Slot #21 Glass 감지	Y7F4	Y014	
X7F5	X015	Slot #22 Glass 감지	Y7F5	Y015	
X7F6	X016	Slot #23 Glass 감지	Y7F6	Y016	
X7F7	X017	Slot #24 Glass 감지	Y7F7	Y017	
X7F8	X018		Y7F8	Y018	
X7F9	X019		Y7F9	Y019	
X7FA	X01A		Y7FA	Y01A	
X7FB	X01B		Y7FB	Y01B	
X7FC	X01C		Y7FC	Y01C	
X7FD	X01D		Y7FD	Y01D	
X7FE	X01E		Y7FE	Y01E	
X7FF	X01F		Y7FF	Y01F	

Station No.	56
Station Type	Remote I/O
용 도	Buffer #2 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X800	X000	Slot #1 Glass 감지	Y800	Y000	
X801	X001	Slot #2 Glass 감지	Y801	Y001	
X802	X002	Slot #3 Glass 감지	Y802	Y002	
X803	X003	Slot #4 Glass 감지	Y803	Y003	
X804	X004	Slot #5 Glass 감지	Y804	Y004	
X805	X005	Slot #6 Glass 감지	Y805	Y005	
X806	X006	Slot #7 Glass 감지	Y806	Y006	
X807	X007	Slot #8 Glass 감지	Y807	Y007	
X808	X008	Slot #9 Glass 감지	Y808	Y008	
X809	X009	Slot #10 Glass 감지	Y809	Y009	
X80A	X00A	Slot #11 Glass 감지	Y80A	Y00A	
X80B	X00B	Slot #12 Glass 감지	Y80B	Y00B	
X80C	X00C	Slot #13 Glass 감지	Y80C	Y00C	
X80D	X00D	Slot #14 Glass 감지	Y80D	Y00D	
X80E	X00E	Slot #15 Glass 감지	Y80E	Y00E	
X80F	X00F	Slot #16 Glass 감지	Y80F	Y00F	
X810	X010	Slot #17 Glass 감지	Y810	Y010	
X811	X011	Slot #18 Glass 감지	Y811	Y011	
X812	X012	Slot #19 Glass 감지	Y812	Y012	
X813	X013	Slot #20 Glass 감지	Y813	Y013	
X814	X014	Slot #21 Glass 감지	Y814	Y014	
X815	X015	Slot #22 Glass 감지	Y815	Y015	
X816	X016	Slot #23 Glass 감지	Y816	Y016	
X817	X017	Slot #24 Glass 감지	Y817	Y017	
X818	X018		Y818	Y018	
X819	X019		Y819	Y019	
X81A	X01A		Y81A	Y01A	
X81B	X01B		Y81B	Y01B	
X81C	X01C		Y81C	Y01C	
X81D	X01D		Y81D	Y01D	
X81E	X01E		Y81E	Y01E	
X81F	X01F		Y81F	Y01F	

Station No.	57
Station Type	Remote I/O
용 도	Buffer #3 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X820	X000	Slot #1 Glass 감지	Y820	Y000	
X821	X001	Slot #2 Glass 감지	Y821	Y001	
X822	X002	Slot #3 Glass 감지	Y822	Y002	
X823	X003	Slot #4 Glass 감지	Y823	Y003	
X824	X004	Slot #5 Glass 감지	Y824	Y004	
X825	X005	Slot #6 Glass 감지	Y825	Y005	
X826	X006	Slot #7 Glass 감지	Y826	Y006	
X827	X007	Slot #8 Glass 감지	Y827	Y007	
X828	X008	Slot #9 Glass 감지	Y828	Y008	
X829	X009	Slot #10 Glass 감지	Y829	Y009	
X82A	X00A	Slot #11 Glass 감지	Y82A	Y00A	
X82B	X00B	Slot #12 Glass 감지	Y82B	Y00B	
X82C	X00C	Slot #13 Glass 감지	Y82C	Y00C	
X82D	X00D	Slot #14 Glass 감지	Y82D	Y00D	
X82E	X00E	Slot #15 Glass 감지	Y82E	Y00E	
X82F	X00F	Slot #16 Glass 감지	Y82F	Y00F	
X830	X010	Slot #17 Glass 감지	Y830	Y010	
X831	X011	Slot #18 Glass 감지	Y831	Y011	
X832	X012	Slot #19 Glass 감지	Y832	Y012	
X833	X013	Slot #20 Glass 감지	Y833	Y013	
X834	X014	Slot #21 Glass 감지	Y834	Y014	
X835	X015	Slot #22 Glass 감지	Y835	Y015	
X836	X016	Slot #23 Glass 감지	Y836	Y016	
X837	X017	Slot #24 Glass 감지	Y837	Y017	
X838	X018		Y838	Y018	
X839	X019		Y839	Y019	
X83A	X01A		Y83A	Y01A	
X83B	X01B		Y83B	Y01B	
X83C	X01C		Y83C	Y01C	
X83D	X01D		Y83D	Y01D	
X83E	X01E		Y83E	Y01E	
X83F	X01F		Y83F	Y01F	

Station No.	58
Station Type	Remote I/O
용 도	Buffer #4 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X840	X000	Slot #1 Glass 감지	Y840	Y000	
X841	X001	Slot #2 Glass 감지	Y841	Y001	
X842	X002	Slot #3 Glass 감지	Y842	Y002	
X843	X003	Slot #4 Glass 감지	Y843	Y003	
X844	X004	Slot #5 Glass 감지	Y844	Y004	
X845	X005	Slot #6 Glass 감지	Y845	Y005	
X846	X006	Slot #7 Glass 감지	Y846	Y006	
X847	X007	Slot #8 Glass 감지	Y847	Y007	
X848	X008	Slot #9 Glass 감지	Y848	Y008	
X849	X009	Slot #10 Glass 감지	Y849	Y009	
X84A	X00A	Slot #11 Glass 감지	Y84A	Y00A	
X84B	X00B	Slot #12 Glass 감지	Y84B	Y00B	
X84C	X00C	Slot #13 Glass 감지	Y84C	Y00C	
X84D	X00D	Slot #14 Glass 감지	Y84D	Y00D	
X84E	X00E	Slot #15 Glass 감지	Y84E	Y00E	
X84F	X00F	Slot #16 Glass 감지	Y84F	Y00F	
X850	X010	Slot #17 Glass 감지	Y850	Y010	
X851	X011	Slot #18 Glass 감지	Y851	Y011	
X852	X012	Slot #19 Glass 감지	Y852	Y012	
X853	X013	Slot #20 Glass 감지	Y853	Y013	
X854	X014	Slot #21 Glass 감지	Y854	Y014	
X855	X015	Slot #22 Glass 감지	Y855	Y015	
X856	X016	Slot #23 Glass 감지	Y856	Y016	
X857	X017	Slot #24 Glass 감지	Y857	Y017	
X858	X018		Y858	Y018	
X859	X019		Y859	Y019	
X85A	X01A		Y85A	Y01A	
X85B	X01B		Y85B	Y01B	
X85C	X01C		Y85C	Y01C	
X85D	X01D		Y85D	Y01D	
X85E	X01E		Y85E	Y01E	
X85F	X01F		Y85F	Y01F	

Station No.	59
Station Type	Remote I/O
용 도	Buffer #5 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X860	X000	Slot #1 Glass 감지	Y860	Y000	
X861	X001	Slot #2 Glass 감지	Y861	Y001	
X862	X002	Slot #3 Glass 감지	Y862	Y002	
X863	X003	Slot #4 Glass 감지	Y863	Y003	
X864	X004	Slot #5 Glass 감지	Y864	Y004	
X865	X005	Slot #6 Glass 감지	Y865	Y005	
X866	X006	Slot #7 Glass 감지	Y866	Y006	
X867	X007	Slot #8 Glass 감지	Y867	Y007	
X868	X008	Slot #9 Glass 감지	Y868	Y008	
X869	X009	Slot #10 Glass 감지	Y869	Y009	
X86A	X00A	Slot #11 Glass 감지	Y86A	Y00A	
X86B	X00B	Slot #12 Glass 감지	Y86B	Y00B	
X86C	X00C	Slot #13 Glass 감지	Y86C	Y00C	
X86D	X00D	Slot #14 Glass 감지	Y86D	Y00D	
X86E	X00E	Slot #15 Glass 감지	Y86E	Y00E	
X86F	X00F	Slot #16 Glass 감지	Y86F	Y00F	
X870	X010	Slot #17 Glass 감지	Y870	Y010	
X871	X011	Slot #18 Glass 감지	Y871	Y011	
X872	X012	Slot #19 Glass 감지	Y872	Y012	
X873	X013	Slot #20 Glass 감지	Y873	Y013	
X874	X014	Slot #21 Glass 감지	Y874	Y014	
X875	X015	Slot #22 Glass 감지	Y875	Y015	
X876	X016	Slot #23 Glass 감지	Y876	Y016	
X877	X017	Slot #24 Glass 감지	Y877	Y017	
X878	X018		Y878	Y018	
X879	X019		Y879	Y019	
X87A	X01A		Y87A	Y01A	
X87B	X01B		Y87B	Y01B	
X87C	X01C		Y87C	Y01C	
X87D	X01D		Y87D	Y01D	
X87E	X01E		Y87E	Y01E	
X87F	X01F		Y87F	Y01F	

Station No.	60
Station Type	Remote I/O
용 도	Buffer #6 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X880	X000	Slot #1 Glass 감지	Y880	Y000	
X881	X001	Slot #2 Glass 감지	Y881	Y001	
X882	X002	Slot #3 Glass 감지	Y882	Y002	
X883	X003	Slot #4 Glass 감지	Y883	Y003	
X884	X004	Slot #5 Glass 감지	Y884	Y004	
X885	X005	Slot #6 Glass 감지	Y885	Y005	
X886	X006	Slot #7 Glass 감지	Y886	Y006	
X887	X007	Slot #8 Glass 감지	Y887	Y007	
X888	X008	Slot #9 Glass 감지	Y888	Y008	
X889	X009	Slot #10 Glass 감지	Y889	Y009	
X88A	X00A	Slot #11 Glass 감지	Y88A	Y00A	
X88B	X00B	Slot #12 Glass 감지	Y88B	Y00B	
X88C	X00C	Slot #13 Glass 감지	Y88C	Y00C	
X88D	X00D	Slot #14 Glass 감지	Y88D	Y00D	
X88E	X00E	Slot #15 Glass 감지	Y88E	Y00E	
X88F	X00F	Slot #16 Glass 감지	Y88F	Y00F	
X890	X010	Slot #17 Glass 감지	Y890	Y010	
X891	X011	Slot #18 Glass 감지	Y891	Y011	
X892	X012	Slot #19 Glass 감지	Y892	Y012	
X893	X013	Slot #20 Glass 감지	Y893	Y013	
X894	X014	Slot #21 Glass 감지	Y894	Y014	
X895	X015	Slot #22 Glass 감지	Y895	Y015	
X896	X016	Slot #23 Glass 감지	Y896	Y016	
X897	X017	Slot #24 Glass 감지	Y897	Y017	
X898	X018		Y898	Y018	
X899	X019		Y899	Y019	
X89A	X01A		Y89A	Y01A	
X89B	X01B		Y89B	Y01B	
X89C	X01C		Y89C	Y01C	
X89D	X01D		Y89D	Y01D	
X89E	X01E		Y89E	Y01E	
X89F	X01F		Y89F	Y01F	

Station No.	61
Station Type	Remote I/O
용 도	Buffer #7 Mapping Unit


입력		Name	출력		Name
Master	Remote		Master	Remote	
X8A0	X000	Slot #1 Glass 감지	Y8A0	Y000	
X8A1	X001	Slot #2 Glass 감지	Y8A1	Y001	
X8A2	X002	Slot #3 Glass 감지	Y8A2	Y002	
X8A3	X003	Slot #4 Glass 감지	Y8A3	Y003	
X8A4	X004	Slot #5 Glass 감지	Y8A4	Y004	
X8A5	X005	Slot #6 Glass 감지	Y8A5	Y005	
X8A6	X006	Slot #7 Glass 감지	Y8A6	Y006	
X8A7	X007	Slot #8 Glass 감지	Y8A7	Y007	
X8A8	X008	Slot #9 Glass 감지	Y8A8	Y008	
X8A9	X009	Slot #10 Glass 감지	Y8A9	Y009	
X8AA	X00A	Slot #11 Glass 감지	Y8AA	Y00A	
X8AB	X00B	Slot #12 Glass 감지	Y8AB	Y00B	
X8AC	X00C	Slot #13 Glass 감지	Y8AC	Y00C	
X8AD	X00D	Slot #14 Glass 감지	Y8AD	Y00D	
X8AE	X00E	Slot #15 Glass 감지	Y8AE	Y00E	
X8AF	X00F	Slot #16 Glass 감지	Y8AF	Y00F	
X8B0	X010	Slot #17 Glass 감지	Y8B0	Y010	
X8B1	X011	Slot #18 Glass 감지	Y8B1	Y011	
X8B2	X012	Slot #19 Glass 감지	Y8B2	Y012	
X8B3	X013	Slot #20 Glass 감지	Y8B3	Y013	
X8B4	X014	Slot #21 Glass 감지	Y8B4	Y014	
X8B5	X015	Slot #22 Glass 감지	Y8B5	Y015	
X8B6	X016	Slot #23 Glass 감지	Y8B6	Y016	
X8B7	X017	Slot #24 Glass 감지	Y8B7	Y017	
X8B8	X018		Y8B8	Y018	
X8B9	X019		Y8B9	Y019	
X8BA	X01A		Y8BA	Y01A	
X8BB	X01B		Y8BB	Y01B	
X8BC	X01C		Y8BC	Y01C	
X8BD	X01D		Y8BD	Y01D	
X8BE	X01E		Y8BE	Y01E	
X8BF	X01F		Y8BF	Y01F	

Station No.	62
Station Type	Remote I/O
용 도	Buffer #8 Mapping Unit

입력		Name	출력		Name
Master	Remote		Master	Remote	
X8C0	X000	Slot #1 Glass 감지	Y8C0	Y000	
X8C1	X001	Slot #2 Glass 감지	Y8C1	Y001	
X8C2	X002	Slot #3 Glass 감지	Y8C2	Y002	
X8C3	X003	Slot #4 Glass 감지	Y8C3	Y003	
X8C4	X004	Slot #5 Glass 감지	Y8C4	Y004	
X8C5	X005	Slot #6 Glass 감지	Y8C5	Y005	
X8C6	X006	Slot #7 Glass 감지	Y8C6	Y006	
X8C7	X007	Slot #8 Glass 감지	Y8C7	Y007	
X8C8	X008	Slot #9 Glass 감지	Y8C8	Y008	
X8C9	X009	Slot #10 Glass 감지	Y8C9	Y009	
X8CA	X00A	Slot #11 Glass 감지	Y8CA	Y00A	
X8CB	X00B	Slot #12 Glass 감지	Y8CB	Y00B	
X8CC	X00C	Slot #13 Glass 감지	Y8CC	Y00C	
X8CD	X00D	Slot #14 Glass 감지	Y8CD	Y00D	
X8CE	X00E	Slot #15 Glass 감지	Y8CE	Y00E	
X8CF	X00F	Slot #16 Glass 감지	Y8CF	Y00F	
X8D0	X010	Slot #17 Glass 감지	Y8D0	Y010	
X8D1	X011	Slot #18 Glass 감지	Y8D1	Y011	
X8D2	X012	Slot #19 Glass 감지	Y8D2	Y012	
X8D3	X013	Slot #20 Glass 감지	Y8D3	Y013	
X8D4	X014	Slot #21 Glass 감지	Y8D4	Y014	
X8D5	X015	Slot #22 Glass 감지	Y8D5	Y015	
X8D6	X016	Slot #23 Glass 감지	Y8D6	Y016	
X8D7	X017	Slot #24 Glass 감지	Y8D7	Y017	
X8D8	X018		Y8D8	Y018	
X8D9	X019		Y8D9	Y019	
X8DA	X01A		Y8DA	Y01A	
X8DB	X01B		Y8DB	Y01B	
X8DC	X01C		Y8DC	Y01C	
X8DD	X01D		Y8DD	Y01D	
X8DE	X01E		Y8DE	Y01E	
X8DF	X01F		Y8DF	Y01F	

Station No.			63		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #1~4 RAE & Buffer Sensor Input(Loader)		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X8E0	Robot Action Enable #1		Equipment #1
	TB09	X8E1	Robot Action Enable #2		
	TB10	X8E2	Robot Action Enable #3		
	TB11	X8E3	Robot Action Enable #4		
	TB12	X8E4	Robot Action Enable #1		Equipment #2
	TB13	X8E5	Robot Action Enable #2		
	TB14	X8E6	Robot Action Enable #3		
	TB15	X8E7	Robot Action Enable #4		
	TB16	X8E8	Robot Action Enable #1		Equipment #3
	TB17	X8E9	Robot Action Enable #2		
	TB18	X8EA	Robot Action Enable #3		
	TB19	X8EB	Robot Action Enable #4		
	TB20	X8EC	Robot Action Enable #1		Equipment #4
	TB21	X8ED	Robot Action Enable #2		
	TB22	X8EE	Robot Action Enable #3		
	TB23	X8EF	Robot Action Enable #4		
	TB24	X8F0	Buffer Stage #1 Sensor On		Buffer Stage Sensor Input (Loader)
	TB25	X8F1	Buffer Stage #2 Sensor On		
	TB26	X8F2	Buffer Stage #3 Sensor On		
	TB27	X8F3	Buffer Stage #4 Sensor On		
	TB28	X8F4	Buffer Stage #5 Sensor On		
	TB29	X8F5	Buffer Stage #6 Sensor On		
	TB30	X8F6	Buffer Stage #7 Sensor On		
	TB31	X8F7	Buffer Stage #8 Sensor On		
	TB32	X8F8	Buffer Stage #9 Sensor On		
	TB33	X8F9	Buffer Stage #10 Sensor On		
	TB34	X8FA	Buffer Stage #11 Sensor On		
	TB35	X8FB	Buffer Stage #12 Sensor On		
	TB36	X8FC	Buffer Stage #13 Sensor On		
	TB37	X8FD	Buffer Stage #14 Sensor On		
	TB38	X8FE	Buffer Stage #15 Sensor On		
	TB39	X8FF	Buffer Stage #16 Sensor On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

Station No.			64		
Station Type			Remote I/O(AJ65SBTB1-32D1)		
용 도			Equipment #1~4 RAE & Buffer Sensor Input(Unloader)		
구분	TB No.	Address	Name	접점종류	비고
CC-Link	TB01		DA		
	TB02		DB		
	TB03		DG		
	TB04		SLD		
	TB05		DC 24V		
	TB06		FG		
	TB07		DC 0V		
입력	TB08	X900	Robot Action Enable #1		Equipment #1
	TB09	X901	Robot Action Enable #2		
	TB10	X902	Robot Action Enable #3		
	TB11	X903	Robot Action Enable #4		
	TB12	X904	Robot Action Enable #1		Equipment #2
	TB13	X905	Robot Action Enable #2		
	TB14	X906	Robot Action Enable #3		
	TB15	X907	Robot Action Enable #4		
	TB16	X908	Robot Action Enable #1		Equipment #3
	TB17	X909	Robot Action Enable #2		
	TB18	X90A	Robot Action Enable #3		
	TB19	X90B	Robot Action Enable #4		
	TB20	X90C	Robot Action Enable #1		Equipment #4
	TB21	X90D	Robot Action Enable #2		
	TB22	X90E	Robot Action Enable #3		
	TB23	X90F	Robot Action Enable #4		
	TB24	X910	Buffer Stage #1 Sensor On		Buffer Stage Sensor Input (Unloader)
	TB25	X911	Buffer Stage #2 Sensor On		
	TB26	X912	Buffer Stage #3 Sensor On		
	TB27	X913	Buffer Stage #4 Sensor On		
	TB28	X914	Buffer Stage #5 Sensor On		
	TB29	X915	Buffer Stage #6 Sensor On		
	TB30	X916	Buffer Stage #7 Sensor On		
	TB31	X917	Buffer Stage #8 Sensor On		
	TB32	X918	Buffer Stage #9 Sensor On		
	TB33	X919	Buffer Stage #10 Sensor On		
	TB34	X91A	Buffer Stage #11 Sensor On		
	TB35	X91B	Buffer Stage #12 Sensor On		
	TB36	X91C	Buffer Stage #13 Sensor On		
	TB37	X91D	Buffer Stage #14 Sensor On		
	TB38	X91E	Buffer Stage #15 Sensor On		
	TB39	X91F	Buffer Stage #16 Sensor On		
COM	TB40	COM+	DC 24V(P24)		
	TB41	COM-	DC 0V(N24)		

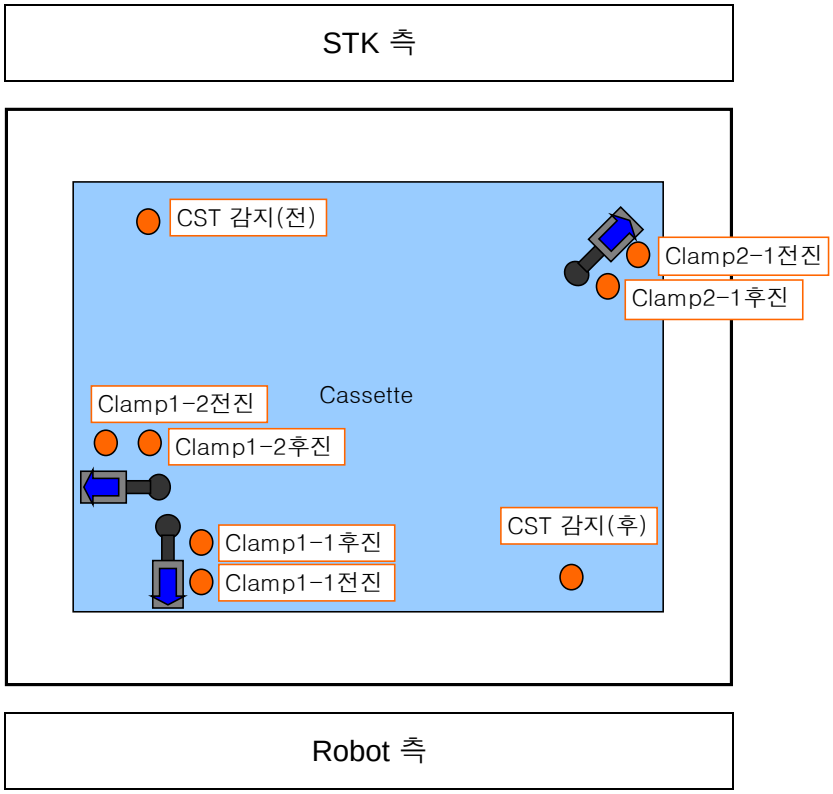

	Port #1	Port #2	Port #3	Port #4	Port #5	Port #6
CST 감지 전	X560	X568	X580	X588	X5A0	X5A8
CST 감지 후	X561	X569	X581	X589	X5A1	X5A9
Clamp 1-1 전진	X562	X56A	X582	X58A	X5A2	X5AA
Clamp 1-1 후진	X563	X56B	X583	X58B	X5A3	X5AB
Clamp 1-2 전진	X564	X56C	X584	X58C	X5A4	X5AC
Clamp 1-2 후진	X565	X56D	X585	X58D	X5A5	X5AD
Clamp 2-1 전진	X566	X56E	X586	X58E	X5A6	X5AE
Clamp 2-1 후진	X567	X56F	X587	X58F	X5A7	X5AF