


CONSTRUCTION NOTES

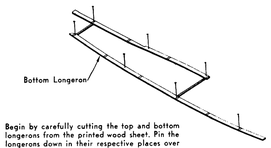


Begin by carefully cutting the top and bottom longerons from the printed wood sheet. Pin the longerons down in their respective places over shaded portion of plan. Cement connecting ½ sq. strips in place as shown. When dry, remove this unit from plan.

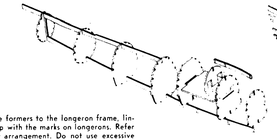


Cement the formers to the longeron frame, lining them up with the marks on longerons. Refer to plan for arrangement. Do not use excessive amounts of cement at this stage of assembly so the formers will not be warped and thrown out of line.

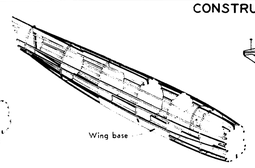


Stringers are cemented into notches next. Do this in pairs—one on each side—to keep the fuselage from springing out of line. When stringers are all in place, cement wing base in its respective position.

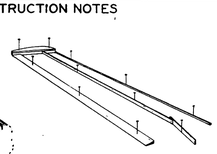


Build wing directly over shaded portion of plan. A piece of wax paper may be used over plan to prevent cement from sticking to it. Start by pinning down leading edge, trailing edge and spar. Then cement wing tips in place.

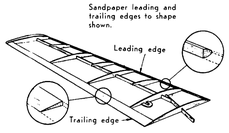


Cut out ribs from printed sheet and cement into position, trimming to fit if necessary. Cement rib "A" with dihedral angle. (See next sketch.) When dry, remove framework from plan.

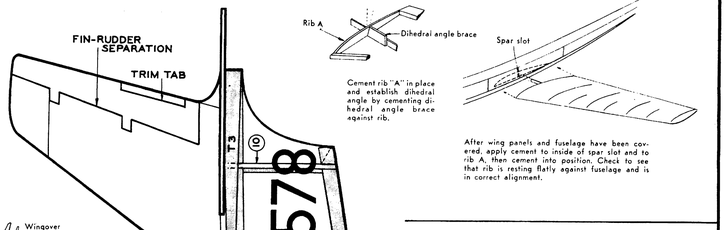



Cement rib "A" in place and establish dihedral angle by cementing dihedral angle brace against rib.


After wing panels and fuselage have been covered, apply cement to inside of spar slot and to rib A, then cement into position. Check to see that rib is resting flatly against fuselage and is in correct alignment.

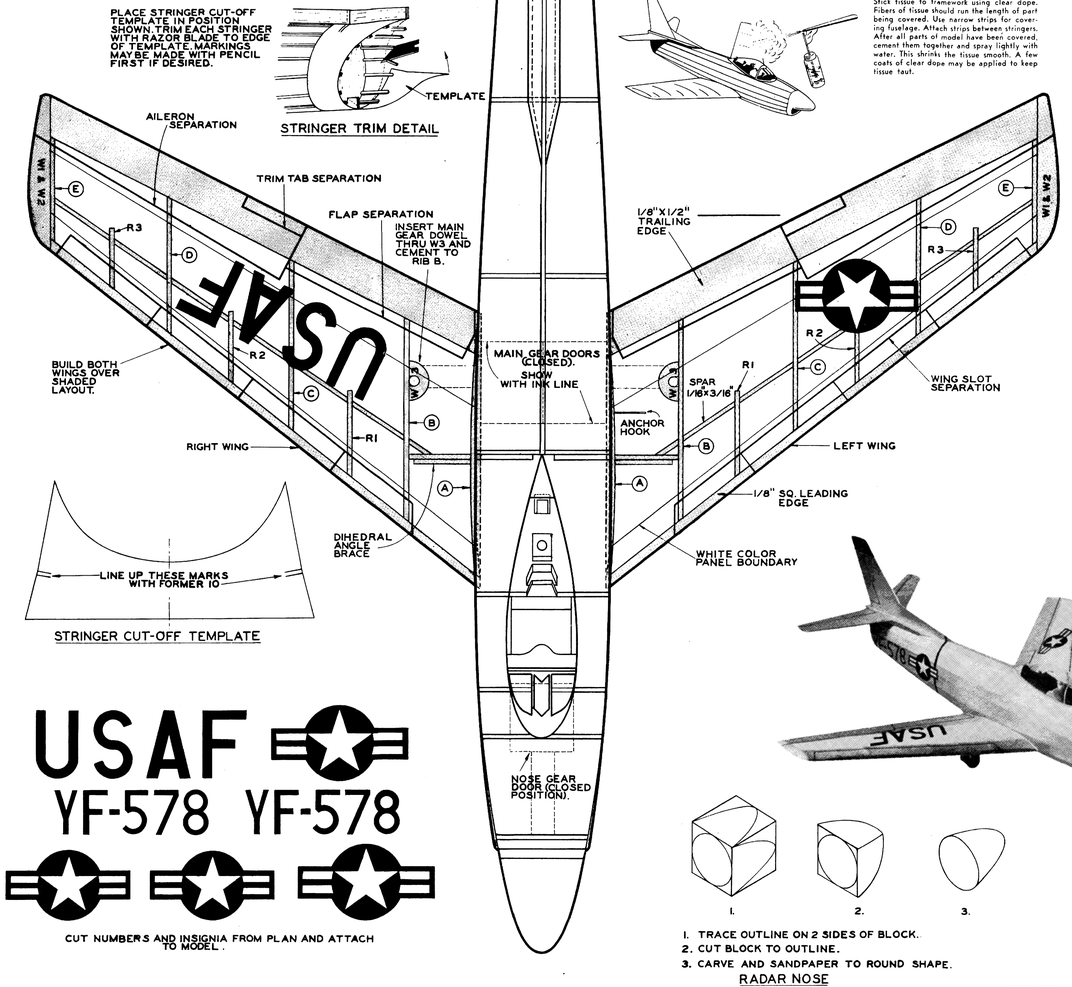


Notes on Covering

Stick tissue to framework using clear dope. Fibers of tissue should run the length of part being covered. Use narrow strips for covering fuselage. Attach strips between stringers. After all parts of model have been covered, cement them together and spray lightly with water. This shrinks the tissue smooth. A few coats of clear dope may be applied to keep tissue taut.

CONSTRUCTION NOTES



To attach tail surfaces, apply cement along inside edge of stabilizer halves and cement in place as shown. Sandpaper rudder deck flush with stabilizer, then cement rudder assembly in place.

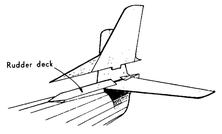


Cement fin, rudder and fairing together over plan. When dry, sandpaper to smoothness and apply a coat or two of clear dope. Finish stabilizer halves in same manner before attaching to model.


Tether Flying

Be sure that the tether line guide hook and anchor hook are made to size shown on plan and are securely fastened to the model. These must be placed in their required positions to give the model its proper balance in flight.


Fishing line or string may be used for the tether line and must be secured to a pole about five to ten feet in length. While learning to get the "feel" of the model it is best that you use one pole length of line. With a little practice you can climb or dive the plane by raising or lowering the pole. Use a longer line to step up the fun when you have become familiar with the model.

Take-offs can be made by shortening the line and paying it out when the model is in the air. Landings will require a smooth surface. While flying, always remember that the model will tend to follow the tip of the pole.

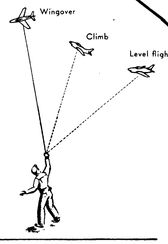


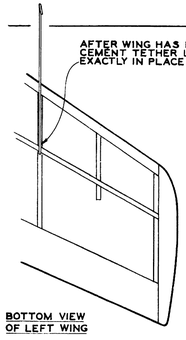

BOTTOM VIEW OF LEFT WING




TETHER LINE GUIDE




ANCHOR HOOK

BEND TETHER LINE GUIDE AND ANCHOR HOOK TO ABOVE SHAPES FROM WIRE SUPPLIED IN KIT. CEMENT SECURELY IN PLACE. SEE TETHER FLYING NOTES.

COMPLETED TETHER FLYING SET-UP.

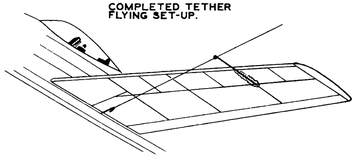




COCKPIT COWLING


CUT FROM PLANS AND CEMENT BETWEEN FORMER 4 AND 7.




CUT RUDDER PEDALS FROM PRINTED SHEET AND CEMENT IN PLACE AS SHOWN. NEXT CEMENT INSTRUMENT PANEL IN PLACE.



RUDDER PEDALS




RADIO EQUIPMENT DETAIL

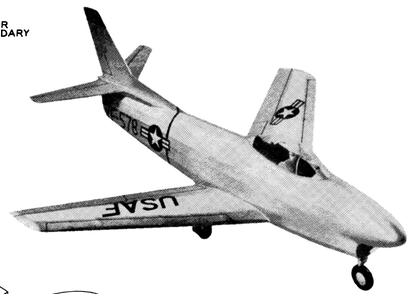


1. TRACE OUTLINE ON 2 SIDES OF BLOCK.
2. CUT BLOCK TO OUTLINE.
3. CARVE AND SANDPAPER TO ROUND SHAPE.


RADAR NOSE

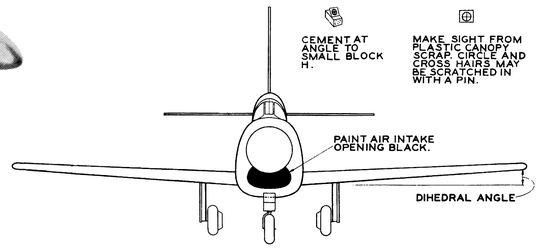

FRONT VIEW 1/2 SIZE




BUCKET SEAT ASSEMBLY

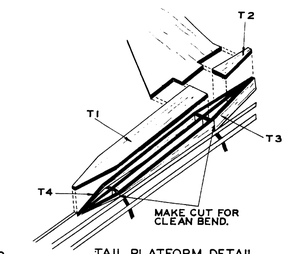

TAIL PLATFORM DETAIL



JET OUTLET DETAIL

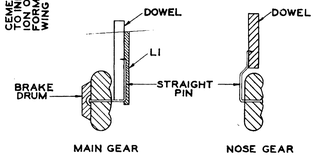

LANDING GEAR DETAIL

USAF YF-578 YF-578

CUT NUMBERS AND INSIGNIA FROM PLAN AND ATTACH TO MODEL.

F-86D SABRE

WINGSPAN 13 1/4 INCHES	LENGTH 15 1/16 INCHES
KIT NO. R5	DRAWN BY Frank Ehmenthal DESIGNED BY John Zawacki

COPYRIGHT 1952 BY COMET MODEL HOBBYCRAFT INC., CHICAGO, ILL.

SABRE JET
KIT NO R5 SHEET NO.2 1/16

STABILIZER

RUDDER

RUDDER PEDALS

C
W1
D
R2
R2
W1
S3
B
E
E
A
W3
W3
F1
R3
A
D
F4
S4
B
S3
F G
C
R1
T1
R1
T2
T1
10
3
9
F5
F5

SABRE JET
KIT NO R5 SHEET I 1/16

S1
T1
F2
F3
T3
T4
R3
L3
L2
E
D
A
RUDDER FAIRING
FIN
S1
6
6
4
9
DIHEDRAL ANGLE BRACES
STABILIZER
7
SPAR POSITION

W2
C
SABRE JET
KIT NO R8
SHEET NO.3
1/8"
B
B
1
BRAKE DRUMS
H
W2