Beams

Giacomo Boffi

http://intranet.dica.polimi.it/people/boffi-giacomo

Dipartimento di Ingegneria Civile Ambientale e Territoriale Politecnico di Milano

November 2, 2017

Beams

Giacomo Boffi

ntroduction

ieneral Principles

Design of Beam

Introduction

Definition:

- ► a prevalent dimension (the span),
- ▶ loads act perpendicular to the prevalent dimension, so no axial forces but shear and bending moment,
- ► the cross section dimensions are the depth (parallel to loading) and the width

We restrict our attention to rectilinear beams but curvilinear beams are possible as well.

Historical remarks:

- ► Galileo Galilei,
- ► Coulomb.
- De Saint Venant.

Beams

Giacomo Boffi

Introduction

General Principle

Design of Beam

Beams in Buildings

Beams are almost always present in a building.

When beams form the principal structural system they are arranged in a systematic manner, usually following a hierarchical arrangement.

Decking or planks have limited span so it is typical to support them, at regular intervals with orthogonal beams, forming a two-level system.

It is common (especially in steel structures) to support these deck-supporting beams on larger, orthogonal beams forming a three-level system.

The loads on the beams are progressively increasing, as well as the lengths of the beams and this leads in turn to an increase in the size of the beams in a three level system, from the secondary beams to the primary ones.

Beams

Giacomo Boffi

Introduction

General Principles
Beams in Buildings
Basic Stress Distributions

Analysis of Beams

Beams in Buildings

Beams

Giacomo Boffi

Introduction

General Principles
Beams in Buildings

Analysis of Beams

The stresses in a beam depend on the bending moment value and on shape of the cross section.

- ► The bending moment depends on the value of the loading, on the span of the beam and on the support conditions.
- ▶ In general, the larger the section the lower the stresses, but also the shape and its orientation w/r to loading direction is important, in particular an increase of the depth leads to an important decrease of the maximum stresses.

Basic Stress Distributions

Beams

Giacomo Boffi

ntroduction

General Principles
Beams in Buildings
Basic Stress Distributions

Analysis of Beams

Design of Ream

At any cross section the resultant of the stresses must equal the shear force and the bending moment.

- ► The shear force, that acts in the direction of the depth of the section, is equilibrated by tangential stresses.
- ► The bending moment, that acts perpendicular to the cross section, is equilibrated by normal stresses.

Basic Stress Distributions

Beams

Giacomo Boffi


Introduction

General Principles

Beams in Buildings

Basic Stress Distributions

Analysis of Beams

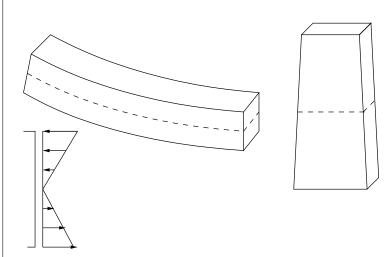

Basic Stress Distributions

Beams

Giacomo Boffi

ntroduction

General Principles
Beams in Buildings

Analysis of Beams

Design of Beams

► The moment cause the beam to bow, in our figure top fibers are shorted and bottom fibers are elongated.

- ► There are fibers whose length is not varied, these fibers cross the section on a line called the *neutral axis*.
- ► The amount of length variation depends linearly on the distance *y* from the neutral axis.
- ► The stresses, for a linear elastic material, depends on the amount of length variation(a.k.a. deformation) and are hence linearly varying, with positive and negative extremes on the borders of the cross section.

Bending Stresses

The stresses are proportional from the distance y from the neutral axis, are proportional to the bending moment and are inversely proportional to a property of the dimensions and shape of the cross section, that we call moment of inertia and denote with the symbol J. (nb dimensional analysis)

$$\sigma = My/J$$

Example

Simply supported beam, $L=8\,\mathrm{m},\ p=60\,\frac{\mathrm{kN}}{\mathrm{m}},\ M_{\mathrm{max}}=\frac{pL^2}{8}=480\,\mathrm{kNm}.$ For a rectangular section it is $J=bd^3/12$ and $y_{\mathrm{max}}=b/2$.

The maximum stress is $\sigma_{\rm max}=\frac{\frac{PL^2}{8}\times\frac{d}{2}}{bd^3/12}$ and with $b=0.3\,\rm m,~d=0.6\,m$ it is $\sigma_{\rm max}=26\,666\,667\,\frac{N}{m^2}=26.67\,\rm MPa$

Beams

Giacomo Boffi

Introduction

General Principles

Bending Stresses

Lateral Buckling Shear Stresses

Torsion

Principal Stresses

Design of Beams

Bending Stresses

For a rectangular section it is

$$J = rac{bd^3}{12}, \quad \sigma_{ ext{max}} = rac{Md/2}{bd^3/12} = rac{M}{bd^2/6} = M/W$$

where $W = bd^2/6$ is the section modulus.

It is clear that if the double the amount of material in a beam by doubling the width b the maximum stress is halved, if we double the depth d the stress is reduced to one quarter.

Example

Simply supported beam, $L=7.2\,\mathrm{m},\,P=20\,\mathrm{kN}$ applied ad midspan,

 $M_{\text{max}} = PL/4 = 36 \text{ kN m} = 36 \text{ MN mm}.$

Rectangular section, $b=120\,\mathrm{mm}$ and $d=200\,\mathrm{mm}$, $J=80\times10^6\,\mathrm{mm^4}$ and $W=800\times10^3\,\mathrm{mm^3}$, eventually $\sigma_{\mathrm{max}}=45\,\mathrm{MPa}$.

Reams

Giacomo Boffi

ntroduction

General Principles

Analysis of Bea

Bending Stresses Lateral Buckling

Shear Stresses

Bearing Stresses Torsion

near Center

eflections

A little theory

Beams

Giacomo Boffi

ntroduction

General Principles

Analysis of Beam

Bending Stresses

Shear Stresses

Bearing Stresses Torsion

Deflections

Design of Beams

In general we have to perform our computation in two steps

- 1. find the position of the neutral axis,
- 2. find the moment of inertia with respect to the neutral axis.

A little theory

To find the position of the neutral axis

- 1. draw an axis parallel to the neutral one at a(n unknown) distance y_G from it,
- 2. the distance from the neutral axis, in terms of the distance of the temporary axis, is $y-y_{G}$,
- 3. the stress is $\sigma = (y y_G)k$,
- 4. the stress resultant is $N = \int_A \sigma \, dA = k \int_A (y y_G) \, dA = k \int_A y \, dA k y_G A$
- 5. we have N = 0 hence

$$y_G = \frac{S_x}{A}$$
 where $S_x = \int_A y \, dA$

Similarly $x_G = S_y/A$ with $S_y = \int_A x \, dA$.

We have found the position of the *centroid* of the cross section w/r to two arbitrary axes.

Beams

Giacomo Boffi

ntroduction

General Principles

Analysis of Bean

Bending Stresses ateral Buckling

Bearing Stresses Torsion Shear Center

Design of Beams

A little theory

The moment of the stresses about the neutral axes, if now we measure the distances from it, is $M=\int_A y\sigma\,dA=k\int_A y^2\,dA=k\,J_x$ by the definition of moment of inertia, so that we can solve for $k=M/J_x$ and eventually we can write

$$\sigma = \frac{M}{J_x} y.$$

The expression above coincides with the expression that was shown earlier w/o an explanation.

Beams

Giacomo Boffi

ntroduction

General Principles

Analysis of Bea

Bending Stresses Lateral Buckling

Shear Stresses

Bearing Stresses

Deflections

Principal Stresses

Computing moments of inertia

Beams

Giacomo Boffi

Bending Stress

Bearing Stresses

Shear Center

Design of Beams

The moments of inertia of many simple figures are tabulated, with respect to their own centroids. We can use these known results along with parallel axis theorem.

Theorem

The moment of inertia J of an area A, with respect to a axis parallel to an axis passing for its centroid is equal to the sum of the centroidal moment of inertia J'plus the moment of transport $\Delta^2 A$

$$J = J' + \Delta^2 A$$

where Δ is the distance between the two axes.

Computing moments of inertia

Giacomo Boffi

Shear Cente

 $y_G = \frac{180 \times 48}{180 \times 2} \text{mm} = 24 \text{mm}$ $\frac{J_1}{\text{mm}^4} = \frac{30^3 \times 6}{12} + 180 \times (15 - 24)^2 = (13500 + 14580) = 28080^{\text{Str}}$

 $S_x = (180 \times 15 + 180 \times 33) \text{mm}^3 = (180 \times 48) \text{mm}^3$

 $A = (6 \times 30 + 6 \times 30) \text{mm}^2 = 360 \text{mm}^2$

 $\frac{J_2}{\mathsf{mm}^4} = \frac{30 \times 6^3}{12} + 180 \times (33 - 15)^2 = (540 + 14580) = 15120$

$$J = J_1 + J_2 = 43200 \text{mm}^4$$
.

$$W_t = J/12\text{mm} = 3600\text{mm}^3$$

$$W_b = J/24 \mathrm{mm} = 1800 \mathrm{mm}^3$$


30mm

Computing moments of inertia

Giacomo Boffi

Bending Stresses Lateral Buckling

Bearing Stresses

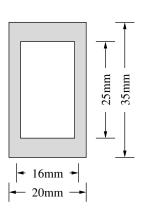

$$A = (20 \times 35 - 16 \times 25) \text{mm}^2 = 300 \text{mm}^2$$

$$S_x = 10 \text{mm}, \quad y_G = 17.5 \text{mm}$$

$$\frac{J_1}{\text{mm}^4} = \frac{35^3 \times 20}{12} = 71458.33$$

$$\frac{J_2}{\text{mm}^4} = \frac{25 \times 16^3}{12} = 20833.33$$

$$J = J_1 - J_2 = 50625.00 \text{mm}^4.$$

$$W = J/17.5 \text{mm} = 2892.86 \text{mm}^3$$

Rectangle

Beams

Giacomo Boffi

Analysis of Beams

Bending Stresses Lateral Buckling Shear Stresses

Bearing Stresses Torsion Shear Center

Design of Beams

Giacomo Boffi

Analysis of Beams Lateral Buckling

Shear Center

Design of Beams

Ga -

Sides

Centroid


$$x_G = a/2, \quad y_G = b/2$$

Area

$$A = ab$$
,

$$J = \frac{ab^3}{12}$$

Triangle

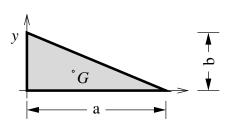

For a right triangle.

Sides
$$a, b$$

Centroid $x_G =$


$$x_G = a/3, \quad y_G = b/3$$

$$A = ab/2$$

$$J=\frac{ab^3}{36}$$

Oval

When a = b = D = 2R the oval is a circle.

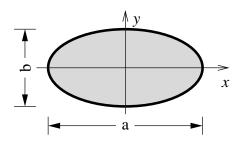

$$x_G=y_G=0$$

$$A = \frac{\pi ab}{4} = \pi R^2,$$

$$J=\pi \frac{ab^3}{64}=\pi \frac{R^4}{4}$$

Giacomo Boffi

Bending Stresses Lateral Buckling Shear Stresses

Bearing Stresses Torsion Shear Center

Lateral Buckling

Beams

Giacomo Boffi

Lateral Buckling

Bearing Stresses


Design of Beams

As was the case with trusses, one side of a beam is subjected to compression and it's subjected to the possibility of a lateral sway.

Possible remedies:

- lateral bracing
- stiffening the compressed part in the lateral direction

Shear Stresses



- ▶ On the left, a "beam" composed of three equal, separate sheets, each one behaves the same,
- ▶ on the right, the sheets have been glued and the top sheet is shortened while the bottom one is elongated.

This behavior is possible only if the sheets exchange tangential stresses at their

These tangential stresses are the shear stresses.

Giacomo Boffi

Shear Stresses

Shear Center

Design of Beams

Shear Stresses

E.g., for a rectangular beam the resultants of compressive and tensile stresses lie at d/6 from the borders, so their arm is a = 2d/3 and we have

$$T = C = M/a = 1.5M/d.$$

Consider now a slice of beam cut between x_1 and $x_2 = x_1 + \delta$ and separated in two halves at the neutral axis, the bottom part is subjected to two forces $T_1 = 1.5 M_1/d$ and $T_2 = 1.5 M_2/d$, we have an unbalanced force

$$U=1.5\frac{M(x_1+\delta)-M(x_1)}{d}.$$

For $\delta \to dx$ it is

$$dU = 1.5 dM/d = 1.5 V dx/d$$
,

the area available for equilibrating the unbalanced force using tangential stresses is dA = b dx so eventually

$$\tau = dU/dA = 1.5V/(bd).$$

Giacomo Boffi

Bending Stresse

Shear Stresses

Bearing Stresses

Shear Stresses

Beams

Giacomo Boffi

Bearing Stresses

Design of Beams

The procedure can be generalized, we know that $\sigma = My/J$ so the resultant for an area A^* is

 $F = \frac{M}{J} \int_{A^*} y \, dA = \frac{M}{J} S^*$

where S^* is the first moment of the area A^* w/r to the neutral axis. The variation of F over dx, $dF = S^*V dx/J$, is the unbalanced force to equilibrate over an area dA = b dx so that

$$\tau = \frac{V S^*}{b J}.$$

Shear Stresses

Giacomo Boffi

Shear Stresses

Shear Center

Design of Beams

For the T section we have previously studied, consider a maximum shear $V = 4800 \,\mathrm{N}$ and consider that the flange and the web have been glued together $(b = 6 \, \text{mm}).$

We have to compute S^* for the flange

$$S^* = \int_{30}^{36} 30y \, dy = 5940 \, \text{mm}^3$$

and compute au

$$au = rac{V\,S^*}{b\,J} = rac{4800 imes 5940}{6 imes 43200} {\sf MPa} = 110 {\sf MPa}.$$

Just a few formulas, E is the Young modulus of the material... for the cantilever, the concentrated load is at the free end, in the other cases the concentrated load

Supported

48*EJ*

 $5wL^4$

Fixed Ends

 PL^3

192*EJ*

 wL^4

384*EJ*

is at midspan — the deflections are measured at the same points.

Cantilever

 PL^3

3EJ

<u>wL⁴</u> 8*EJ*

Р

Your glue must resist to a tangential stress of 110MPa.

Deflections

Note how much the displacements depend on the beam span, note also that different end conditions influence very much the deflections.

Beams

Giacomo Boffi

Bearing Stresses

Deflections

Deflections $\begin{array}{l} \text{Beams} \\ \text{Giacomo Boffi} \\ \\ \text{Introduction} \\ \text{General Principles} \\ \text{Analysis of Beams} \\ \text{Analysis of Beams} \\ \text{Bending Stresses} \\ \\ \text{Bending Stresses} \\ \\ \text{Bending Stresses} \\ \\ \text{Bending Stresses} \\ \\ \text{Shear Stresses} \\ \\ \text{Bearing Stresses} \\ \\ \text{Bearing Stresses} \\ \\ \text{Deflections} \\ \\ \text{Principal Stresses} \\ \\ \text{Design of Beams} \\ \\ \\ \Delta \approx 4 \text{ mm} \end{array}$

General Principles	Beams Giacomo Boffi
	Introduction
	General Principles
	Analysis of Beams
	Design of Beams
► Approaches	General Principles
	Timber Steel
Strength and stiffness	Reinforced Concrete:
► Cross-section design	Principles Reinforced Concrete:
Cross-section design	Procedures
 Material properties variation 	
► Shaping the beam	
1 0	

► Position of supports

Steel Beams

The design of a steel beam in most cases coincides with choosing a section in a catalogue of commonly available steel members.

The section you are going to choose has to satisfy two essential requirements in terms of strength and deformability.

▶ Strength: the section must be strong enough to resist the maximum value of the bending moment,

$$f_y W \ge M_{\sf max} \quad o \quad W \ge M_{\sf max}/f_y.$$

▶ Deformability: the maximum deflection must be less than a fraction of the beam span, $\Delta \leq L/k$.

The value of k depends on the load cases used to compute the deflection (live vs dead vs combination) and the function that the beam has to perform (support a roof, a floor, a wall, etc).

E.g., for a simply supported beam subjected to a distributed load, supporting a wall

$$\Delta = \frac{5wL^4}{384EJ} \le \frac{L}{200} \quad \rightarrow \quad J \ge \frac{1000wL^3}{384EJ}.$$


Beams

Giacomo Boffi

Steel beams, plastic behavior

Steel is an elastic-plastic material, if the strain exceeds a certain amount the normal stress remains constant, $\sigma = f_v$.

What happens when $M = Wf_v$ and the load is increasing?



When the external bending moment increases, the outer fibres are further pulled-pushed and in a larger part of the section the stress is equal to f_V — the part of the section that is still elastic is, otoh, smaller and smaller and the elastic stiffness of the section is diminishing.

At some point, when in all the section $\sigma = \pm f_y$ the elastic stiffness is equal to 0. In terms of strength we have reached the plastic moment, in terms of stiffness we have formed a plastic hinge.

Giacomo Boffi

Analysis of Beams

Steel beams, plastic behavior

For a rectangular beam $\,W=bd^2/6$ and $\,M_y=f_ybd^2/6$ is the maximum elastic moment. When $\sigma = \pm f_y$ we have $T = C = f_y bd/2$ and their arm is a = d/2, hence $M_p = f_y b d^2/4$ is the moment of plasticization, that turns the section into a plastic

For a rectangular section $M_p/M_y=1.5$, for different shapes we have different ratios. For common I shaped sections, the ratio has an average value around 1.12, for a circular bar it's about 1.7 and it's 2.0 for a diamond shaped bar.

Beams

Giacomo Boffi

Shear

Beams

Giacomo Boffi

Reinforced Concrete: Principles Reinforced Concrete Procedures

 $V_{Rd} = 0.6 f_{\rm v} A_{\rm w}$.

In most cases, when dealing with wide flange beams, T beams, channels it is

possible to estimate the design value of the shear strength taking into account

RC Principles

only the web area A_w ,

Giacomo Boffi

Timber Steel

Reinforced Concrete: Principles

Concrete resists very well compression, resists very poorly tension.

A plain concrete beam when loaded will tend to crack vertically in zones of (relatively) large bending moments and diagonally in zones of high shear and eventually break down for small loadings.

To avoid the crack growt and the eventual failure we dispose some tension resistent material perpendicular to the cracks' directions, usually steel bars, longitudinal steel bars to equilibrate bending moments and vertical stirrups (U-shaped bars) or diagonally bent bars to equilibrate shear forces.

Principles of reinforcement design

Giacomo Boffi

Design of reinforcement, especially the longitudinal reinforcement, is a balancing act.

If you provide not enough steel, the section will collapse by breackage of the reinforcement, but also providing too much steel leads to a bad design in which the failure of the beam happens when the compressed concrete is crushed. Concrete has a degree of ductility when compressed, but when its deformation is

excessive it breaks suddenly.

A RC beam correctly designed has the right amount of reinforcement, so that the first yielding happens in the steel and we reach a limit state in which most of the concrete is safely plasticized and the steel deformations are still under control.

In this case a possible failure of a beam is preceded by a visual increase of deflections. Further, the possibility of a plastic behavior leads to an energy dissipation that is useful to control the response to seismic excitation.

Design of Beams

Reinforced Concrete Principles

RC design at the limit state

Beams

Giacomo Boffi

ntroduction

General Principles


Analysis of Beams

Design of Beams

General Principles Timber

Reinforced Concrete: Principles

Principles
Reinforced Concrete:
Procedures



To have a correct ductility, a good design choice is to assign appropriate values to the steel and concrete deformations.

RC Member Sizes

Beams

Giacomo Boffi

Introduction

General Principles

Analysis of Beams

Design of Beams

General Principles

Timber

Reinforced Concrete: Principles

Reinforced Concrete: Procedures

 $Min\ Overall\ Depth\ (U.S.\ practice)$

Member	Simply Supported	H+F	F+F	Cantilever
Slabs	L/20	L/24	,	L/10
Beams	L/16	L/18		L/8

Overall depth h is the reinforcement depth d plus the bottom concrete cover.