# Generalized Single Degree of Freedom Systems PVD, Generalized Parameters, Rayleigh Quotient

Giacomo Boffi

http://intranet.dica.polimi.it/people/boffi-giacomo

Dipartimento di Ingegneria Civile Ambientale e Territoriale Politecnico di Milano

March 24, 2020

### **Outline**

Generalized SDOF

Giacomo Boffi

### Section 1

# **Introductory Remarks**

### **Introductory Remarks**

Generalized SDOF

Giacomo Boffi

Until now our *SDOF*'s were described as composed by a single mass connected to a fixed reference by means of a spring and a damper.

While the mass-spring is a useful representation, many different, more complex systems can be studied as *SDOF* systems, either exactly or under some simplifying assumption.

Until now our *SDOF*'s were described as composed by a single mass connected to a fixed reference by means of a spring and a damper.

While the mass-spring is a useful representation, many different, more complex systems can be studied as *SDOF* systems, either exactly or under some simplifying assumption.

- SDOF rigid body assemblages, where the flexibility is concentrated in a number of springs and dampers, can be studied, e.g., using the Principle of Virtual Displacements and the D'Alembert Principle.
- simple structural systems can be studied, in an approximate manner, assuming a fixed pattern of displacements, whose amplitude (the single degree of freedom) varies with time.

Today we restrict our consideration to plane, 2-D systems.

In rigid body assemblages the limitation to a single shape of displacement is a consequence of the configuration of the system, i.e., the disposition of supports and internal hinges.

When the equation of motion is written in terms of a single parameter and its time derivatives, the terms that figure as coefficients in the equation of motion can be regarded as the *generalised* properties of the assemblage: generalised mass, damping and stiffness on left hand, generalised loading on right hand.

$$m^* \ddot{x} + c^* \dot{x} + k^* x = p^*(t)$$

### **Further Remarks on Continuous Systems**

Generalized SDOF

Giacomo Boffi

Continuous systems have an infinite variety of deformation patterns.

By restricting the deformation to a single shape of varying amplitude, we introduce an infinity of internal contstraints that limit the infinite variety of deformation patterns, but under this assumption the system configuration is mathematically described by a single parameter, so that

- our *model* can be analysed in exactly the same way as a strict *SDOF* system,
- we can compute the *generalised* mass, damping, stiffness properties of the *SDOF* model of the continuous system.

### Final Remarks on Generalised SDOF Systems

Generalized SDOF

Giacomo Boffi

From the previous comments, it should be apparent that everything we have seen regarding the behaviour and the integration of the equation of motion of proper *SDOF* systems applies to rigid body assemblages and to *SDOF* models of flexible systems, provided that we have the means for determining the *generalised* properties of the dynamical systems under investigation.

Giacomo Boffi

### Section 2

# **Assemblage of Rigid Bodies**

■ planar, or bidimensional, rigid bodies, constrained to move in a plane,

Generalized SDOF

- Generalized SDOF
- Giacomo Boffi

- planar, or bidimensional, rigid bodies, constrained to move in a plane,
- the flexibility is *concentrated* in discrete elements, springs and dampers,

- planar, or bidimensional, rigid bodies, constrained to move in a plane,
- the flexibility is *concentrated* in discrete elements, springs and dampers,
- rigid bodies are connected to a fixed reference and to each other by means of springs, dampers and smooth, bilateral constraints (read hinges, double pendulums and rollers),


Generalized SDOF

Generalized SDOF

- planar, or bidimensional, rigid bodies, constrained to move in a plane,
- the flexibility is *concentrated* in discrete elements, springs and dampers,
- rigid bodies are connected to a fixed reference and to each other by means of springs, dampers and smooth, bilateral constraints (read hinges, double pendulums and rollers),
- inertial forces are distributed forces, acting on each material point of each rigid body, their resultant can be described by

- planar, or bidimensional, rigid bodies, constrained to move in a plane,
- the flexibility is *concentrated* in discrete elements, springs and dampers,
- rigid bodies are connected to a fixed reference and to each other by means of springs, dampers and smooth, bilateral constraints (read hinges, double pendulums and rollers),
- inertial forces are distributed forces, acting on each material point of each rigid body, their resultant can be described by
  - an inertial force applied to the centre of mass of the body, the product of the acceleration vector of the centre of mass itself and the total mass of the rigid body,  $M = \int \mathrm{d} m$
  - an inertial couple, the product of the angular acceleration and the moment of inertia J of the rigid body,  $J = \int (x^2 + y^2) dm$ .


### **Rigid Bar**



Unit mass  $ar{m}=$  constant, Length L, Centre of Mass  $x_G=L/2$ , Total Mass  $m=ar{m}L$ , Moment of Inertia  $J=mrac{L^2}{12}=ar{m}rac{L^3}{12}$ 

Generalized SDOF

### **Rigid Rectangle**

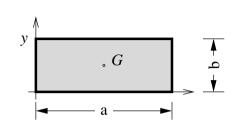

Generalized SDOF


Unit mass 
$$\gamma = {\rm constant},$$
 Sides  $a,b$ 

Centre of Mass  $x_G = a/2, \quad y_G = b/2$ 

Total Mass  $m = \gamma ab,$ 

Moment of Inertia  $I = m \frac{a^2 + b^2}{a^2 + b^2} = \gamma \frac{a^3 b + b^2}{a^2 + b^2}$ 

### **Rigid Triangle**

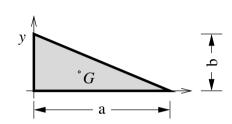

For a right triangle.

Unit mass 
$$\gamma=$$
 constant, Sides  $a,b$ 


Centre of Mass  $x_G=a/3, \quad y_G=b/3$ 


Total Mass  $m=\gamma ab/2,$ 

Moment of Inertia  $J=m\frac{a^2+b^2}{18}=\gamma\frac{a^3b+ab}{36}$ 

Generalized SDOF


### **Rigid Oval**

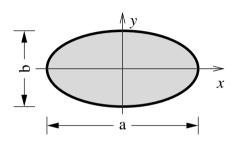

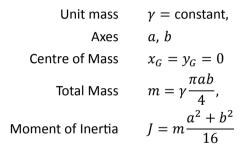

#### Generalized SDOF

### **Rigid Oval**

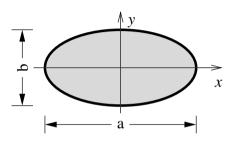

Unit mass Axes

$$\gamma = \text{constant},$$
 $a. b$ 

Centre of Mass

$$x_G = y_G = 0$$

**Total Mass** 

$$J=m\frac{a^2+b^2}{a^2}$$

Moment of Inertia

$$J = m \frac{a^2 + b}{16}$$


 $\pi ab$ 

When a = b = D = 2R the oval is a circle:

$$m = \gamma \pi R^2$$
,  $J = m \frac{R^2}{2} = \gamma \frac{\pi R^4}{2}$ .

Generalized SDOF

Giacomo Boffi




The mass of the left bar is  $m_1 = \bar{m} \, 4a$  and its moment of inertia is

$$J_1 = m_1 \frac{(4a)^2}{12} = 4a^2 m_1/3.$$


The maximum value of the external load is  $P_{\text{max}} = P \, 4a/a = 4P$  and the resultant of triangular load is  $R = 4P \times 4a/2 = 8Pa$ 

### **Forces and Virtual Displacements**

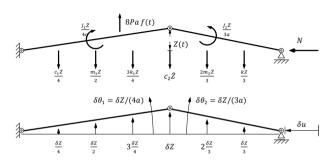


Generalized SDOF

### **Forces and Virtual Displacements**

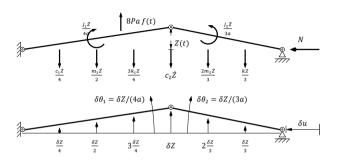


$$\begin{split} u &= 7a - 4a\cos\theta_1 - 3a\cos\theta_2, \quad \delta u = 4a\sin\theta_1\delta\theta_1 + 3a\sin\theta_2\delta\theta_2\\ \delta\theta_1 &= \delta Z/(4a), \quad \delta\theta_2 = \delta Z/(3a)\\ \sin\theta_1 &\approx Z/(4a), \quad \sin\theta_2 \approx Z/(3a)\\ \delta u &= \left(\frac{1}{4a} + \frac{1}{3a}\right)Z\,\delta Z = \frac{7}{12a}Z\,\delta Z \end{split}$$

Generalized SDOF

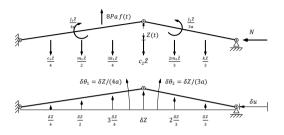


$$\begin{split} \delta W_{\rm I} &= -m_1 \frac{\ddot{Z}}{2} \frac{\delta Z}{2} - J_1 \frac{\ddot{Z}}{4a} \frac{\delta Z}{4a} - m_2 \frac{2 \ddot{Z}}{3} \frac{2 \delta Z}{3} - J_2 \frac{\ddot{Z}}{3a} \frac{\delta Z}{3a} = -\left(\frac{m_1}{4} + 4 \frac{m_2}{9} + \frac{J_1}{16a^2} + \frac{J_2}{9a^2}\right) \ddot{Z} \, \delta Z \\ \delta W_{\rm D} &= -c_1 \frac{\dot{Z}}{4} \frac{\delta Z}{4} - -c_2 Z \, \delta Z = -\left(c_2 + c_1/16\right) \dot{Z} \, \delta Z \\ \delta W_{\rm S} &= -k_1 \frac{3Z}{4} \frac{3 \delta Z}{4} - k_2 \frac{Z}{3} \frac{\delta Z}{3} = -\left(\frac{9k_1}{16} + \frac{k_2}{9}\right) Z \, \delta Z \\ \delta W_{\rm Ext} &= 8Pa \, f(t) \frac{2 \delta Z}{3} + N \frac{7}{12a} Z \, \delta Z \end{split}$$

Generalized SDOF

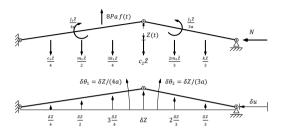


$$\begin{split} \delta W_{\rm I} &= -m_1 \frac{\ddot{Z}}{2} \frac{\delta Z}{2} - J_1 \frac{\ddot{Z}}{4a} \frac{\delta Z}{4a} - m_2 \frac{2 \ddot{Z}}{3} \frac{2 \delta Z}{3} - J_2 \frac{\ddot{Z}}{3a} \frac{\delta Z}{3a} = - \left( \frac{m_1}{4} + 4 \frac{m_2}{9} + \frac{J_1}{16a^2} + \frac{J_2}{9a^2} \right) \ddot{Z} \, \delta Z \\ \delta W_{\rm D} &= -c_1 \frac{\dot{Z}}{4} \frac{\delta Z}{4} - -c_2 Z \, \delta Z = - \left( c_2 + c_1 / 16 \right) \dot{Z} \, \delta Z \\ \delta W_{\rm S} &= -k_1 \frac{3Z}{4} \frac{3 \delta Z}{4} - k_2 \frac{Z}{3} \frac{\delta Z}{3} = - \left( \frac{9k_1}{16} + \frac{k_2}{9} \right) Z \, \delta Z \\ \delta W_{\rm Ext} &= 8 Pa \, f(t) \frac{2 \delta Z}{3} + N \frac{7}{12a} Z \, \delta Z \end{split}$$

Generalized SDOF

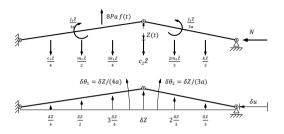

$$\begin{split} \delta W_{\rm I} &= -m_1 \frac{\ddot{Z}}{2} \frac{\delta Z}{2} - J_1 \frac{\ddot{Z}}{4a} \frac{\delta Z}{4a} - m_2 \frac{2 \ddot{Z}}{3} \frac{2 \delta Z}{3} - J_2 \frac{\ddot{Z}}{3a} \frac{\delta Z}{3a} = - \left( \frac{m_1}{4} + 4 \frac{m_2}{9} + \frac{J_1}{16a^2} + \frac{J_2}{9a^2} \right) \ddot{Z} \, \delta Z \\ \delta W_{\rm D} &= -c_1 \frac{\dot{Z}}{4} \frac{\delta Z}{4} - -c_2 Z \, \delta Z = - \left( c_2 + c_1/16 \right) \dot{Z} \, \delta Z \\ \delta W_{\rm S} &= -k_1 \frac{3Z}{4} \frac{3 \delta Z}{4} - k_2 \frac{Z}{3} \frac{\delta Z}{3} = - \left( \frac{9k_1}{16} + \frac{k_2}{9} \right) Z \, \delta Z \\ \delta W_{\rm Ext} &= 8 Pa \, f(t) \frac{2 \delta Z}{3} + N \frac{7}{12a} Z \, \delta Z \end{split}$$

Generalized SDOF

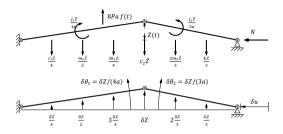

$$\begin{split} \delta W_{\rm I} &= -m_1 \frac{\ddot{Z}}{2} \frac{\delta Z}{2} - J_1 \frac{\ddot{Z}}{4a} \frac{\delta Z}{4a} - m_2 \frac{2 \ddot{Z}}{3} \frac{2 \delta Z}{3} - J_2 \frac{\ddot{Z}}{3a} \frac{\delta Z}{3a} = - \left( \frac{m_1}{4} + 4 \frac{m_2}{9} + \frac{J_1}{16a^2} + \frac{J_2}{9a^2} \right) \ddot{Z} \, \delta Z \\ \delta W_{\rm D} &= -c_1 \frac{\dot{Z}}{4} \frac{\delta Z}{4} - -c_2 Z \, \delta Z = - \left( c_2 + c_1 / 16 \right) \dot{Z} \, \delta Z \\ \delta W_{\rm S} &= -k_1 \frac{3Z}{4} \frac{3 \delta Z}{4} - k_2 \frac{Z}{3} \frac{\delta Z}{3} = - \left( \frac{9k_1}{16} + \frac{k_2}{9} \right) Z \, \delta Z \\ \delta W_{\rm Ext} &= 8 Pa \, f(t) \frac{2 \delta Z}{3} + N \frac{7}{12a} Z \, \delta Z \end{split}$$

Generalized SDOF

Generalized SDOF

For a rigid body in condition of equilibrium the total virtual work must be equal to zero

$$\delta W_{\rm I} + \delta W_{\rm D} + \delta W_{\rm S} + \delta W_{\rm Ext} = 0$$

Substituting our expressions of the virtual work contributions and simplifying  $\delta Z$ , the equation of equilibrium is

$$\begin{split} \left(\frac{m_1}{4} + 4\frac{m_2}{9} + \frac{J_1}{16a^2} + \frac{J_2}{9a^2}\right) \ddot{Z} + \\ &+ \left(c_2 + c_1/16\right) \dot{Z} + \left(\frac{9k_1}{16} + \frac{k_2}{9}\right) Z = \\ & 8Pa\,f(t)\frac{2}{3} + N\frac{7}{12a}Z \end{split}$$

$$m^*\ddot{Z} + c^*\dot{Z} + k^*Z = p^*f(t)$$

introducing the so called *generalised properties*, in our example it is

$$m^* = \frac{1}{4}m_1 + \frac{4}{9}9m_2 + \frac{1}{16a^2}J_1 + \frac{1}{9a^2}J_2,$$

$$c^* = \frac{1}{16}c_1 + c_2, \qquad k^* = \frac{9}{16}k_1 + \frac{1}{9}k_2 - \frac{7}{12a}N, \qquad p^* = \frac{16}{3}Pa.$$

$$m^*\ddot{Z} + c^*\dot{Z} + k^*Z = p^*f(t)$$

introducing the so called *generalised properties*, in our example it is

$$m^* = \frac{1}{4}m_1 + \frac{4}{9}9m_2 + \frac{1}{16a^2}J_1 + \frac{1}{9a^2}J_2,$$

$$c^* = \frac{1}{16}c_1 + c_2, \qquad k^* = \frac{9}{16}k_1 + \frac{1}{9}k_2 - \frac{7}{12a}N, \qquad p^* = \frac{16}{3}Pa.$$

 $k^* = \frac{9k_1}{16} + \frac{k_2}{9} - \frac{7}{128}N$ It is worth writing down the expression of  $k^*$ :

Collecting Z and its time derivatives give us

$$m^{\star}\ddot{Z} + c^{\star}\dot{Z} + k^{\star}Z = p^{\star}f(t)$$

introducing the so called generalised properties, in our example it is

$$m^* = \frac{1}{4}m_1 + \frac{4}{9}9m_2 + \frac{1}{16a^2}J_1 + \frac{1}{9a^2}J_2,$$

$$c^* = \frac{1}{16}c_1 + c_2, \qquad k^* = \frac{9}{16}k_1 + \frac{1}{9}k_2 - \frac{7}{12a}N, \qquad p^* = \frac{16}{3}Pa.$$

It is worth writing down the expression of  $k^*$ :

$$k^{\star} = \frac{9k_1}{16} + \frac{k_2}{9} - \frac{7}{12a}N$$

Geometrical stiffness

Giacomo Boffi


### Section 3

## **Continuous Systems**

### Let's start with an example...

Consider a cantilever, with varying properties  $\bar{m}$  and EJ, subjected to a dynamic load that is function of both time t and position x,


$$p=p(x,t).$$



Generalized SDOF

Consider a cantilever, with varying properties  $\bar{m}$  and EJ, subjected to a dynamic load that is function of both time t and position x,

$$p=p(x,t).$$



Even the transverse displacements  $\boldsymbol{v}$  will be function of time and position,

$$v = v(x, t)$$

and because the inertial forces depend on  $\ddot{v}=\partial^2 v/\partial t^2$  and the elastic forces on  $v''=\partial^2 v/\partial x^2$  the equation of dynamic equilibrium must be written in terms of a partial derivatives differential equation.

### ... and an hypothesis

To study the previous problem, we introduce an *approximate model* by the following hypothesis,

$$v(x,t) = \Psi(x) Z(t),$$

that is, the hypothesis of *separation of variables* 

Generalized SDOF

### ... and an hypothesis

To study the previous problem, we introduce an *approximate model* by the following hypothesis,

$$v(x,t) = \Psi(x) Z(t),$$

that is, the hypothesis of separation of variables Note that  $\Psi(x)$ , the shape function, is adimensional, while Z(t) is dimensionally a generalised displacement, usually chosen to characterise the structural behaviour.

Generalized SDOF

To study the previous problem, we introduce an *approximate model* by the following hypothesis,

$$v(x,t) = \Psi(x) Z(t),$$

that is, the hypothesis of separation of variables Note that  $\Psi(x)$ , the shape function, is adimensional, while Z(t) is dimensionally a generalised displacement, usually chosen to characterise the structural behaviour. In our example we can use the displacement of the tip of the chimney, thus implying that  $\Psi(H)=1$  because

$$Z(t) = v(H,t)$$
 and  $v(H,t) = \Psi(H) Z(t)$ 

## **Principle of Virtual Displacements**

Generalized SDOF

Giacomo Boffi

For a flexible system, the PoVD states that, at equilibrium,

$$\delta W_{\rm E} = \delta W_{\rm I}.$$

The virtual work of external forces can be easily computed, the virtual work of internal forces is usually approximated by the virtual work done by bending moments, that is

$$\delta W_{\rm i} \approx \int M \, \delta \chi$$

where  $\chi$  is the curvature and  $\delta\chi$  the virtual increment of curvature.

The external forces are p(x,t), N and the forces of inertia  $f_i$ ; we have, by separation of variables, that  $\delta v = \Psi(x)\delta Z$  and we can write

$$\delta W_{\rm p} = \int_0^H p(x,t) \delta v \, \mathrm{d}x = \left[ \int_0^H p(x,t) \Psi(x) \, \mathrm{d}x \right] \, \delta Z = p^*(t) \, \delta Z$$

$$\delta W_{\text{Inertia}} = \int_0^H -\bar{m}(x) \ddot{v} \delta v \, dx = \int_0^H -\bar{m}(x) \left( \Psi(x) \, \ddot{Z} \right) \left( \Psi(x) \, \delta Z \right) dx$$
$$= \left[ \int_0^H -\bar{m}(x) \Psi^2(x) \, dx \right] \, \ddot{Z}(t) \, \delta Z = m^* \ddot{Z} \, \delta Z.$$

The virtual work done by the axial force deserves a separate treatment...

Generalized SDOF Giacomo Boffi

Giacomo Be

We start computing the vertical displacement of the top of the chimney in terms of the rotation of the axis line,  $\phi \approx \Psi'(x)Z(t)$ ,

$$u(t) = H - \int_0^H \cos \phi \, dx = \int_0^H (1 - \cos \phi) \, dx,$$

substituting the well known approximation  $cos\phipprox 1-rac{\phi^2}{2}$  in the above equation we have

$$u(t) = \int_0^H \frac{\phi^2}{2} dx = \int_0^H \frac{\Psi'^2(x)Z^2(t)}{2} dx \implies$$

$$\Rightarrow \delta u = \int_0^H \Psi'^2(x)Z(t)\delta Z dx = \int_0^H \Psi'^2(x) dx Z\delta Z$$

and

$$\delta W_{\rm N} = \left[ \int_0^H \Psi'^2(x) \, \mathrm{d}x \, N \right] Z \, \delta Z = k_G^{\star} \, Z \, \delta Z$$

# Approximating the internal work with the work done by bending moments, for an infinitesimal slice of beam we write

$$dW_{\text{int}} = \frac{1}{2}Mv''(x, t) dx = \frac{1}{2}M\Psi''(x)Z(t) dx$$

with 
$$M = EJ(x)v''(x)$$

$$\delta(dW_{\rm int}) = EJ(x)\Psi^{"2}(x)Z(t)\delta Z\,dx$$

integrating

$$\delta W_{\text{int}} = \left[ \int_0^H EJ(x) \Psi^{"2}(x) \, \mathrm{d}x \right] Z \delta Z = k^* Z \, \delta Z$$

#### **Remarks**


■ the shape function *must* respect the geometrical boundary conditions of the problem, i.e., both

$$\Psi_1 = x^2$$
 and  $\Psi_2 = 1 - \cos \frac{\pi x}{2H}$ 

are accettable shape functions for our example, as  $\Psi_1(0)=\Psi_2(0)=0$  and  $\Psi_1'(0)=\Psi_2'(0)=0$ 


Generalized SDOF

#### **Remarks**

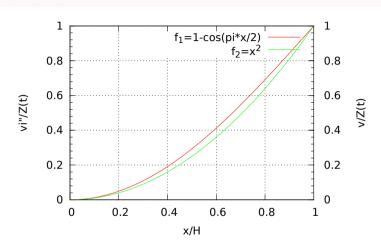

# Generalized SDOF

#### **Remarks**

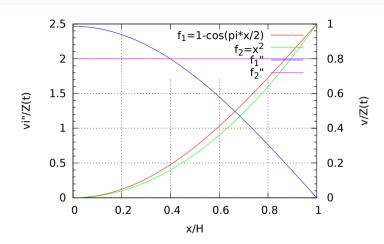

#### Generalized SDOF

■ the shape function *must* respect the geometrical boundary conditions of the problem, i.e., both

$$\Psi_1 = x^2$$
 and  $\Psi_2 = 1 - \cos \frac{\pi x}{2H}$ 

are accettable shape functions for our example, as  $\Psi_1(0)=\Psi_2(0)=0$  and  $\Psi_1'(0)=\Psi_2'(0)=0$ 

 better results are obtained when the second derivative of the shape function at least resembles the typical distribution of bending moments in our problem, so that between

$$\Psi_1^{\prime\prime} = \text{constant}$$
 and  $\Psi_2^{\prime\prime} = \frac{\pi^2}{4H^2} \cos \frac{\pi x}{2H}$ 

the second choice is preferable.

Using  $\Psi(x)=1-\cos\frac{\pi x}{2H}$ , with  $\bar{m}=$  constant and EJ= constant, with a load characteristic of seismic excitation,  $p(t)=-\bar{m}\dot{v}_g(t)$ ,

$$\begin{split} m^{\star} &= \bar{m} \int_{0}^{H} (1 - \cos \frac{\pi x}{2H})^{2} \, \mathrm{d}x = \bar{m} (\frac{3}{2} - \frac{4}{\pi}) H \\ k^{\star} &= EJ \frac{\pi^{4}}{16H^{4}} \int_{0}^{H} \cos^{2} \frac{\pi x}{2H} \, \mathrm{d}x = \frac{\pi^{4}}{32} \frac{EJ}{H^{3}} \\ k^{\star}_{G} &= N \frac{\pi^{2}}{4H^{2}} \int_{0}^{H} \sin^{2} \frac{\pi x}{2H} \, \mathrm{d}x = \frac{\pi^{2}}{8H} N \\ p^{\star}_{g} &= -\bar{m} \ddot{v}_{g}(t) \int_{0}^{H} 1 - \cos \frac{\pi x}{2H} \, \mathrm{d}x = -\left(1 - \frac{2}{\pi}\right) \bar{m} H \, \ddot{v}_{g}(t) \end{split}$$

Generalized SDOF

Giacomo Boffi

#### Section 4

# **Vibration Analysis by Rayleigh's Method**

#### **Vibration Analysis**

Generalized SDOF

Giacomo Boffi

■ The process of estimating the vibration characteristics of a complex system is known as *vibration analysis*.

#### **Vibration Analysis**

Generalized SDOF

- The process of estimating the vibration characteristics of a complex system is known as *vibration analysis*.
- We can use our previous results for flexible systems, based on the SDOF model, to give an estimate of the natural frequency  $\omega^2 = k^*/m^*$

- The process of estimating the vibration characteristics of a complex system is known as *vibration analysis*.
- We can use our previous results for flexible systems, based on the SDOF model, to give an estimate of the natural frequency  $\omega^2 = k^*/m^*$
- A different approach, proposed by Lord Rayleigh, starts from different premises to give the same results but the *Rayleigh's Quotient* method is important because it offers a better understanding of the vibrational behaviour, eventually leading to successive refinements of the first estimate of  $\omega^2$ .

# **Rayleigh's Quotient Method**

Our focus will be on the *free vibration* of a flexible, undamped system.

Generalized SDOF

Our focus will be on the *free vibration* of a flexible, undamped system.

■ inspired by the free vibrations of a proper *SDOF* we write

$$Z(t)=Z_0\sin\omega t$$
 and  $v(x,t)=Z_0\Psi(x)\sin\omega t,$   $\dot{v}(x,t)=\omega\,Z_0\Psi(x)\cos\omega t.$ 

■ inspired by the free vibrations of a proper SDOF we write

$$Z(t)=Z_0\sin\omega t$$
 and  $v(x,t)=Z_0\Psi(x)\sin\omega t,$   $\dot{v}(x,t)=\omega\,Z_0\Psi(x)\cos\omega t.$ 

 $\blacksquare$  the displacement and the velocity are in quadrature: when v is at its maximum  $\dot{v}=0$ , hence  $V=V_{\rm max}$ , T=0 and when  $\dot{v}$  is at its maximum it is v=0, hence V=0,  $T=T_{\rm max}$ 

■ inspired by the free vibrations of a proper SDOF we write

$$Z(t)=Z_0\sin\omega t$$
 and  $v(x,t)=Z_0\Psi(x)\sin\omega t,$   $\dot{v}(x,t)=\omega\,Z_0\Psi(x)\cos\omega t.$ 

- the displacement and the velocity are in quadrature: when v is at its maximum  $\dot{v}=0$ , hence  $V=V_{\max}$ , T=0 and when  $\dot{v}$  is at its maximum it is v=0, hence V=0,  $T=T_{\max}$ ,
- disregarding damping, the energy of the system is constant during free vibrations,

$$V_{\max} + 0 = 0 + T_{\max} \quad \Rightarrow \quad V_{\max} = T_{\max}$$

# Rayleigh's Quotient Method

Generalized SDOF

Giacomo Boffi

Now we write the expressions for  $V_{\rm max}$  and  $T_{\rm max}$ ,

$$V_{\text{max}} = \frac{1}{2} Z_0^2 \int_S EJ(x) \Psi''^2(x) \, dx,$$

$$T_{\text{max}} = \frac{1}{2} \omega^2 Z_0^2 \int_S \bar{m}(x) \Psi^2(x) \, dx,$$

equating the two expressions and solving for  $\omega^2$  we have

$$\omega^2 = \frac{\int_S EJ(x)\Psi''^2(x) dx}{\int_S \bar{m}(x)\Psi^2(x) dx}.$$

Recognizing the expressions we found for  $k^\star$  and  $m^\star$  we could question the utility of Rayleigh's Quotient...

# **Rayleigh's Quotient Method**

■ in Rayleigh's method we know the specific time dependency of the inertial forces

Giacomo Boffi

$$f_{\rm I} = -\bar{m}(x)\ddot{v} = \bar{m}(x)\omega^2 Z_0 \Psi(x) \sin \omega t$$

 $f_{\rm I}$  has the same *shape* we use for displacements.

if  $\Psi$  were the real shape assumed by the structure in free vibrations, the displacements v due to a loading  $f_1 = \omega^2 \bar{m}(x) \Psi(x) Z_0$  should be proportional to  $\Psi(x)$  through a constant factor, with equilibrium respected in every point of the structure during free vibrations.

■ in Rayleigh's method we know the specific time dependency of the inertial forces

$$f_{\rm I} = -\bar{m}(x)\ddot{v} = \bar{m}(x)\omega^2 Z_0 \Psi(x) \sin \omega t$$

 $f_1$  has the same *shape* we use for displacements.

- if  $\Psi$  were the real shape assumed by the structure in free vibrations, the displacements v due to a loading  $f_1 = \omega^2 \bar{m}(x) \Psi(x) Z_0$  should be proportional to  $\Psi(x)$  through a constant factor, with equilibrium respected in every point of the structure during free vibrations.
- starting from a shape function  $\Psi_0(x)$ , a new shape function  $\Psi_1$  can be determined normalizing the displacements due to the inertial forces associated with  $\Psi_0(x)$ ,  $f_1 = \bar{m}(x)\Psi_0(x)$ ,

■ in Rayleigh's method we know the specific time dependency of the inertial forces

$$f_{\rm I} = -\bar{m}(x)\ddot{v} = \bar{m}(x)\omega^2 Z_0 \Psi(x) \sin \omega t$$

 $f_1$  has the same *shape* we use for displacements.

- if  $\Psi$  were the real shape assumed by the structure in free vibrations, the displacements v due to a loading  $f_1 = \omega^2 \bar{m}(x) \Psi(x) Z_0$  should be proportional to  $\Psi(x)$  through a constant factor, with equilibrium respected in every point of the structure during free vibrations.
- starting from a shape function  $\Psi_0(x)$ , a new shape function  $\Psi_1$  can be determined normalizing the displacements due to the inertial forces associated with  $\Psi_0(x)$ ,  $f_1 = \bar{m}(x)\Psi_0(x)$ ,
- we are going to demonstrate that the new shape function is a better approximation of the true mode shape

## **Selection of mode shapes**

Generalized SDOF

Giacomo Boffi

Given different shape functions  $\Psi_i$  and considering the true shape of free vibration  $\Psi$ , in the former cases equilibrium is not respected by the structure itself.

#### **Selection of mode shapes**

Generalized SDOF

Giacomo Boffi

Given different shape functions  $\Psi_i$  and considering the true shape of free vibration  $\Psi_i$ in the former cases equilibrium is not respected by the structure itself. To keep inertia induced deformation proportional to  $\Psi_i$  we must consider the presence of additional elastic constraints. This leads to the following considerations

Given different shape functions  $\Psi_i$  and considering the true shape of free vibration  $\Psi$ , in the former cases equilibrium is not respected by the structure itself. To keep inertia induced deformation proportional to  $\Psi_i$  we must consider the presence of additional elastic constraints. This leads to the following considerations

 the frequency of vibration of a structure with additional constraints is higher than the true natural frequency, Given different shape functions  $\Psi_i$  and considering the true shape of free vibration  $\Psi$ , in the former cases equilibrium is not respected by the structure itself. To keep inertia induced deformation proportional to  $\Psi_i$  we must consider the presence of additional elastic constraints. This leads to the following considerations


- the frequency of vibration of a structure with additional constraints is higher than the true natural frequency,
- the criterium to discriminate between different shape functions is: better shape functions give lower estimates of the natural frequency, the true natural frequency being a lower bound of all estimates.

Giacomo Boffi

In general the selection of trial shapes goes through two steps,

- 1 the analyst considers the flexibilities of different parts of the structure and the presence of symmetries to devise an approximate shape,
- the structure is loaded with constant loads directed as the assumed displacements, the displacements are computed and used as the shape function, of course a little practice helps a lot in the the choice of a proper pattern of loading...

# **Selection of mode shapes 3**

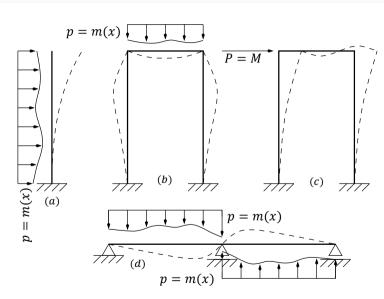

Generalized SDOF

# Refinement $R_{00}$

Generalized SDOF

Giacomo Boffi

Choose a trial function  $\Psi^{(0)}(x)$  and write

$$\begin{split} v^{(0)} &= \Psi^{(0)}(x) Z^{(0)} \sin \omega t \\ V_{\text{max}} &= \frac{1}{2} Z^{(0)2} \int EJ \Psi^{(0)''2} \, \mathrm{d}x \\ T_{\text{max}} &= \frac{1}{2} \omega^2 Z^{(0)2} \int \bar{m} \Psi^{(0)2} \, \mathrm{d}x \end{split}$$

our first estimate  $R_{00}$  of  $\omega^2$  is

$$\omega^2 = \frac{\int EJ\Psi^{(0)}^{"2} dx}{\int \bar{m}\Psi^{(0)2} dx}.$$

## Refinement $R_{01}$

We try to give a better estimate of  $V_{\rm max}$  computing the external work done by the inertial forces,

$$p^{(0)} = \omega^2 \bar{m}(x) v^{(0)} = Z^{(0)} \omega^2 \Psi^{(0)}(x)$$

the deflections due to  $p^{(0)}$  are

$$v^{(1)} = \omega^2 \frac{v^{(1)}}{\omega^2} = \omega^2 \Psi^{(1)} \frac{Z^{(1)}}{\omega^2} = \omega^2 \Psi^{(1)} \bar{Z}^{(1)},$$

where we write  $ar{Z}^{(1)}$  because we need to keep the unknown  $\omega^2$  in evidence. The maximum strain energy is

$$V_{\text{max}} = \frac{1}{2} \int p^{(0)} v^{(1)} \, \mathrm{d}x = \frac{1}{2} \omega^4 Z^{(0)} \bar{Z}^{(1)} \int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} \, \mathrm{d}x$$

Equating to our previous estimate of  $T_{\text{max}}$  we find the  $R_{01}$  estimate

$$\omega^2 = \frac{Z^{(0)}}{\bar{Z}^{(1)}} \frac{\int \bar{m}(x) \Psi^{(0)} \Psi^{(0)} dx}{\int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} dx}$$

Generalized SDOF Giacomo Boffi

#### Refinement $R_{11}$

With little additional effort it is possible to compute  $T_{\text{max}}$  from  $v^{(1)}$ :

$$T_{\text{max}} = \frac{1}{2}\omega^2 \int \bar{m}(x)v^{(1)2} \, dx = \frac{1}{2}\omega^6 \bar{Z}^{(1)2} \int \bar{m}(x)\Psi^{(1)2} \, dx$$

equating to our last approximation for  $V_{\rm max}$  we have the  $R_{11}$  approximation to the frequency of vibration,

$$\omega^2 = \frac{Z^{(0)}}{\bar{Z}^{(1)}} \frac{\int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} dx}{\int \bar{m}(x) \Psi^{(1)} \Psi^{(1)} dx}.$$

Generalized SDOF

$$T_{\text{max}} = \frac{1}{2}\omega^2 \int \bar{m}(x)v^{(1)2} \, \mathrm{d}x = \frac{1}{2}\omega^6 \bar{Z}^{(1)2} \int \bar{m}(x)\Psi^{(1)2} \, \mathrm{d}x$$

equating to our last approximation for  $V_{\rm max}$  we have the  $R_{11}$  approximation to the frequency of vibration,

$$\omega^2 = \frac{Z^{(0)}}{\bar{Z}^{(1)}} \frac{\int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} dx}{\int \bar{m}(x) \Psi^{(1)} \Psi^{(1)} dx}.$$

Of course the procedure can be extended to compute better and better estimates of  $\omega^2$  but usually the refinements are not extended beyond  $R_{11}$ , because it would be contradictory with the quick estimate nature of the Rayleigh's Quotient method

Generalized SDOF

$$T_{\text{max}} = \frac{1}{2}\omega^2 \int \bar{m}(x)v^{(1)2} \, \mathrm{d}x = \frac{1}{2}\omega^6 \bar{Z}^{(1)2} \int \bar{m}(x)\Psi^{(1)2} \, \mathrm{d}x$$

equating to our last approximation for  $V_{\rm max}$  we have the  $R_{11}$  approximation to the frequency of vibration,

$$\omega^2 = \frac{Z^{(0)}}{\bar{Z}^{(1)}} \frac{\int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} dx}{\int \bar{m}(x) \Psi^{(1)} \Psi^{(1)} dx}.$$

Of course the procedure can be extended to compute better and better estimates of  $\omega^2$  but usually the refinements are not extended beyond  $R_{11}$ , because it would be contradictory with the quick estimate nature of the Rayleigh's Quotient method and also because  $R_{11}$  estimates are usually very good ones.

Generalized SDOF

#### Refinement $R_{11}$

With little additional effort it is possible to compute  $T_{\sf max}$  from  $v^{(1)}$ :

$$T_{\text{max}} = \frac{1}{2}\omega^2 \int \bar{m}(x)v^{(1)2} \, \mathrm{d}x = \frac{1}{2}\omega^6 \bar{Z}^{(1)2} \int \bar{m}(x)\Psi^{(1)2} \, \mathrm{d}x$$

equating to our last approximation for  $V_{\rm max}$  we have the  $R_{11}$  approximation to the frequency of vibration,


$$\omega^2 = \frac{Z^{(0)}}{\bar{Z}^{(1)}} \frac{\int \bar{m}(x) \Psi^{(0)} \Psi^{(1)} dx}{\int \bar{m}(x) \Psi^{(1)} \Psi^{(1)} dx}.$$

Of course the procedure can be extended to compute better and better estimates of  $\omega^2$  but usually the refinements are not extended beyond  $R_{11}$ , because it would be contradictory with the quick estimate nature of the Rayleigh's Quotient method and also because  $R_{11}$  estimates are usually very good ones.

Nevertheless, we recognize the possibility of itereatively computing better and better estimates opens a world of new opportunities.

Generalized SDOF

# **Refinement Example**

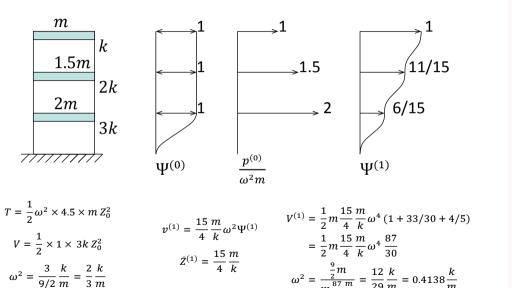

Generalized SDOF