# HWRS 561b: Physical Hydrogeology II

## Solute transport (Part 2)

Agenda:

1. Basic concepts
2. Flux law
3. Derivation of solute transport equation


# Solute transport under saturated flow



Taylor-Aris Dispersion: Spatial variation of velocity leads to dispersion of solutes

Spatial variation of velocity in a porous medium:


(1) Velocity profile through a pore throat (related to T-A dispersion)
(2) Velocity variation among pore throats
(3) Tortuosity

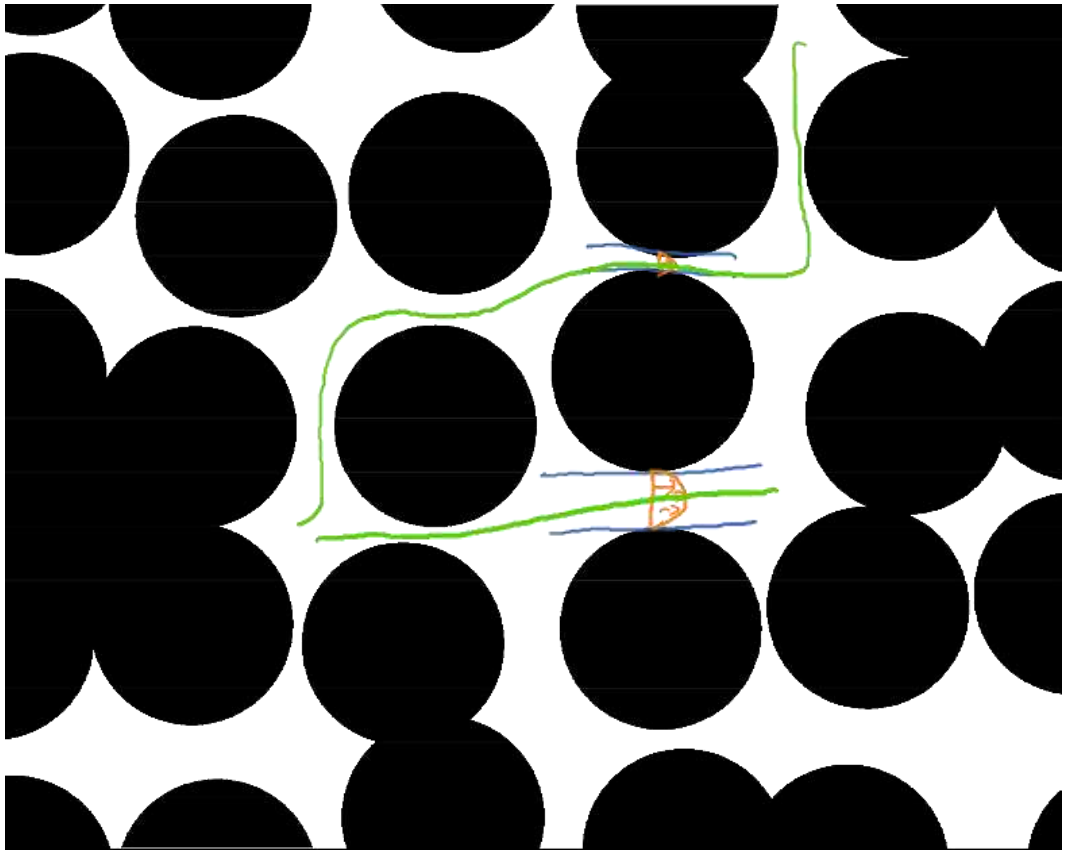

# Solute transport under saturated flow




Pure advection

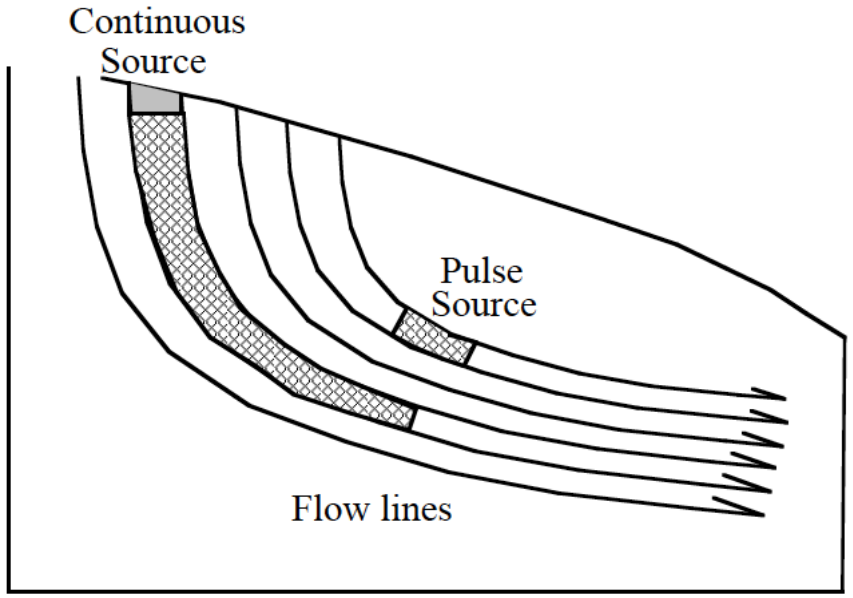


Advection + Mechanical dispersion + Molecular diffusion


Hydrodynamic dispersion

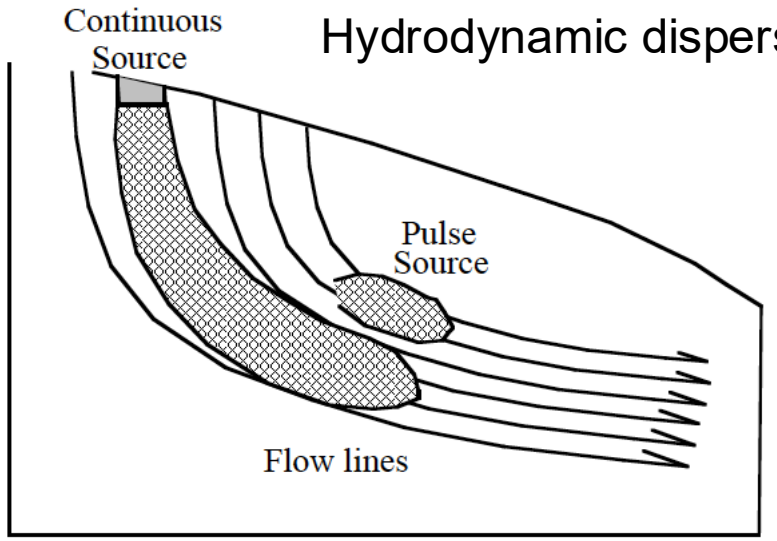


# Solute transport under saturated flow



A widely used theory for describing solute flux in saturated porous media [J. Bear (1961)]

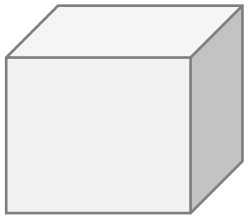


Saturated
porous medium

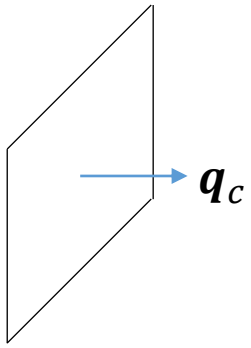



$$\boldsymbol{q}_c = \phi(\boldsymbol{v}C - \boldsymbol{D}\nabla \mathrm{C}),$$

- $\boldsymbol{q}_c$ is the solute flux vector.
- $\boldsymbol{v}$ is the velocity field.
- $\boldsymbol{D}$ is a tensor that depends on the velocity field and molecular diffusion in the porous medium.

---

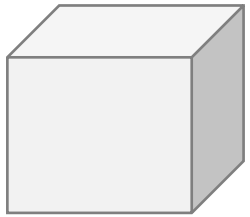

Fluid only
(e.g., free water)

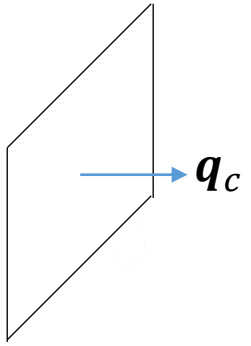


$$\boldsymbol{q}_c = \boldsymbol{v}C - D_0\nabla \mathrm{C}$$

Diffusion is isotropic,
not a tensor.

# Solute transport under saturated flow



$$\boldsymbol{q}_c = \phi(\boldsymbol{v}C - \boldsymbol{D}\nabla \mathrm{C})$$
$$= \boldsymbol{q}C - \phi\boldsymbol{D}\nabla \mathrm{C}$$

For a special case in 1D flow ($v_y$ and $v_z$ are zero)

$$D_{xx} = \alpha_L v_x + D_d$$
$$D_{yy} = D_{zz} = \alpha_T v_x + D_d$$

$$\mathbf{D} = \begin{pmatrix} \alpha_L|\mathbf{v}| + wD_0 & 0 & 0 \\ 0 & \alpha_T|\mathbf{v}| + wD_0 & 0 \\ 0 & 0 & \alpha_T|\mathbf{v}| + wD_0 \end{pmatrix}$$

Outer product $\underset{\sim}{v}\underset{\sim}{v} \cdot \underset{\sim}{x} = \underset{\sim}{v}(\underset{\sim}{v} \cdot \underset{\sim}{x})$

$$\boldsymbol{D} = \alpha_T|\boldsymbol{v}|\mathbf{I} + (\alpha_L - \alpha_T)\frac{\boldsymbol{vv}}{|\boldsymbol{v}|} + wD_0\mathbf{I}$$

$\alpha_L$ and $\alpha_T$ are longitudinal and transverse dispersivities, respectively.


$$\mathbf{D} = \begin{pmatrix} \alpha_T|\mathbf{v}| + wD_0 + \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_x^2 & \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_x v_y & \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_x v_z \\ \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_y v_x & \alpha_T|\mathbf{v}| + wD_0 + \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_y^2 & \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_y v_z \\ \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_z v_x & \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_z v_y & \alpha_T|\mathbf{v}| + wD_0 + \frac{\alpha_L - \alpha_T}{|\mathbf{v}|}v_z^2 \end{pmatrix}$$

$$q_{c,x} = \left[\alpha_T|\boldsymbol{v}| + (\alpha_L - \alpha_T)\frac{v_x^2}{|\boldsymbol{v}|} + wD_0\right]\frac{\partial C}{\partial x} + \left[(\alpha_L - \alpha_T)\frac{v_x v_y}{|\boldsymbol{v}|}\right]\frac{\partial C}{\partial y} + \left[(\alpha_L - \alpha_T)\frac{v_x v_z}{|\boldsymbol{v}|}\right]\frac{\partial C}{\partial z}$$

$q_y$ and $q_z$ can be written out in a similar way.

# Solute transport under saturated flow

HWRS 561b
Ty Ferre
Spring 2027

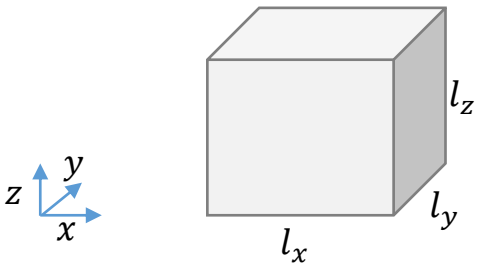


$$C(x,y,z,t) = \frac{\text{mass of solute}}{\text{unit fluid volume}}$$

Mass conservation: Change of mass storage = mass in – mass out.

Rate of mass change: $\frac{\partial}{\partial t}\int_0^{l_x}\int_0^{l_y}\int_0^{l_z} \phi(x,y,z,t)\, C(x,y,z,t)\, dx\,dy\,dz = \frac{\partial}{\partial t}\int_\Omega \phi C\, dV$

Net fluxes:

$$-\int_\Omega \nabla \cdot \underset{\sim}{q}_c\, dV = -\int_{\partial\Omega} \underset{\sim}{q}_c \cdot \underset{\sim}{n}\, dS \Leftarrow \begin{cases} \int_0^{l_y}\int_0^{l_z} q_{c,x}\big|_{x=0} - \int_0^{l_y}\int_0^{l_z} q_{c,x}\big|_{x=l_x} \\ + \int_0^{l_x}\int_0^{l_z} q_{c,y}\big|_{y=0} - \int_0^{l_x}\int_0^{l_z} q_{c,y}\big|_{y=l_y} \\ + \int_0^{l_x}\int_0^{l_y} q_{c,z}\big|_{z=0} - \int_0^{l_x}\int_0^{l_y} q_{c,z}\big|_{z=l_z} \end{cases}$$

# Solute transport under saturated flow



$$\frac{\partial}{\partial t}\int_\Omega \phi c \, dV = -\int_\Omega \nabla \cdot \underset{\sim}{q}_c \, dV$$

↙ $\Omega \neq \Omega(t)$

$$\Rightarrow \int_\Omega \frac{\partial}{\partial t}(\phi c)\, dV = -\int_\Omega \nabla \cdot \underset{\sim}{q}_c \, dV$$

$$\Rightarrow \int_\Omega \left[\frac{\partial}{\partial t}(\phi c) + \nabla \cdot \underset{\sim}{q}_c\right] dV = 0$$

↙ $\Omega$ is arbitrary

$$\Rightarrow \frac{\partial}{\partial t}(\phi c) + \nabla \cdot \underset{\sim}{q}_c = 0$$


$$\underset{\sim}{q}_c = \underset{\sim}{q} c - \phi \underset{\sim}{\underset{\sim}{D}} \nabla c$$


$$\Rightarrow \boxed{\frac{\partial}{\partial t}(\phi c) + \nabla \cdot (\underset{\sim}{q} c - \phi \underset{\sim}{\underset{\sim}{D}} \nabla c) = 0}$$

3D general equation for Solute transport in Saturated porous media.

# Solute transport under saturated flow



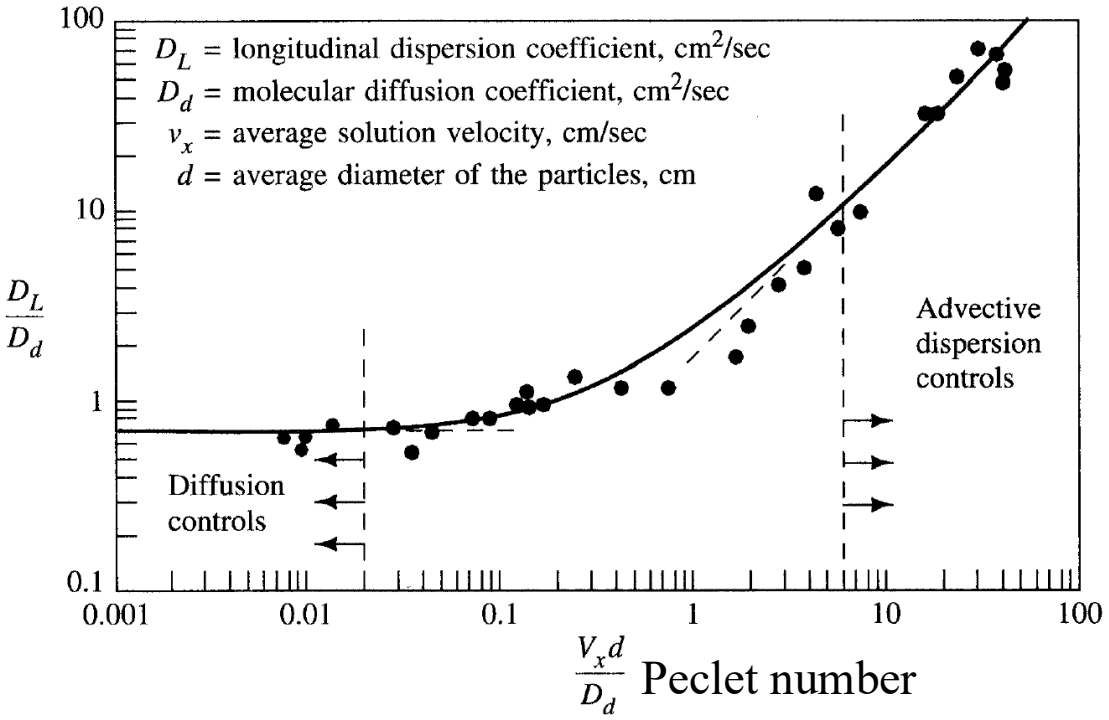

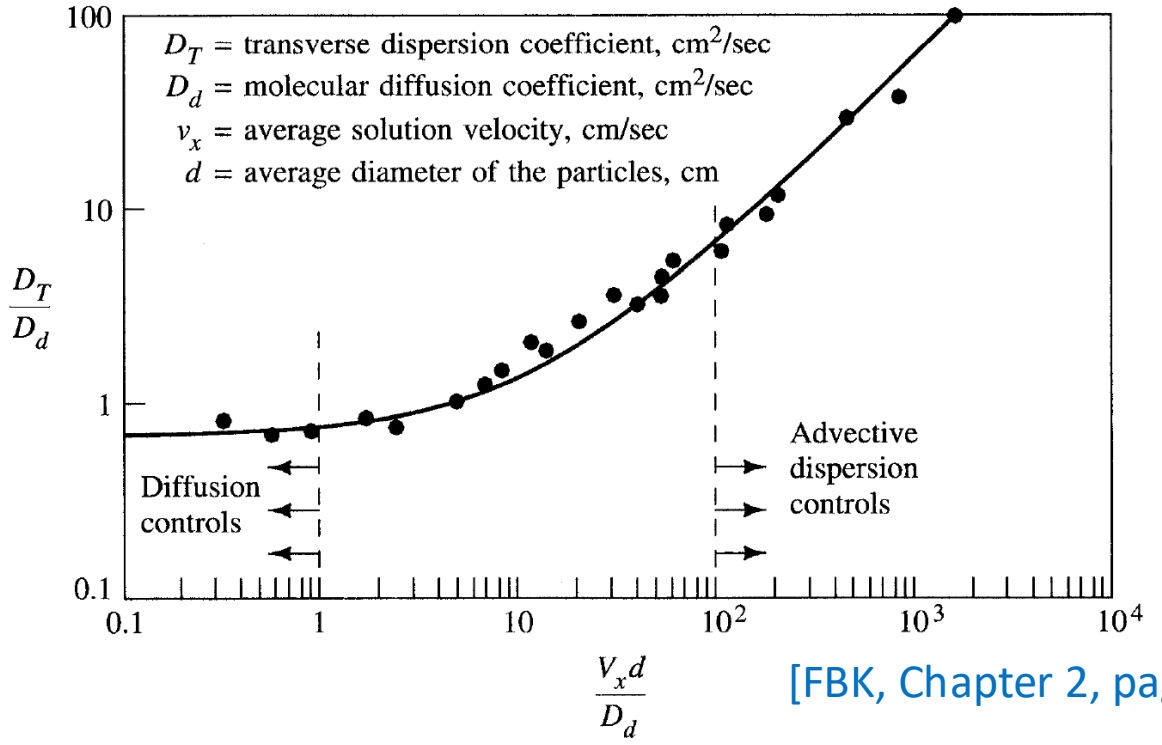
[FBK, Chapter 2, page 69]

- At lower Peclet numbers diffusion is the predominant force, and dispersion can be neglected
- At higher Peclet numbers mechanical dispersion is the predominant cause of mixing of the contaminant plume (Perkins and Johnson 1963; Bear 1972; Bear and Verruijt 1987) and the effects of diffusion can be ignored. Under these conditions $D_i$ can be replaced with $a_i v_i$ in the advection-dispersion equations.
- In between, there is a transition zone, where the effects of diffusion and longitudinal mechanical dispersion are comparable.