# CON-FMC Example of AMBA AHB BFM with Block Memory

Version 0 Revision 0

May 10, 2018 (May 10, 2018)

Future Design Systems, Inc. <a href="https://www.future-ds.com/contact@future-ds.com/">www.future-ds.com/</a> / <a href="mailto:contact@future-ds.com/">contact@future-ds.com/</a>

# Copyright © 2018 Future Design Systems, Inc.

#### **Abstract**

This document addresses an example of CON-FMC with ML605 FPGA board consisting of AMBA AHB BFM and memory.

## **Table of contents**

Copyright © 2018 Future Design Systems, Inc	1
Abstract	1
Table of contents	
1 Introduction	2
2 Getting started	2
2.1 Prerequisites	2
2.2 Setup	
2.3 Quick start	3
3 Design in detail	3
3.1 Hardware structure	
3.1.1 Address map	4
3.1.2 Clock and reset	4
3.2 Software	5
3.2.1 Host-program driven BFM architecture	5
3.2.2 C API	5
4 Example script and program	6
4.1 Directory structure	6
4.2 RTL simulation	7
4.3 Logic synthesis	7
4.4 FPGA PnR	7
4.5 Memory test	8
Wish list	
References	8
Revision history	8

Future Design Systems	FDS-TD-2018-04-007

## 1 Introduction

This example introduces an example as shown in Figure 1, where the design consists of a simple AMBA AHB memory that is accessed by the host program through AHB BFM over USB 2.0 or 3.0.

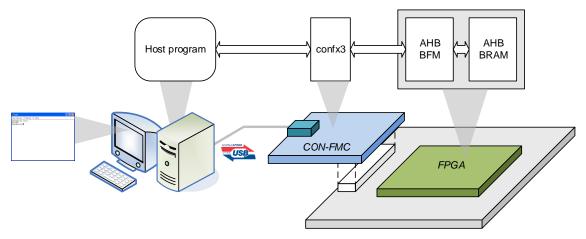


Figure 1: AMBA AHB Memory Platform

# 2 Getting started

## 2.1 Prerequisites

- Mandatory
  - ♦ CON-FMC board
  - ♦ CON-FMC SW package
  - ♦ FPGA board: Xilinx ML605 board
  - ♦ USB device driver: usbfs for Linux
- Optional
  - ♦ Simulator: industry standard Verilog simmulator, e.g., ModelSim
  - → FPGA development package: Xilinx ISE 14.7

## 2.2 Setup

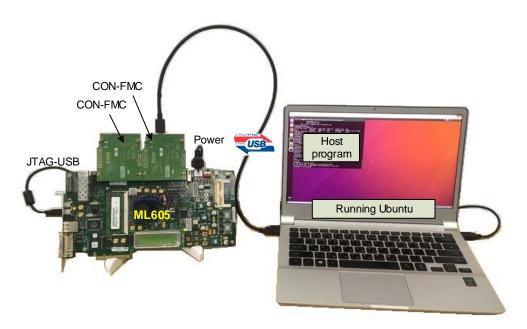


Figure 2: Setup under operation (one of two CON-FMC is used)

#### 2.3 Quick start

- 1. Make sure the FPGA board is turned off
- 2. Connect CON-FMC to the FPGA board on HPC or LPC connector
- 3. Connect CON-FMC to the host computer through 3.0
- 4. Connect JTAG-USB to the host computer
- 5. Turn on FPGA board1
- 6. Down load bit-stream under the \$project directory<sup>2</sup>
  - □ hw.single/pnr/ise.ml605.lpc/fpga.bit
  - □ hw.single/pnr/ise.ml605.hpc/fpga.bit
  - □ hw.dual/pnr/ise.ml605.dual/fpga.bit
- 7. Go to '\$project/sw.native/test mem' directory
- 8. Run 'make cleanup; make; make run'
- 9. Then, host-program writes and read the memory in the FPGA.

## 3 Design in detail

#### 3.1 Hardware structure

Figure 3 shows internal structure of the design; i.e., FPGA design, where 'bram\_ahb' is directly connected to 'trx\_ahb' through AMB AHB bus signals.

<sup>&</sup>lt;sup>1</sup> After turn on, CON-FMC should be detected by '\$ Isusb' command. It should list '0x04B4:0x00F3' device.

<sup>&</sup>lt;sup>2</sup> Xilinx 'impact' tool can be used or simple run '\$ make' in \$project/hw.single/pnr/ise.ml605.lpc/impact' directory. Bit-stream should be carefully selected depending on which FMC connector is used.

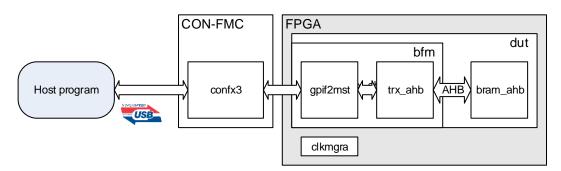


Figure 3: Hardware structure

#### 3.1.1 Address map

AHB BFM bypasses all AMBA transactions. For this example, AMB BRAM, i.e. memory has 512Kbyte space.

#### 3.1.2 Clock and reset

As shown in Figure 4, one clock is fed into the FPGA, which is 66Mhz USER\_CLK\_IN. This clock is adjusted by FPGA internal MMCM and two clocks are provided; one is SYS\_CLK and the other is SYS\_CLK.

SYS\_CLK: it is for USB interface and can be 80Mhz or 100Mhz depending on defining macro, 'SL\_PCLK\_FREQ' in 'syn\_define.v'. USR\_CLK: it is for user design and can be 80Mhz or 100Mhz depending on defining macro, 'USR\_CLK\_FREQ' in 'syn\_define.v'.

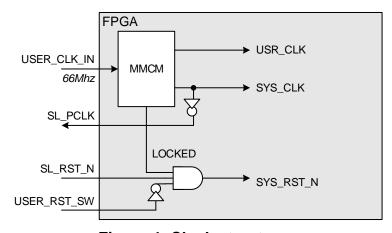


Figure 4: Clock structure

As shown in Figure 4, three reset sources are fed into the FPGA; SL\_RST\_N (active-low), USER\_RST\_SW (active-high), LOCKED (active-low in terms of reset). These two are active-low. In addition to this MMCM LOCED result is used to build reset.

Future Design Systems	FDS-TD-2018-04-007

#### 3.2 Software

#### 3.2.1 Host-program driven BFM architecture

Transactor (i.e., BFM: Bus Functional Model) in the FPGA generates system bus specific bus transaction under the command that comes from the host program through USB channel.

As shown in Figure 5, C program sends bus commands to the BFM through transparent communication channel over USB and then the commands direct BFM to carry out corresponding bus transactions, which can be AHB or AXI depending on BFM and system bus.

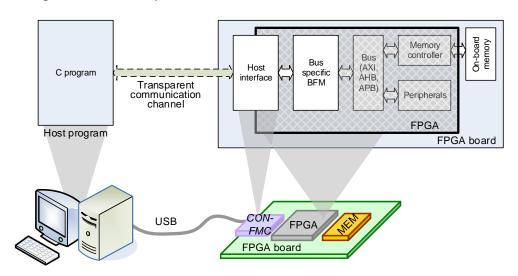


Figure 5: Host-program driven BFM architecture

#### 3.2.2 C API

It should be noted that following C APIs are just macro and you should have proper C header and library. If you are not sure, please contact technical support of Future Design Systems.

- \$CONFMC HOME/include/conapi.h
- trx ahb/drv/c/trx ahb api.h

BfmWrite() generates write transaction on the system bus, where the buffer pointed by 'data' carries justified data and each item carries 'size' bytes up to 4.

void BfmWrite( unsigned int addr // address to write

- , unsigned int \*data // pointer to buffer contains data to write
- , unsigned int size // num of bytes for each element in the buffer
- , unsigned int length); // num of items to write

BfmRead() generates read transaction on the system bus, where the buffer pointed by 'data' carries justified data and each item carries 'size' bytes up to 4. void BfmRead (unsigned int addr // address to read

Future Design Systems	FDS-TD-2018-04-007

```
, unsigned int *data // pointer to buffer containing data read
, unsigned int size // num of bytes for each item
, unsigned int length); // num of items to read
```

Following shows an example,

```
unsigned int addr;
unsigned int dataR, dataW;

addr = 0x80000000;
dataW = 0x12345678;
BfmWrite(addr, dataW, 4, 1); // write 4-byte of data to the address 0x80000000
BfmWrite(addr, dataR, 4, 1); // read 4-byte of data from 0x80000000

addr = 0x80000002;
dataW = 0x00001234; // two bytes of data in justified fashion
BfmWrite(addr, dataW, 2, 1); // write 2-byte of data to the address 0x80000002
BfmWrite(addr, dataR, 2, 1); // read 2-byte of data from 0x80000002

addr = 0x80000003;
dataW = 0x00000012; // one byte of data in justified fashion
BfmWrite(addr, dataW, 1, 1); // write 1-byte of data to the address 0x80000003
BfmWrite(addr, dataR, 1, 1); // read 1-byte of data from 0x800000003
```

API argument 'addr' should be aligned with the size and data in the 'data' argument is justified.

# 4 Example script and program

## 4.1 Directory structure

**Table 1: Directory structure** 

Directory				Remarks
fe	fex_0002_amba_ahb_mem			
	doc			document
	hw.dual			Dual FMC case
		beh		
		bench		
		design		
		pnr		
		sim		
		syn		
	hw.single			Single FMC case
		beh	verilog/gpif2slv.v	Behavioral tester
		bench	verilog/top.v	Top-level for simulation
		design	verilog/fpga.v	Design for FPGA
			verilog/dut.v	

Future Design Systems	FDS-TD-2018-04-007

		verilog/clkmgra.v	
	pnr	ise.ml605.hpc ise.ml605.lpc	PnR for Xilinx ML605 board
	sim	modelsim	HDL simulation for ModelSim
	syn	xst.v6	RLT synthesis for Xilinx Virtex 6
iplib			HW IP
	mem_ahb		AMBA AHB memory IP
		beh	Behavioral model
		bram_dual_port	Xilinx Dual-Port BRAM
		rtl/verilog	RTL
sw.native			Native-mode program to test the
			design
	test_mem		Memory testing
		src	

#### 4.2 RTL simulation

As shown in Figure 6, the design can be simulated using tasks. It uses 'gpif2slv' behavioral model, which generates GPIF2 Interface transactions.

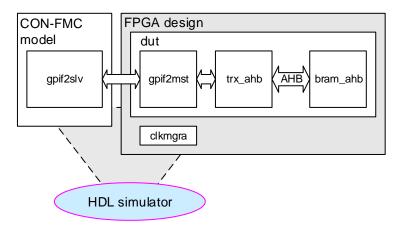


Figure 6: HW/SW co-simulation

Do as follows:

- ① go to \$project/hw.single/sim/modelsim
- ② run 'make'.

## 4.3 Logic synthesis

Look '\$(project)/hw.single/syn/xst.v6' directory and run 'make' to get net-list for Xilinx Virtex-7 FPGA.

#### 4.4 FPGA PnR

Look '\$(PROJECT)/hw.single/pnr/ise.ml605.lpc' directory and run 'make' to get bitstream.

Future Design Systems	FDS-TD-2018-04-007

## 4.5 Memory test

Look '\$(project)/sw.native/test\_mem' directory and run 'make cleanup; make run' to run the program.

## Wish list

П

## References

- [1] Future Design Systems, Cypress EZ-USB FX3 GPIF-II Master Controller, FDS-TD-2018-04-002, 2018.
- [2] Futue Design Systens, TRX\_AHB: AMBA AHB Transactor for GPIF2MST, FDS-TD-2018-04-006, 2018.
- [3] Futue Design Systens, CON-FMC API based on LIBUSB, FDS-TD-2018-04-004, 2018.

# **Revision history**

- □ 2018.10.10.: Version 0 Revision 0 is prepared by Ando Ki.
- -- End of Document --