




## **DWV Re-route Installation Manual**

The **DWV Re-route** is a vent pipe solution designed to be compatible with Standard 2" or 1.5" ABS or PVC plumbing on residential composition roofs.

The DWV Re-route will allow installers to span PV modules over standard drain waste vents while maintaining the integrity of the household plumbing system.

In standard solar installations, the DWV Re-route is installed after the ZS Comp Flashings and Comp Mounts, and before the PV modules.


Follow standard SolarCity procedures with necessary safety equipment during any and all roofwork.

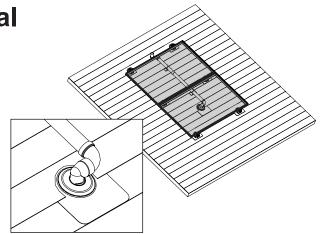

## Components




Standard Plumbing

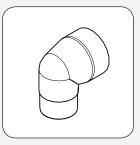

Zep Elbow Part No. 850-1525-001 (2") Part No. 850-1526-001 (1.5")




Zep Flashing Part No. 850-1520-001

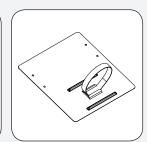

Zep Anchor Part No. 850-1524-001



Truss Head Screw #8 1-1/2" length




Pipe



Street-Hub Elbow



**Hub-Hub Elbow** 

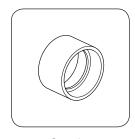

Coupler



Pipe Cement

## **Recommended Tools**



Flat Bar



Roof Sealant



M1 Structural Sealant



Hammer



Reciprocating Saw



Drill