




### **INSTRUCTION MANUAL**

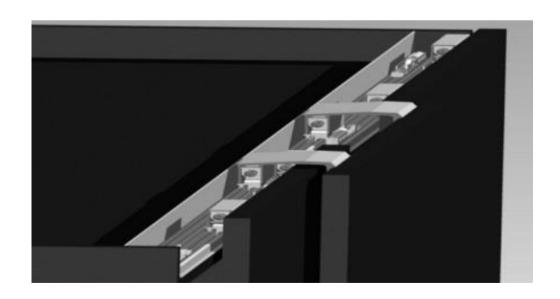

# EXTRA MINI

# max 50 Kg

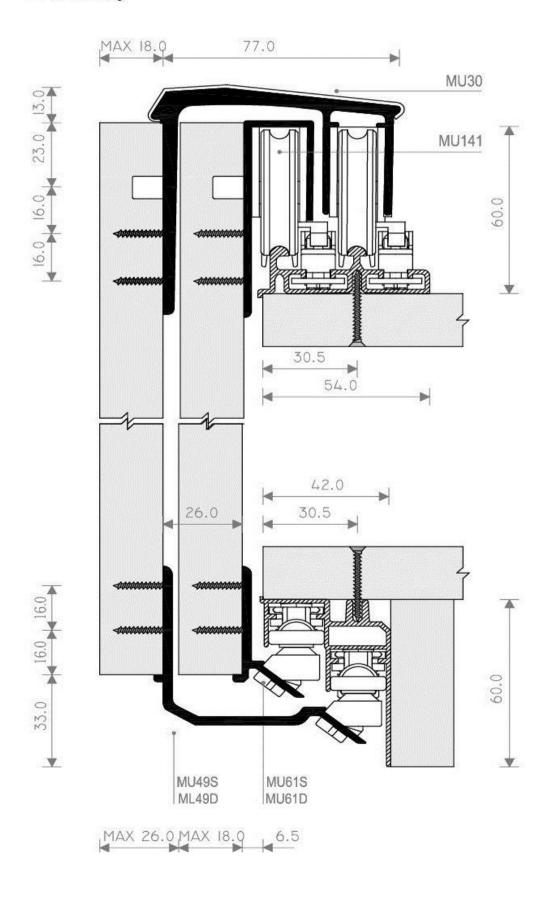




Carrello superiore anta esterna Chariot superieur porte extérieure Upper truck of external door Obere Schlitten Außentür

Carro superior puerta externa

X 2




Pattini inferiori anta esterna
Câles inférieurs porte extérieure
Lower sliders of internal door
Untere Laufwerk Außentür
Patinos inferior puerta externa

MU 49 R MU 49 L

MU 30

X 1

H 33



Carrello superiore anta interna
Chariot supérieur porte intérieure
Upper truck of internal door
Obere Schlitten Innentür
Carro superior puerta interna MU 141

X 2



Pattini inferiori anta interna
Câles inférieurs porte intérieure
Lower sliders of internal door
Untere Laufwerk Innentür
Patinos inferior puerta interna MU 61 R MU 61 L

X 1



Attivatore con vite
Activator avec vis
Activator with screw
Activator mit Schraube
Activador con tornillo **MUT 92** X 2


**MU92** - Fermo superiore


Arrêt supérieur
Upper stopper
Obere Stopper
Tope superior

X 2





- Fermo inferiore - Arrêt inférieur ML93 X 2 Lower stopper
Unterer Stopper
Tope inferior

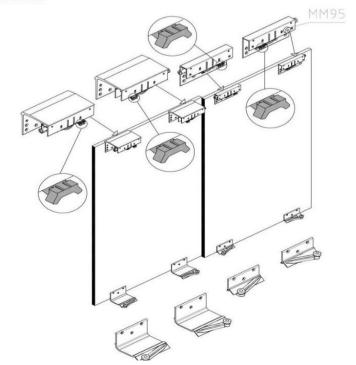

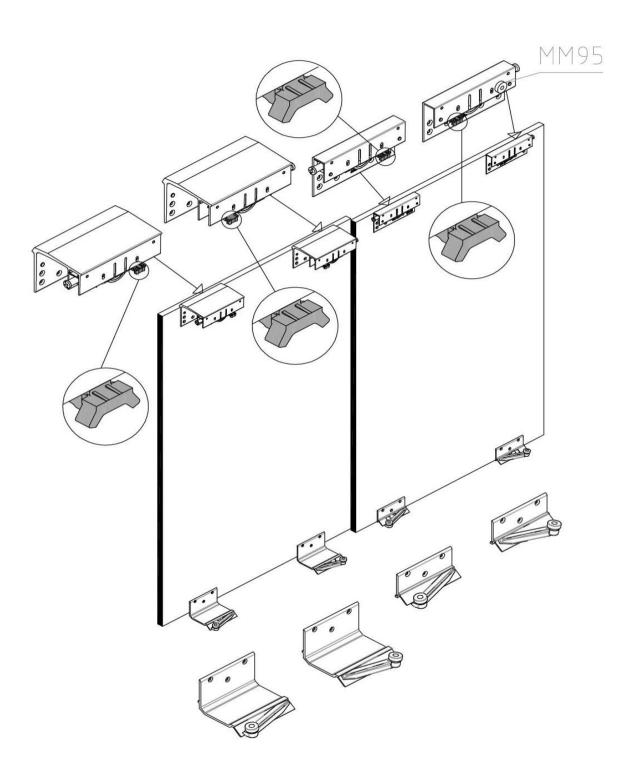


### Block assembly for internal door

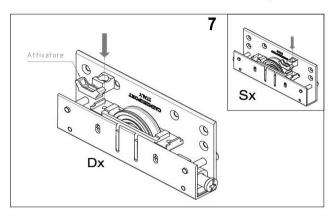


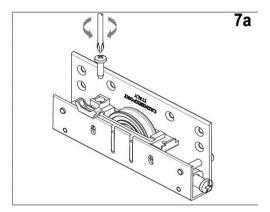


- 7 Place the block into the seat on the wheel holder.
- 7a Fix the block to the wheel holder of the truck with a tapping screw


## Block assembly for external door

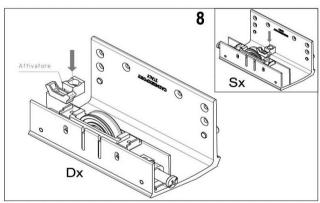

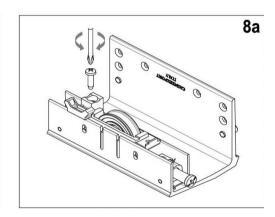


- 8 Place the block into the seat on the wheel holder
- 8a Fix the block to the wheel holder of the truck with a tapping screw

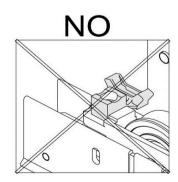

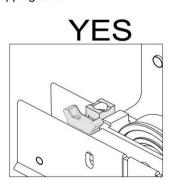


**ATTENTION** to the block mounting direction

## Mounting amortized stopper

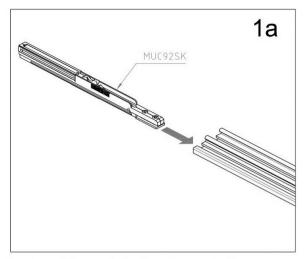


**1a** - Insert the soft closing stopper in the upper rail.

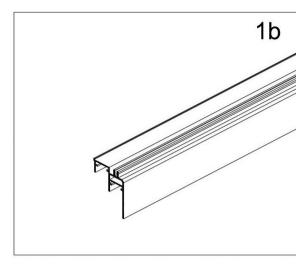


1b - Do not insert any stopper in the lower rail

# Mounting traditional stopper

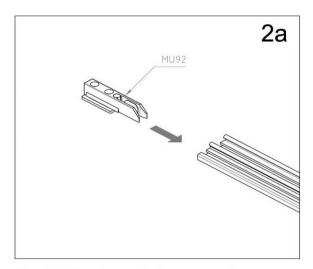



2a - Put the stopper in the upper rail.

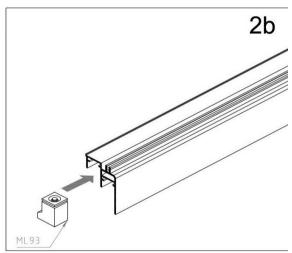


2b - Put the stopper in the lower rail.


# **Assembly MM95**

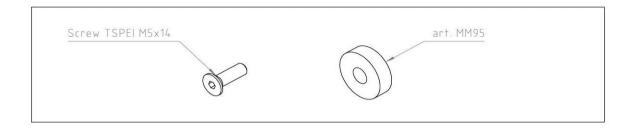


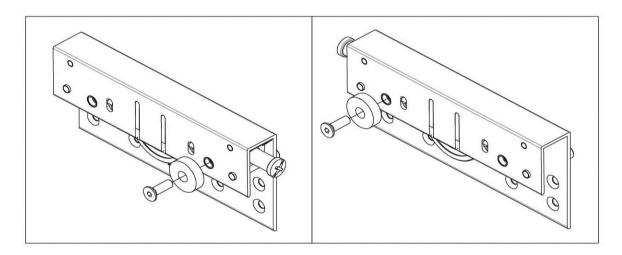


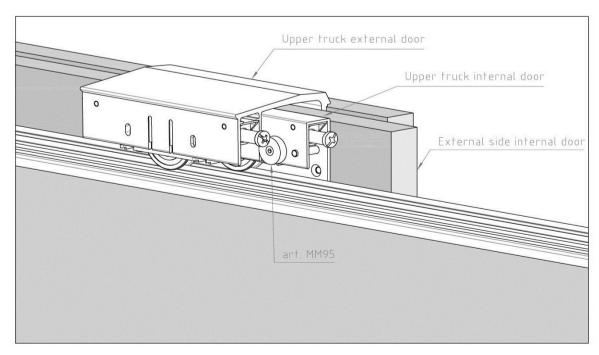


- 3 Fix MM95 with the screw supplied. (for position see page 6 o 7)
- 3a MM95 must always be positioned on the outside of internal truck near the external shoulder of the wardrobe.

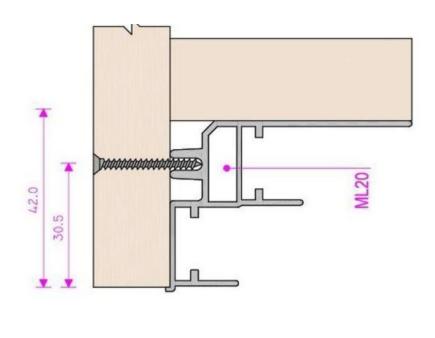


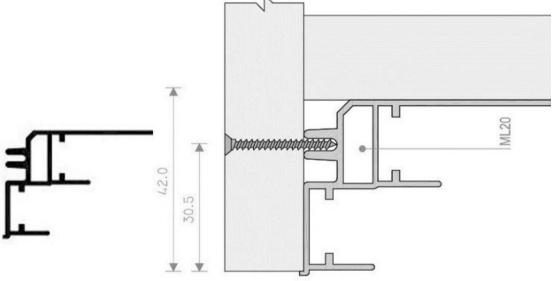

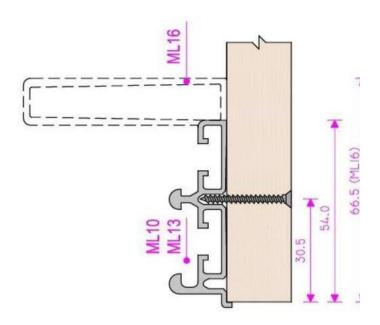


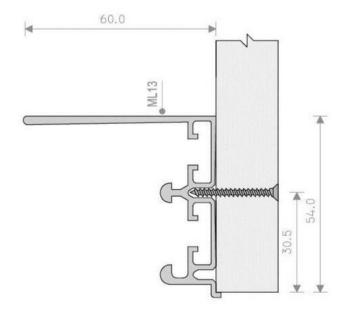


#### Block position for 2 doors wardrobe

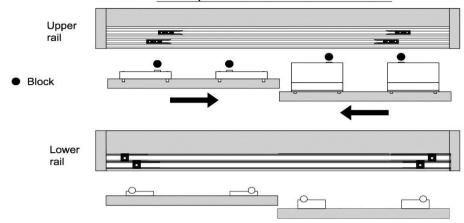


#### Block position for 3 doors wardrobe external door LEFT opening

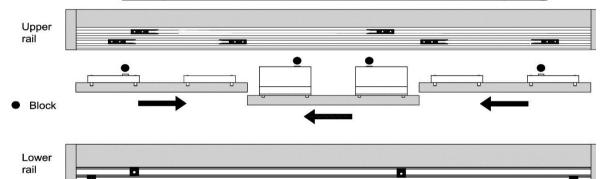


#### Block position for 3 doors wardrobe external door RIGHT opening

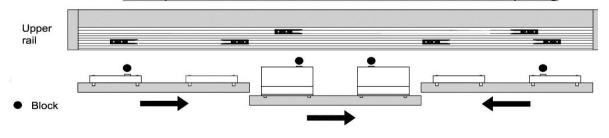




## Wardobes with soft closing and soft opening


Block position for 2 doors wardrobe

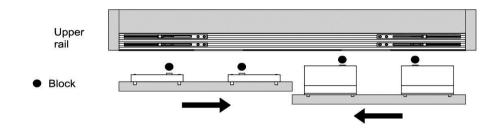


Block position for 3 doors wardrobe external door LEFT opening

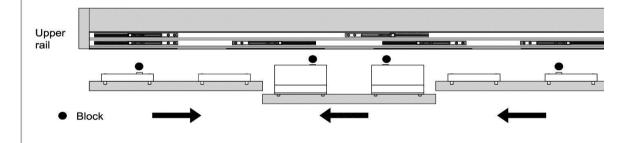


Block position for 3 doors wardrobe external door RIGHT opening

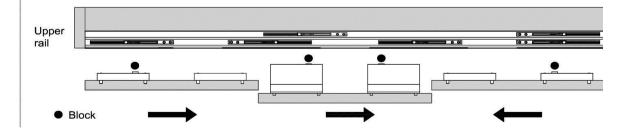


# Assembly internal door

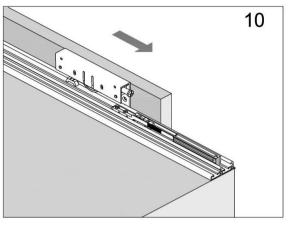

**10** - Put the internal door on the upper rail, <u>pay</u> attention that the trucks do not go on the dumper.

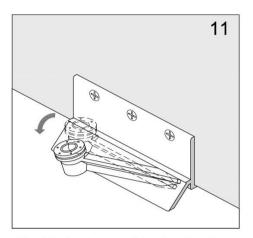


**11** - Fix the lower slider turning tha arm outward

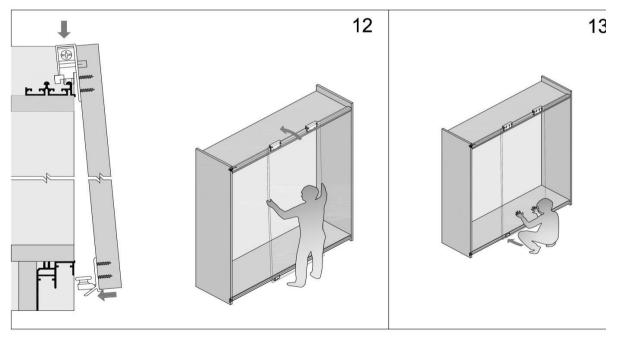


- **12** Place the internal door on the upper rail, making sure that the truck do not overlap the stoppers. precedentemente montati e che appoggino correttamente sulla guida.
- **13** Block the door placing the lower side on the rail and press lightly until to hear the click of the previously open arms


### Assembly external door

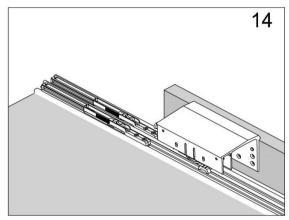

**14** - Put the external door on the upper rail, <u>pay</u> attention that the trucks do not go on the dumper.

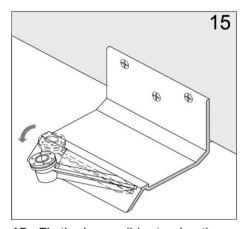


**15** - Fix the lower slider turning the arm outward

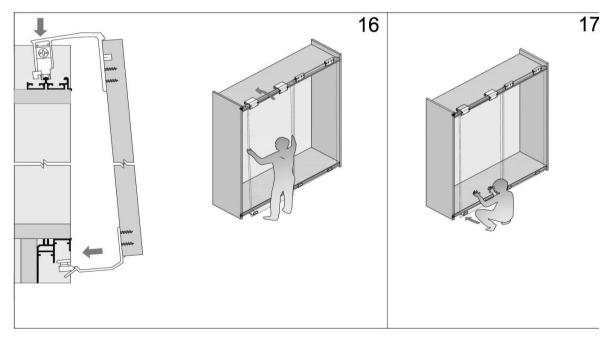


**16** - Place the internal door on the upper rail, <u>making sure that the truck do not overlap the stoppers</u> precedentemente montati e che appoggino correttamente sulla guida.


17 - Block the door placing the lower side on the rail and press lightly until to hear the click of the previously open arms

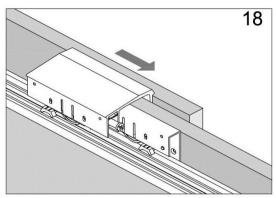


**18** - in the case of wardrobe with 3 doors, slide the door toward the outside shoulder of the cabinet by overlaying the internal one. After this, repeateps points 10-11-12-13.

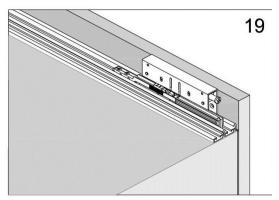


**19** - Slide the door to the block with upr dumper. The dumper must be armed.

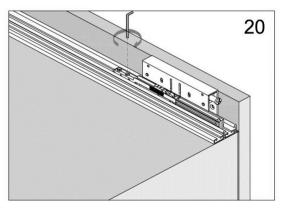

**20** - After moving the doors in their correct position, blockt the upper stopper with a 3mm key. In the case of lower stopper adjust and fix it with a wrench 8.

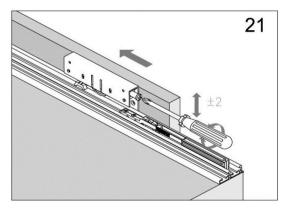


21 - To get a perfect quietness and smoothnes of the system, take off the door from the dumper and adjust its verticality using a screwdriver on the adjustment screw.

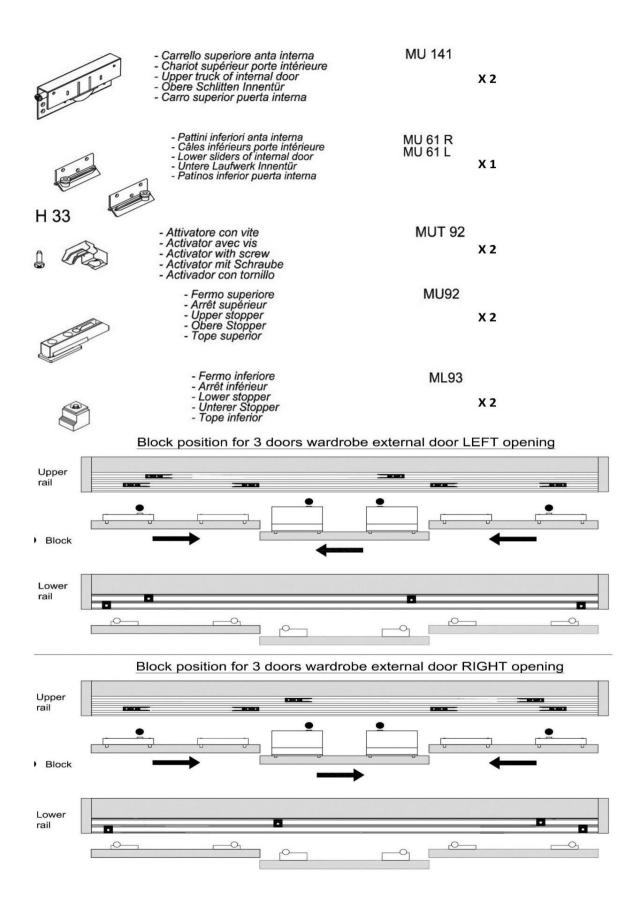





_			











ber

is er