




## **ASSEMBLY INSTRUCTIONS**


# UltraHD® Stainless-Steel Rolling Cabinet (Model No. 20210)


28 in. W x 18 in. D x 34.5 in. H (71.1 cm x 45.7 cm x 87.6 cm)

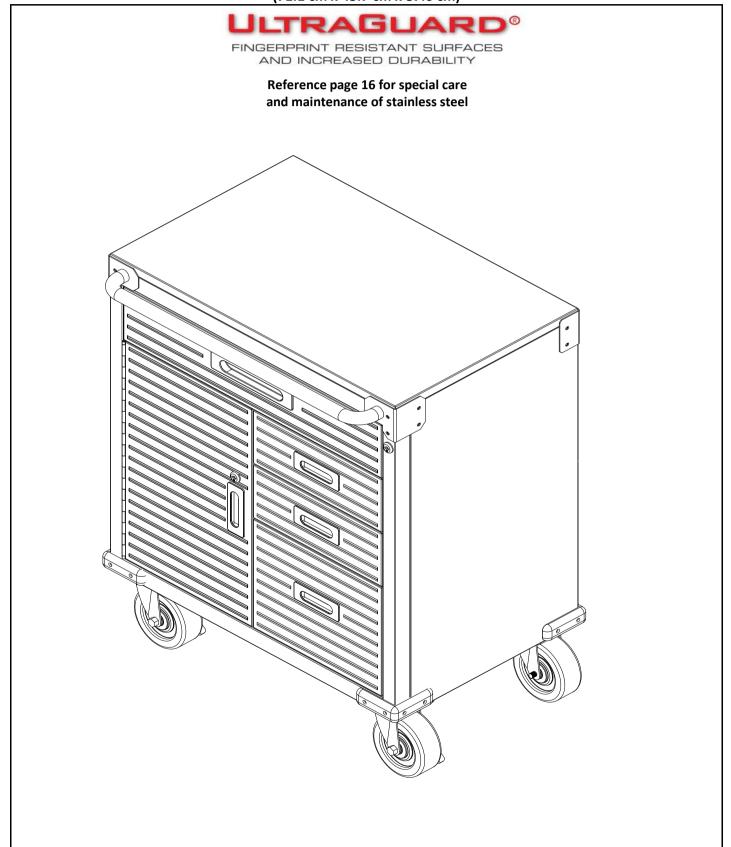


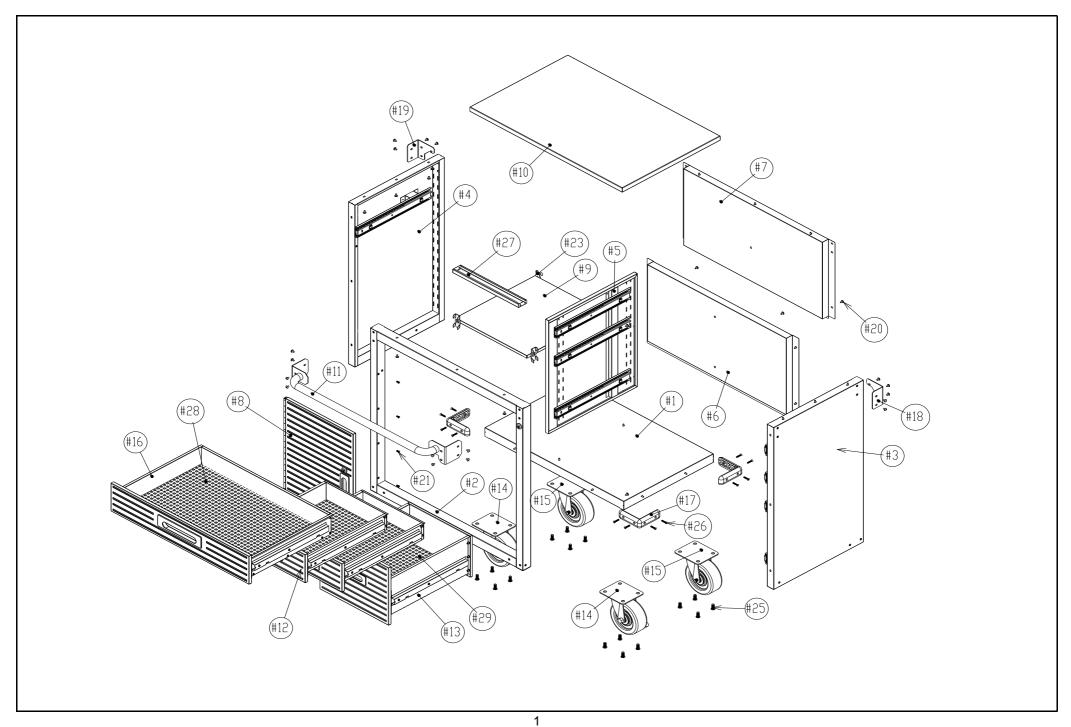


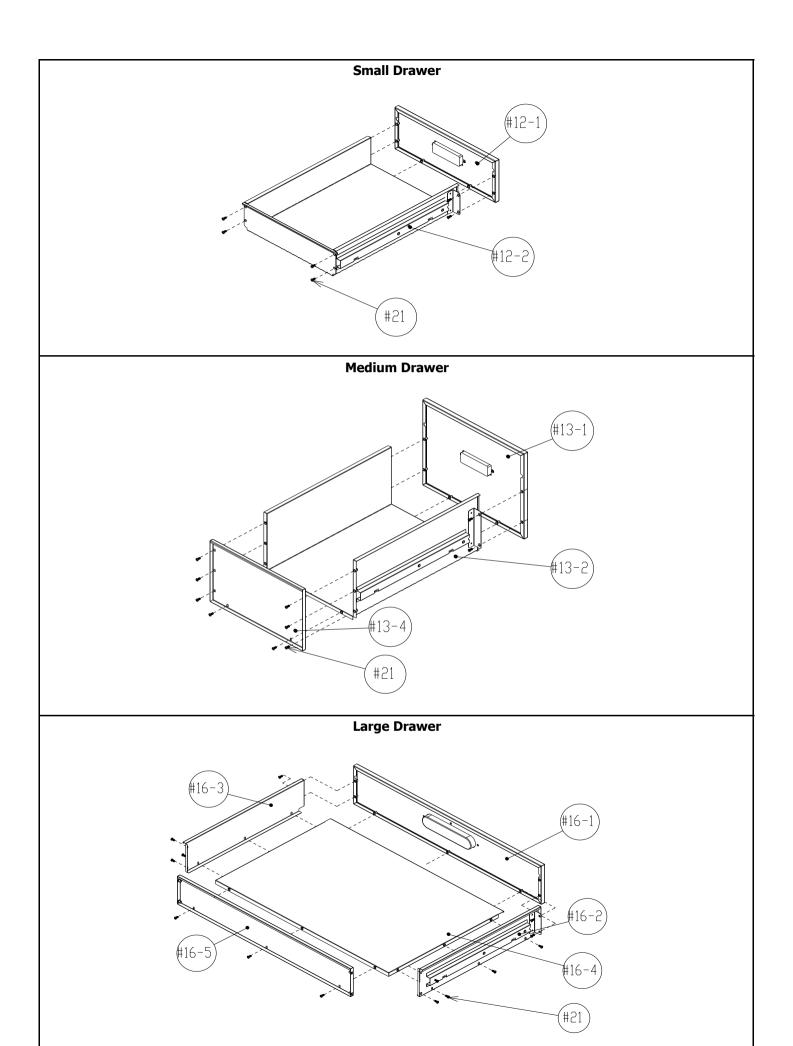

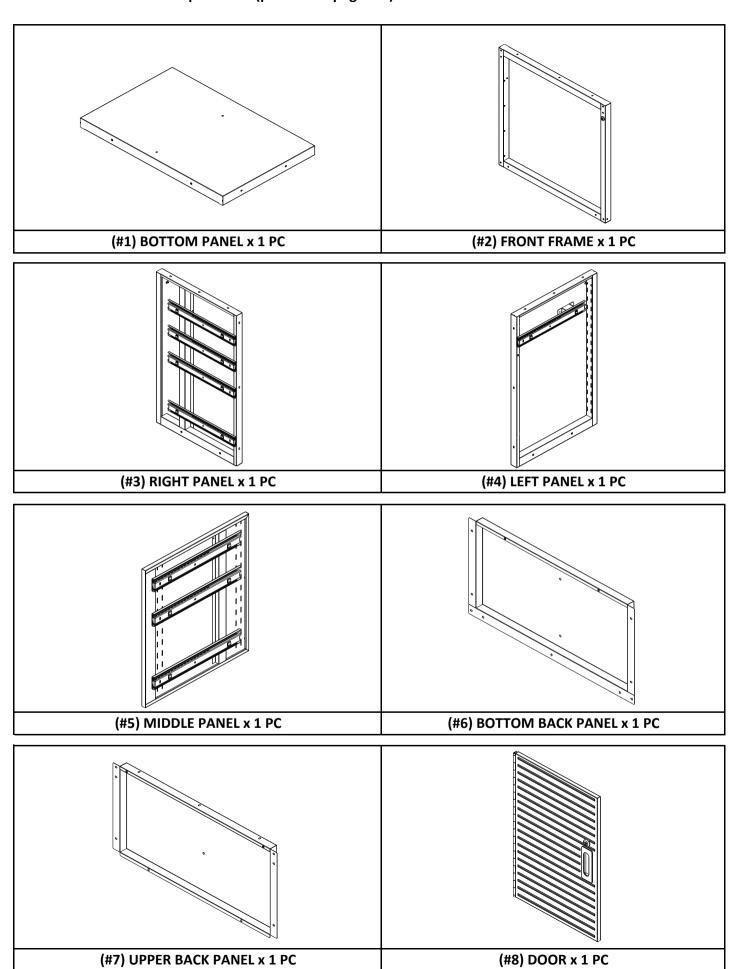

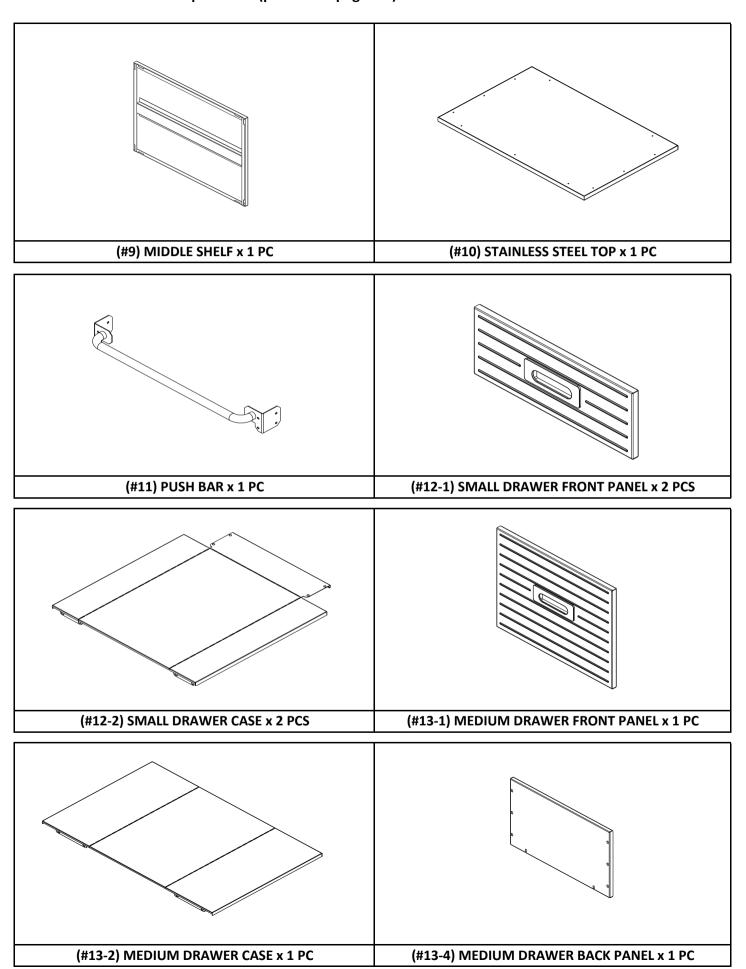

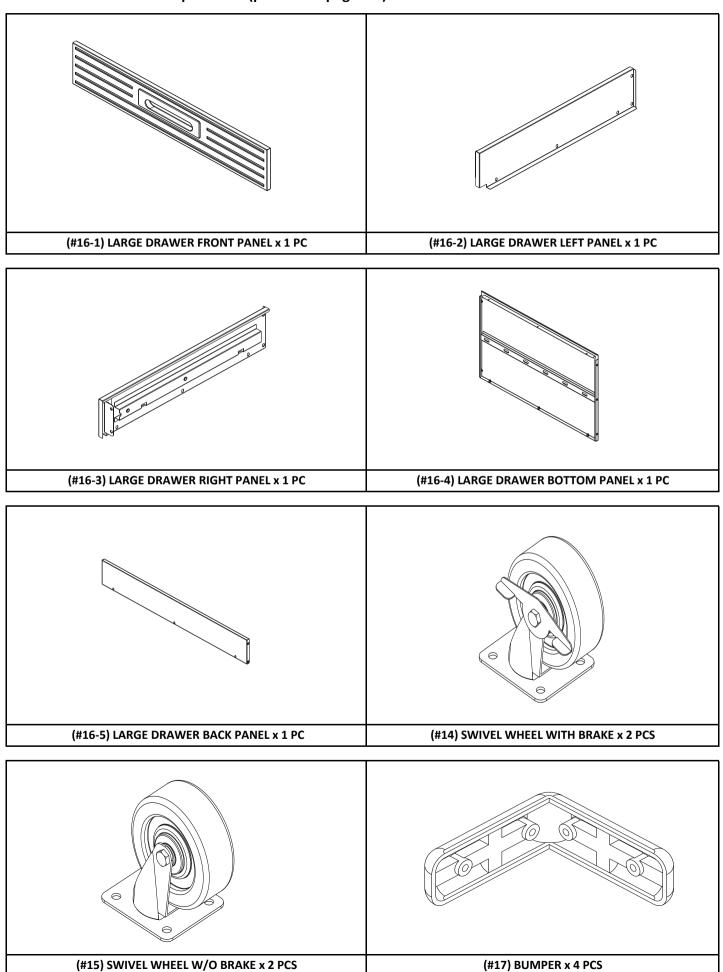

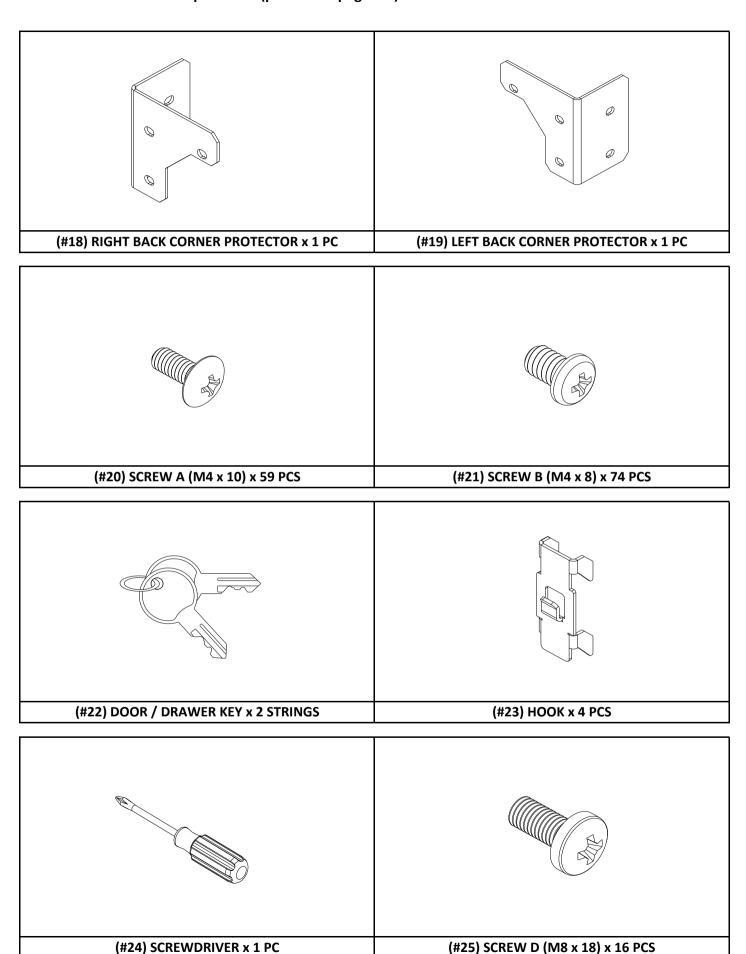

Please check the parts carefully according to the parts list. If you are missing any parts, please contact


our customer service department (please see page 17.)

(#26) SCREW C (M4 x 18) x 16 PCS	(#27) Middle Crossbar x 1 PC
With the state of	
(#28) LARGE DRAWER MAT x 1 PC	(#29) SMALL DRAWER MAT x 3 PCS



\*NOTE: We recommend using TWO people to assemble the cabinet.




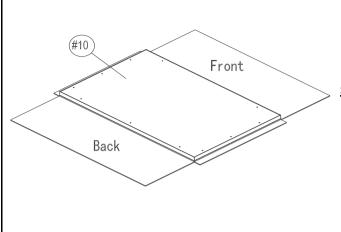

TIP: A magnetic screwdriver is included for your convenience. If a power screwdriver is used, keep torque setting on LOW.

**Step 1.** Open the package. Remove and place all parts to the side. Then open the package of the Stainless Steel Top (#10).


NOTE: The Stainless Steel Top is packed within an inner cardboard box. Assemble on top of the cardboard to help avoid scratching the stainless steel top

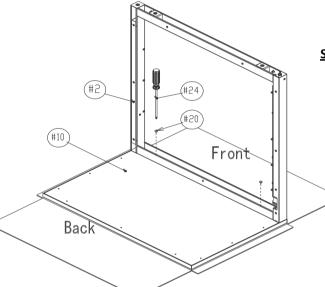

#### Step 2. Install Front Frame (#2)

Locate the Front Frame (#2) and attach to the "Front" of the Stainless Steel Top (#10) using Screwdriver (#24) and Screw A (#20).

NOTE: The screw holes have some tolerance so make sure that the top and sides of the Front Frame are flushed with the Stainless Steel Top - this may save time by avoiding having to make slight adjustments later.

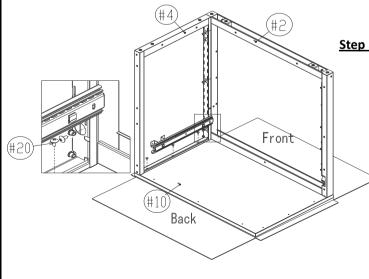


#### Step 3. Install the Left Panel (#4)

Attach the Left Panel (#4) to Front Frame (#2) and Stainless Steel Top (#10). Make sure the "Top" of the Left Panel (#4) is on the Stainless Steel Top (#10) and the screw holes are lined up to the Front Frame (#2). Use Screwdriver (#24) and Screw A (#20) to tighten the Left Panel (#4) to the Front Frame (#2) and Stainless Steel Top (#10).



\*NOTE: We recommend using TWO people to assemble the cabinet.



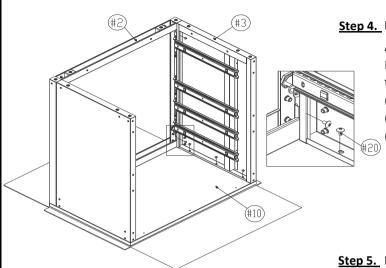


#### Step 4. Install the Right Panel (#3)

Attach the Right Panel (#3) to Front Frame (#2). Make sure the "Top" of the Right Panel (#3) is on the Stainless Steel Top (#10). Use Screwdriver (#24) and Screw A (#20) to tighten the Right Panel (#3) to the Front Frame (#2) and Stainless Steel Top (#10).

#### Step 5. Install the Upper Back Panel (#7) and **Bottom Back Panel (#6)**


A. Attach the Upper Back Panel (#7) between the Left Panel (#4) and Right Panel (#3). Make sure the "Top" of the Upper Back Panel (#7) is on the Stainless Steel Top (#10) as the sticker indicates. Line up the screw holes and use Screw A (#20) to tighten up the Upper Back Panel to the Stainless Steel Top (#10), Left Panel (#4) and Right Panel (#3).

B. Attach Bottom Back Panel (#6) between the Left Panel (#4) and Right Panel (#3). Make sure the "Top" of the Bottom Back Panel (#6) is on the Upper Back Panel (#7) as the sticker indicates. Line up the screw holes and use Screw A (#20) to tighten the Bottom Back Panel (#6) to the Upper Back Panel (#7), Left Panel (#4) and Right Panel (#3).

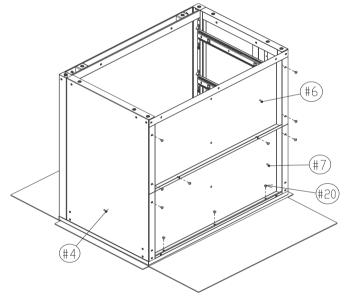

#### Step 6. Install the Bottom Panel (#1).


Attach the Bottom Panel (#1) to the Left Panel (#4), Right Panel (#3), Front Frame (#2) and Bottom Back Panel (#6). Line up the screw holes and use Screw A (#20) to tighten.

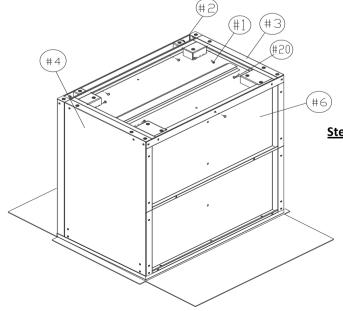




\*NOTE: We recommend using TWO people to assemble the cabinet.



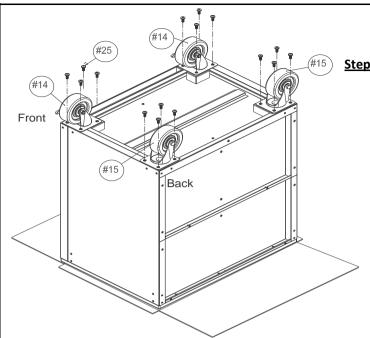


#### Step 7. Install Wheels (#14 and #15)

Attach Wheels (#14 and #15) to the Bottom Panel (#1) and surrounding frame. Make sure the Swivel Wheels with Brake are installed at the front side. Use Screw D (#25) to tighten them.



#### Step 8. Install Bumpers (#17)

Attach Bumpers (#17) to the bottom four corners of the cabinet. Use Screw C (#26) to tighten them.

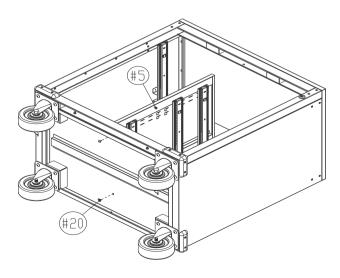

#### Step 9. Install the Middle Panel (#5)


Install the middle panel as the left photo show. Use 2 pcs of Screw A (#20) to tighten with the Bottom Panel (#1).





\*NOTE: We recommend using TWO people to assemble the cabinet.



Lift the Storage Cabinet upright, fix the Middle Panel (#5) with the Upper and Bottom Back Panel (#6 & #7) using 3 pcs of Screw A (#20) to tighten.

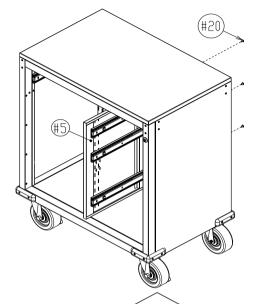

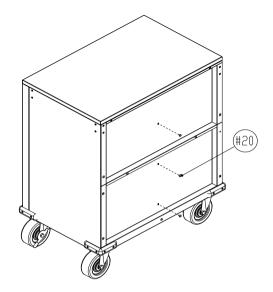


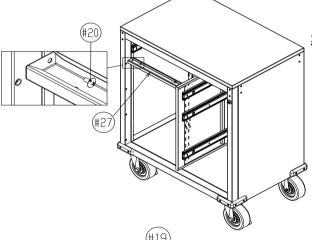

#### Step 10. Install Middle Crossbar (#27)

Install the Middle Crossbar (#27) with the Left Panel (#4) and Middle Panel (#5) as the left photo shows. Use Screw A (#20) to tighten.

Note: Make sure the inner side of the Middle Crossbar is facing upward.

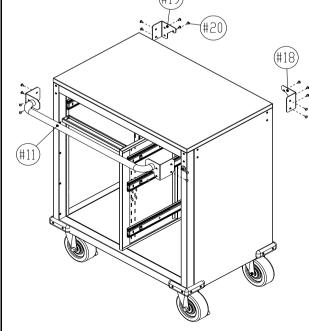


#### Step 11. Attach the Push Bar (#11) and Back Corner Protection (#18 and #19)

Attach the Push Bar (#11) to the front side of the cabinet. Use 8 pcs of Screw A (#20) to tighten. Then attach the Right Back Corner Protection (#18) to the right side of the cabinet and Left Back Corner Protection (#19) to the left side of the cabinet. Use 10 pcs of Screw A (#20) to tighten them.




\*NOTE: We recommend using TWO people to assemble the cabinet.



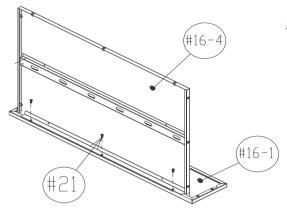


#### Step 12: Install Large Drawer Base Panel (#16-4)

Fit and attach Large Drawer Base Panel (#16-4) into the back slot of stainless steel Drawer Front (#16-1), use Screw B (#21) to tighten.

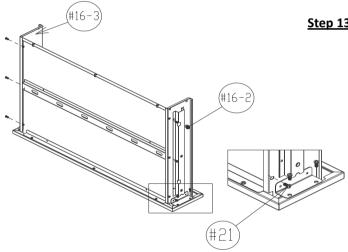

#### Step 13: Install Large Drawer Side Panel (#16-2 & #16-3)

Attach Large Drawer Side Panels (#16-2 and #16-3) to the back of Drawer Front (#12-1). Make sure the Drawer Side Panels (#12-2 and #12-3) are placed all the way into the slot, making contact with the inner wall of the front panel. Line up the screw holes and use Screw B (#21) to tighten them.

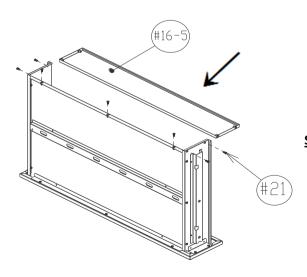


#### Step 14: Install Large Drawer Back Panel (#16-5).

Attach the Large Drawer Back Panel (#16-5) to the rest of the assembled drawer. Use Screw B (#21) to tighten.



\*NOTE: We recommend using TWO people to assemble the cabinet.



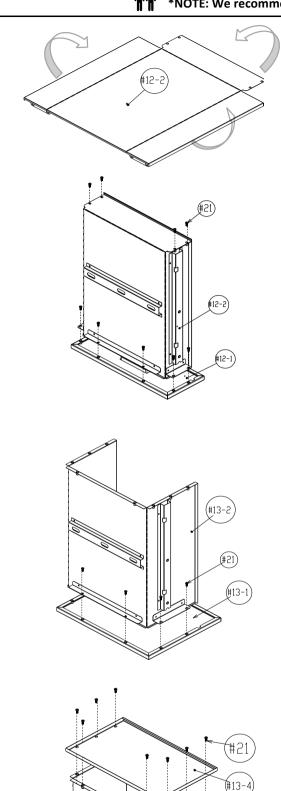

#### Step 15. Install Small Drawer (#12)

Fold up all three panels of the Small Drawer Case (#12-2), slide the Left and Right Drawer Panel into Small Drawer Front panel (#12-1) use Screw B (#21) to tighten the drawer.

Repeat Step 15 to assemble 2<sup>nd</sup> small drawer.

#### Step 16. Install Medium Drawer (#13)


Fold up all three panels of the Medium Drawer Case (#13-2), slide the Left and Right Drawer Panel into Medium Drawer Front panel (#13-1) use Screw B (#21) to tighten the drawer

Attach the Medium Drawer Back Panel (#13-4) to the folded drawer panel, use 8pcs Screw B (#21) to tighten.



\*NOTE: We recommend using TWO people to assemble the cabinet.




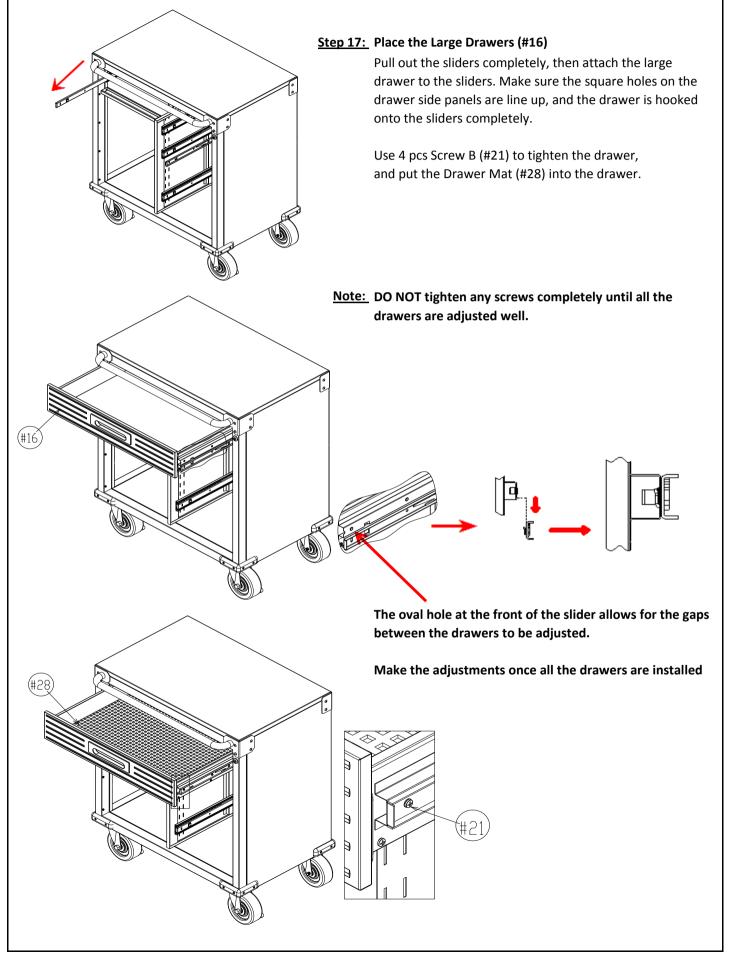



\*NOTE: We recommend using TWO people to assemble the cabinet.



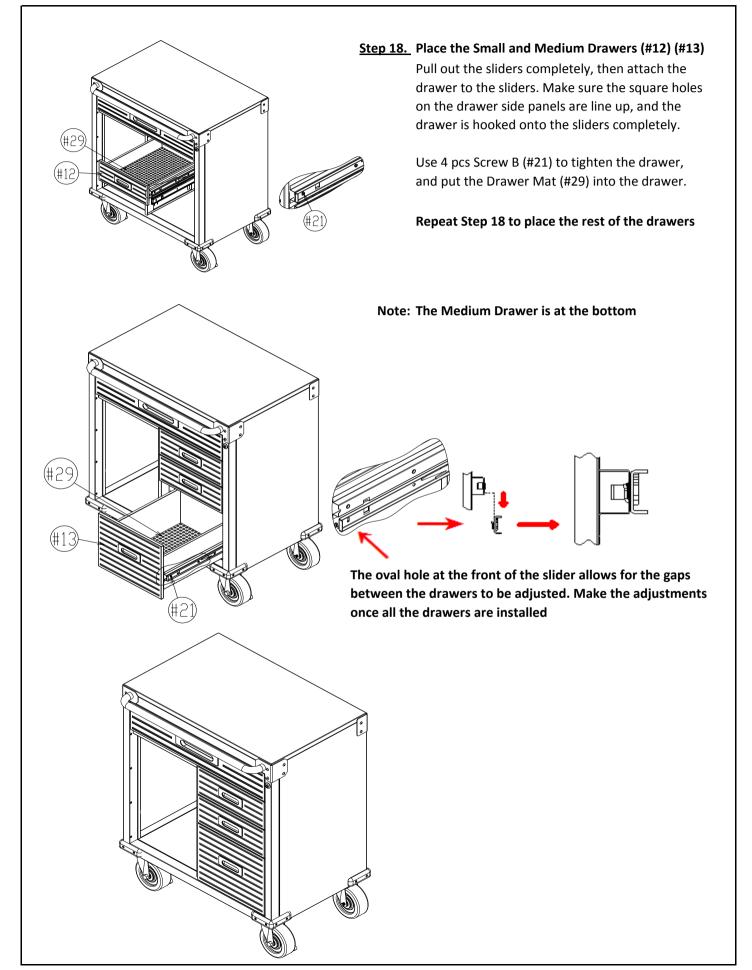



\*NOTE: We recommend using TWO people to assemble the cabinet.





#### Step 19. Install the Shelf(#9).


A. Decide the height for each Middle Shelf (#9), place the Hooks (#23) into the hook slot and push down. Note: The Middle Shelf has 4 Hooks at four corners for support. Place the 4 Hooks at the four corners and make sure they are the same height.

B. Place the Middle Shelf (#9) into the cabinet and push down onto the Hooks (#23).

Purchase additional shelves (Model #: UHD20205S) on SevilleClassics.com.

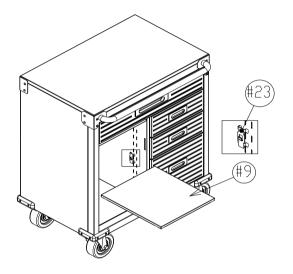

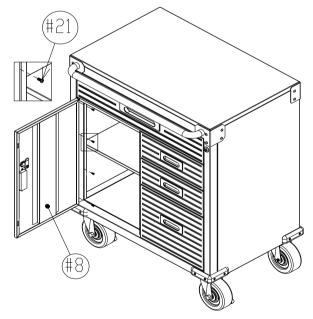

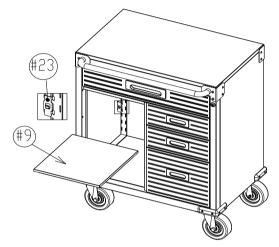

Step 20. Install the Door Panel (#8) Attach the Door (#8) to the unit using Screw B (#21) to tighten.

Note: The screw holes on the door hinge have tolerance, enabling the door to be adjusted and centered in the door frame.

#### **UltraHD® Stainless Steel Care Instructions**

The stainless steel is protected with UltraGuard fingerprint resistant finish. DO NOT use traditional stainless-steel cleaners.

To safely manage unwanted fingerprints and prevent new stains, perform the following steps once monthly:

- Lightly wipe with warm water and clean microfiber cloth
- Always wipe in the direction of the surface grain (NEVER ACROSS)
- Wipe away excess water with dry clean cloth

#### CONTACT INFORMATION

If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:



Seville Classics, Inc.

19401 Harborgate Way Torrance, CA 90501 USA

Telephone: (800) 323-5565 within USA

Fax: (310) 533-3899


Hours: 9:00am - 4:30pm (Pacific Standard Time)

E-mail: support@sevilleclassics.com

Website & Online Store: www.sevilleclassics.com

\*\*\*Please visit our website or call and inquire about our additional UltraHD Line\*\*\*

# **UltraHD® Line**

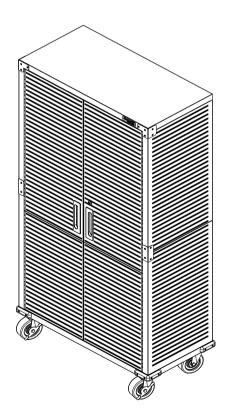


**UltraHD® Tall Storage Cabinet** 

Model No. 16236 (Granite)

Model No. 20143 (Graphite)

**Model No. 20153 (Red)** 

Model No. 20133 (White)

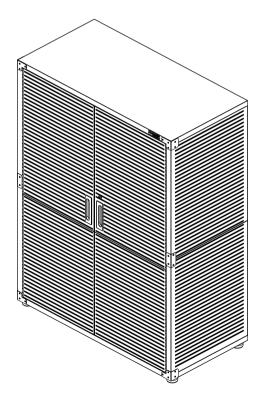


**UltraHD® Mega Storage Cabinet** Model No. 16238 (Granite)


Model No. 20148 (Graphite)

**Model No. 20158 (Red)** 


# **UltraHD®** Line

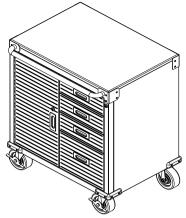


UltraHD® 4-Drawer Rolling Cabinet Model No. 20205 (Granite)

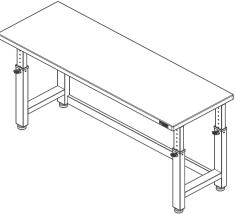


UltraHD® 6-Foot Height Adjustable Workbench Model No. 20292 (Granite)

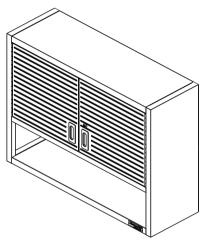

UltraHD® Wall Cabinet with Open Shelf Model No. 20230 (Granite) Model No. 20140 (Graphite) Model No. 20150 (Red)

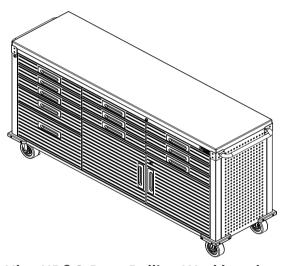

UltraHD® 2-Door Rolling Workbench Model No. 20262 (Granite) Model No. 20142 (Graphite) Model No. 20152 (Red)



UltraHD® Rolling Trash Bin Model No. 20215



UltraHD<sup>®</sup> Lighted Workcenter Model No. 20247 (Granite) Model No. 20246 (Graphite) Model No. 20157 (Red)