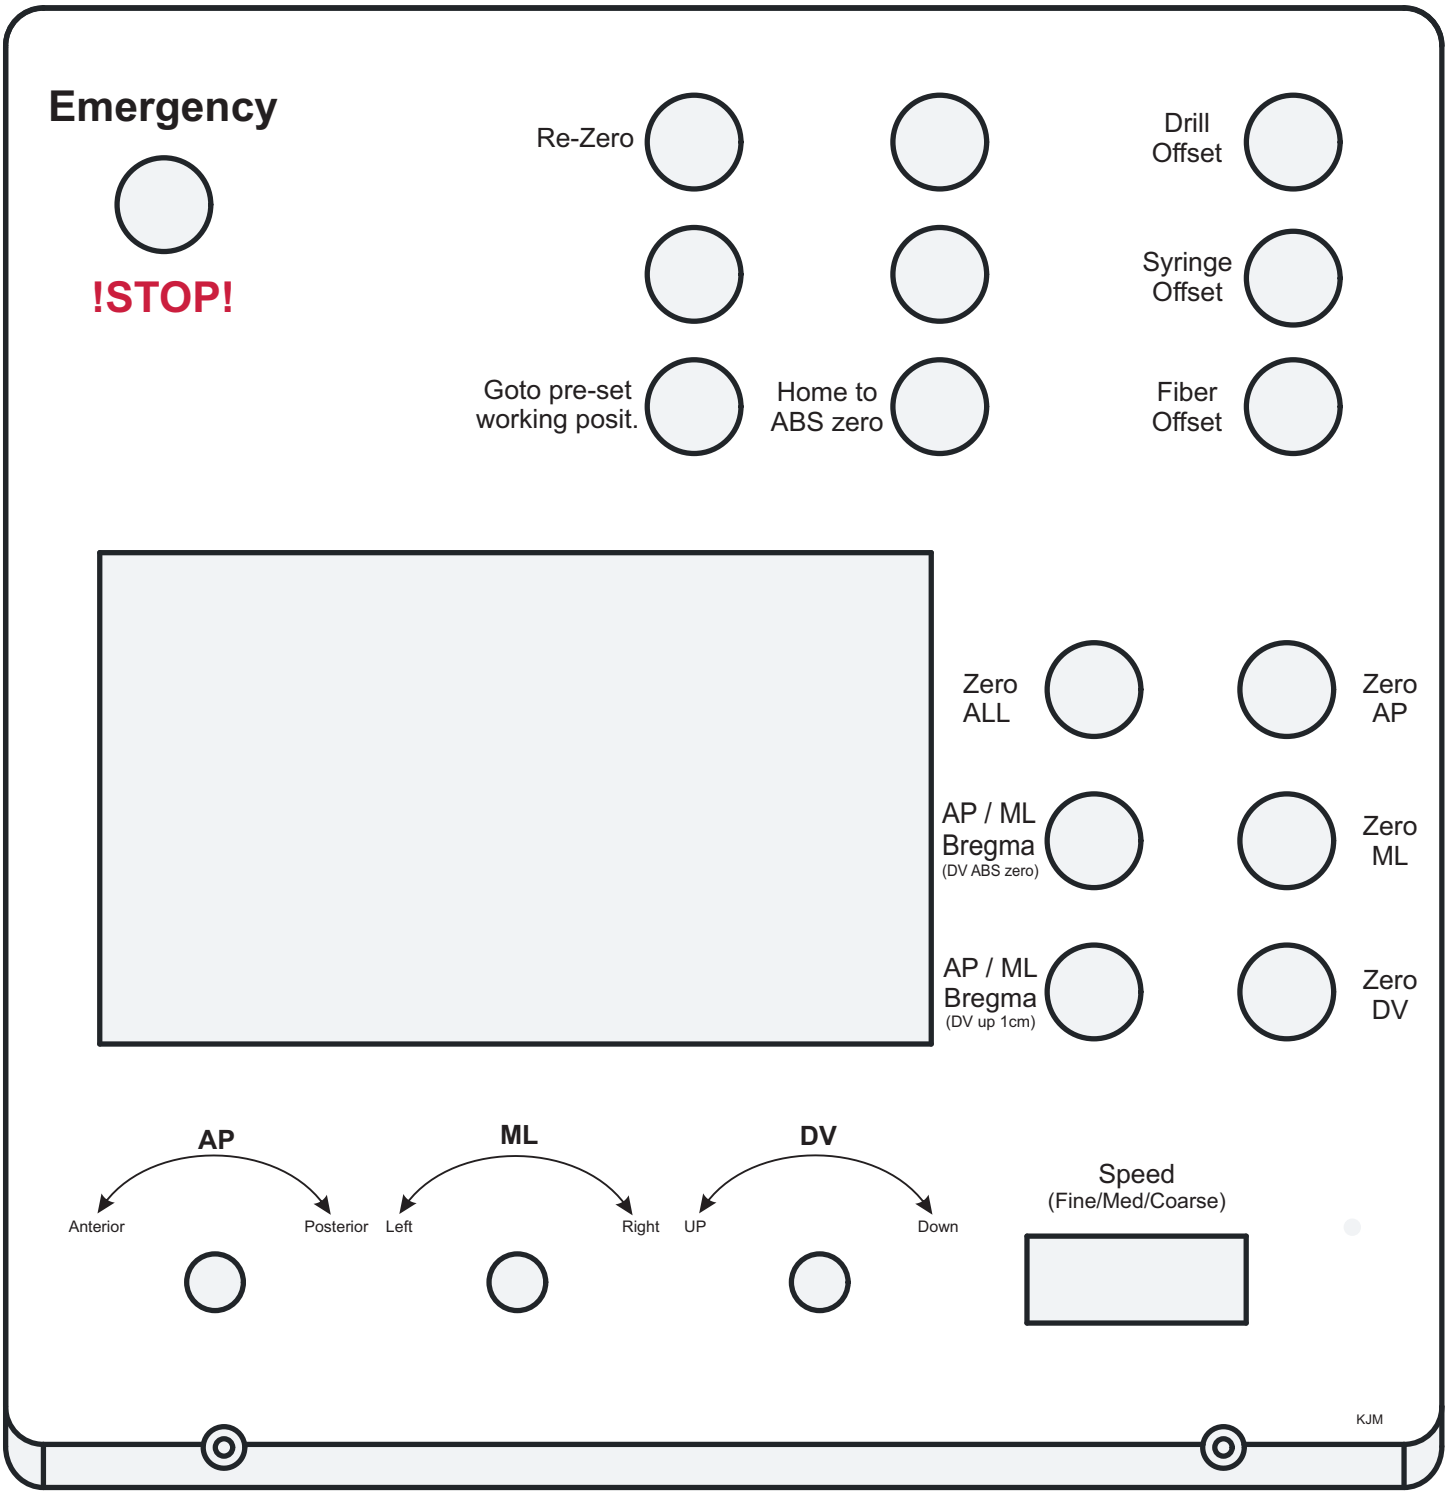
Emergency
!STOP!
Re-Zero
Drill Offset
Syringe Offset
Goto pre-set working posit.
Home to ABS zero
Fiber Offset
Zero ALL
Zero AP
AP / ML Bregma
(DV ABS zero)
Zero ML
AP / ML Bregma
(DV up 1cm)
Zero DV
AP
Anterior
Posterior
ML
Left
Right
DV
UP
Down
Speed
(Fine/Med/Coarse)
KJM