```
S. Jiang, Ed.
Softwire
Internet-Draft
                                            Huawei Technologies Co., Ltd
Intended status: Standards Track
                                                               Y. Fu. Ed.
Expires: November 15, 28, 2019
                                                                        CNNIC
                                                                   B Lin
                                            Huawei Technologies Co., Ltd
                                                                P. Deacon
                                                      IEA Software, In
                                                                   C. Xie
                                                           China Telecom
                                                      Tsinghua University
                                                       M. Boucadair, Ed.
                                                                  Orange
                                                             May 14, 27, 2019
```

RADIUS Attributes for Address plus Port (A+P) based Softwire Mechanisms draft-ietf-softwire-map-radius-23

Abstract

IPv4-over-IPv6 transition mechanisms provide IPv4 connectivity services over IPv6 native networks during the IPv4/IPv6 co-existence period. DHCPv6 options have been defined for configuring clients for Lightweight 4over6, Mapping of Address and Port with Encapsulation, and Mapping of Address and Port using Translation unicast softwire mechanisms, and also multicast softwires. However, in many networks, configuration information is stored in an Authentication, Authorization, and Accounting server which utilizes the RADIUS protocol to provide centralized management for users. When a new transition mechanism is developed, new RADIUS attributes need to be defined correspondingly.

This document defines new RADIUS attributes to carry Address plus Port based softwire configuration parameters from an Authentication, Authorization, and Accounting server to a Broadband Network Gateway. Both unicast and multicast attributes are covered.

Status of This Memo

This Internet-Draft is submitted in full conformance with the provisions of BCP 78 and BCP 79.

Internet-Drafts are working documents of the Internet Engineering Task Force (IETF). Note that other groups may also distribute working documents as Internet-Drafts. The list of current Internet-Drafts is at https://datatracker.ietf.org/drafts/current/.

Internet-Drafts are draft documents valid for a maximum of six months and may be updated, replaced, or obsoleted by other documents at any time. It is inappropriate to use Internet-Drafts as reference material or to cite them other than as "work in progress."

This Internet-Draft will expire on November 15, 28, 2019.

Copyright Notice

Copyright (c) 2019 IETF Trust and the persons identified as the document authors. All rights reserved.

This document is subject to BCP 78 and the IETF Trust's Legal Provisions Relating to IETF Documents (https://trustee.ietf.org/license-info) in effect on the date of publication of this document. Please review these documents carefully, as they describe your rights and restrictions with respect to this document. Code Components extracted from this document must include Simplified BSD License text as described in Section 4.e of the Trust Legal Provisions and are provided without warranty as described in the Simplified BSD License.

Table of Contents

2. Terminology	1.	Introduction		
3.1. Softwire46-Configuration Attribute	2.	Terminology		
3.1.1. Softwire46 Attributes	3.	New RADIUS A	ttributes 6	
3.1.1.1 Softwire46-MAP-E Attribute 10 3.1.1.2 Softwire46-MAP-T Attribute 10 3.1.1.3 Softwire46-Lightweight-4over6 Attribute 11 3.1.2 Softwire46 Sub-Attributes 11 3.1.3 Specification of the Softwire46 Sub-Attributes 12 3.1.3.1 Softwire46-Rule Attribute 12 3.1.3.2 Softwire46-BR Attribute 13 3.1.3.3 Softwire46-DMR Attribute 13 3.1.3.4 Softwire46-DMR Attribute 14 3.1.3.5 Softwire46-PORTPARAMS Attribute 14 3.1.4 Sub-Attributes for Softwire46-Rule 15 3.1.4.1 Rule-IPv6-Prefix Attribute 15 3.1.4.2 Rule-IPv4-Prefix Attribute 16 3.1.4.3 EA-Length Attribute 16 3.1.5 Attributes for Softwire46-V4V6Bind 17 3.1.5.2 Bind-IPv6-Prefix Attribute 17 3.1.5.2 Bind-IPv6-Prefix Attribute 17 3.1.5.2 Bind-IPv6-Prefix Attribute 17 3.1.6 Attributes for S46-PORTPARAMS 18 3.1.6.1 PSID offset PSID-Offset Attribute 19 3.1.6.3 PSID Attribute 19	3	.1. Softwire	46-Configuration Attribute 7	
3.1.1.2. Softwire46-MAP-T Attribute 10 3.1.1.3. Softwire46-Lightweight-4over6 Attribute 11 3.1.2. Softwire46 Sub-Attributes		3.1.1. Soft	wire46 Attributes	
3.1.1.3. Softwire46-Lightweight-4over6 Attribute 11 3.1.2. Softwire46 Sub-Attributes 11 3.1.3. Specification of the Softwire46 Sub-Attributes 12 3.1.3.1. Softwire46-Rule Attribute 12 3.1.3.2. Softwire46-BR Attribute 13 3.1.3.3. Softwire46-DMR Attribute 14 3.1.3.5. Softwire46-PORTPARAMS Attribute 14 3.1.4. Sub-Attributes for Sofwire46-Rule 15 3.1.4.1. Rule-IPv6-Prefix Attribute 15 3.1.4.2. Rule-IPv4-Prefix Attribute 16 3.1.4.3. EA-Length Attribute 16 3.1.5. Attributes for Softwire46-v4v6Bind 17 3.1.5.1. IPv4-address IPv4-Address Attribute 17 3.1.5.2. Bind-IPv6-Prefix Attribute 17 3.1.6. Attributes for S46-PORTPARAMS 118 3.1.6.1. PSID offset PSID-Offset Attribute 18 3.1.6.2. PSID-len PSID-Len Attribute 19		3.1.1.1.	Softwire46-MAP-E Attribute 10	
3.1.2. Softwire46 Sub-Attributes		3.1.1.2.	Softwire46-MAP-T Attribute 10	
3.1.3. Specification of the Softwire46 Sub-Attributes 12 3.1.3.1. Softwire46-Rule Attribute 12 3.1.3.2. Softwire46-BR Attribute 13 3.1.3.3. Softwire46-DMR Attribute 13 3.1.3.4. Softwire46-V4V6Bind Attribute 14 3.1.3.5. Softwire46-PORTPARAMS Attribute 14 3.1.4. Sub-Attributes for Softwire46-Rule 15 3.1.4.1. Rule-IPv6-Prefix Attribute 15 3.1.4.2. Rule-IPv4-Prefix Attribute 16 3.1.4.3. EA-Length Attribute 16 3.1.5. Attributes for Softwire46-v4v6Bind 17 3.1.5. IPv4-address IPv4-Address Attribute 17 3.1.5.2. Bind-IPv6-Prefix Attribute 17 3.1.6. Attributes for S46-PORTPARAMS 18 3.1.6.1. PSID offset PSID-Offset Attribute 18 3.1.6.2. PSID-len PSID-Len Attribute 19 3.1.6.3. PSID Attribute 19		3.1.1.3.	Softwire46-Lightweight-4over6 Attribute 11	
3.1.3.1. Softwire46-Rule Attribute		3.1.2. Soft	wire46 Sub-Attributes	
3.1.3.2. Softwire46-BR Attribute		3.1.3. Spec	ification of the Softwire46 Sub-Attributes 12	
3.1.3.3. Softwire46-DMR Attribute		3.1.3.1.	Softwire46-Rule Attribute	
3.1.3.4. Softwire46-V4V6Bind Attribute		3.1.3.2.	Softwire46-BR Attribute	
3.1.3.5. Softwire46-PORTPARAMS Attribute		3.1.3.3.	Softwire46-DMR Attribute	
3.1.4. Sub-Attributes for Sofwtire46-Rule		3.1.3.4.	Softwire46-V4V6Bind Attribute 14	
3.1.4.1. Rule-IPv6-Prefix Attribute		3.1.3.5.	Softwire46-PORTPARAMS Attribute	
3.1.4.2. Rule-IPv4-Prefix Attribute 16 3.1.4.3. EA-Length Attribute 16 3.1.5. Attributes for Softwire46-v4v6Bind 17 3.1.5.1. IPv4-address IPv4-Address Attribute 17 3.1.5.2. Bind-IPv6-Prefix Attribute 17 3.1.6. Attributes for S46-PORTPARAMS 18 3.1.6.1. PSID offset PSID-Offset Attribute 18 3.1.6.2. PSID-len PSID-Len Attribute 19 3.1.6.3. PSID Attribute 19		3.1.4. Sub-	Attributes for Sofwtire46-Rule 15	
3.1.4.3. EA-Length Attribute		3.1.4.1.	Rule-IPv6-Prefix Attribute 15	
3.1.5. Attributes for Softwire46-v4v6Bind		3.1.4.2.	Rule-IPv4-Prefix Attribute 16	
3.1.5.1. IPv4-address IPv4-Address Attribute		3.1.4.3.	EA-Length Attribute	
3.1.5.2. Bind-IPv6-Prefix Attribute		3.1.5. Att	ibutes for Softwire46-v4v6Bind	
3.1.6. Attributes for S46-PORTPARAMS		3.1.5.1.	IPv4-address IPv4-Address Attribute	17
3.1.6.1. PSID-offset PSID-Offset Attribute		3.1.5.2.	Bind-IPv6-Prefix Attribute 17	
3.1.6.2. PSID-len PSID-Len Attribute		3.1.6. Att	ibutes for S46-PORTPARAMS	
3.1.6.3. PSID Attribute		3.1.6.1.	PSID offset PSID-Offset Attribute	18
		3.1.6.2.	PSID-len PSID-Len Attribute	
3 2 Softwire46-Driority Attribute 20		3.1.6.3.	PSID Attribute	
	3	2 Softwire	46-Priority Attribute 20	

3.2.1. Softwire46-Option-Code	
3.3. Softwire46-Multicast Attribute	
3.3.1. ASM-Prefix64 Attribute	
3.3.2. SSM-Prefix64 Attribute	
3.3.3. U-Prefix64 Attribute	
4. A Sample Configuration Process with RADIUS 24	
5. Table of Attributes	
6. Security Considerations	
7. IANA Considerations	
7.1. New RADIUS Attributes	
7.2. RADIUS Softwire46 Configuration and Multicast Attributes 29	
7.3. Softwire46 Mechanisms and Their Identifying Option Codes 30	
8. Contributing Authors	
9. Acknowledgements	3:
10. References	
10.1. Normative References	
10.2. Informative References	34
Appendix A. DHCPv6 to RADIUS Field Mappings	
A.1. OPTION_S46_RULE (89) to Softwire46-Rule Sub-TLV Field	
Mappings	
A.2. OPTION_S46_BR (90) to Softwire46-BR Field Mappings 35	
A.3. OPTION_S46_DMR (91) to Softwire46-DMR	
A.4. OPTION_S46_V4V6BIND (92) to Softwire46-V4V6Bind 35	- 30
A.5. OPTION_S46_PORTPARAMS (93) to Softwire46-PORTPARAMS Field	
Mappings	
A.6. OPTION_S46_PRIORITY (111) to Softwire46-PORTPARAMS Field	
Mappings	
A.7. OPTION_V6_PREFIX64 (113) to Softwire46-Multicast	
Attribute Field Mappings	
Authors' Addresses	

1. Introduction

Providers have started deploying and transitioning to IPv6. Several IPv4 service continuity mechanisms based on the Address plus Port (A+P) [RFC6346] have been proposed for providing unicast IPv4 over IPv6-only infrastructure, such as Mapping of Address and Port with Encapsulation (MAP-E) [RFC7597], Mapping of Address and Port using Translation (MAP-T) [RFC7599], and Lightweight 4over6 [RFC7596]. Also, [RFC8114] specifies a generic solution for the delivery of IPv4 multicast services to IPv4 clients over an IPv6 multicast network. For each of these mechanisms, DHCPv6 options have been specified for client configuration.

In many networks, user configuration information is stored in an Authentication, Authorization, and Accounting (AAA) server. AAA servers generally communicate using the Remote Authentication Dial In User Service (RADIUS) [RFC2865] protocol. In a fixed broadband network, a Broadband Network Gateway (BNG) acts as the access gateway for users. That is, the BNG acts as both an AAA client to the AAA server, and a DHCPv6 server for DHCPv6 messages sent by clients. Throughout this document, the term BNG describes a device implementing both the AAA client and DHCPv6 server functions.

Since IPv4-in-IPv6 softwire configuration information is stored in an AAA server, and user configuration information is mainly transmitted through DHCPv6 protocol between the BNGs and Customer Premises Equipment (CEs, a.k.a., CPE), new RADIUS attributes are needed to propagate the information from the AAA servers to BNGs.

The RADIUS attributes defined in this document provide configuration to populate the corresponding DHCPv6 options for unicast and multicast softwire configuration, specifically:

- o "Mapping of Address and Port with Encapsulation (MAP-E)" [RFC7597] (DHCPv6 options defined in [RFC7598].
- o "Mapping of Address and Port using Translation (MAP-T)" [RFC7599] (DHCPv6 options defined in [RFC7598].
- o "Lightweight 4over6: An Extension to the Dual-Stack Lite Architecture" [RFC7596] (DHCPv6 options defined in [RFC7598].
- o "Unified IPv4-in-IPv6 Softwire Customer Premises Equipment (CPE): A DHCPv6-Based Prioritization Mechanism" [RFC8026].
- o "Delivery of IPv4 Multicast Services to IPv4 Clients over an IPv6 Multicast Network" [RFC8114] (DHCPv6 options defined in [RFC8115].

The contents of the attributes defined in this document have a 1:1 mapping into the fields of the various DHCPv6 options in [RFC7598], [RFC8026], and [RFC8115]. Table 1 shows how the DHCPv6 options map to the corresponding RADIUS attribute. For detailed mappings between each DHCPv6 option field and the corresponding RADIUS Attribute or field, see Appendix A.

+		+	
DHCPv6 Option	RADIUS Attribute		
OPTION_S46_RULE (89) OPTION_S46_BR (90)	Softwire46-Rule Softwire46-BR	+	
OPTION_S46_DMR (91) OPTION_S46_V4V6BIND (92)	Softwire46-DMR Softwire46 v4v6Bind S	 oftwire46-V4V6Bind	
OPTION_S46_PORTPARAMS (93) OPTION_S46_PRIORITY (111)	Softwire46-PORTPARAMS Softwire46-Priority Attribute		
OPTION_V6_PREFIX64 (113)	Softwire46-Multicast Attribute	+	

Table 1: Mapping between DHCPv6 Options and RADIUS Attributes

A RADIUS attribute for Dual-Stack Lite [RFC6333] is defined in

[RFC6519].

2. Terminology

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "NOT RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as described in [RFC2119] [RFC8174] when, and only when, they appear in all capitals, as shown here.

The reader should be familiar with the concepts and terms defined in [RFC7596], [RFC7597], [RFC7599], and [RFC8026].

The terms "multicast Basic Bridging BroadBand" element (mB4) and "multicast Address Family Transition Router" element (mAFTR) are defined in [RFC8114].

Softwire46 (S46) is used throughout to denote any of the IPv4-in-IPv6 softwire mechanisms listed above. Additionally, the following abbreviations are used within the document:

- o BMR: Basic Mapping Rule
- o BNG: Broadband Network Gateway
- o BR: Border Relay
- o CE: Customer Edge
- o DMR: Default Mapping Rule
- o EA: Embedded Address
- o FMR: Forwarding Mapping Rule
- o PSID: Port Set Identifier
- o TLV: Type, Length, Value
- o MAP-E: Mapping of Address and Port with Encapsulation
- o MAP-T: Mapping of Address and Port using Translation

3. New RADIUS Attributes

This section defines the following attributes:

1. Softwire46-Configuration Attribute (Section 3.1):

This attribute carries the configuration information for MAP-E, MAP-T, and Lightweight 4over6. The configuration information for each Softwire46 mechanism is carried in the corresponding Softwire46 attributes. Different attributes are required for each Softwire46 mechanism.

2. Softwire46-Priority Attribute (Section 3.2):

Depending on the deployment scenario, a client may support several different Softwire46 mechanisms and so request configuration for more than one Softwire46 mechanism at a time. The Softwire46-Priority Attribute contains information allowing the client to prioritize which mechanism to use, corresponding to OPTION_S46_PRIORITY defined in [RFC8026].

3. Softwire46-Multicast Attribute (Section 3.3):

This attribute conveys the IPv6 prefixes to be used in [RFC8114] to synthesize IPv4-embedded IPv6 addresses. The BNG uses the IPv6 prefixes returned in the RADIUS Softwire46-Multicast Attribute to populate the DHCPv6 PREFIX64 Option [RFC8115].

All of these attributes are allocated from the RADIUS "Extended Type" code space per [RFC6929].

All of these attribute designs follow [RFC6158] and [RFC6929].

This document adheres to [RFC8044] for defining the new RADIUS attributes.

3.1. Softwire46-Configuration Attribute

This attribute is of type "tlv", as defined in the RADIUS Protocol Extensions [RFC6929]. It contains some sub-attributes, with the following requirements:

The Softwire46-Configuration Attribute MUST contain one or more of the following attributes: Softwire46-MAP-E, Softwire46-MAP-T, and/or Softwire46-Lightweight-4over6.

The Softwire46-Configuration Attribute conveys the configuration information for MAP-E, MAP-T, or Lightweight 4over6. The BNG SHALL use the configuration information returned in the RADIUS attribute to populate the DHCPv6 Softwire46 Container Option defined in Section 5 of [RFC7598].

The Softwire46-Configuration Attribute MAY appear in an Access-Accept packet. It MAY also appear in an Access-Request packet to indicate a preferred Softwire46 configuration. However, the server is not required to honor such a preference.

The Softwire46-Configuration Attribute MAY appear in a CoA-Request packet.

The Softwire46-Configuration Attribute MAY appear in an Accounting-Request packet.

The Softwire46-Configuration Attribute MUST NOT appear in any other RADIUS packet.

The Softwire46-Configuration Attribute MUST only encapsulate one or more of the Softwire46 attributes defined in this document.

The Softwire46-Configuration Attribute is structured as follows:

Type

241 (To be confirmed by IANA).

Length

Indicates the total length, in bytes, of all fields of this attribute, including the Type, Length, Extended-Type, and the entire length of the embedded attributes.

Extended-Type

TBD1

Value

Contains one or more of the following attributes. Each attribute type may appear at most once:

Softwire46-MAP-E

For configuring MAP-E clients. For the construction of this attribute, refer to Section 3.1.1.1.

Softwire46-MAP-T

For configuring MAP-T clients. For the construction of this attribute, refer to Section 3.1.1.2.

Softwire46-Lightweight-4over6

For configuring Lightweight 4over6 clients. For the construction of this attribute, refer to Section 3.1.1.3.

The Softwire46-Configuration Attribute is associated with the following identifier: 241.Extended-Type(TBD1).

3.1.1. Softwire46 Attributes

The Softwire46 attributes can only be encapsulated in the Softwire46-Configuration Attribute. Depending on the deployment scenario, a client might request for more than one transition mechanism at a time. There MUST be at least one Softwire46 attribute encapsulated in one Softwire46-Configuration Attribute. There MUST be at most one instance of each type of Softwire46 attribute encapsulated in one Softwire46-Configuration Attribute.

There are three types of Softwire46 attributes, namely:

- 1. Softwire46-MAP-E (Section 3.1.1.1)
- 2. Softwire46-MAP-T (Section 3.1.1.2)
- 3. Softwire46-Lightweight 4over6 (Section 3.1.1.3)
 Each type of Softwire46 attribute contains a number of subattributes, defined in Section 3.1.3. The hierarchy of the
 Softwire46 attributes is shown in Figure 1. Section 3.1.2 describes
 which sub-attributes are mandatory, optional, or not permitted for
 each defined Softwire46 attribute.

```
/1.Rule-IPv6-Prefix
                        1.Softwire46-Rule
                                                  2.Rule-IPv4-Prefix
f
    Softwire46-MAP-E-
                        2.Softwire46-BR
                                                  3.EA Length
i
                                                       /1.PSID-offset
                                                                                                     /1.PSID-Offset
е
                          Softwire46 PORTPARAMS 3.Softwire46-PORTPARAMS ----+ 2.PSID len 2.PSID-Len
С
                                                        3.PSID
0
n
f
                                                 /1.Rule-IPv6-Prefix
i
                                                  2.Rule-IPv4-Prefix
u
    Softwire46-MAP-T
                                   46 DMR 2.Softwire46-DMR
                                                                 3.EA Length
                                                                                                     /1.PSID-Offset
i
                                                          .PSID-len 3.Softwire46-PORTPARAMS----+ 2.PSID-Len
n
                                                        3.PSID
Α
                                                     /1.IPv4-address
                                                                                                                      /1.IPv4-Address
                        4.Softwire46 v4v6Bind 1.Softwire46-V4V6Bind ----+ 2.Bind-IPv6-Prefix
b
    Softwire46-
                                                       /1.PSID-offset 2.Softwire46-BR
    Lightweight-4over6
                                                                                                     /1.PSID-Offset
u
                                     -PORTPARAMS 3.Softwire46-PORTPARAMS ----+ 2.PSID-len 2.PSID-Len
                                                        3.PSID
```

Figure 1: Softwire46 Attributes Hierarchy

3.1.1.1. Softwire46-MAP-E Attribute

Softwire46-MAP-E attribute is designed for carrying the configuration information for MAP-E. The structure of Softwire46-MAP-E is shown below:

TLV-Type

TLV-Length

Indicates the length of this attribute, including the TLV-Type, TLV-Length, and TLV-Value fields.

TLV-Value

Contains a set of sub-attributes, with the following requirements:

- It MUST contain Softwire46-Rule, defined in Section 3.1.3.1.
- It MUST contain Softwire46-BR, defined in Section 3.1.3.2.
- It MAY contain Softwire46-PORTPARAMS, defined in Section 3.1.3.5.

3.1.1.2. Softwire46-MAP-T Attribute

Softwire46-MAP-T attribute is designed for carrying the configuration information for MAP-T. The structure of Softwire46-MAP-T is shown below:

TLV-Type

TLV-Length

Indicates the length of this attribute, including the TLV-Type, TLV-Length, and TLV-Value fields.

TLV-Value

Contains a set of sub-attributes, with the following requirements:

- It MUST contain Softwire46-Rule, defined in Section 3.1.3.1.
- It MUST contain Softwire46-DMR, defined in Section 3.1.3.3.
- It MAY contain Softwire46-PORTPARAMS, defined in Section 3.1.3.5.

3.1.1.3. Softwire46-Lightweight-4over6 Attribute

Softwire46-Lightweight-4over6 attribute is designed for carrying the configuration information for Lightweight 4over6. The structure of Softwire46-Lightweight-4over6 is shown below:

TLV-Type

TLV-Length

Indicates the length of this attribute, including the TLV-Type, TLV-Length, and TLV-Value fields.

TLV-Value

Contains a set of sub-attributes as follows:

- It MUST contain Softwire46-BR, defined in Section 3.1.3.2.
- It MUST contain Softwire46-V4V6Bind, defined in Section 3.1.3.4.
- It MAY contain Softwire46-PORTPARAMS, defined in Section 3.1.3.5.

3.1.2. Softwire46 Sub-Attributes

Table 2 shows which encapsulated sub-attributes are mandatory, optional, or not permitted for each defined Softwire46 attribute.

+	+	+	+	+
Sub-Attributes	MAP-E	MAP-T	Lightweight 4over6	İ
Softwire46-BR	1	0	1	
Softwire46-Rule	1	1	0	ĺ
Softwire46-DMR	j 0	1	0	İ
Softwire46-V4V6Bind	j 0	j 0	1	İ
Softwire46-PORTPARAMS	0-1	0-1	0-1	ĺ

Table 2: Softwire46 Sub-Attributes

The following table defines the meaning of Table 2 entries.

- 0 Not Permitted
- O-1 Optional, zero or one instance of the attribute may be present.
- Mandatory Mandatory, only one instance of the attribute must be present.
- 3.1.3. Specification of the Softwire46 Sub-Attributes

3.1.3.1. Softwire46-Rule Attribute

Softwire46-Rule can only be encapsulated in Softwire46-MAP-E (Section 3.1.1.1) or Softwire46-MAP-T (Section 3.1.1.2). Depending on the deployment scenario, one Basic Mapping Rule (BMR) and zero or

```
more Forwarding Mapping Rules (FMRs) MUST be included in one
   Softwire46-MAP-E or Softwire46-MAP-T.
   Each type of Softwire46-Rule also contains a number of sub-
   attributes, including Rule-IPv6-Prefix, Rule-IPv4-Prefix, and EA-
   Length. The structure of the sub-attributes for Softwire46-Rule is
   defined in Section 3.1.4.
   Defining multiple TLV-types achieves the same design goals as the "Softwire46 Rule Flags" defined in Section 4.1 of [RFC7598]. Using
   TLV-type set to 5 is equivalent to setting the F-flag in the
   OPTION_S46_RULE S46 Rule Flags field.
  TLV-Type
     4 Basic Mapping Rule only (not to be used for forwarding)
     5 Forwarding Permitted Mapping Rule
     Indicates the length of this attribute, including the TLV-Type, TLV-Length, and TLV-Value fields.
  Data Type
     The attribute Softwire46-Rule is of type tly (Section 3.13 of
     [RFC8044]).
  TLV-Value
     This field contains a set of attributes as follows:
     Rule-IPv6-Prefix
        This attribute contains the IPv6 prefix for use in the MAP rule.
        Refer to Section 3.1.4.1.
     Rule-IPv4-Prefix
        This attribute contains the {\ensuremath{{\mbox{\footnotesize IPv4}}}} prefix for use in the MAP rule.
        Refer to Section 3.1.4.2.
        This attribute contains the Embedded-Address (EA) bit length.
        Refer to Section 3.1.4.1. 3.1.4.3.
3.1.3.2. Softwire46-BR Attribute
   Softwire46-BR can only be encapsulated in Softwire46-MAP-E
   (Section 3.1.1.1) or Softwire46-Lightweight-4over6 (Section 3.1.1.3).
   There MUST be at least one Softwire46-BR included in each
   Softwire46-MAP-E or Softwire46-Lightweight-4over6.
   The structure of Softwire46-BR is shown below:
     TLV-Type
     TLV-Length
        18 octets
     Data Type
        The attribute Softwire46-BR is of type ip6addr (Section 3.9 of
        [RFC8044]).
        br-ipv6-address. A fixed-length field of 16 octets that
        specifies the IPv6 address for the Softwire46 Border Relay (BR).
3.1.3.3. Softwire46-DMR Attribute
   Softwire46-DMR may only appear in Softwire46-MAP-T (Section 3.1.1.2).
   There MUST be exactly one Softwire46-DMR included in one Softwire46-
   The structure of Softwire46-DMR is shown below:
    TLV-Type
    TLV-Length
       4 + length of dmr-ipv6-prefix specified in octets.
    Data Type
       The attribute Softwire46-DMR is of type ip6pref (Section 3.10 of
       [RFC8044]).
    TLV-Value
       dmr-ipv6-prefix. A variable-length (dmr-prefix6-len) field
       specifying the IPv6 prefix for the BR. This field is right-padded
       with zeros to the nearest octet boundary when dmr-prefix6-len
       is not divisible by 8. Prefixes with from 0 to 96 are allowed.
3.1.3.4. Softwire46-V4V6Bind Attribute
   Softwire46-V4V6Bind may only be encapsulated in Softwire46-
   Lightweight-4over6 (Section 3.1.1.3). There MUST be exactly one
   Softwire46-V4V6Bind included in each Softwire46-Lightweight-4over6.
   The structure of Softwire46-V4V6Bind is shown below:
   TLV-Type
   TLV-Length
      Indicates the length of this attribute, including
```

```
the TLV-Type, TLV-Length, and TLV-Value fields.
   Data Type
       The attribute Softwire46-V4V6Bind is of type tlv (Section 3.13 of
      [RFC8044]).
      This field contains a set of attributes as follows:
      IPv4-address
      IPv4-Address
          This attribute contains an IPv4 address, used to specify the full or shared IPv4 address of the CE. Refer to
      Bind-IPv6-Prefix
          This attribute contains an IPv6 prefix used to indicate which
          configured prefix the Softwire46 \overline{\text{CE}} should use for constructing the softwire. Refer to Section 3.1.5.2.
3.1.3.5. Softwire46-PORTPARAMS Attribute
   Softwire46-PORTPARAMS is optional. It is used to specify port set
   information for IPv4 address sharing between clients. Softwire46-PORTPARAMS MAY be included in any of the Softwire46
   attributes.
   The structure of Softwire46-PORTPARAMS is shown below:
    TLV-Type
       9
    TLV-Length
       Indicates the length of this attribute, including
       the TLV-Type, TLV-Length, and TLV-Value fields.
        The attribute Softwire46-PORTPARAMS is of type tlv (Section 3.13
       of [RFC8044]).
    TLV-Value
       This field contains a set of attributes as follows:
       PSTD-offset
           This attribute specifies the numeric value for the Softwire 46
           algorithm's excluded port range/offset bits (a bits). Refer to
           Section 3.1.6.1.
       PSID-ler
           This attribute specifies the number of significant bits in the PSID field (also known as 'k'). Refer to Section 3.1.6.2.
           This attribute specifies PSID value. Refer to Section 3.1.6.3.
3.1.4. Sub-Attributes for Sofwtire46-Rule
   There are two types of Softwire46-Rule: the Basic Mapping Rule and the Forwarding Mapping Rule, indicated by the value in the TLV-Type
   field of Softwire46-Rule (Section 3.1.3.1).
   Each type of Softwire46-Rule also contains a number of Sub-attributes
   as detailed in the following sub-sections.
3.1.4.1. Rule-IPv6-Prefix Attribute
   Rule-IPv6-Prefix is REQUIRED for every Softwire46-Rule. There MUST
   be exactly one Rule-IPv6-Prefix encapsulated in each type of
   Rule-IPv6-Prefix follows the framed IPv6 prefix designed in [RFC3162]
   and [RFC8044].
   The structure of Rule-IPv6-Prefix is shown below:
     TLV-Type
        10
     TLV-Length
         4 + length of rule-ipv6-prefix specified in octets.
     Data Type
         The attribute Rule-IPv6-Prefix is of type ipv6pref (Section 3.10
         of [RFC8044]).
     TLV-Value
         rule-ipv6-prefix. 128 bits long A variable-length field that specifies an IPv6
         prefix appearing in the MAP rule.
3.1.4.2. Rule-IPv4-Prefix Attribute
   This attribute is used to convey the MAP Rule IPv4 prefix. The
   structure of Rule-IPv4-Prefix is shown below:
     TLV-Type
```

```
11
     TLV-Length
        4 + length of rule-ipv4-prefix specified in octets.
     Data Type
        The attribute Rule-IPv4-Prefix is of type ipv4pref (Section 3.11
        of [RFC8044]).
     TLV-Value
        rule-ipv4-prefix. 32 bits long. Specifies the A variable-length field that pecifies
        an IPv4 prefix appearing in the MAP rule.
3.1.4.3. EA-Length Attribute
   This attribute is used to convey the Embedded Address (EA) Embedded-Address (EA) bit
   length. The structure of EA-Length is shown below:
      TLV-Type
      TI-V-Length
          6 octets
      Data Type
          The attribute EA-Length is of type integer (Section 3.1 of
          [RFC8044]).
     TLV-Value
          EA-len; 32-bits long. Specifies the Embedded-Address(EA) Embedded-Address (EA) bit
          length. Allowed values range from 0 to 48.
3.1.5. Attributes for Softwire46-v4v6Bind
3.1.5.1. IPv4-address IPv4-Address Attribute
   The \frac{IPv4}{Address} IPv4-Address MAY be used to specify the full or shared IPv4
   address of the CE.
   The structure of <a href="#">IPv4-address</a> is shown below:
      TLV-Type
        13
      TLV-Length
         6 octets
      Data Type
         The attribute IPv4-address IPv4-Address is of type ipv4addr (Section 3.8
      TLV-Value
          32-bits long. Specifies the IPv4 address (ipv4-address) to
          appear in Softwire46-V4V6Bind (Section 3.1.3.4).
3.1.5.2. Bind-IPv6-Prefix Attribute
  The Bind-IPv6-Prefix is used by the CE to identify the correct IPv6 prefix to be used as the tunnel source.
   The structure of Bind-IPv6-Prefix is shown below:
     TLV-Type
       14
     TLV-Length
         4 + length of bind-ipv6-prefix specified in octets.
     Data Type
        The attribute Bind-IPv6-Prefix is of type ipv6pref (Section 3.10
        of [RFC80441).
     TLV-Value
        bind-ipv6-prefix. A variable-length field specifying the IPv6 prefix or address for the Softwire46 CE. This field is right-padded with zeros to the nearest octet boundary
        when bindprefix6-len is not divisible by 8.
3.1.6. Attributes for S46-PORTPARAMS
3.1.6.1. PSID-offset PSID-Offset Attribute
   This attribute is used to convey the Port Set Identifier offset as
   defined in [RFC7597]. This attribute is encoded 32 bits as per the recommendation in Appendix A.2.1 of [RFC6158].
   The structure of PSID-offset PSID-Offset is shown below:
      TLV-Type
      TLV-Length
          6 octets
      Data Type
         The attribute PSID-offset PSID-Offset is of type integer (Section 3.1
         of [RFC8044]).
          Contains the PSID-Offset (8-bits) right
```

```
justified, and the unused bits in this field {\tt MUST}
                          be set to zero. This field that specifies the
                          numeric value for the Softwire46 algorithm's excluded port range/offset bits (a bits), as per Section 5.1
                          of RFC7597. [RFC7597]. Allowed values are between 0 and 15.
                          Default values for this field are specific to the Softwire mechanism being implemented and are defined
                          in the relevant specification document.
3.1.6.2. PSID-len PSID-Len Attribute
         This attribute is used to convey the PSID length as defined in
        [RFC7597]. This attribute is encoded 32 bits as per the recommendation in Appendix A.2.1 of [RFC6158].
         The structure of PSID-len PSID-Len is shown below:
                 TLV-Type
                         16
                 TLV-Length
                          6 octets
                 Data Type
                          The attribute \frac{PSID-len}{PSID-len} is of type integer (Section 3.1
                          of [RFC80441).
                          Contains the PSID-len (8-bits) right
                          justified, and the unused bits in this field MUST
                          be set to zero. This field specifies the number of
                          significant bits in the PSID field (also known as 'k'). When set to 0, the PSID field is to be ignored. After the first 'a' bits, there are k bits in the
                          port number representing the value of the PSID.
                          Subsequently, the address sharing ratio would be
3.1.6.3. PSID Attribute
         This attribute is used to convey the PSID as defined in [RFC7597].
        This attribute is encoded 32 bits as per the recommendation in Appendix A.2.1 of [RFC6158].
        The structure of PSID is shown below:
              TLV-Type
              TLV-Length
              Data Type
                       The attribute \frac{Bind\ IPv6\ Prefix}{Prefix} PSID is of type integer (Section 3.1
                       of [RFC8044]).
                       Contains the PSID (16-bits) right justified, and the unused bits
                       in this field MUST be set to zero. The PSID value algorithmically identifies a set of ports % \left( 1\right) =\left( 1\right) +\left( 1\right)
                       assigned to a CE. The first \boldsymbol{k} bits on the left of this
                       2-octet field is the PSID value. The remaining (16-k) bits
                       on the right are padding zeros.
3.2. Softwire46-Priority Attribute
         The Softwire46-Priority Attribute includes an ordered list of
        Softwire64 mechanisms allowing the client to prioritize which mechanism to use, corresponding to OPTION_S46_PRIORITY defined in [RFC8026]. The following requirements apply:
                 The Softwire46-Priority Attribute MAY appear in an Access-Accept
                 packet. It MAY also appear in an Access-Request packet.
                 The Softwire46-Priority Attribute MAY appear in a CoA-Request
                 The Softwire46-Priority Attribute MAY appear in an Accounting-
                 Request packet.
                 The Softwire46-Priority Attribute MUST NOT appear in any other
                 RADIUS packet.
         The Softwrie46-Priority Attribute is structured as follows:
                  Туре
                       241 (To be confirmed by IANA)
                 Length
                       Indicates the length of this attribute,
                       including the Type, Length, Extended-Type and Value fields.
                 Extended-Type
                  TLV-Value
                    The attribute includes one or more Softwire46-Option-Code TLVs:
                             A Softwire46-Priority Attribute MUST contain at least one
                             Softwire46-Option-Code TLV (Section 3.2.1).
```

Softwire46 mechanisms are prioritized in the appearance order

```
of the in the Softwire46-Priority Attribute.
```

The Softwire46-Priority Attribute is associated with the following identifier: 241.Extended-Type (TBD5).

3.2.1. Softwire46-Option-Code

This attribute is used to convey an option code assigned to a Softwire64 mechanism [RFC8026]. This attribute is encoded 32 bits as per the recommendation in Appendix A.2.1 of [RFC6158].

The structure of Softwire46-Option-Code is shown below:

```
TLV-Type
18
```

TLV-Length

Data Type

The attribute Softwire46-Option-Code is of type integer (Section 3.1 of [RFC8044]).

TI.V-Value

A 32-bit IANA-registered option code representing a Softwire46 mechanism (Softwire46-option-code). The codes and their corresponding Softwire46 mechanisms are listed in Section 7.3.

3 3 Softwire46-Multicast Attribute

The Softwire46-Multicast Attribute conveys the IPv6 prefixes to be used to synthesize multicast and unicast IPv4-embedded IPv6 addresses as per [RFC8114]. This attribute is of type "tlv" and contains additional TLVs. The following requirements apply:

The BNG SHALL use the IPv6 prefixes returned in the RADIUS Softwire46-Multicast Attribute to populate the DHCPv6 PREFIX64 Option [RFC8115].

This attribute MAY be used in Access-Request packets as a hint to the RADIUS server. For example, if the BNG is pre-configured for Softwire46-Multicast, these prefixes MAY may be inserted in the attribute. The RADIUS server MAY ignore the hint sent by the BNG, and it MAY assign a different Softwire46-Multicast Attribute.

The Softwire46-Multicast Attribute MAY appear in an Access-Request, Access-Accept, CoA-Request, and Accounting-Request packet.

The Softwire46-Multicast Attribute MUST NOT appear in any other RADIUS packet.

The Softwire46-Multicast Attribute MAY contain ASM-Prefix64 (Section 3.3.1), SSM-Prefix64 (Section 3.3.2), and U-Prefix64 (Section 3.3.3).

The Softwire46-Multicast Attribute MUST include ASM-Prefix64 or SSM-Prefix64, and it MAY include both.

The U-Prefix64 MUST be present when SSM-Prefix64 is present. U-Prefix64 MAY be present when ASM-Prefix64 is present.

The Softwire46-Multicast Attribute is structured as follows:

```
Type 241 (To be confirmed by IANA)
```

Length

This field indicates the total length in bytes of all fields of this attribute, including the Type, Length, Extended-Type, and the entire length of the embedded attributes.

Extended-Type

Value

This field contains a set of attributes as follows:

ASM-Prefix64

This attribute contains the ASM IPv6 prefix. Refer to Section 3.3.1. $\,$

SSM-Prefix64

This attribute contains the SSM IPv6 prefix. Refer to Section 3.3.2. $\,$

U-Prefix64

This attribute contains the IPv4 prefix used for address translation. Refer to Section 3.3.3.

The Softwire46-Multicast Attribute is associated with the following identifier: 241.Extended-Type(TBD6).

3.3.1. ASM-Prefix64 Attribute

The ASM-Prefix64 attribute is structured as follows:

TLV-Type 19

TLV-Length

```
16 octets. The length of ssm-prefix64 must be to 96 [RFC8115].

Data Type
The attribute ASM-Prefix64 is of type ipv6prefix (Section 3.10 of [RFC8044]).

TLV-Value
This field specifies the IPv6 multicast prefix (asm-prefix64) to be used to synthesize the IPv4-embedded IPv6 addresses of the multicast groups in the ASM mode. The conveyed multicast IPv6 prefix MUST belong to the ASM range.
```

3.3.2. SSM-Prefix64 Attribute

The SSM-Prefix64 attribute is structured as follows:

Type 20

TLV-Length

16 octets. The length of ssm-prefix64 must be to 96 [RFC8115].

Data Type

The attribute SSM-Prefix64 is of type ipv6prefix (Section 3.10 of [RFC8044]).

TLV-Type

This field specifies the IPv6 multicast prefix (ssm-prefix64) to be used to synthesize the IPv4-embedded IPv6 addresses of the multicast groups in the SSM mode. The conveyed multicast IPv6 prefix MUST belong to the SSM range.

3.3.3. U-Prefix64 Attribute

The structure of U-Prefix64 is shown below:

TLV-Type 21

TLV-Length

4 + length of unicast-prefix. As specified in [RFC6052], the unicast-prefix prefix-length MUST be set to 32, 40, 48, 56, 64, or 96.

Data Type

The attribute U-Prefix64 is of type ipv6prefix (Section 3.10 of [RFC8044]).

TLV-Value

This field identifies the IPv6 unicast prefix (u-prefix64) to be used in SSM mode for constructing the IPv4-embedded IPv6 addresses representing the IPv4 multicast sources in the IPv6 domain. It may also be used to extract the IPv4 address from the received multicast data flows.

4. A Sample Configuration Process with RADIUS

Figure 2 illustrates how the RADIUS and DHCPv6 protocols interwork to provide CE with softwire configuration information.

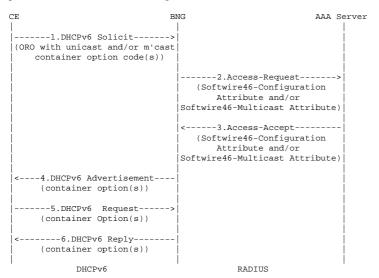


Figure 2: Interaction between DHCPv6 and AAA Server with RADIUS authentication

- 1. The CE creates a DHCPv6 Solicit message. For unicast softwire configuration, the message includes an OPTION_REQUEST_OPTION (6) with the Softwire46 Container option codes as defined in [RFC7598]. OPTION_S46_CONT_MAPE (94) should be included for MAP-E, OPTION_S46_CONT_MAPT (95) for MAP-T, and OPTION_S46_CONT_LW (96) for Lightweight 4over6. For multicast configuration, the option number for OPTION_V6_PREFIX64 (113) is included in the client's ORO. The message is sent to the BNG.
- On receipt of the Solicit message, the BNG constructs a RADIUS Access-Request message containing a User-Name Attribute (1)

(containing either a CE MAC address, interface-id or both), a User-Password Attribute (2) (with a pre-configured shared password as defined in [RFC2865]. The Softwire46-Configuration Attribute and/or Softwire46-Multicast Attribute are also included (as requested by the client). The resulting message is sent to the AAA server.

- 3. The AAA server authenticates the request. If this is successful, and suitable configuration is available, an Access-Accept message is sent to the BNG containing the requested Softwire46-Configuration Attribute or Softwire46-Multicast Attribute. It is the responsibility of the AAA server to ensure the consistency of the provided configuration.
- 4. The BNG maps the received softwire configuration into the corresponding fields in the DHCPv6 softwire configuration option(s). These are included in the DHCPv6 Advertise message which is sent to the CE.
- The CE sends a DHCPv6 Request message. In the ORO, the option code(s) of any of the required softwire options that were received in the Advertise message are included.
- The BNG sends a Reply message to the client containing the softwire container options enumerated in the ORO.

The authorization operation could also be done independently, after the authentication process. In this case, steps 1-5 are completed as above, then the following steps are performed:

- 6a. When the BNG receives the DHCPv6 Request, it constructs a RADIUS Access-Request message, which contains a Service-Type Attribute (6) with the value "Authorize Only" (17), the corresponding Softwire46-Configuration Attribute, and a State Attribute obtained from the previous authentication process according to [RPC5080]. The resulting message is sent to the AAA server.
- 7a. The AAA checks the authorization request. If it is approved, an Access-Accept message is returned to the BNG with the corresponding Softwire46-Configuration Attribute.
- 8a. The BNG sends a Reply message to the client containing the softwire container options enumerated in the ORO.

In addition to the above, the following points need to be considered:

- o In both the configuration message flows described above the Message-authenticator (type 80) [RFC2869] SHOULD be used to protect both Access-Request and Access-Accept messages.
- o If the BNG does not receive the corresponding Softwire46-Configuration Attribute in the Access-Accept message it MAY fall back to creating the DHCPv6 softwire configuration options using pre-configured Softwire46 configuration, if this is
- o If the BNG receives an Access-Reject from the AAA server, then Softwire46 configuration MUST NOT be supplied to the client.
- o As specified in [RFC8415], Section 18.2.5, "Creation and Transmission of Rebind Messages", if the DHCPv6 server to which the DHCPv6 Renew message was sent at time T1 has not responded by time T2, the CE (DHCPv6 client) SHOULD enter the Rebind state and attempt to contact any available server. In this situation, a secondary BNG receiving the DHCPv6 message MUST initiate a new Access-Request message towards the AAA server. The secondary BNG includes the Softwire46-Configuration Attribute in this Access-Request message.
- o For Lightweight 4over6, the subscriber's binding state needs to be synchronized between the clients and the lwAFTR/BR. This can be achieved in two ways: static pre-configuration of the bindings on both the AAA server and lwAFTR, or on-demand whereby the AAA server updates the lwAFTR with the subscriber's binding state as it is created or deleted.

In some deployments, the DHCP server may use the Accounting-Request to report to a AAA server the softwire configuration returned to a requesting host. It is the responsibility of the DHCP server to ensure the consistency of the configuration provided to requesting hosts. Reported data to a AAA server may be required for various operational purposes (e.g., regulatory).

5. Table of Attributes

This document specifies three new RADIUS attributes, and their formats are as follows:

- o Softwire46-Configuration Attribute: 241.TBD1
- o Softwire46-Priority Attribute: 241.TBD5
- o Softwire46-Multicast Attribute: 241.TBD6

Table 3 describes which attributes may be found, in which kinds of packets and in what quantity.

Request Accept Reject Challenge Acct CoA- # Attribute 0-1 0-1 0 0 0-1 0-1 241.TBD1 Softwire46-

0 - 1	0-1	0	0	0-1	0 - 1	241.TBD5	Softwire46-
							Priority
0-1	0-1	0	0	0-1	0-1	241.TBD6	Softwire46-
							Multicast

Table 3: Table of Attributes

6. Security Considerations

Known security vulnerabilities of the RADIUS protocol are discussed in [RFC2607], [RFC2865], and[RFC2869]. Use of IPsec [RFC4301] for providing security when RADIUS is carried in IPv6 is discussed in [RFC3162].

Specific security considerations for interactions between the MAP CE and the BNG are discussed in [RFC7597] and [RFC7599]. Security considerations for Lightweight 4over6 are discussed in [RFC7596]. Security considerations for DHCPv6-Based Softwire46 Prioritization Mechanism are discussed in [RFC8026]. Security considerations for multicast scenarios are discussed in [RFC8114]. Furthermore, generic DHCPv6 security mechanisms can be applied to DHCPv6 intercommunication between the CE and the BNG.

7. IANA Considerations

 ${\tt IANA}$ is requested to make new code point assignments for RADIUS attributes as described in the following subsections.

7 1 New RADIUS Attributes

This document requests IANA to assign the Attribute Types defined in this document from the RADIUS namespace as described in the "IANA Considerations" section of [RFC3575], in accordance with BCP 26 [RFC8126].

This document requests that IANA register three new RADIUS attributes, from the "Short Extended Space" of [RFC6929]. The attributes are: Softwire46-Configuration Attribute, Softwire46-Priority Attribute, and Softwire46-Multicast Attribute:

Type	Description	Data Type	Reference
241.TBD1	Softwire46-Configuration	tlv	Section 3.1
241.TBD5	Softwire46-Priority	tlv	Section 3.2
241.TBD6	Softwire46-Multicast	tlv	Section 3.3

7.2. RADIUS Softwire46 Configuration and Multicast Attributes

IANA is requested to create a new registry called "RADIUS Softwire46 Configuration and Multicast Attributes".

All attributes in this registry have one or more parent RADIUS attributes in nesting (refer to [RFC6929]).

This registry must be initially populated with the following values:

Value	Description	Data Type	Reference	
0	Reserved			
1	Softwire46-MAP-E	tlv	Section 3.1.1.1	
2	Softwire46-MAP-T	tlv	Section 3.1.1.2	
3	Softwire46-Lightweight-4over6	tlv	Section 3.1.1.3	
4	Softwire46-Rule (BMR)	tlv	Section 3.1.3.1	
5	Softwire46-Rule (FMR)	tlv	Section 3.1.3.1	
6	Softwire46-BR	ipv6addr	Section 3.1.3.2	
7	Softwire46-DMR	ipv6prefix	Section 3.1.3.3	
8	Softwire46-V4V6Bind	tlv	Section 3.1.3.4	
9	Softwire46-PORTPARAMS	tlv	Section 3.1.3.5	
10	Rule-IPv6-Prefix	ipv6prefix	Section 3.1.4.1	
11	Rule-IPv4-Prefix	ipv4prefix	Section 3.1.4.2	
12	EA-Length	integer	Section 3.1.4.3	
13	IPv4-address IPv4-Address		ipv4addr	Section 3.1.5.1
14	Bind-IPv6-Prefix	ipv6prefix	Section 3.1.5.2	
15	PSID offset PSID-Offset		integer	Section 3.1.6.1
16	PSID-len PSID-Len		integer Sec	ction 3.1.6.2
17	PSID	integer	Section 3.1.6.3	
18	Softwire64-Option-Code	integer	Section 3.2.1	
19	ASM-Prefix64	ipv6prefix	Section 3.3.1	
20	SSM-Prefix64	ipv6prefix	Section 3.3.2	
21	U-Prefix64	ipv6prefix	Section 3.3.3	
22-255	Unassigned			

The registration procedure for this registry is Standards Action as defined in [RFC8126].

7.3. Softwire46 Mechanisms and Their Identifying Option Codes

The Softwire46-Priority Attribute defines a 16-bit Softwire46-option-code field, conveys an ordered list of option codes assigned to Softwire64 mechanisms, for which IANA is requested to create and maintain a new registry entitled "Option Codes Permitted in the Softwire46-Priority Attribute".

The registration procedure for this registry is Standards Action as defined in [RFC8126].

- This document requests IANA to register the three option codes of the
- Softwire46 mechanisms permitted to be included in the
- Softwire46 Priority Attribute. The value of option code corresponds to the TLV-Type defined in Section 3.1.1. Additional options option codes may be added to this list in the future using the IETF Review process described in Section 4.8 of

```
[RFC8126].
```

Table 4 shows the initial version of allowed option $\frac{\text{codes required}_{\tau}}{\text{codes}_{\tau}}$ codes, and the Softwire46 mechanisms that they represent. The option code for $\frac{\text{DS}_{\tau}}{\text{DS}_{\tau}}$ DS-Lite is derived from the IANA allocated RADIUS Attribute Type value for $\frac{\text{DS}_{\tau}}{\text{DS}_{\tau}}$

Lite DS-Lite [RFC6519]. The option codes for MAP-E, MAP-T, and Lightweight 4over6 need to be assigned. The option codes for MAP-E, MAP-T, and Lightweight 4over6 should also be used as the TLV-Type values for the MAP-E, MAP-T, and Lightweight 4over6 attributes defined in Section 3.1.1.

Option Code	Softwire46 Mechanism	Reference
TBD2	MAP-E	RFC7597
TBD3	MAP-T	RFC7599
TBD4	Lightweight 4over6	RFC7596
144	DS-Lite	RFC6519
+		

Table 4: Option Codes to S46 Mechanisms

8. Contributing Authors

Bing Liu Huawei Technologies Co., Ltd Q14, Huawei Campus, No.156 Beiqing Road Hai-Dian District, Beijing, 100095 P.R. China

Email: leo.liubing@huawei.com

Peter Deacon IEA Software, Inc. P.O. Box 1170 Veradale, WA 99037 USA

Email: peterd@iea-software.com

Qiong Sun China Telecom Beijing China

Email: sunqiong@ctbri.com.cn

Qi Sun Tsinghua University Department of Computer Science, Tsinghua University Beijing 100084 P.R.China Phone: +86-10-6278-5822

Email: sunqibupt@gmail.com

Cathy Zhou

Huawei Technologies Bantian, Longgang District Shenzhen 518129

Email: cathy.zhou@huawei.com

Tina Tsou Huawei Technologies(USA) 2330 Central Expressway Santa Clara, CA 95050 USA

Email: Tina.Tsou.Zouting@huawei.com

ZiLong Liu Tsinghua University Beijing 100084 P.R.China Phone: +86-10-6278-5822

Email: liuzilong8266@126.com

Yong Cui Tsinghua University Beijing 100084 P.R.China Phone: +86-10-62603059

Email: yong@csnet1.cs.tsinghua.edu.cn

Email: yong@csnet1.cs.tsingmua.ed

9. Acknowledgements

The authors would like to thank the valuable comments made by Peter Lothberg, Wojciech Dec, Ian Farrer, Suresh Krishnan, Qian Wang, Wei Meng, Cui Wang, Alan Dekok, Stefan Winter, and Yu Tianpeng to this document.

This document was merged with draft-sun-softwire-lw4over6-radext-01 and draft-wang-radext-multicast-radius-ext-00, thanks to everyone who contributed to this document.

This document was produced using the xml2rfc tool [RFC7991].

Many thanks to Al $\frac{Morton \ and}{Morton}$, Bernie $\frac{Volz}{Volz}$, and Joel Halpern for the

review.

10. References

10.1. Normative References

- [RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirement Levels", BCP 14, RFC 2119, DOI 10.17487/RFC2119, March 1997, https://www.rfc-editor.org/info/rfc2119.

- [RFC3575] Aboba, B., "IANA Considerations for RADIUS (Remote Authentication Dial In User Service)", RFC 3575, DOI 10.17487/RFC3575, July 2003, https://www.rfc-editor.org/info/rfc3575.
- [RFC5080] Nelson, D. and A. DeKok, "Common Remote Authentication Dial In User Service (RADIUS) Implementation Issues and Suggested Fixes", RFC 5080, DOI 10.17487/RFC5080, December 2007, https://www.rfc-editor.org/info/rfc5080.
- [RFC6052] Bao, C., Huitema, C., Bagnulo, M., Boucadair, M., and X.
 Li, "IPv6 Addressing of IPv4/IPv6 Translators", RFC 6052,
 DOI 10.17487/RFC6052, October 2010,
 https://www.rfc-editor.org/info/rfc6052.

- [RFC8026] Boucadair, M. and I. Farrer, "Unified IPv4-in-IPv6
 Softwire Customer Premises Equipment (CPE): A DHCPv6-Based
 Prioritization Mechanism", RFC 8026, DOI 10.17487/RFC8026,
 November 2016, https://www.rfc-editor.org/info/rfc8026.
- [RFC8114] Boucadair, M., Qin, C., Jacquenet, C., Lee, Y., and Q.
 Wang, "Delivery of IPv4 Multicast Services to IPv4 Clients
 over an IPv6 Multicast Network", RFC 8114,
 DOI 10.17487/RFC8114, March 2017,
 https://www.rfc-editor.org/info/rfc8114>.
- [RFC8115] Boucadair, M., Qin, J., Tsou, T., and X. Deng, "DHCPv6
 Option for IPv4-Embedded Multicast and Unicast IPv6
 Prefixes", RFC 8115, DOI 10.17487/RFC8115, March 2017,
 <https://www.rfc-editor.org/info/rfc8115>.
- [RFC8126] Cotton, M., Leiba, B., and T. Narten, "Guidelines for Writing an IANA Considerations Section in RFCs", BCP 26, RFC 8126, DOI 10.17487/RFC8126, June 2017, https://www.rfc-editor.org/info/rfc8126.
- [RFC8415] Mrugalski, T., Siodelski, M., Volz, B., Yourtchenko, A.,
 Richardson, M., Jiang, S., Lemon, T., and T. Winters,
 "Dynamic Host Configuration Protocol for IPv6 (DHCPv6)",
 RFC 8415, DOI 10.17487/RFC8415, November 2018,
 <https://www.rfc-editor.org/info/rfc8415>.

10.2. Informative References

- [RFC6346] Bush, R., Ed., "The Address plus Port (A+P) Approach to the IPv4 Address Shortage", RFC 6346,

```
DOI 10.17487/RFC6346, August 2011, <a href="https://www.rfc-editor.org/info/rfc6346">https://www.rfc-editor.org/info/rfc6346</a>>.
```

- [RFC6519] Maglione, R. and A. Durand, "RADIUS Extensions for Dual-Stack Lite", RFC 6519, DOI 10.17487/RFC6519, February 2012, https://www.rfc-editor.org/info/rfc6519.
- [RFC7596] Cui, Y., Sun, Q., Boucadair, M., Tsou, T., Lee, Y., and I.
 Farrer, "Lightweight 4over6: An Extension to the DualStack Lite Architecture", RFC 7596, DOI 10.17487/RFC7596,
 July 2015, https://www.rfc-editor.org/info/rfc7596>.
- [RFC7597] Troan, O., Ed., Dec, W., Li, X., Bao, C., Matsushima, S.,
 Murakami, T., and T. Taylor, Ed., "Mapping of Address and
 Port with Encapsulation (MAP-E)", RFC 7597,
 DOI 10.17487/RFC7597, July 2015,
 https://www.rfc-editor.org/info/rfc7597.
- [RFC7598] Mrugalski, T., Troan, O., Farrer, I., Perreault, S., Dec, W., Bao, C., Yeh, L., and X. Deng, "DHCPv6 Options for Configuration of Softwire Address and Port-Mapped Clients", RFC 7598, DOI 10.17487/RFC7598, July 2015, https://www.rfc-editor.org/info/rfc7598.
- [RFC7599] Li, X., Bao, C., Dec, W., Ed., Troan, O., Matsushima, S.,
 and T. Murakami, "Mapping of Address and Port using
 Translation (MAP-T)", RFC 7599, DOI 10.17487/RFC7599, July
 2015, https://www.rfc-editor.org/info/rfc7599.

Appendix A. DHCPv6 to RADIUS Field Mappings

The following sections detail the mappings between the softwire DHCPv6 option fields and the relevant RADIUS attributes as defined in this document

A.1. OPTION_S46_RULE (89) to Softwire46-Rule Sub-TLV Field Mappings

+-		+	
İ	OPTION_S46_RULE Field	Softwire46-Rule Name	TLV Subfield
	flags	N/A 	TLV-type (TBD7, TBD8)
	ea-len	EA-Length	EA-len
Ĺ	prefix4-len	Rule-IPv4-Prefix	Prefix-Length
Ĺ	ipv4-prefix	Rule-IPv4-Prefix	rule-ipv4-prefix
Ĺ	prefix6-len	Rule-IPv6-Prefix	Prefix-Length
j	ipv6-prefix	Rule-IPv6-Prefix	rule-ipv6-prefix

A.2. OPTION_S46_BR (90) to Softwire46-BR Field Mappings

OPTION_S46_BR Field	Softwire46-BR Subfield
br-ipv6-address	br-ipv6-address

A.3. OPTION_S46_DMR (91) to Softwire46-DMR

OPTION_S46_BR Field	Softwire46-DMR Subfield
dmr-prefix6-len	dmr-prefix6-len
dmr-ipv6-prefix	dmr-ipv6-prefix

A.4. OPTION_S46_V4V6BIND (92) to Softwire46-V4V6Bind

OPTION_S46_V4V6BIND	Softwire46-V4V6Bind Name	TLV Subfield	+
ipv4-address bindprefix6-len bind-ipv6-prefix		TPv4-Address Prefix-Length bind-ipv6-prefix	ipv4-address

A.5. OPTION S46 PORTPARAMS (93) to Softwire46-PORTPARAMS Field Mappings

OPTION_S46_PORTPARAMS Field	Softwire46-PORTPARAMS Name	TLV Subfield	
offset PSID-len PSID		PSID-Len PSID	PSID-Offset PSID-len

A.6. OPTION_S46_PRIORITY (111) to Softwire46-PORTPARAMS Field Mappings

OPTION_S46_PRIORITY Field	Softwire46-Priority Attribute Subfield
s46-option-code	Softwire46-option-code

A.7. OPTION_V6_PREFIX64 (113) to Softwire46-Multicast Attribute Field Mappings

OPTION_V6_PREFIX64 Softwire46-Multicast Field Attribute TLV Name asm-length ASM-Prefix64 Prefix-Length ASM_mPrefix64 ASM-Prefix64 Prefix-Length Ssm-length SSM-Prefix64 Prefix-Length SSM_mPrefix64 SSM-Prefix64 Prefix-Length Unicast-length U-Prefix64 Prefix-Length U-Prefix64 U-Prefix64 U-Prefix64 U-Prefix64 U-Prefix64	+		L	++
ASM_mPrefix64 ASM-Prefix64 asm-prefix64 ssm-length SSM-Prefix64 Prefix-Length SSM_mPrefix64 SSM-Prefix64 ssm-prefix64 unicast-length U-Prefix64 Prefix-Length	į			TLV Subfield
		ASM_mPrefix64 ssm-length SSM_mPrefix64 unicast-length	ASM-Prefix64 SSM-Prefix64 SSM-Prefix64 U-Prefix64	asm-prefix64 Prefix-Length ssm-prefix64 Prefix-Length

Authors' Addresses

```
Sheng Jiang
Huawei Technologies Co., Ltd
Q14, Huawei Campus, No.156 Beiqing Road
   Hai-Dian District, Beijing, 100095
   P.R. China
   Email: jiangsheng@huawei.com
   Yu Fu
   CNNIC
  No.4 South 4th Street, Zhongguancun
Hai-Dian District, Beijing, 100190
   Email: eleven711711@foxmail.com
Huawei Technologies Co., Ltd

Q14, Huawei Campus, No.156 Beiging Road
  Hai Dian District, Beijing, 100095
P.R. China
- Email: leo.liubing@huawei.com
- Peter Deacon
- IEA Software, Inc.
P.O. Box 1170
- Veradale, WA 99037
- Email: peterd@iea-software.com
```

Chongfeng Xie China Telecom Beijing P.R. China

Email: xiechf.bri@chinatelecom.cn

Tianxiang Li Tsinghua University Beijing 100084 P.R.China

Email: peter416733@gmail.com

Mohamed Boucadair (editor) Orange

Rennes, 35000 France

Email: mohamed.boucadair@orange.com

28/05/2019 à 08:32 17 sur 17