



Bookshelf 056

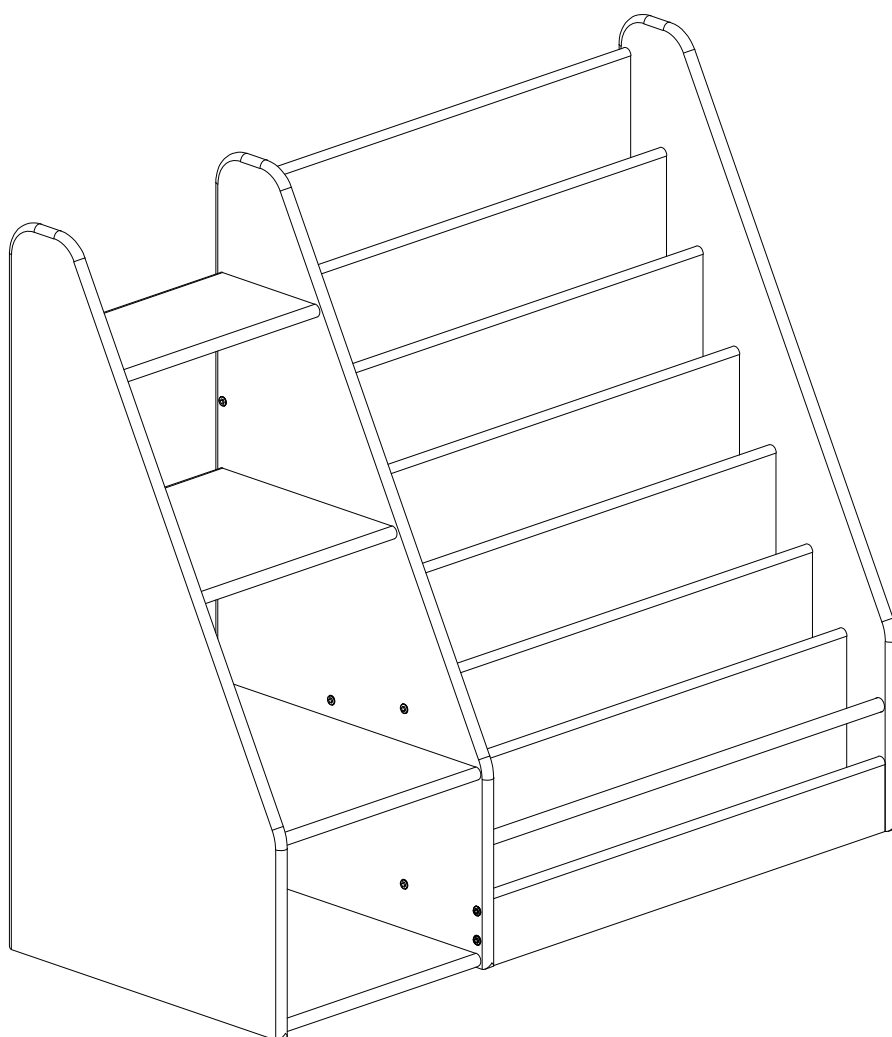
















ASSEMBLY INSTRUCTIONS

SKU SJ056

Name: Bookshelf 056

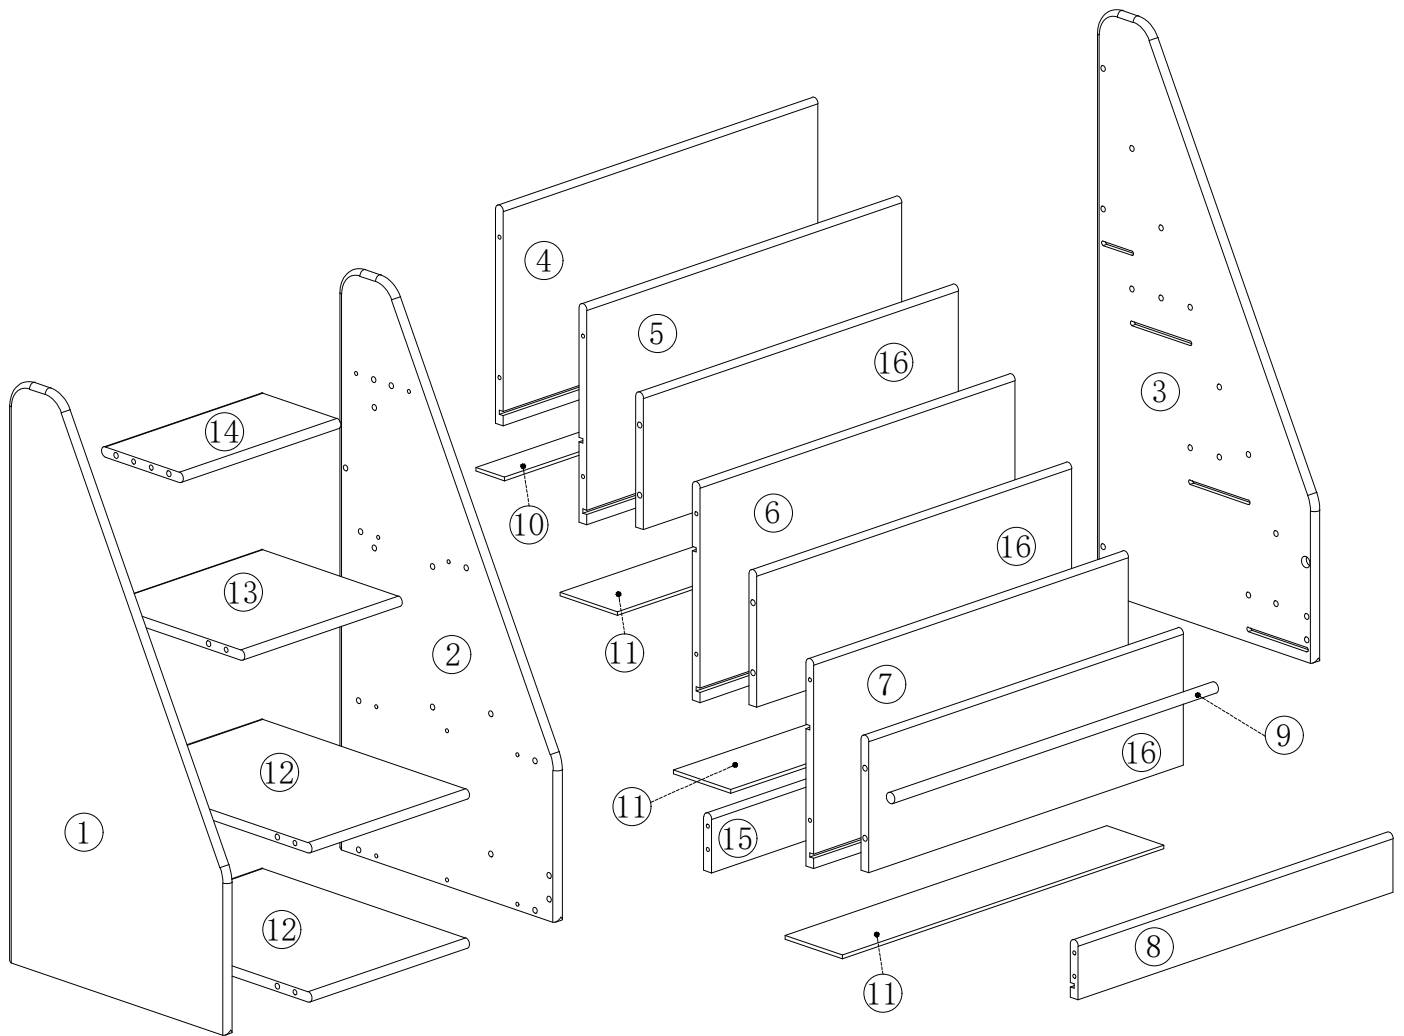


Part List

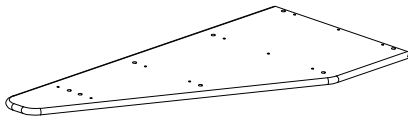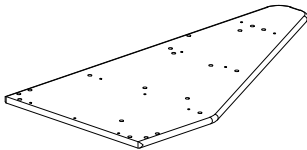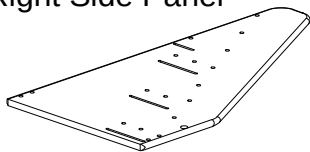
① Left Side Panel  800*395*14MM 1PC	② Center Vertical Panel  800*395*14MM 1PC	③ Right Side Panel  800*395*14MM 1PC
④ Rear Cross Panel  572*275*14MM 1PC	⑤ Center Rear Cross Panel  572*275*14MM 1PC	⑥ Center Front Cross Panel  572*275*14MM 1PC
⑦ Front Cross Panel  572*275*14MM 1PC	⑧ Front Pull Strip  572*80*14MM 1PC	⑨ Round Bar  588*Ø15MM 1PC
⑩ Right Upper Shelf  584*52*5MM 1PC	⑪ Right Lower Shelf  584*104*5MM 3PCS	⑫ Left Lower Shelf  286*382*14MM 2PCS
⑬ Left Middle Shelf  286*260*14MM 1PC	⑭ Left Upper Shelf  286*148*14MM 1PC	⑮ Rear Pull Strip  572*80*14MM 1PC
⑯ Baffle Panel  572*161*14MM 3PCS		

Attention


Using the right screws can prevent damage to these components.

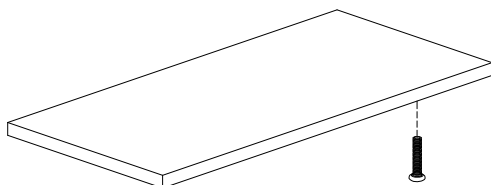

Example

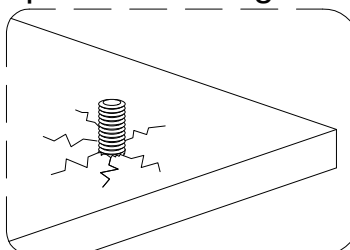


Mistake: screws can cause boards to split.

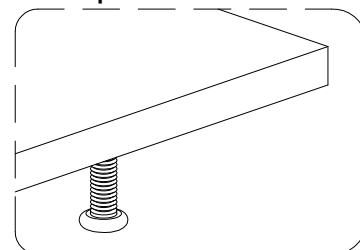


Correct: screws are the correct size.


How to use the cam lock system

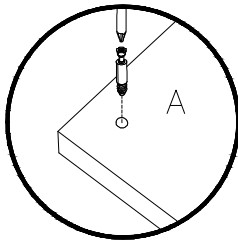


1. Screw cam bolt into panel

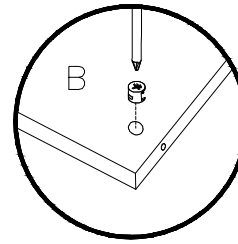


2. Push cam into panel - arrow feature on cam top points to panel edge

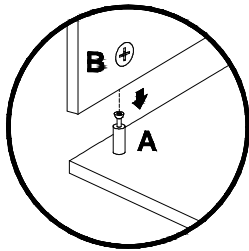

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

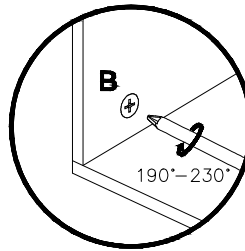


4. Rotate cam(s) clockwise 190°-230° to lock panels together

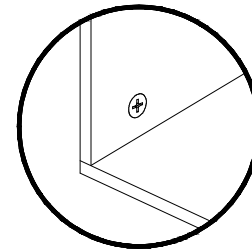

5. Panels should be tight against each other and connection should be rigid







Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

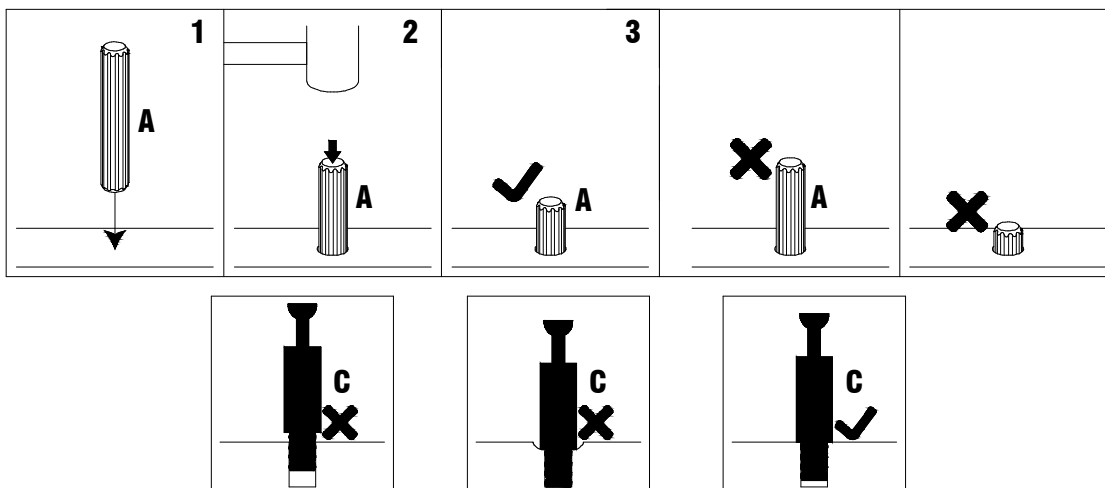


⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Hardware List

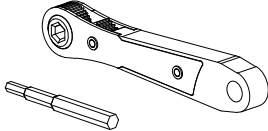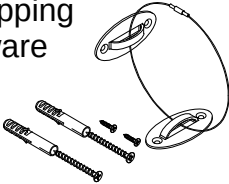A Wood Nog  8*30MM28+2PCS	B Two-in-one Screw  L=35mm20+2PCS	C Two-in-one Lock Handle  15MM20+2PCS
D Circular Adhesive Tape  20MM20+2PCS	E Hexagonal Overmoulding Wire  M7*30MM24+2PCS	F Phillips Screwdriver  6*128MM1PC
G Ratchet Wrench  M4*50MM1 set	H Anti-tipping hardware bag  1 set	

Step 1

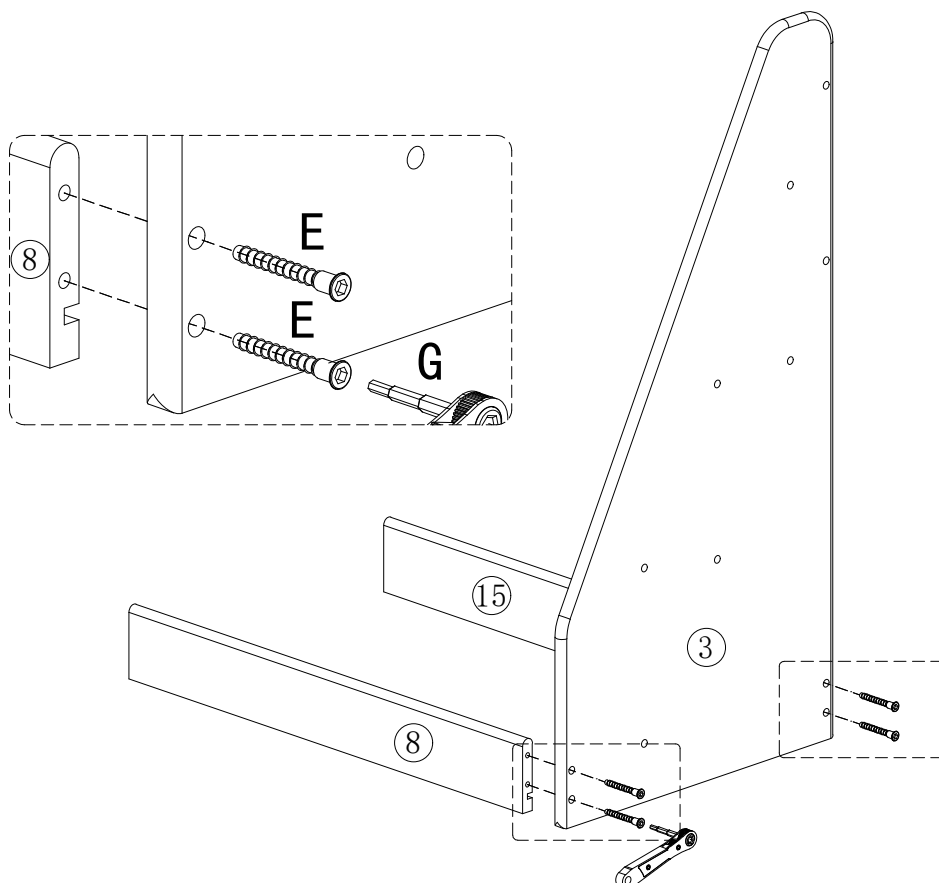


Assemble parts 3/8/15 with hardware E using hardware G.

E		X4
G		X1

Step 2

When assembling, pay attention to the orientation of the slots on each parts.

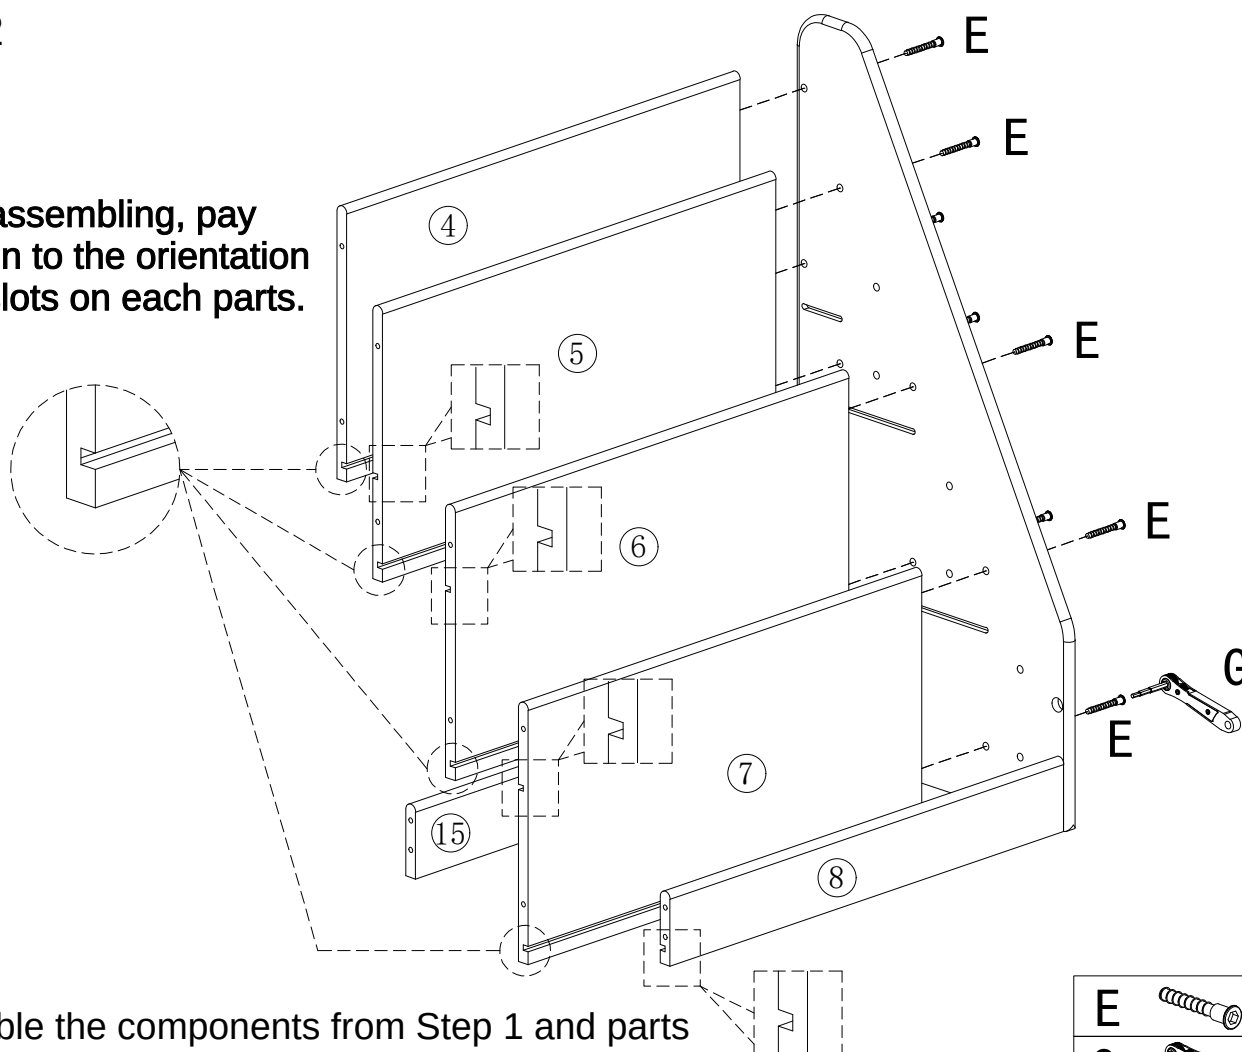


Assemble the components from Step 1 and parts 4/5/6/7 with hardware E using hardware G.

E		X8
G		X1

Name: Bookshelf 056


Step 3

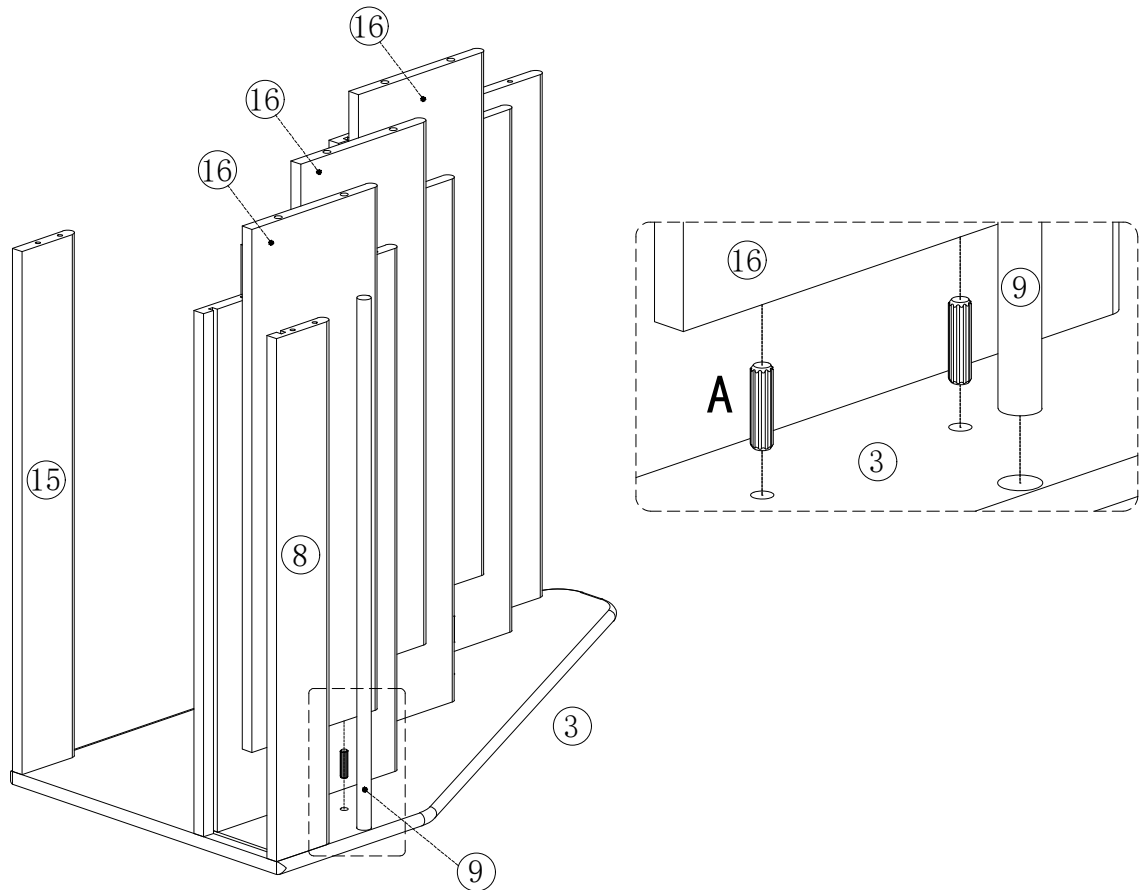

Place the assembled components from Step 2 as shown. Insert parts 9, then use hardware A to assemble component 16.


A  X6

Step 4

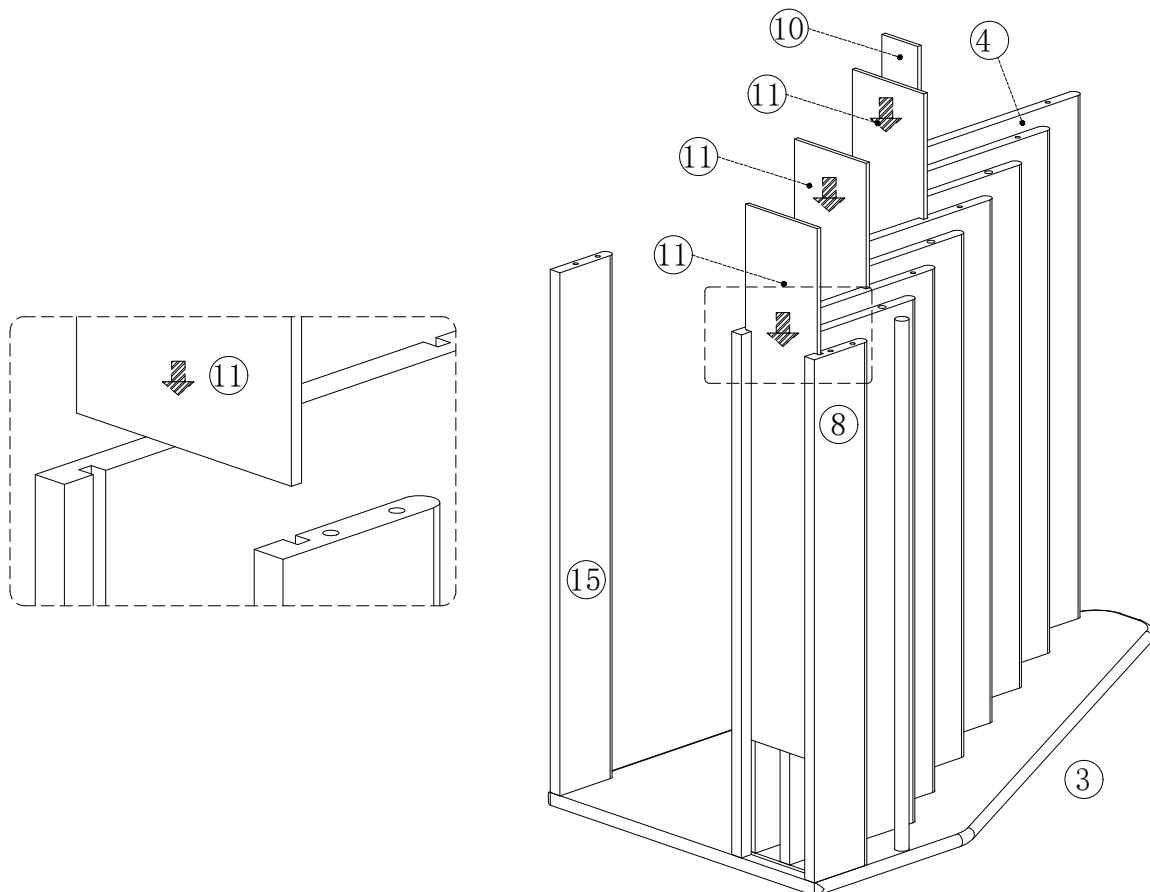

Insert the parts 10/11 into the groove of the assembled components from Step 3.


Step 5

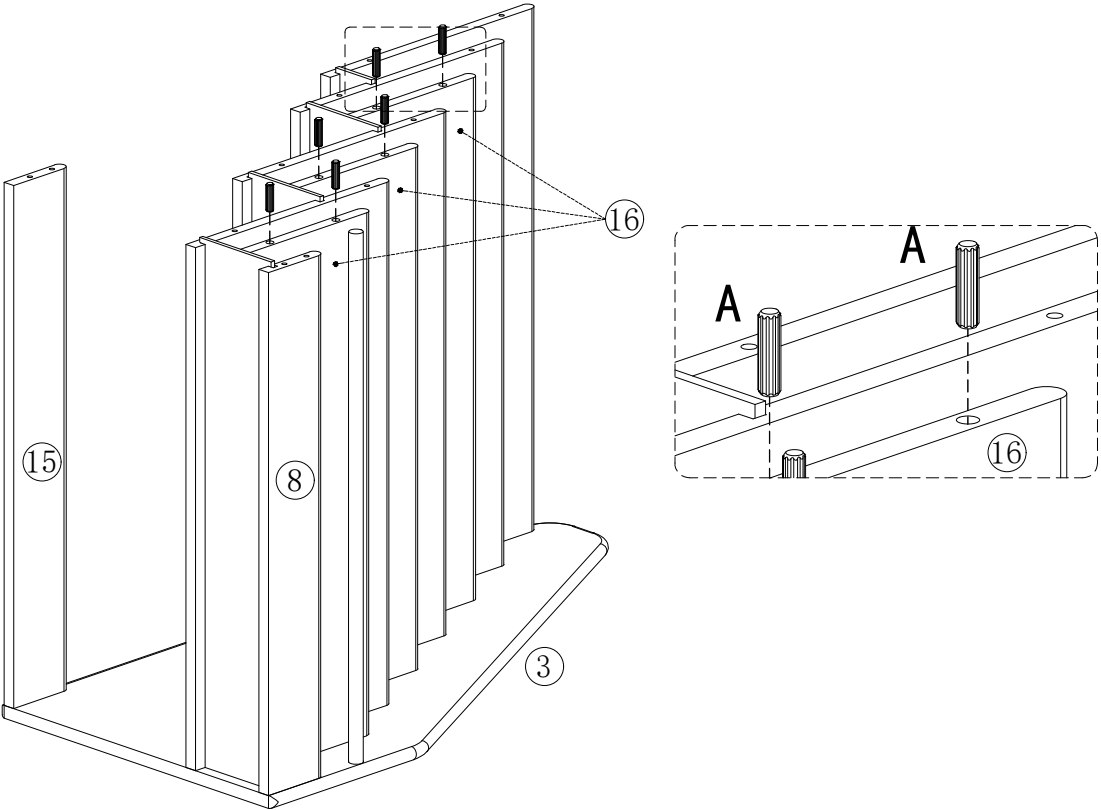

Insert the hardware A into the slot hole of parts 16 assembled in Step 4 as shown.

A		X6
---	---	----



Step 6

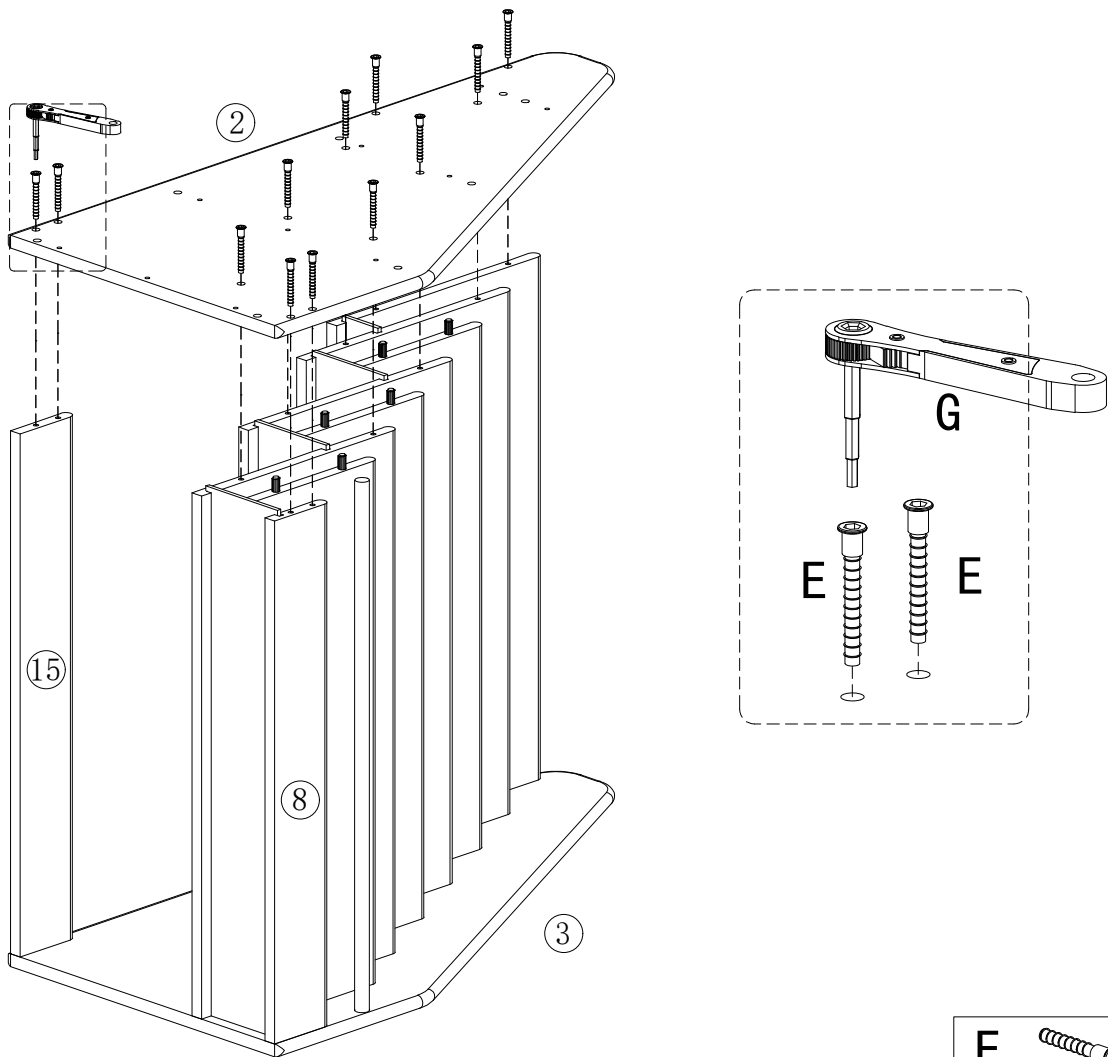

Assemble the components from Step 5 and parts 2 with hardware E using hardware G.

E		X12
G		X1



Step 7

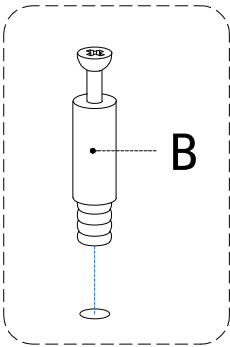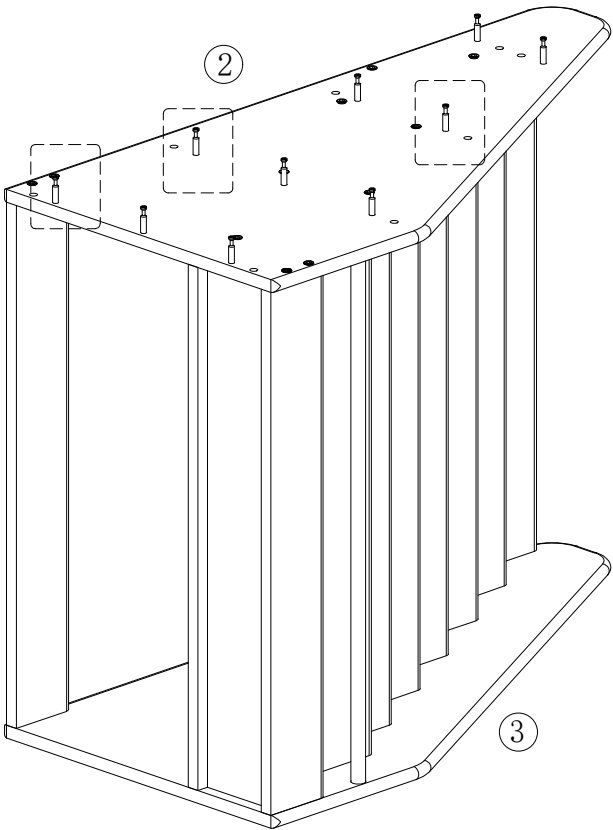

Secure the hardware B to the components from Step 5 using hardware F.

B		X10
F		X1



Step 8

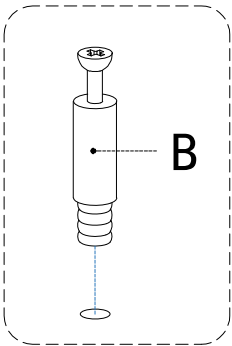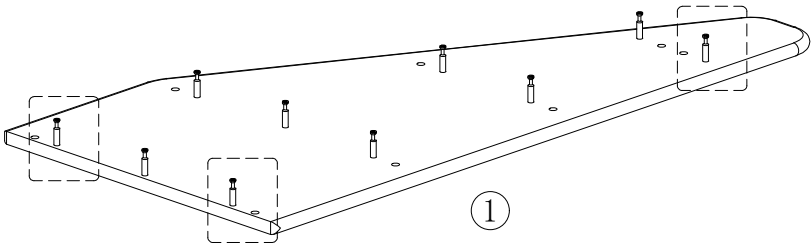


Secure the hardware B to the parts 1 using hardware F.

B		X10
F		X1



Step 9

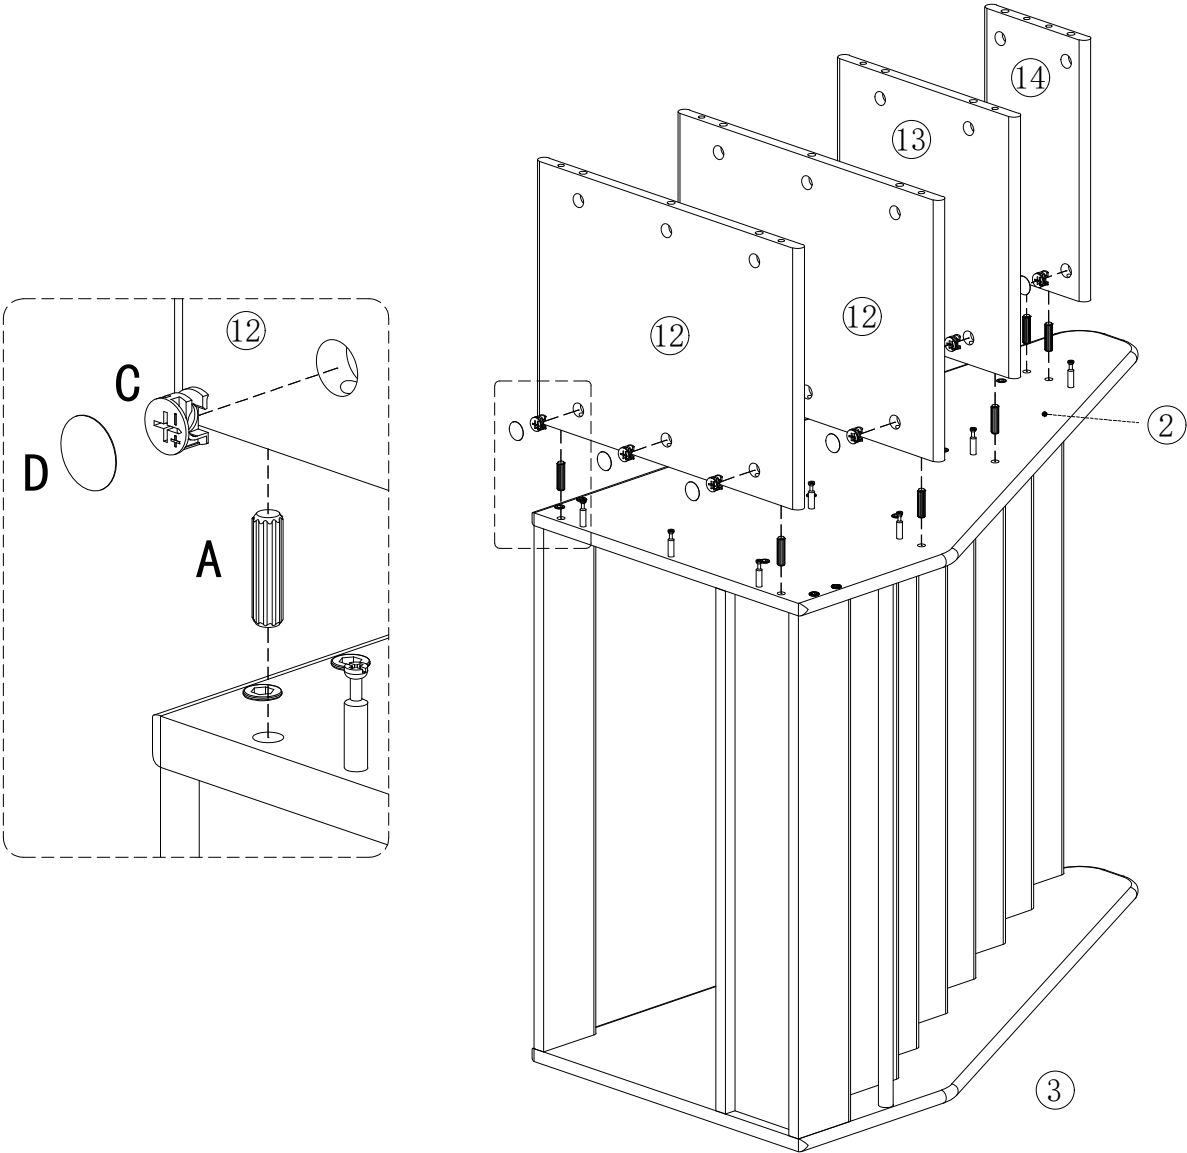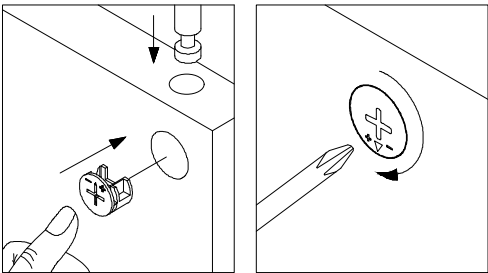


Assemble the components from Step 7 and parts 12/13/14 with hardware A/C using hardware F, then cover with hardware D.

A		X8
C		X10
D		X10
F		X1


Step 10

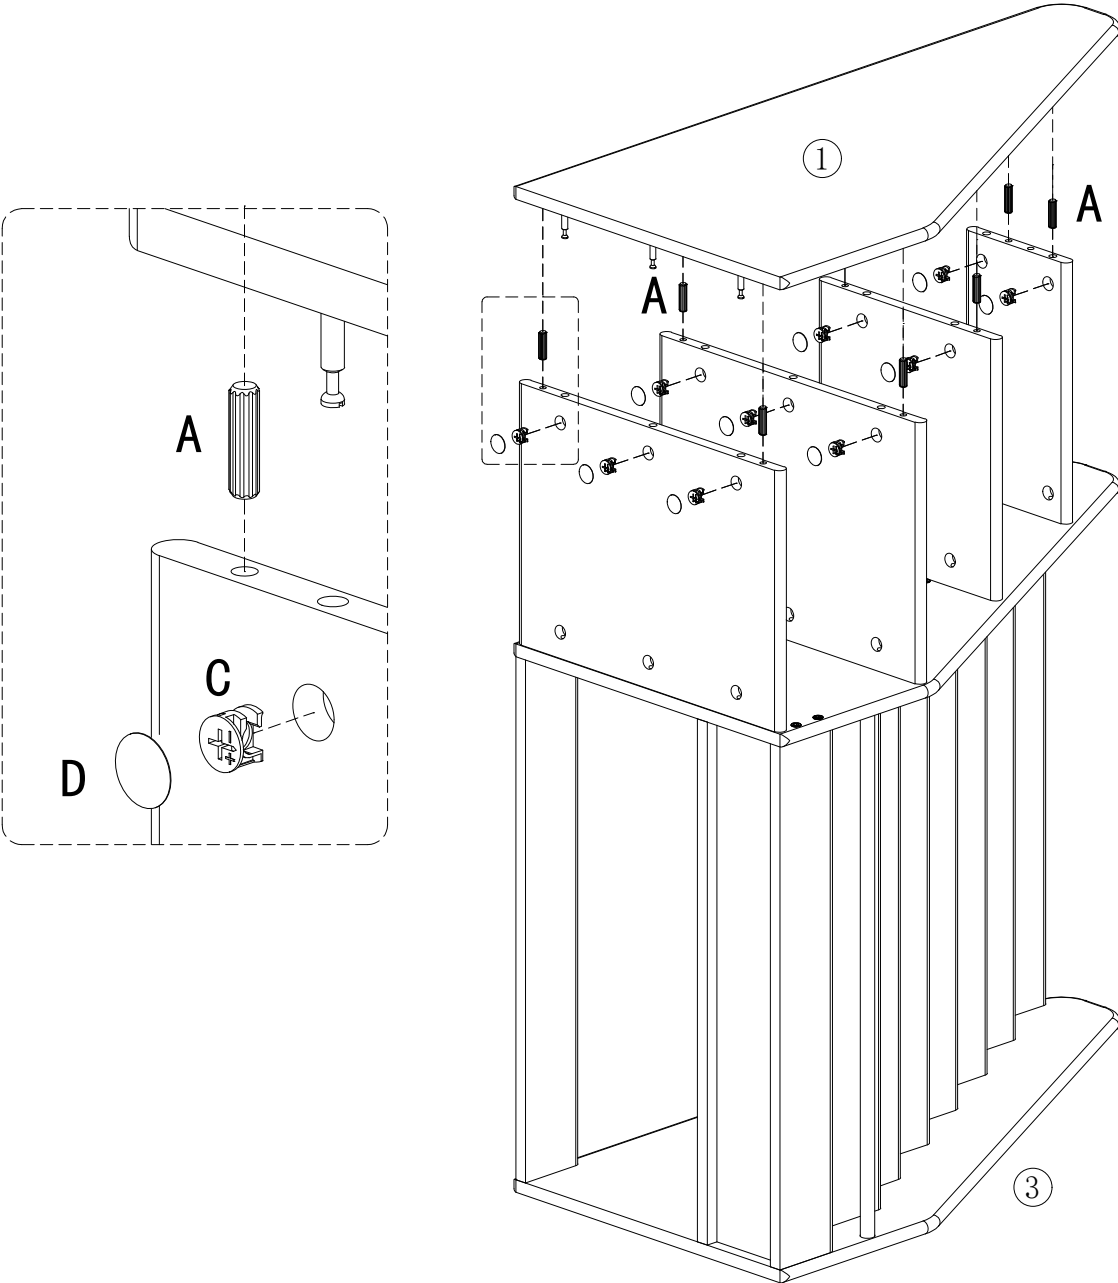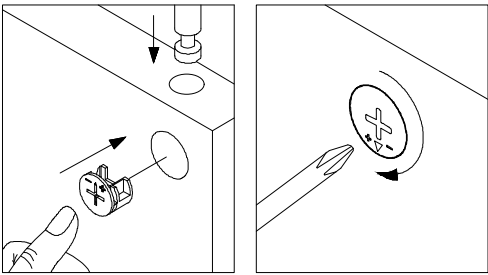

Assemble the components from Step 8 and Step 8 with hardware A/C using hardware F, then cover with hardware D.

A		X8
C		X10
D		X10
F		X1

Step 11

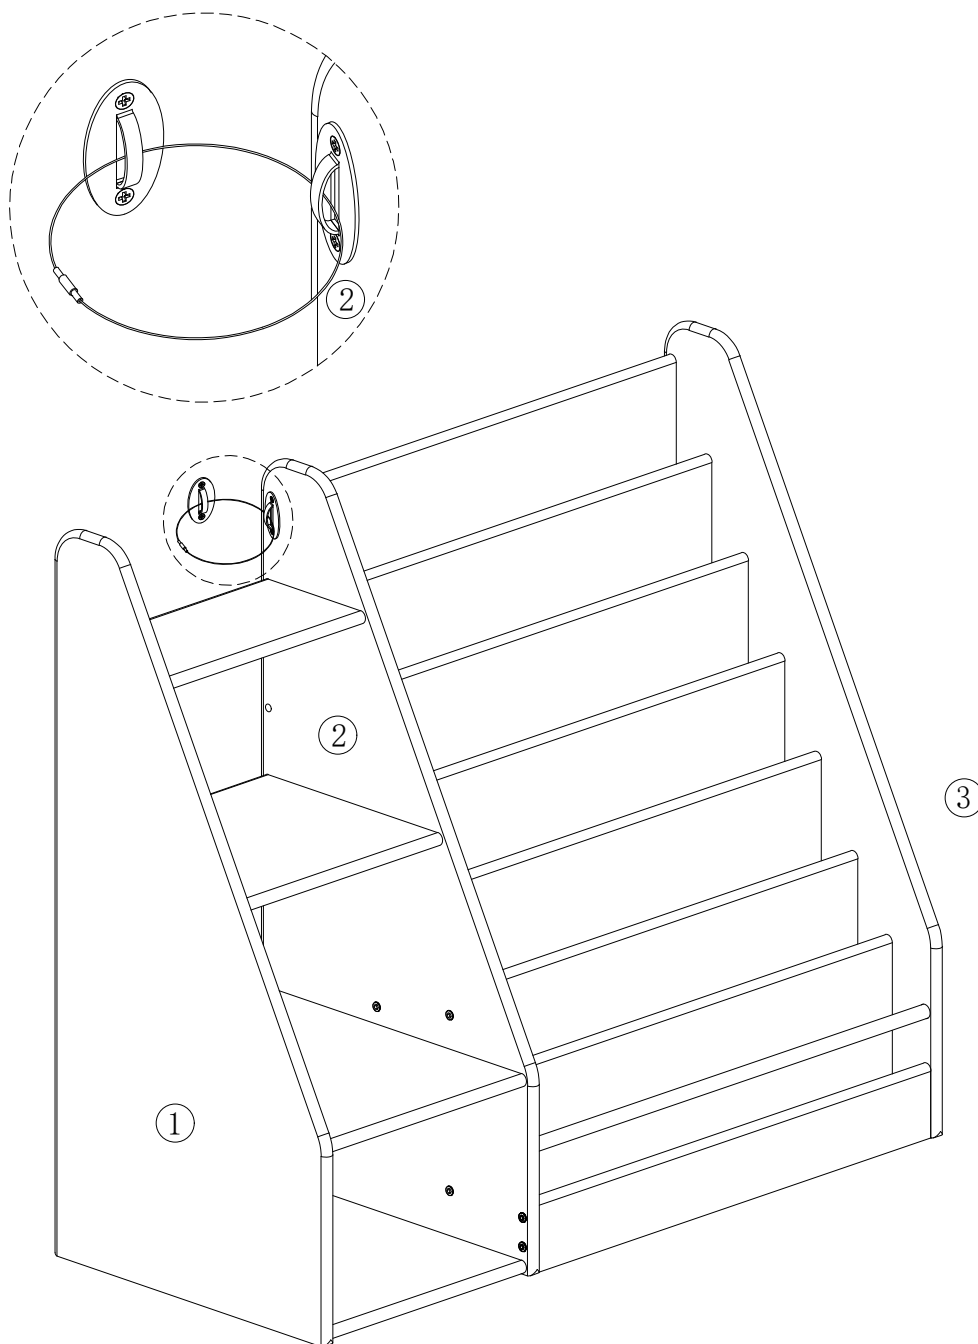

Place the assembled components from Step 10 as shown and secure them to the wall using hardware H.

H



X1