



SG019 Bookcase Model 019

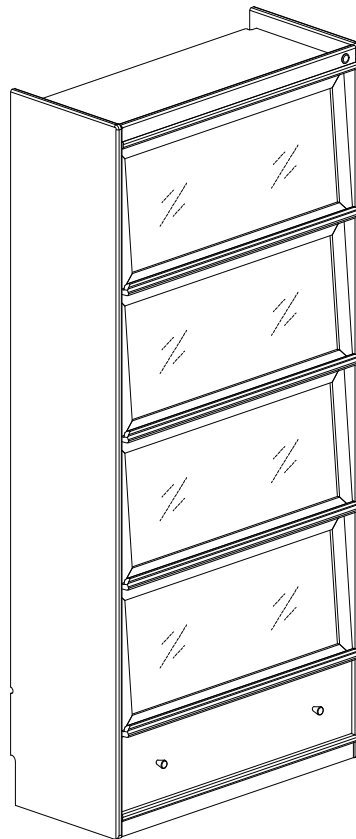

Installation Diagram
















Product Code: **SG019**

Specifications: **Bookcase Model 019**

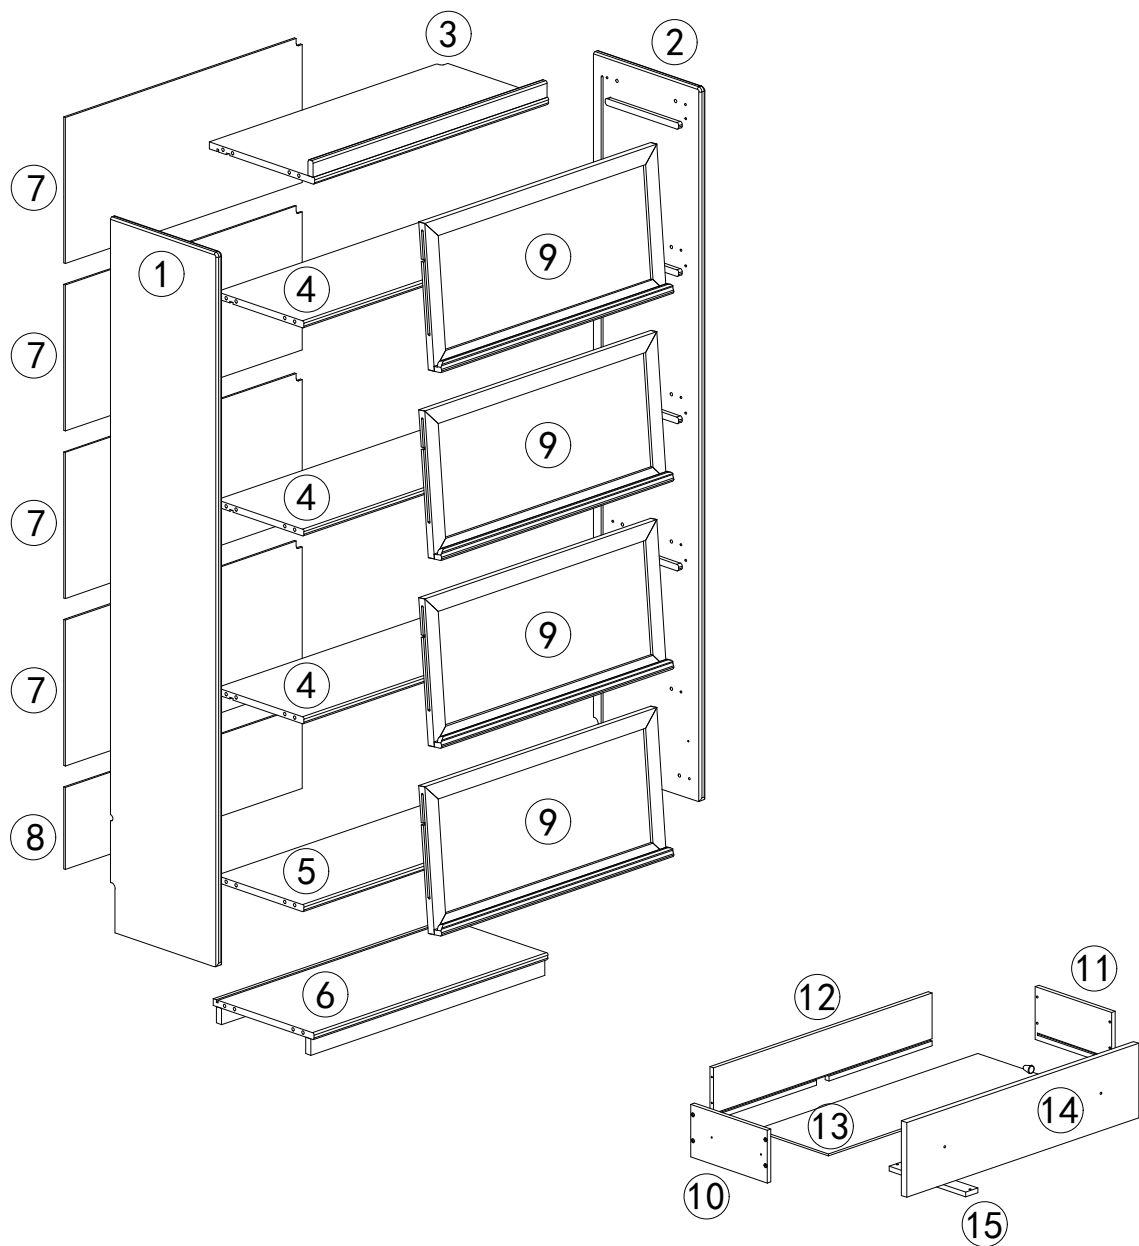










Specifications:Bookcase Model 019

Component List

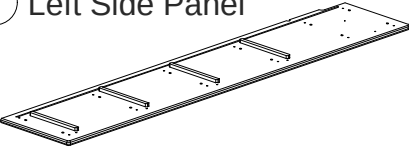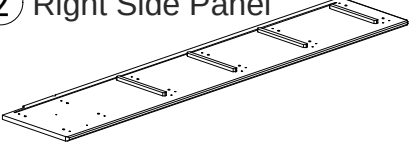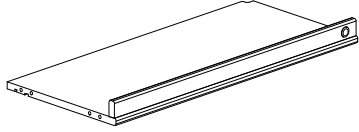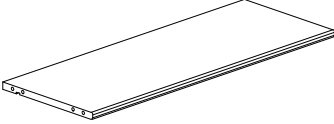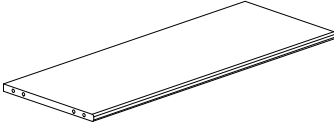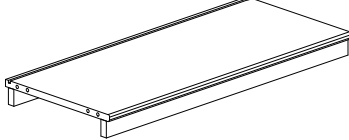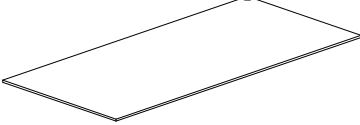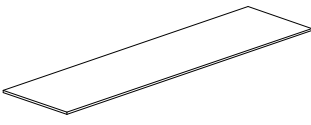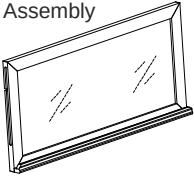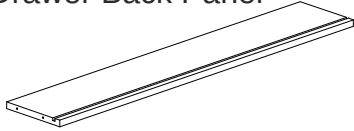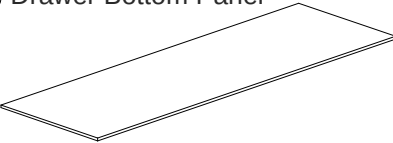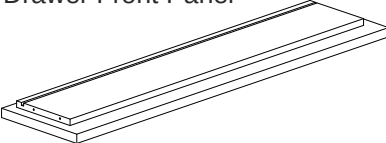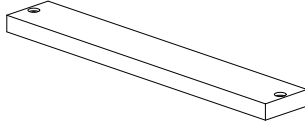① Left Side Panel  1760*350*17MM 1PC	② Right Side Panel  1760*350*17MM 1PC	③ Top Panel Assembly  766*345*57MM 1PC
④ Shelf  766*286*17MM 3PCS	⑤ Lower Shelf  766*286*17MM 1PC	⑥ Bottom Panel Assembly  766*286*57MM 1PC
⑦ Large Back Panel  776*360*5MM 4PCS	⑧ Small Back Panel  776*202*5MM 1PC	⑨ Door Frame Assembly  760*358*45MM 4PCS
⑩ Drawer Left Side Panel  250*130*12MM 1PC	⑪ Drawer Right Side Panel  250*130*12MM 1PC	⑫ Drawer Back Panel  716*130*12MM 1PC
⑬ Drawer Bottom Panel  726*236*5MM 1PC	⑭ Drawer Front Panel  760*184*29MM 1PC	⑮ Drawer Reinforcement Strip  250*40*20MM 1PC


Specifications: Bookcase Model 019

Hardware List


A Two-in-One Lock Handle  $\phi 15\text{MM}$ 24+3PCS	B Two-in-One Bolt  $L=35\text{MM}$ 24+3PCS	C Wood Dowel  $\phi 8*30\text{MM}$ 24+3PCS
D Huanmei Protective Pad  $\phi 20\text{MM}$ 24+3PCS	E Back Panel Clip  $13*13*9.5\text{MM}$ 26+3PCS	F Flat-Head Wood Screw  $\phi 3*15\text{MM}$ 38+4PCS
G Conical Handle  $\phi 20*23\text{MM}$ 2PCS	H Phillips Large Flat-Head Bolt  $M4*25\text{MM}$ 2+1PCS	I Three-Section Drawer Slide  $L200*45\text{MM}$ 1PC
J Flat-Head Wood Screw  $\phi 3.5*12\text{MM}$ 12+2PCS	K Door Frame Hinge  $\phi 5*25\text{MM}$ 8+1PCS	L Anti-Collision Rubber Pad  $\phi 8*3\text{MM}$ 8+1PCS
M Anti-Tip Hardware  2SET	N Non-Woven Fabric Pad  $\phi 20*3\text{MM}$ 4+1PCS	O Flat-Head Self-Tapping Screw  $\#8*30\text{MM}$ 10+2PCS
P Power Plug  1PC	Q Phillips Screwdriver  $M6*128\text{MM}$ 1PC	

Attention


Using appropriate screws can prevent damage to these components

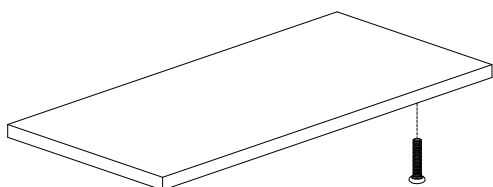

Example

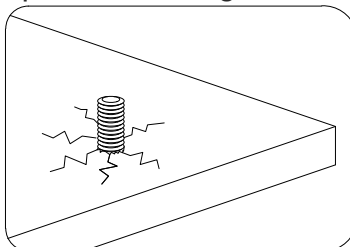


Incorrect: The screw may cause the wooden board to split

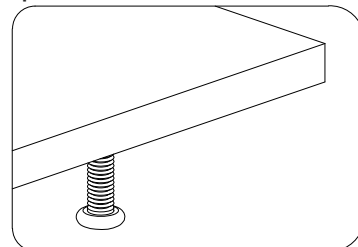


Correct: The screw is of the correct size


How to use the cam lock system

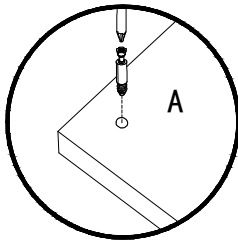


1. Screw cam bolt into panel

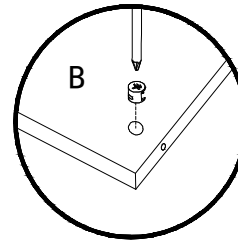


2. Push cam into panel - arrow feature on cam top points to panel edge

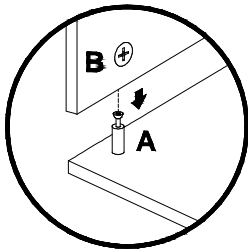

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

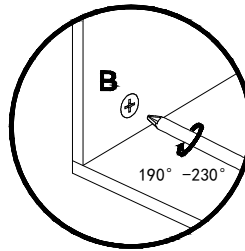


4. Rotate cam(s) clockwise 190°-230° to lock panels together

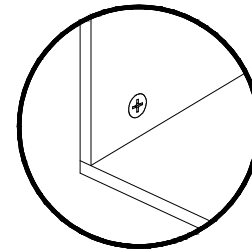

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

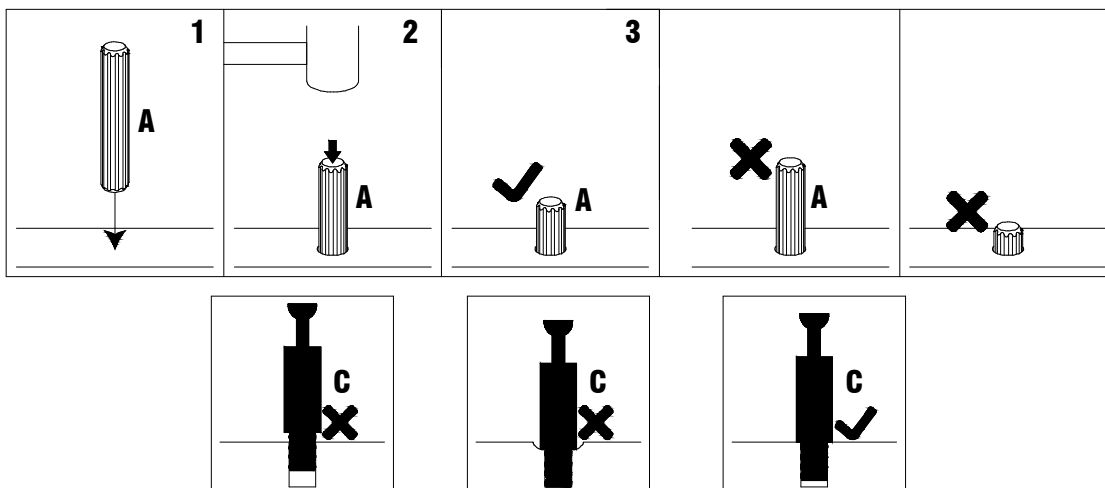

⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Specifications:Bookcase Model 019

Step 1

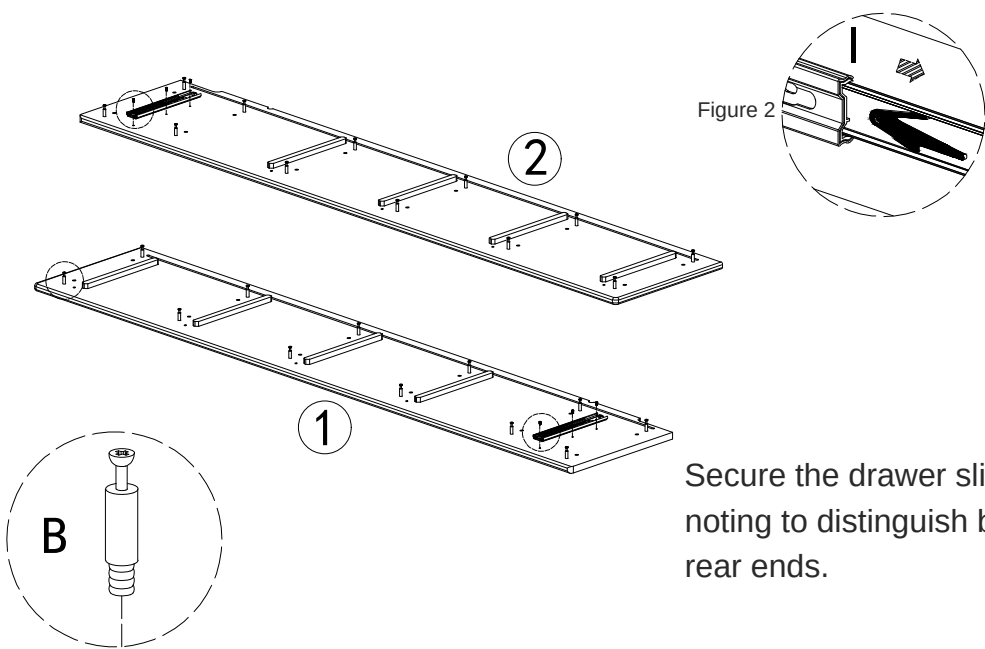


Figure 1

Figure 2


Pull the drawer slide outward by the black plastic part as shown in the figure below.

Secure the drawer slide with Screw J, noting to distinguish between the front and rear ends.

B		24PCS
I		1PC
J		12PCS
Q		1PC

►As shown:1. As shown in Figure 1: Secure Hardware B onto Component 1/2 with Hardware Q.2. As shown in Figure 2: First disassemble Drawer Slide I, then align the holes of the disassembled wider slide section with the holes on Component 1/2 , and secure them with Hardware J/Q.

Step 2

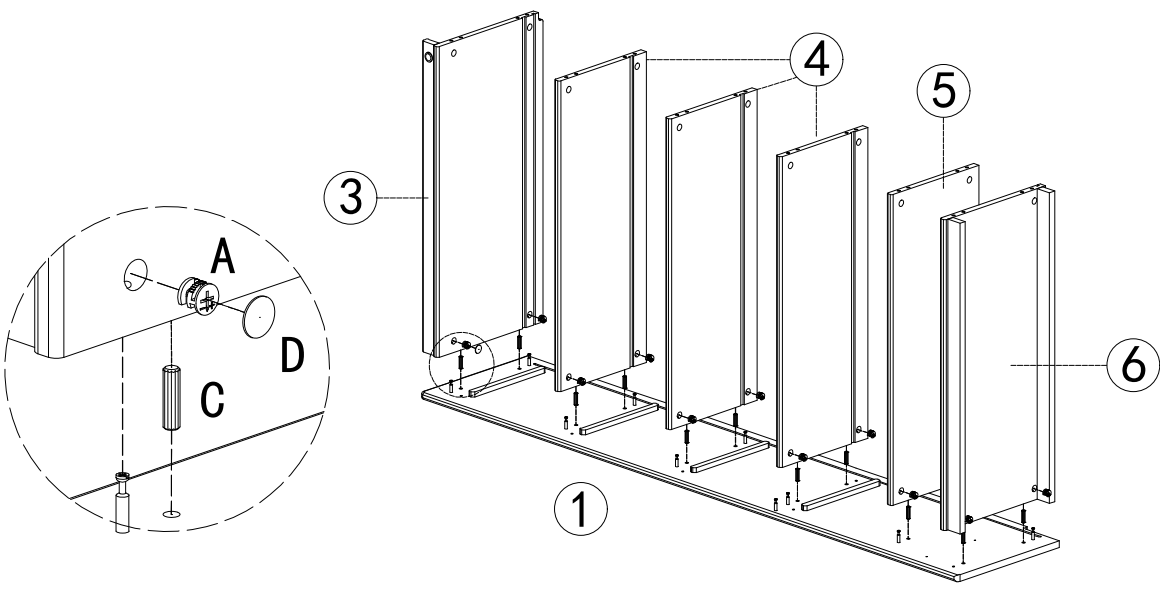

As shown in the figure: Connect Component 1/3/4/5/6 with Hardware A/C/Q, then cover the holes with Hardware D.

A		12PCS
C		12PCS
D		12PCS
Q		1PC

Specifications:Bookcase Model 019

Step 3

Figure 1



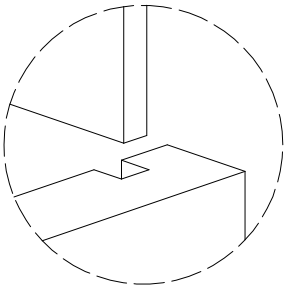




Figure 2

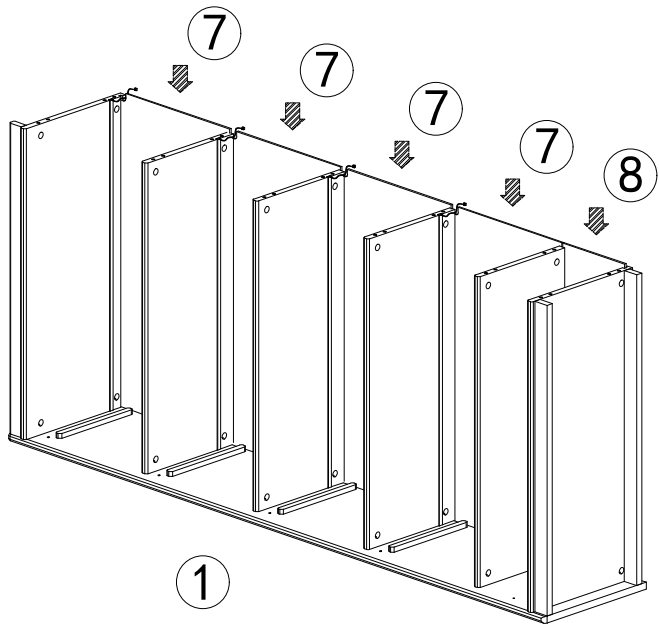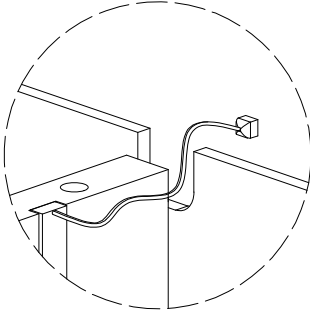

►As shown in Figure 1: Insert Back Panel 7/8 into the component assembled in Step 2. Note that the notch of Back Panel 7 is at the top right corner.

As shown in Figure 2: Pull the wire connector of the LED Strip Light out to the back side through the notch at the top right end of Back Panel 7.

Step 4

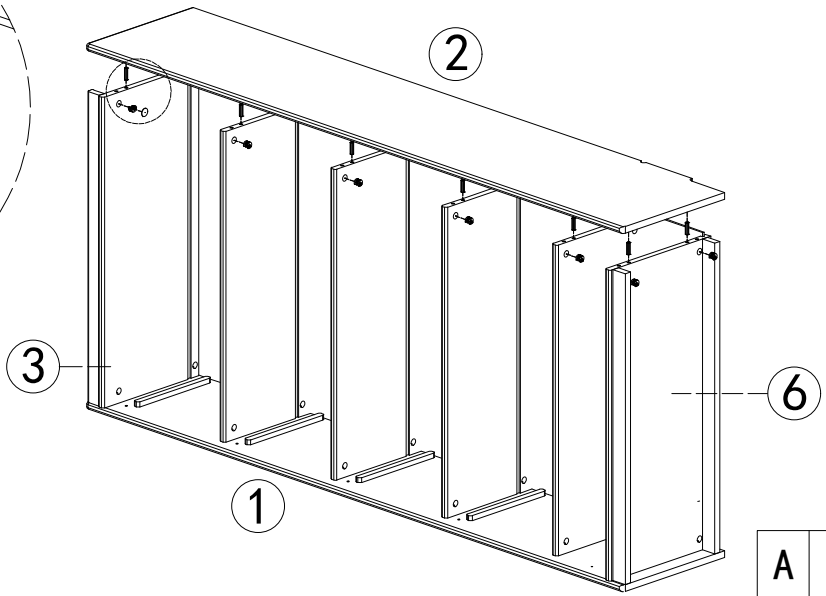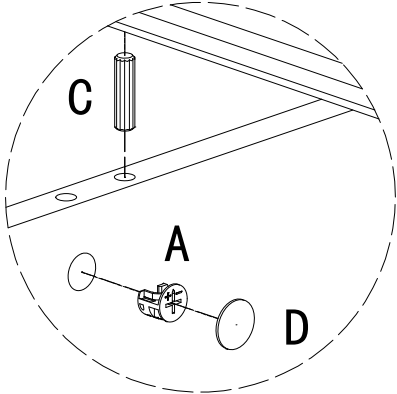


A		12PCS
C		12PCS
D		12PCS
Q		1PC

►As shown in the figure: Connect Component 2 with the component assembled in Step 3 using Hardware A/C/Q, then cover the holes with Hardware D.

Specifications:Bookcase Model 019


Step 5

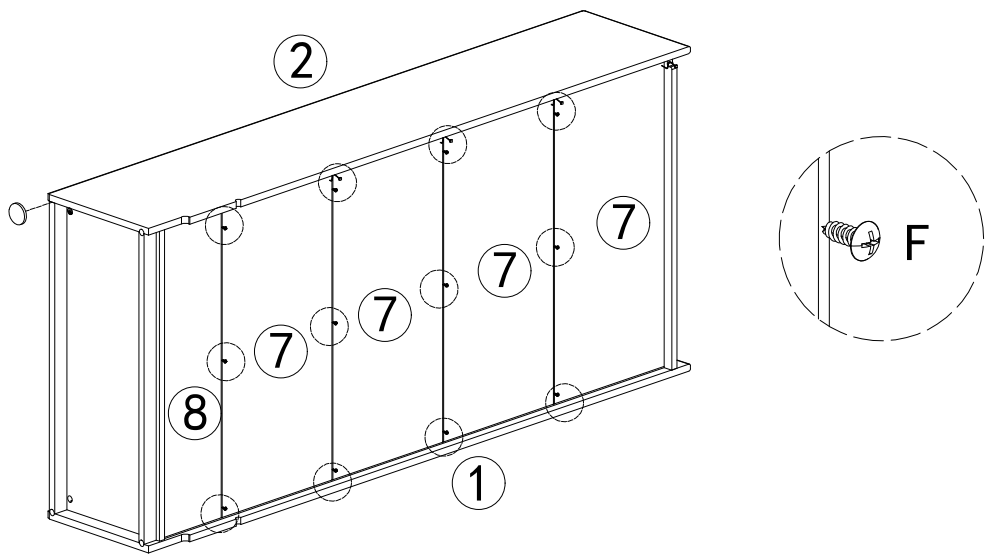

►As shown in the figure: Secure Back Panel 7 and Back Panel 8 to Shelf 4 and Shelf 5 using Hardware F.


F		12PCS
Q		1PC

Step 6

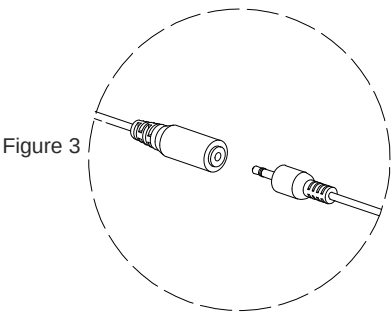

Connect the Control Switch to the Power Socket and plug in the power supply.

Figure 2



As shown in the figure: Connect the wire connector of the LED Strip Light for each layer to the Control Switch Connector.


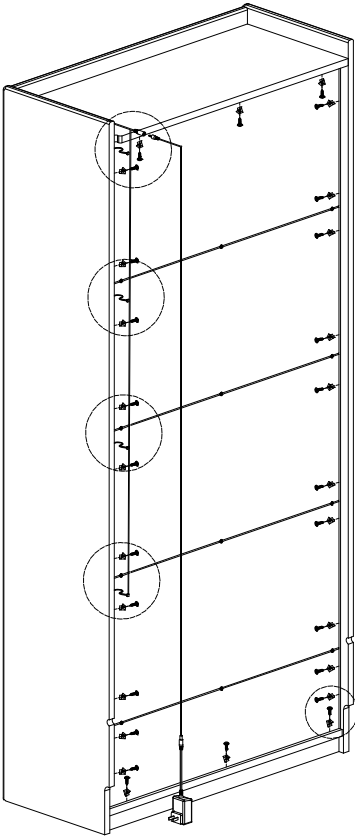


Figure 1

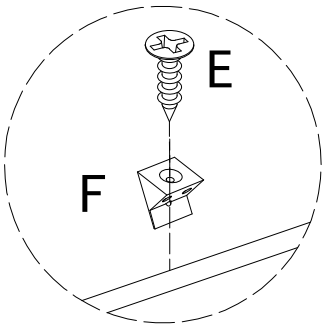


►As shown in the figures: 1. Reinforce the Back Panels with Hardware E/F/Q (Figure 1); 2. Connect the LED Strip Light to the Control Switch (Figure 2) and the Control Switch to the Power Socket (Figure 3); 3. Plug in the power supply.

E		26PCS
F		26PCS
Q		1PC

Specifications:Bookcase Model 019

Step 7

First insert Hardware K into the holes on Component 1/2, then align the door frame slot with Hardware K and install Cabinet Door 9 onto the component assembled in Step 6.

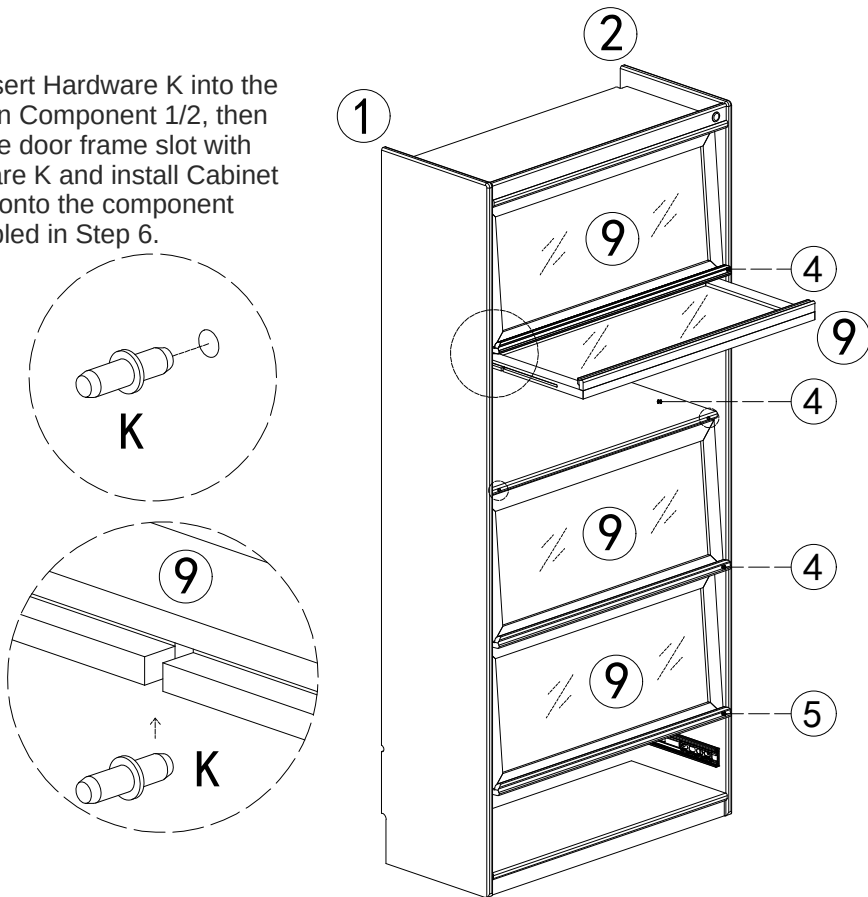


Attach Hardware L onto both ends of Component 4/5 respectively. Flip up the cabinet door until it is parallel to Component 4, then push the door panel inward to hide it.

►As shown in the figure: Install Hardware K onto the left and right side panels, mount Component 9 (the door), then attach Anti-Collision Rubber Pad L to the front ends of both sides of Component 4/5.

K		8PCS
L		8PCS

Step 8

Note to distinguish between the front and rear ends when installing the drawer slides.

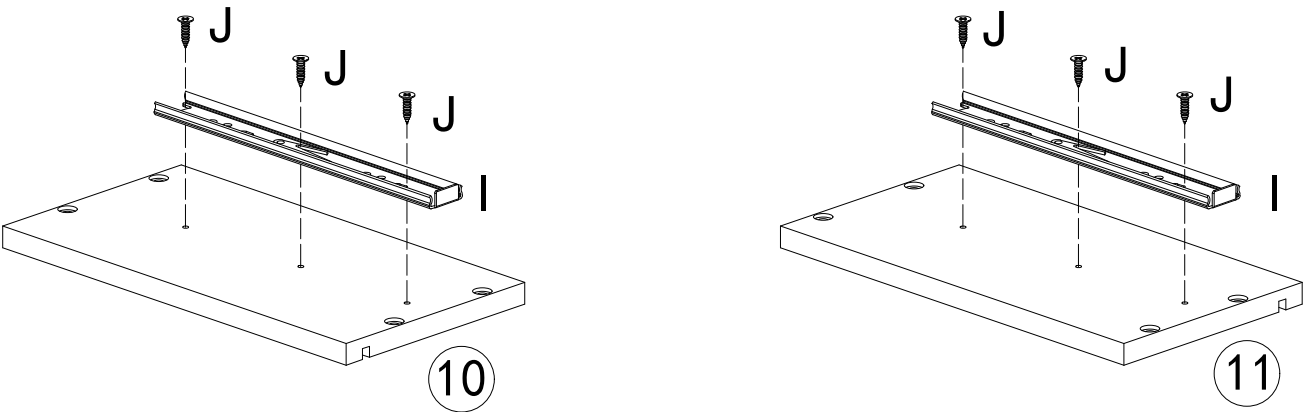

►As shown in the figure: Align the narrow Drawer Slide I (disassembled in Step 1) with the holes on Component 10/11, then secure it with Hardware J/Q.

J		12PCS
Q		1PC

Specifications:Bookcase Model 019

Step 9

Figure 1

Figure 2

G		2PCS
H		2PCS
O		8PCS
Q		1PC

►As shown in Figure 1: First connect Component 10/11/14 with Hardware O, then insert Component 13, and finally connect Component 12 with Hardware O/Q.

►As shown in Figure 2: Secure Hardware G onto Component 14 with Hardware H/Q.

Step 10

►As shown in the figure: Flip over the drawer assembled in Step 9, then connect Component 17 with Hardware O/Q.

O		8PCS
Q		1PC

Specifications:Bookcase Model 019

Step 11

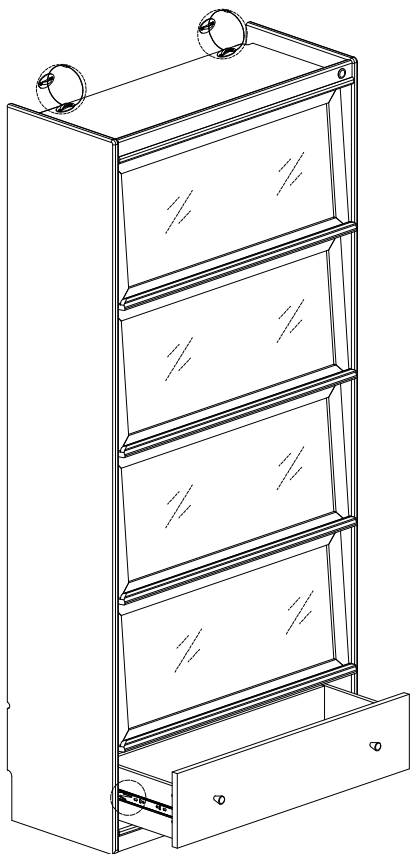


Figure 2


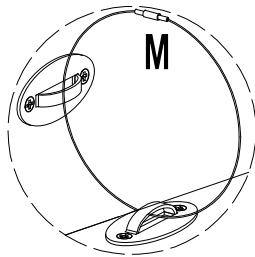



Figure 1

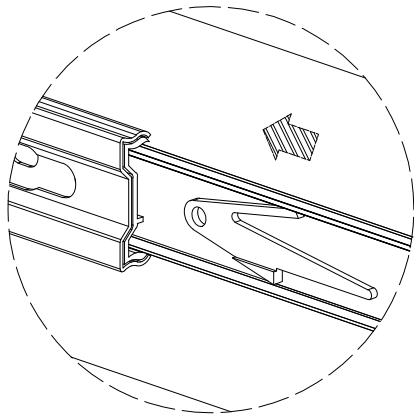

►As shown in the figures: 1. Pull out the drawer slides on the left and right side panels, then install the drawer assembled in Step 9 into the cabinet body. Note that the drawer slides need to be pushed in multiple times (Figure 1). 2. Secure the cabinet body to the wall using Anti-Tip Hardware M (Figure 2).

M		2SET
Q		1PC

Step 12

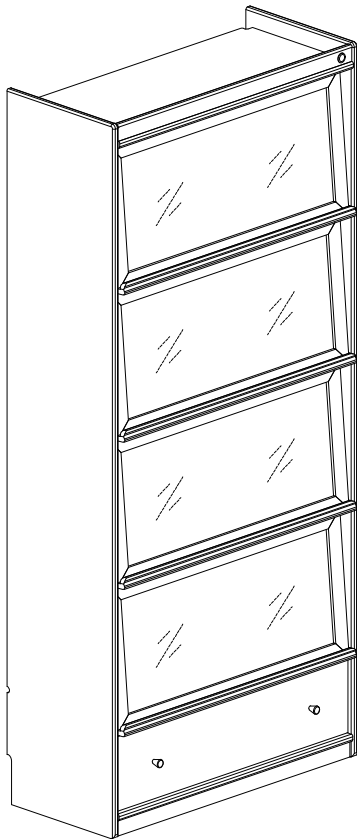

►As shown in the figure: Connect Hardware P (Power Plug), and assembly is completed.

P		1PC
---	---	-----