



SJ056 书架

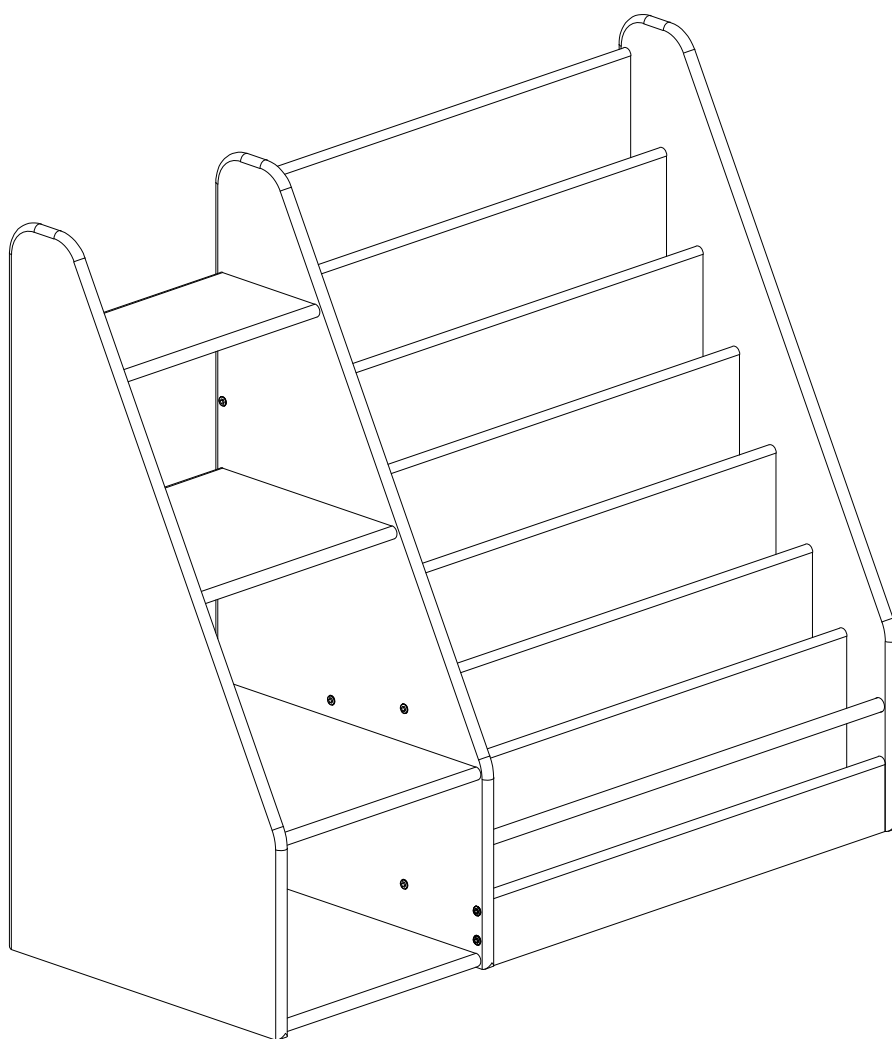















安 装 示 意 图

货品编号: SJ056

规格名称: 书架

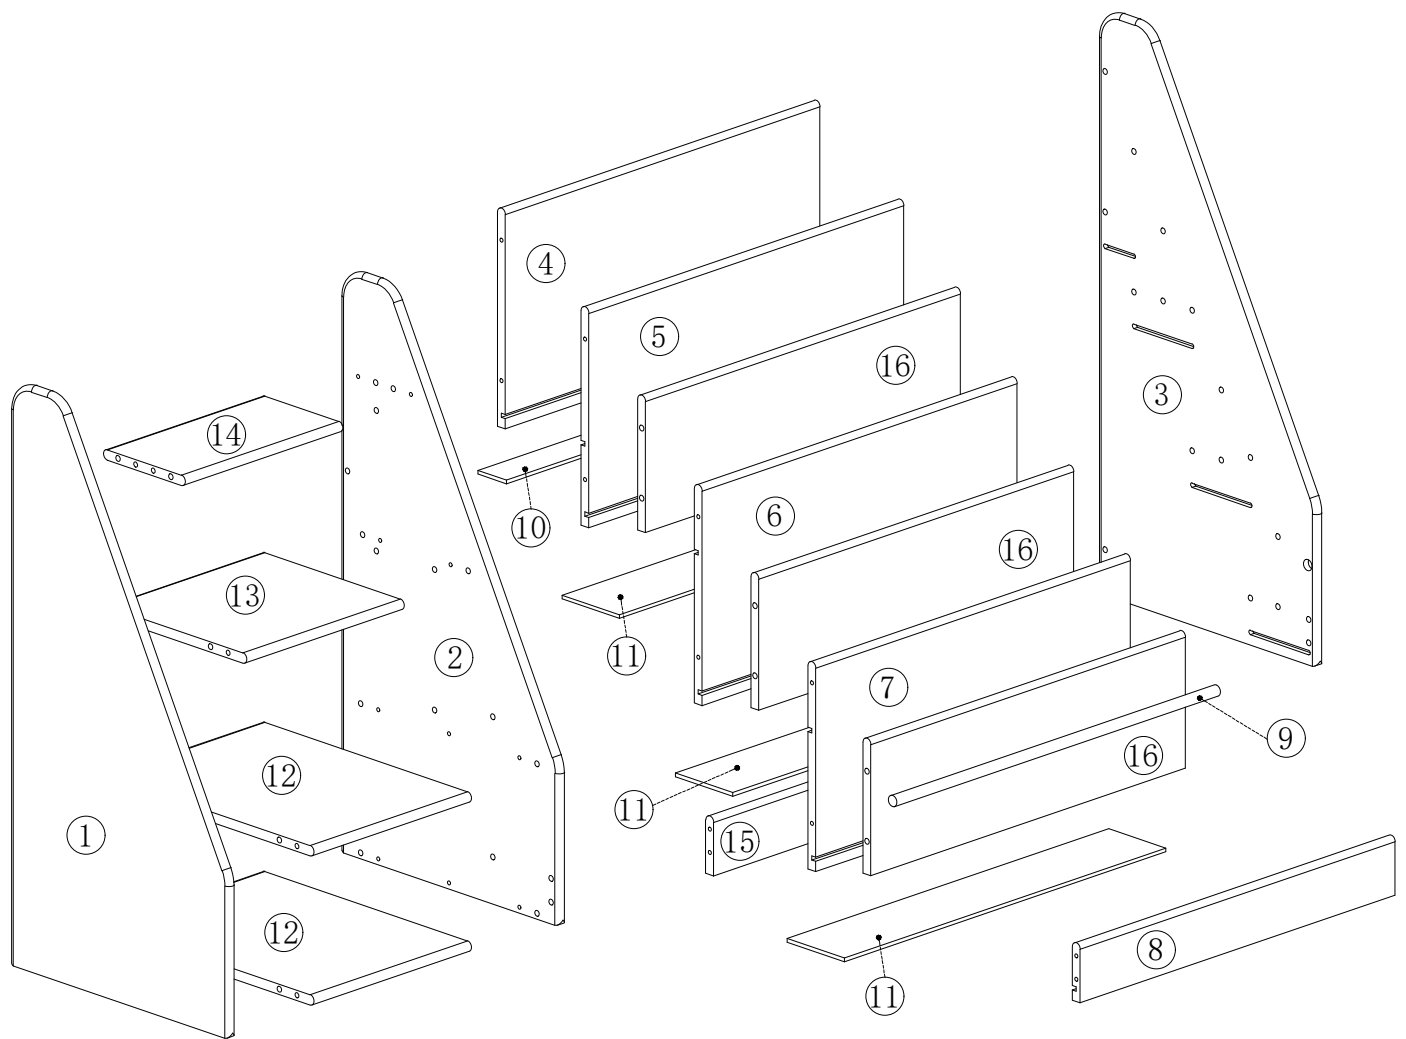


部 件 表

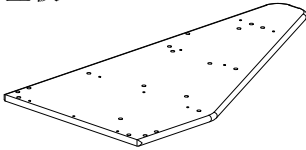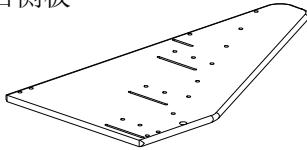
① 左侧板  800*395*14MM 1PC	② 中竖板  800*395*14MM 1PC	③ 右侧板  800*395*14MM 1PC
④ 后横板  572*275*14MM 1PC	⑤ 中后横板  572*275*14MM 1PC	⑥ 中前横板  572*275*14MM 1PC
⑦ 前横板  572*275*14MM 1PC	⑧ 前拉条  572*80*14MM 1PC	⑨ 圆棍  588*ϕ15MM 1PC
⑩ 右上层板  584*52*5MM 1PC	⑪ 右下层板  584*104*5MM 3PCS	⑫ 左下层板  286*382*14MM 2PCS
⑬ 左中层板  286*260*14MM 1PC	⑭ 左上层板  286*148*14MM 1PC	⑮ 后拉条  572*80*14MM 1PC
⑯ 档板  572*161*14MM 3PCS		

注 意


用合适的螺丝能预防损坏这些组件

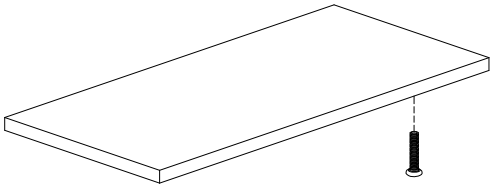

示例

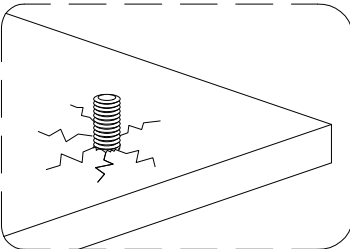


错误：螺丝会导致木板裂开

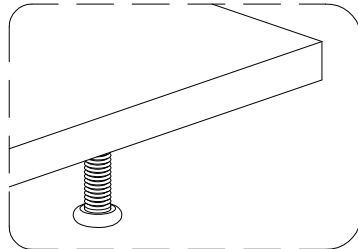


正确：螺丝是正确尺寸


How to use the cam lock system

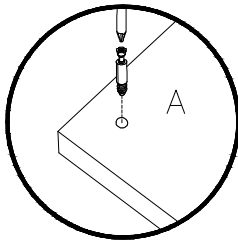


1. Screw cam bolt into panel

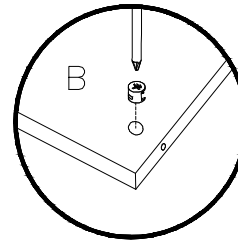


2. Push cam into panel - arrow feature on cam top points to panel edge

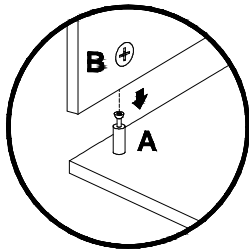

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

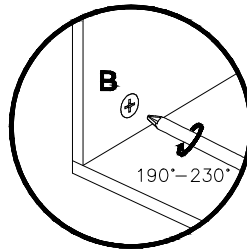


4. Rotate cam(s) clockwise 190°-230° to lock panels together

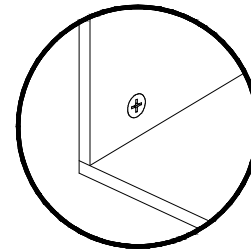

5. Panels should be tight against each other and connection should be rigid







Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

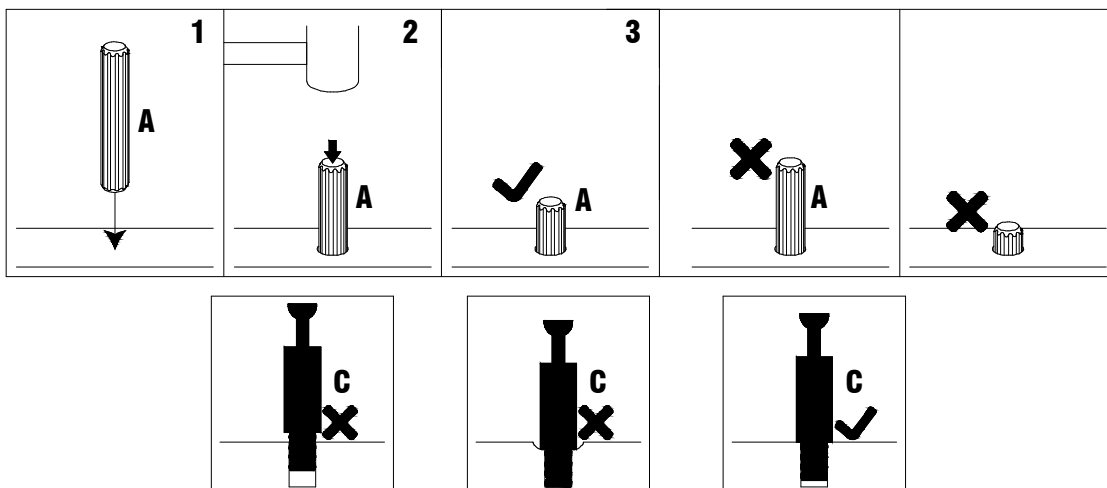

⚠ WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

五金表

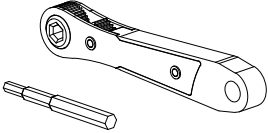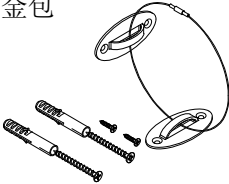A 木榫  8*30MM28+2PCS	B 二合一螺杆  L=35mm20+2PCS	C 二合一锁柄  15MM20+2PCS
D 环美贴  20MM20+2PCS	E 内六角过山丝  M7*30MM24+2PCS	F 十字螺丝刀  6*128MM1PC
G 棘轮扳手  M4*50MM1套	H 防倒五金包  1套	

规格名称：书架

Step 1

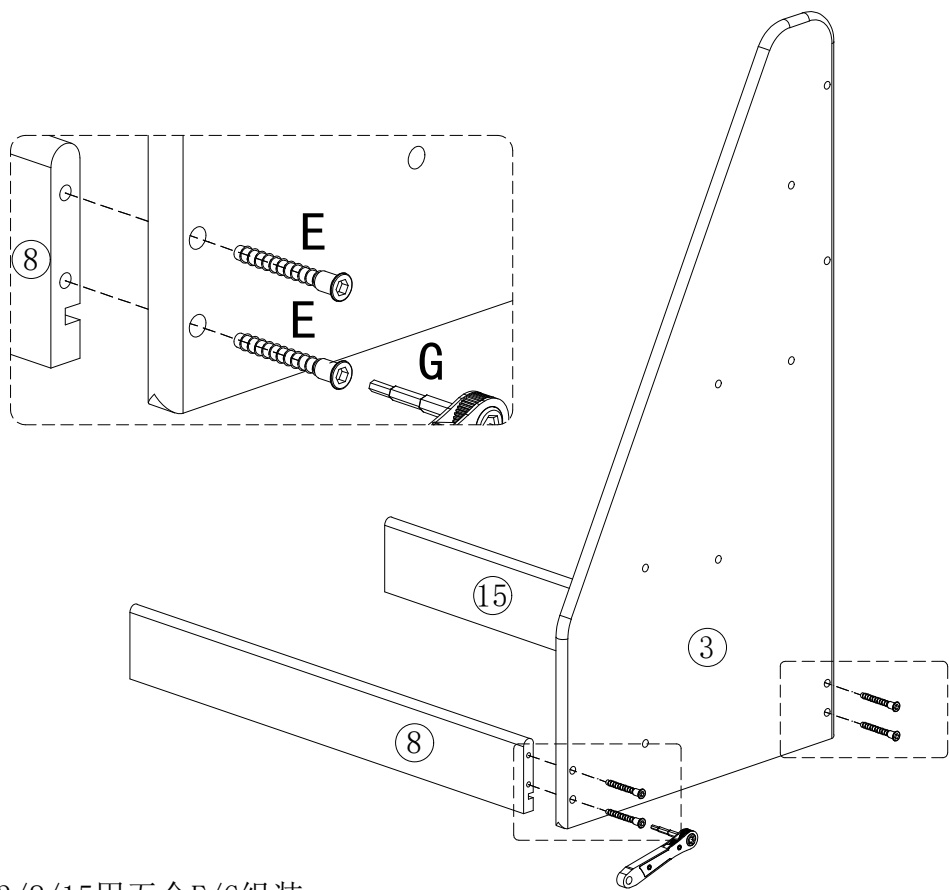


►如图：将部件3/8/15用五金E/G组装。

E		X4
G		X1

Step 2

安装时注意各部件槽的方向

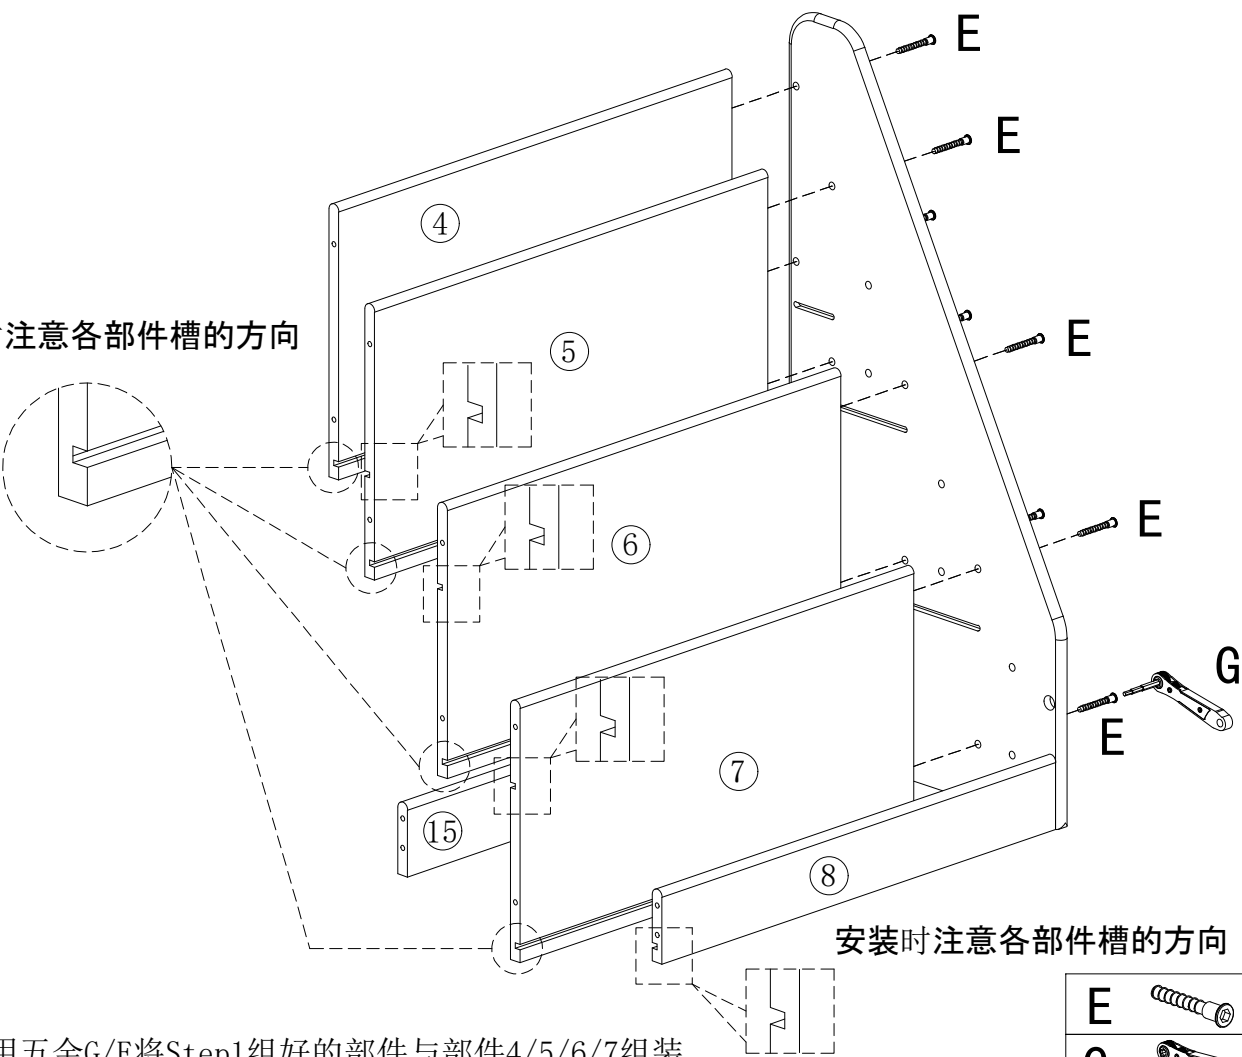


安装时注意各部件槽的方向

►如图：用五金G/E将Step1组好的部件与部件4/5/6/7组装。

E		X8
G		X1


Step 3

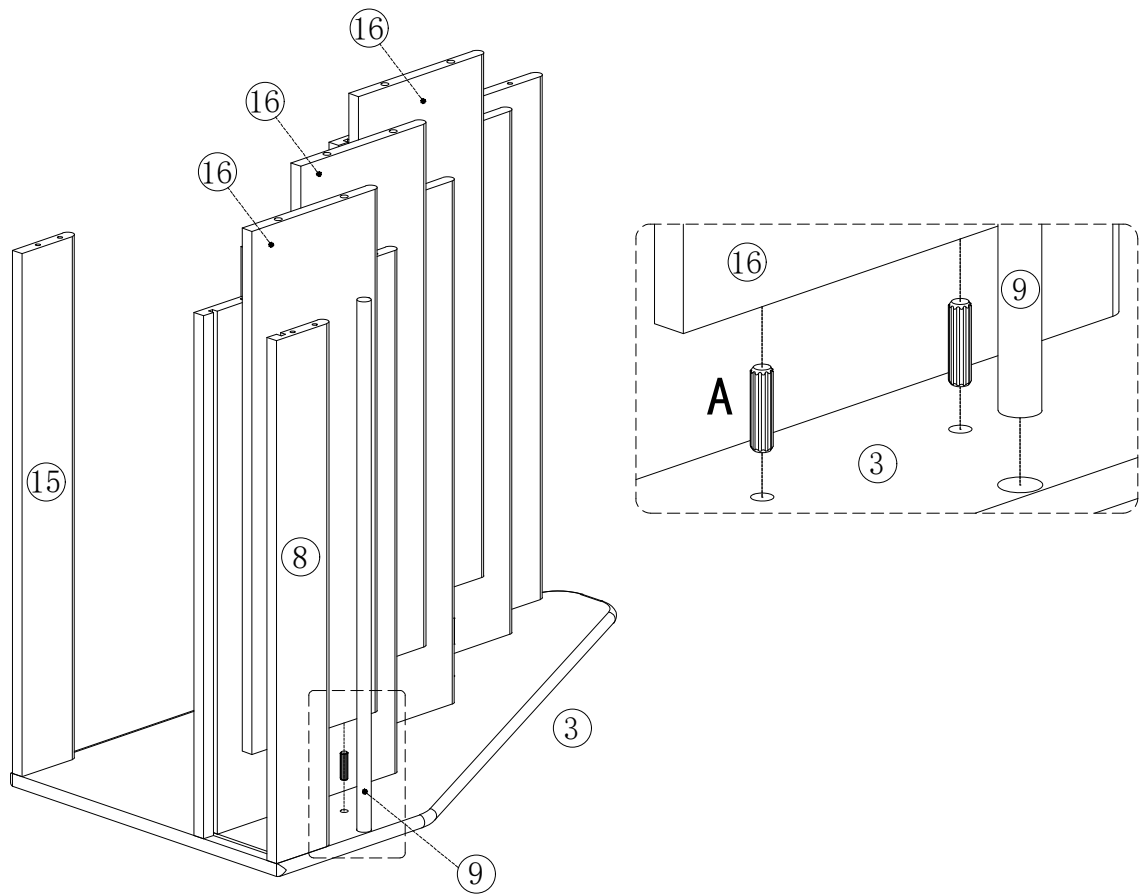

►如图:将Step2组好的部件如图放好，插放部件9，再用五金A将部件16组装。


A  x6

Step 4

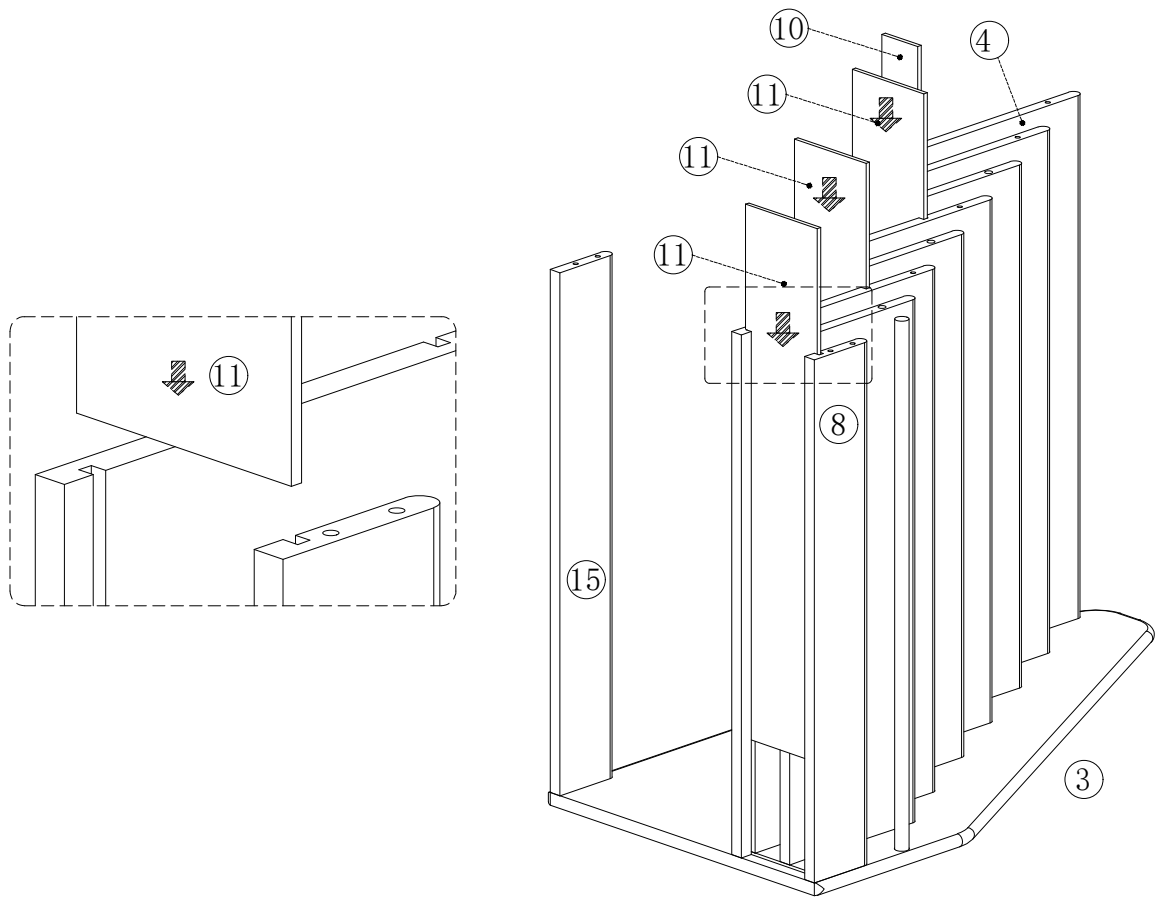

►如图:将10/11号部件插入Step3组好的部件。


Step 5

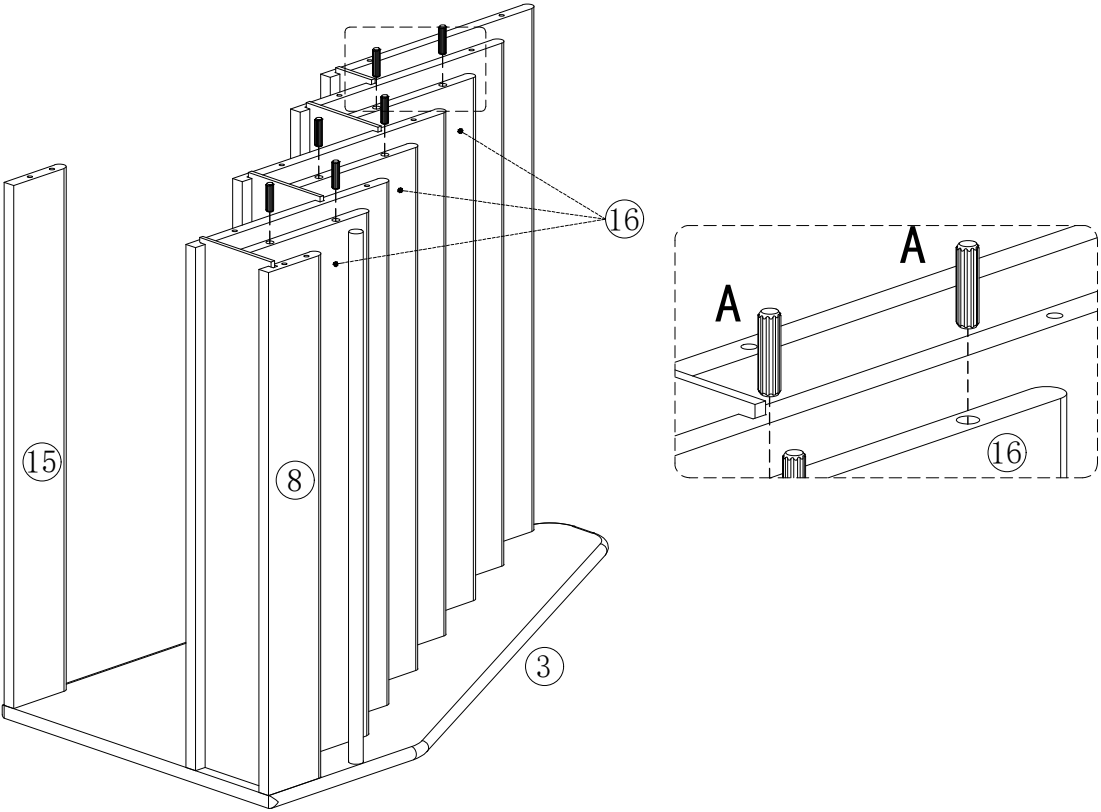

►如图:将五金A插入Step4组好的部件16如图所示位置。

A  X6



Step 6

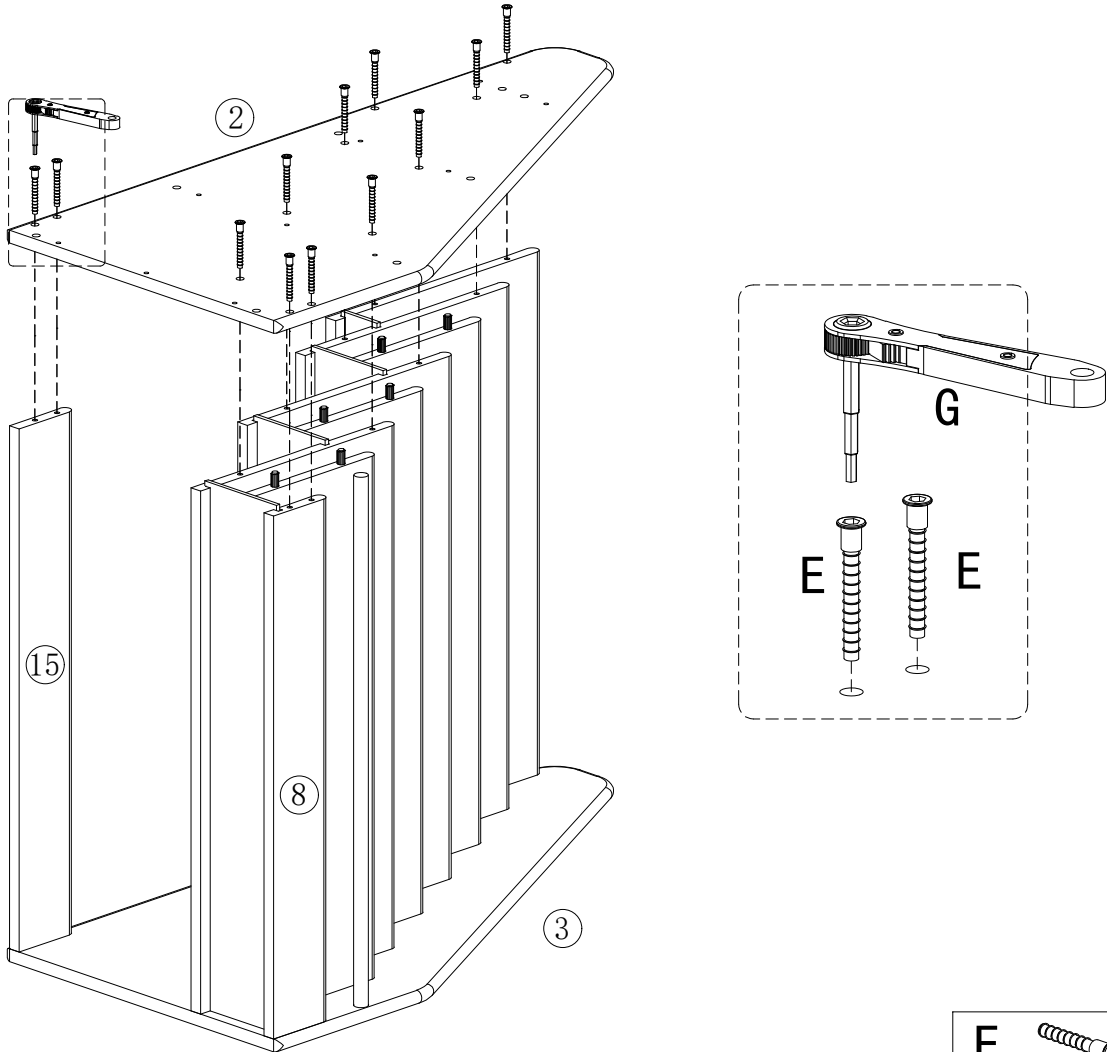


►如图:用五金E/G将Step5组好的部件和部件2组装。

E  X12
G  X1



Step 7

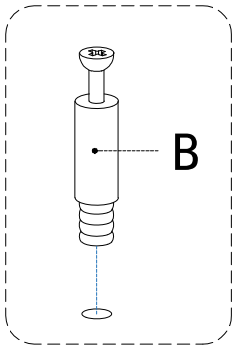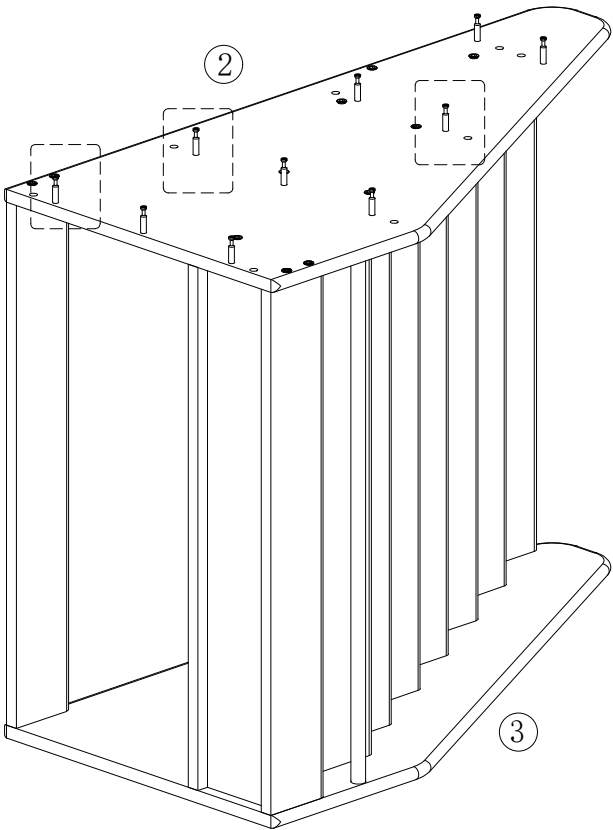


►如图:用工具F将五金B固定在Step7组好的2号部件上。

B		X10
F		X1




Step 8

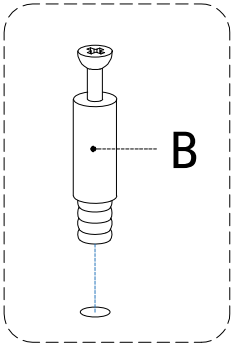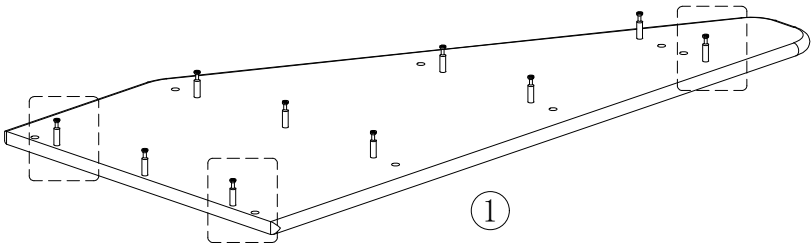


►如图:用工具F将五金B固定在1号部件上。

B		X10
F		X1




Step 9

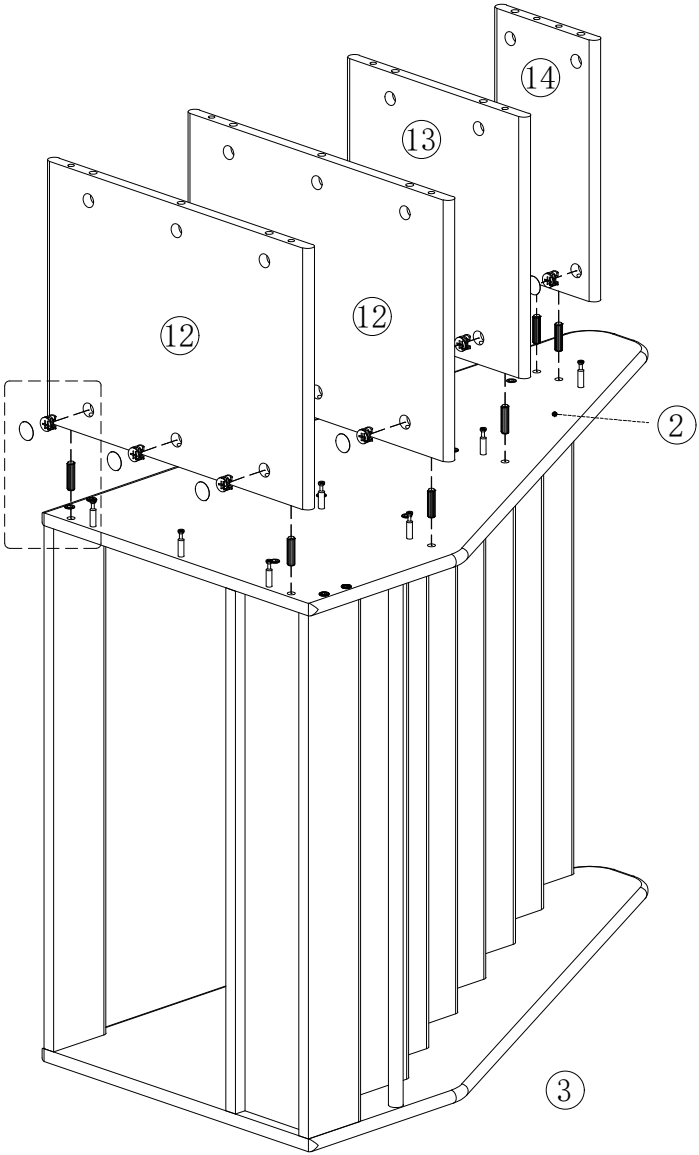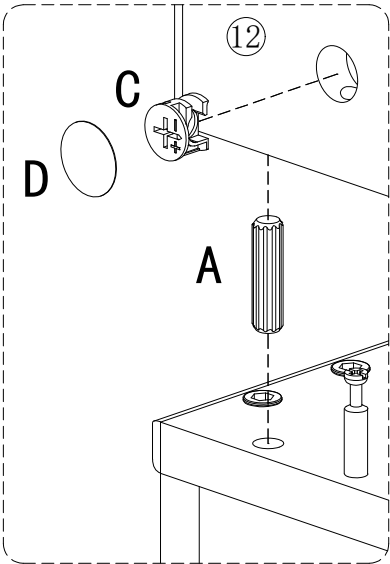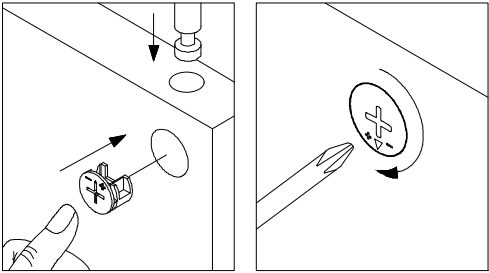


►如图:将Step7组好的部件与部件12/13/14用五金A/C/F组装，再用D盖住。

A		X8
C		X10
D		X10
F		X1


Step 10

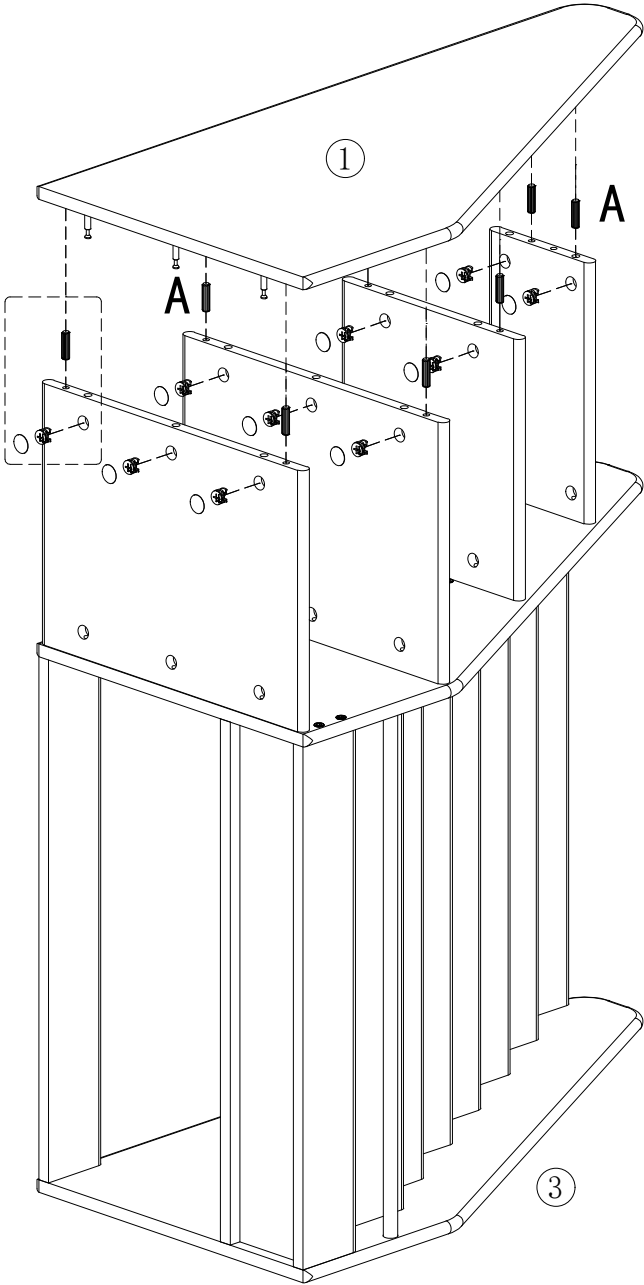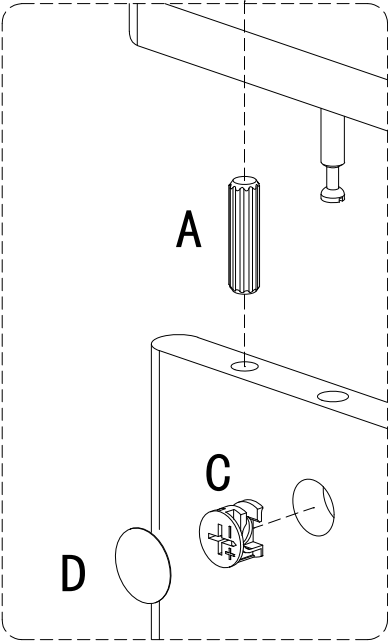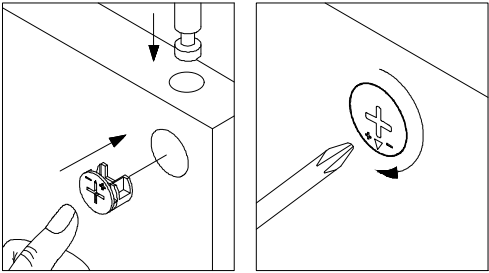

►如图:将Step8/Step9组好的部件用五金A/C/F组装，再用D盖住。

A		X8
C		X10
D		X10
F		X1

Step 11

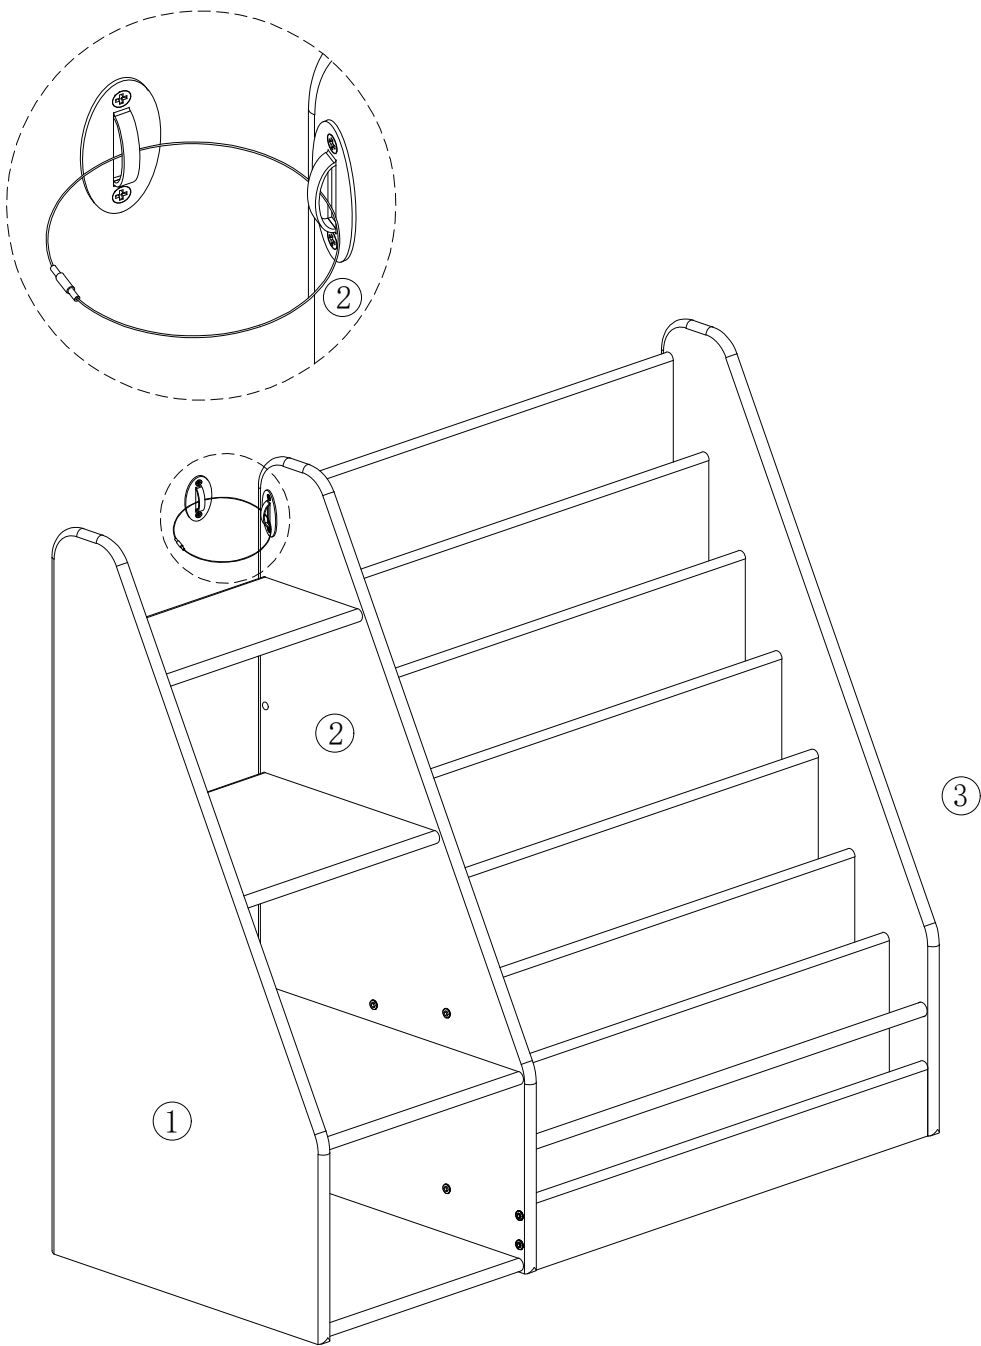

►如图:将Step10组好的部件如图放好，用五金H固定在墙上。