

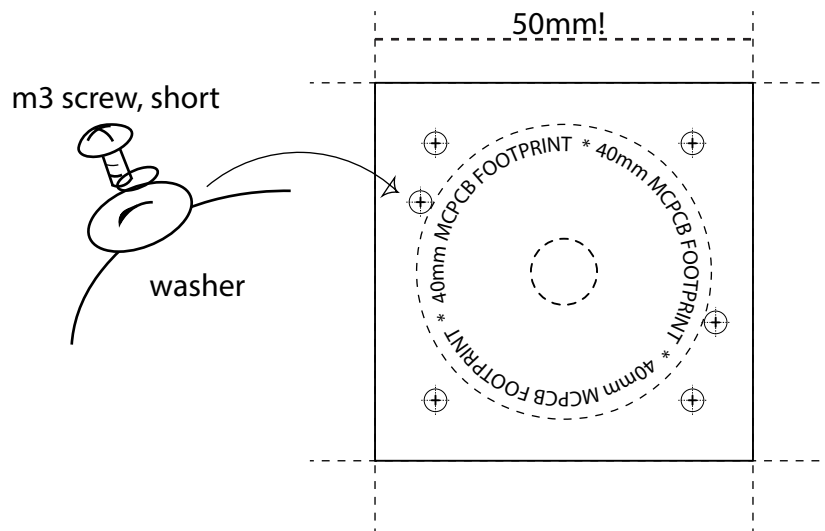
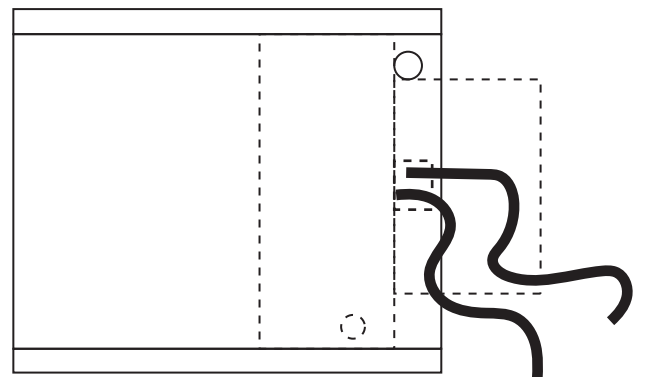
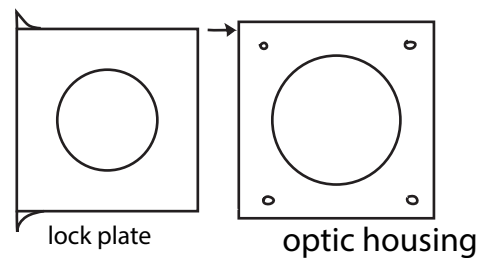


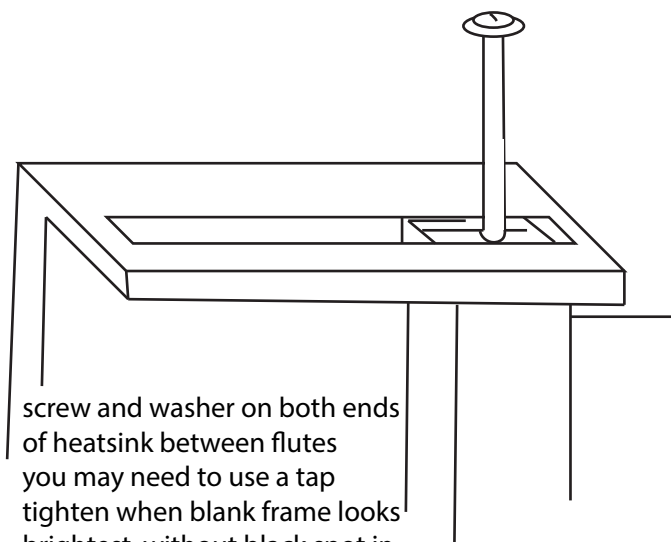

M3 TAP!
#39 tap pilot
hole
USE OIL!!

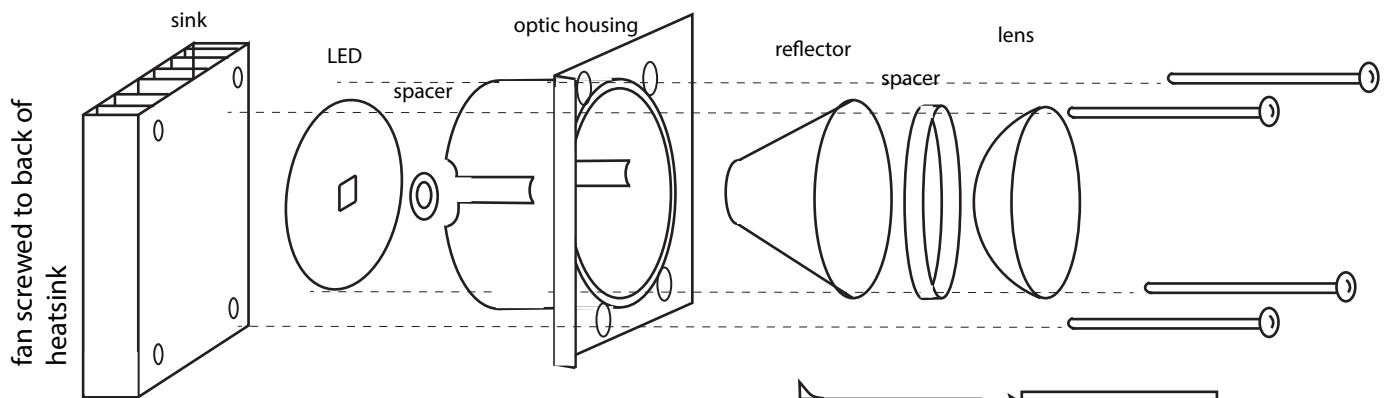

positive and negative wire should come out of a slot on collimation optic bracket