
E4P Assembly Instructions

Step 1:


Place base over shaft. Secure base to mounting surface using two screws. (Centering tool optional)

Transfer Adhesive: Peel off paper backing, place centering tool into center hole of base, slip centering tool onto shaft and slide base and centering tool down onto mounting surface as one piece. Press to form a good bond, then slip centering tool off shaft and continue with standard mounting instructions.

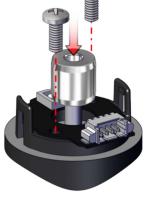

Step 2:

Place codewheel onto shaft with pattern-side down towards base.

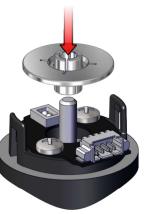

Step 3:

Position spacer/installation tool onto codewheel. Spacer/installation tool provides a nominal air gap of 0.08". Press down firmly until tool bottoms out on base latches.



E4P Assembly Instructions

Step 4:

Snap cover down onto base. With thumb and finger, squeeze base latches together to ensure they are fully engaged with the cover.



Step 5: Attach cable.

