
Preventing Power Meter Faults During Unoccupied

In Drivers / OnyxxNetwork / EdgeIO / Points:

Create an AND from all ZonenCommand.Out to ensure that all are called for.

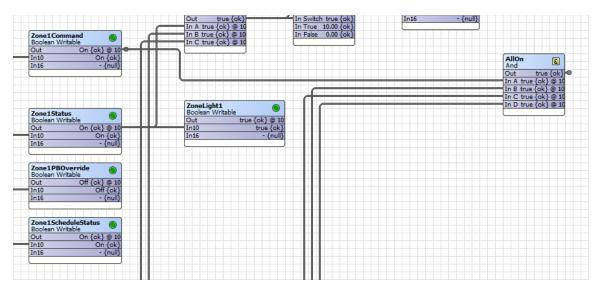

In Drivers / ModbusAsyncNetwork / Scoutn / Points:

Create another AND which is linked to from NumberMeters.Out (or the identically-placed GreaterThan in successive Scouts) as well as the just-created AND in OnyxxNetwork.

Link its output to the NumericSwitch.In Switch that NumberMeters.Out used to link to.

