


OmniStep 2.0
How to launch with
KAT Industry 2.0.8

Step A.01 [PC] SteamVR



Step A.02 [PC] SteamVR

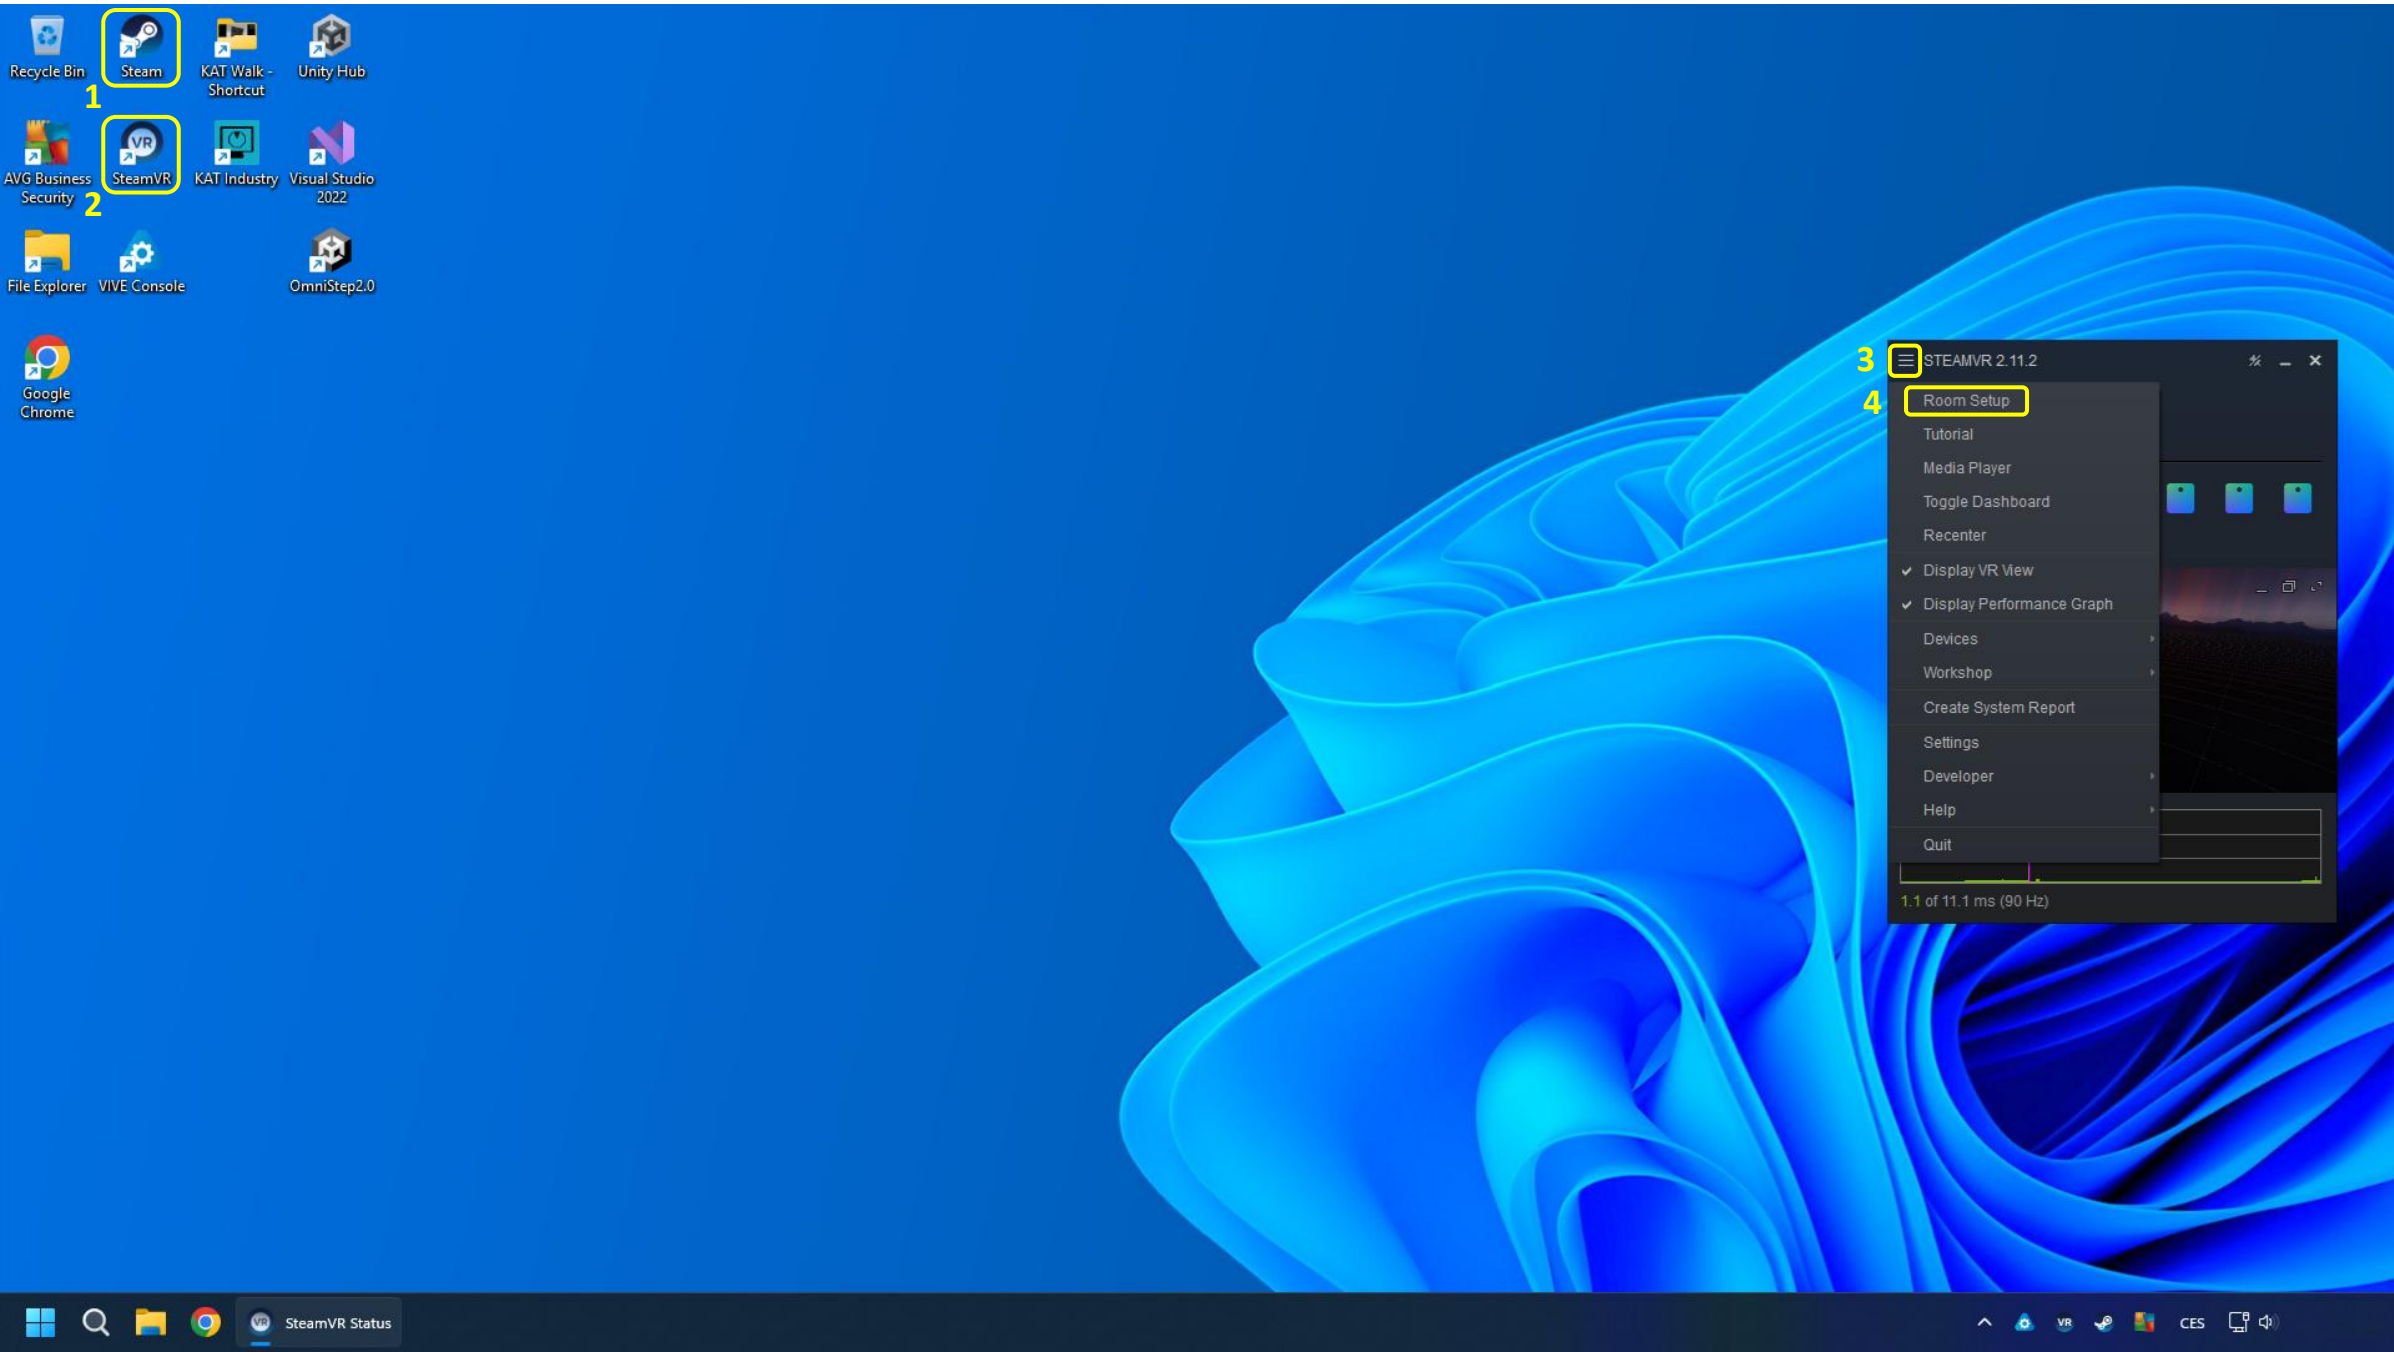

Welcome to Room Setup!

Set up for Room-Scale

Play Room-Scale, Standing, and Seated VR experiences. Choose this if you have at least 2 meters by 1.5 meters, or around 6.5 by 5 feet.



ROOM-SCALE

Set up for Standing Only

Play Standing and Seated VR experiences. Choose this if you have limited space to walk around.



STANDING ONLY



Step A.03 [PC] SteamVR



A 3D rendering of a room with a desk, a lamp, and a black stick figure holding a VR headset. The room is dimly lit with a warm light from the lamp. The stick figure is standing in the center of the room, holding a VR headset in its right hand. The desk has a computer monitor, a keyboard, and a mouse. There are some books and a mug on the desk. The lamp is on a small table next to the desk. The room has a bed on the left and a desk on the right.

Locate the floor.

Place the Headset on a stable surface and click the Calibrate Floor button. Then measure the vertical distance between the surface and the floor and enter it below.

If you place your Headset on the floor, enter 0. If you place it on your head, enter your height.


cm in.

CALIBRATE FLOOR


BACK

NEXT


Place the headset on the "platform" of the VR treadmill.

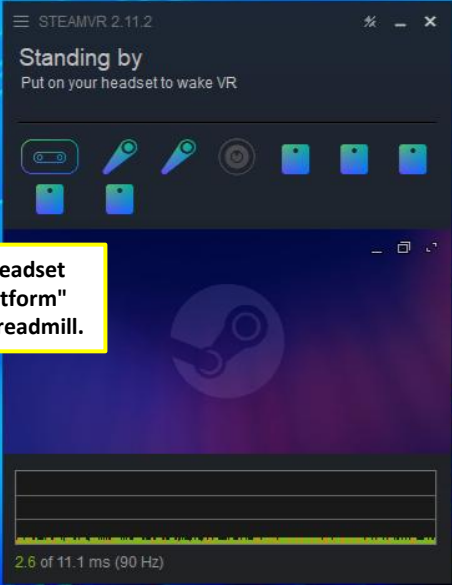

Step A.04 [PC] SteamVR

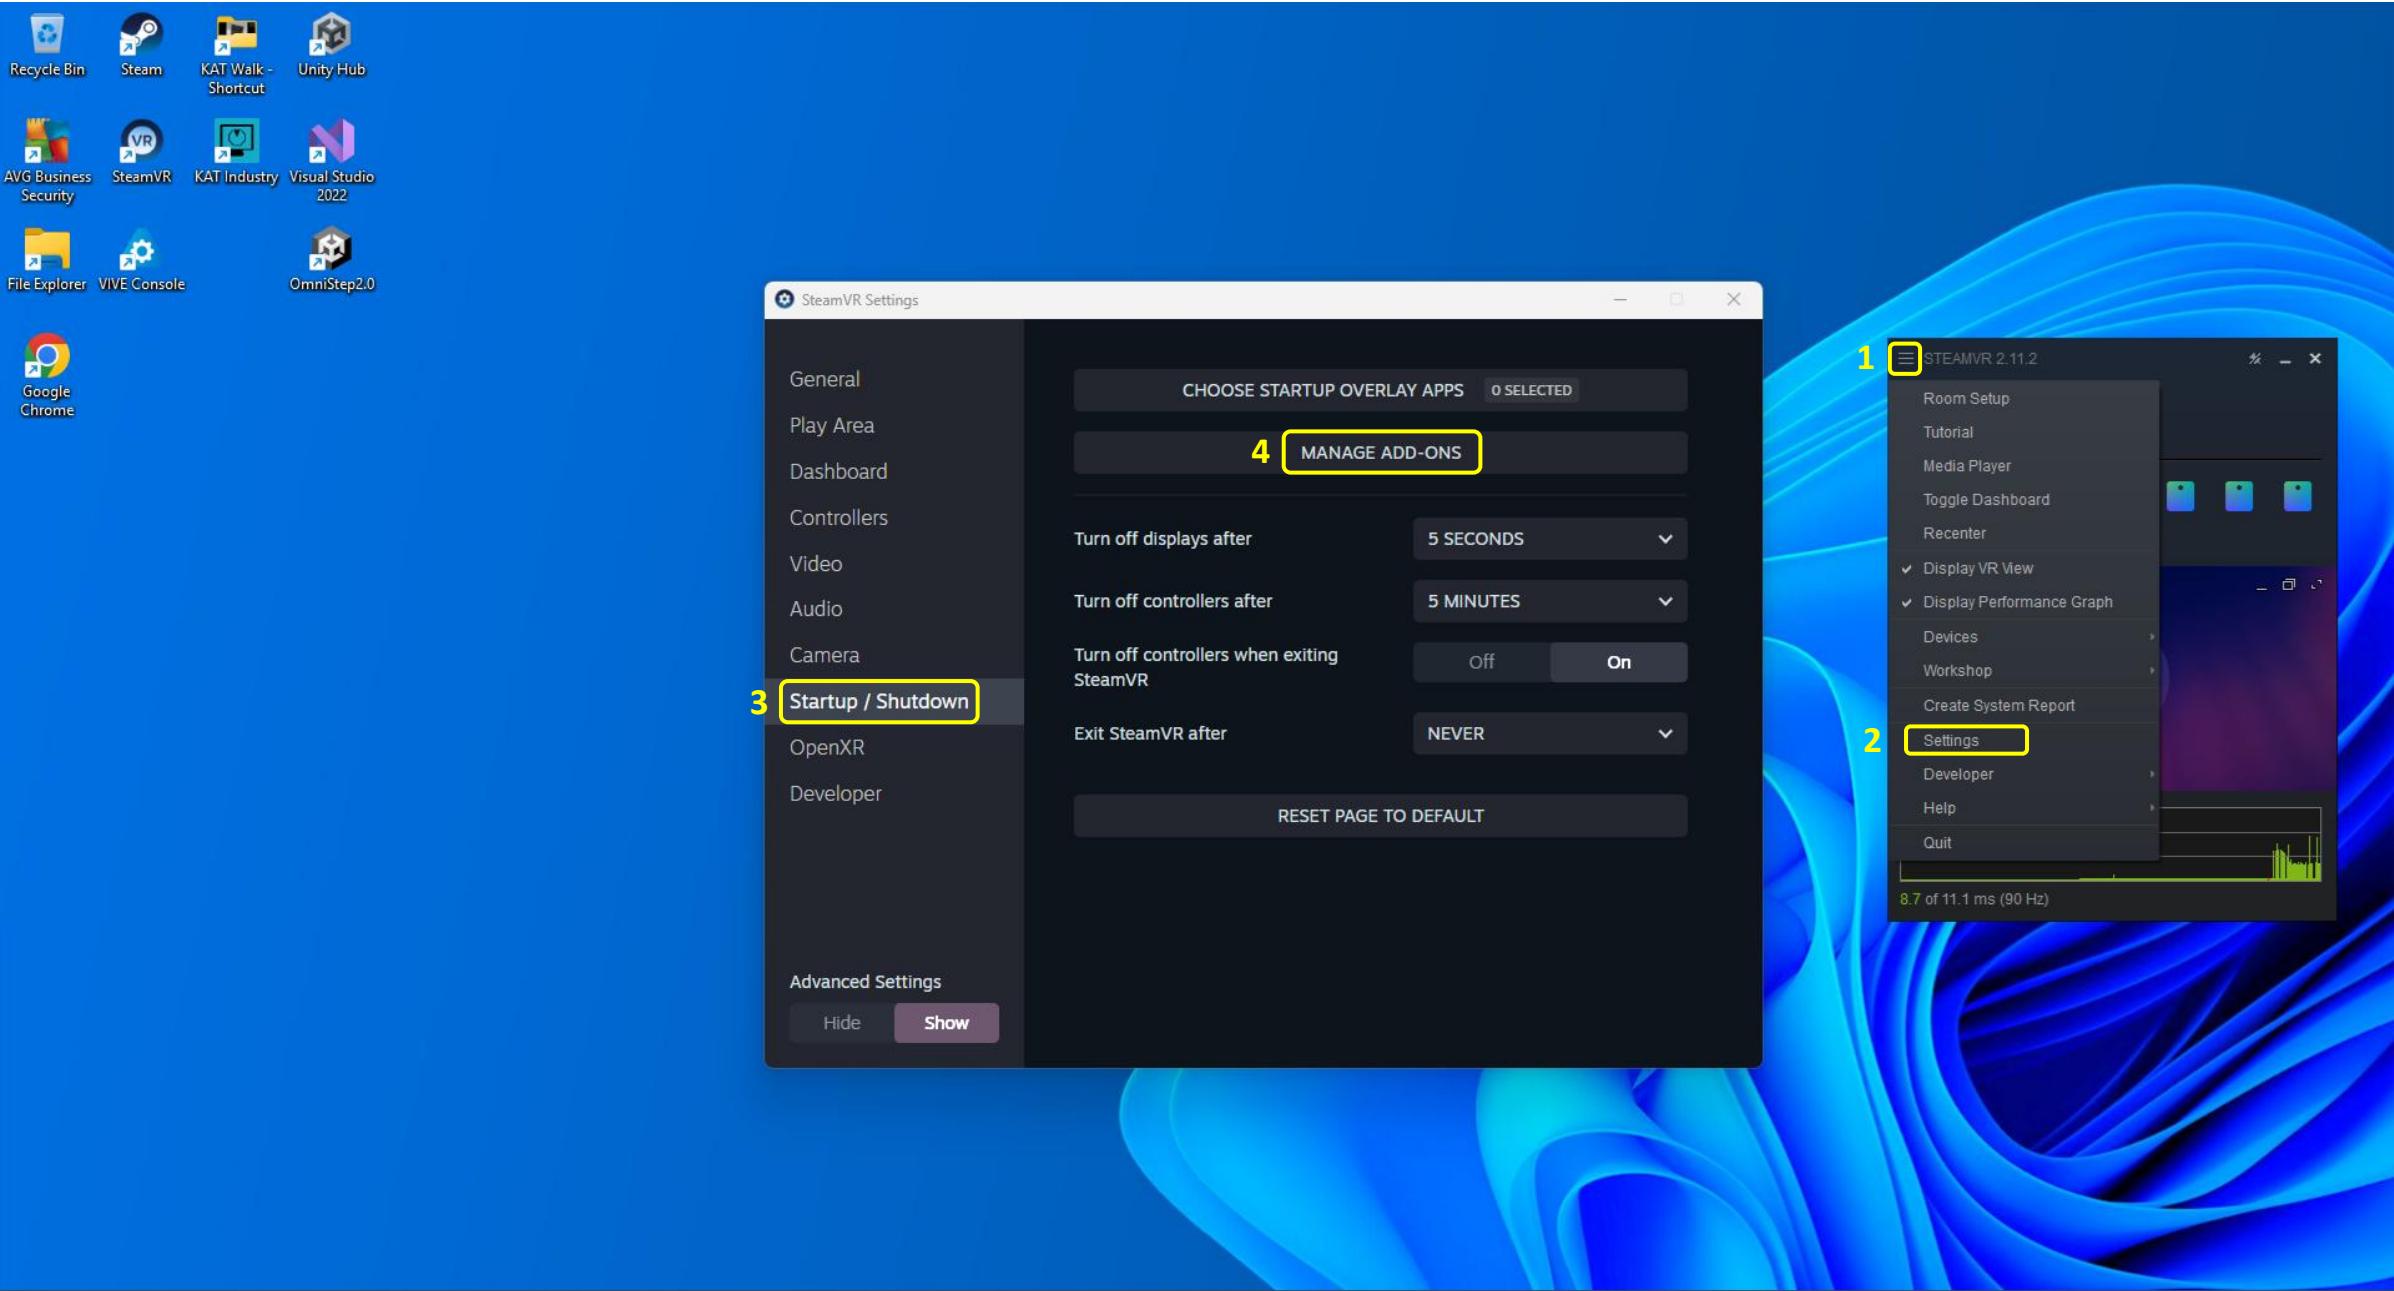

Step A.05 [PC] SteamVR

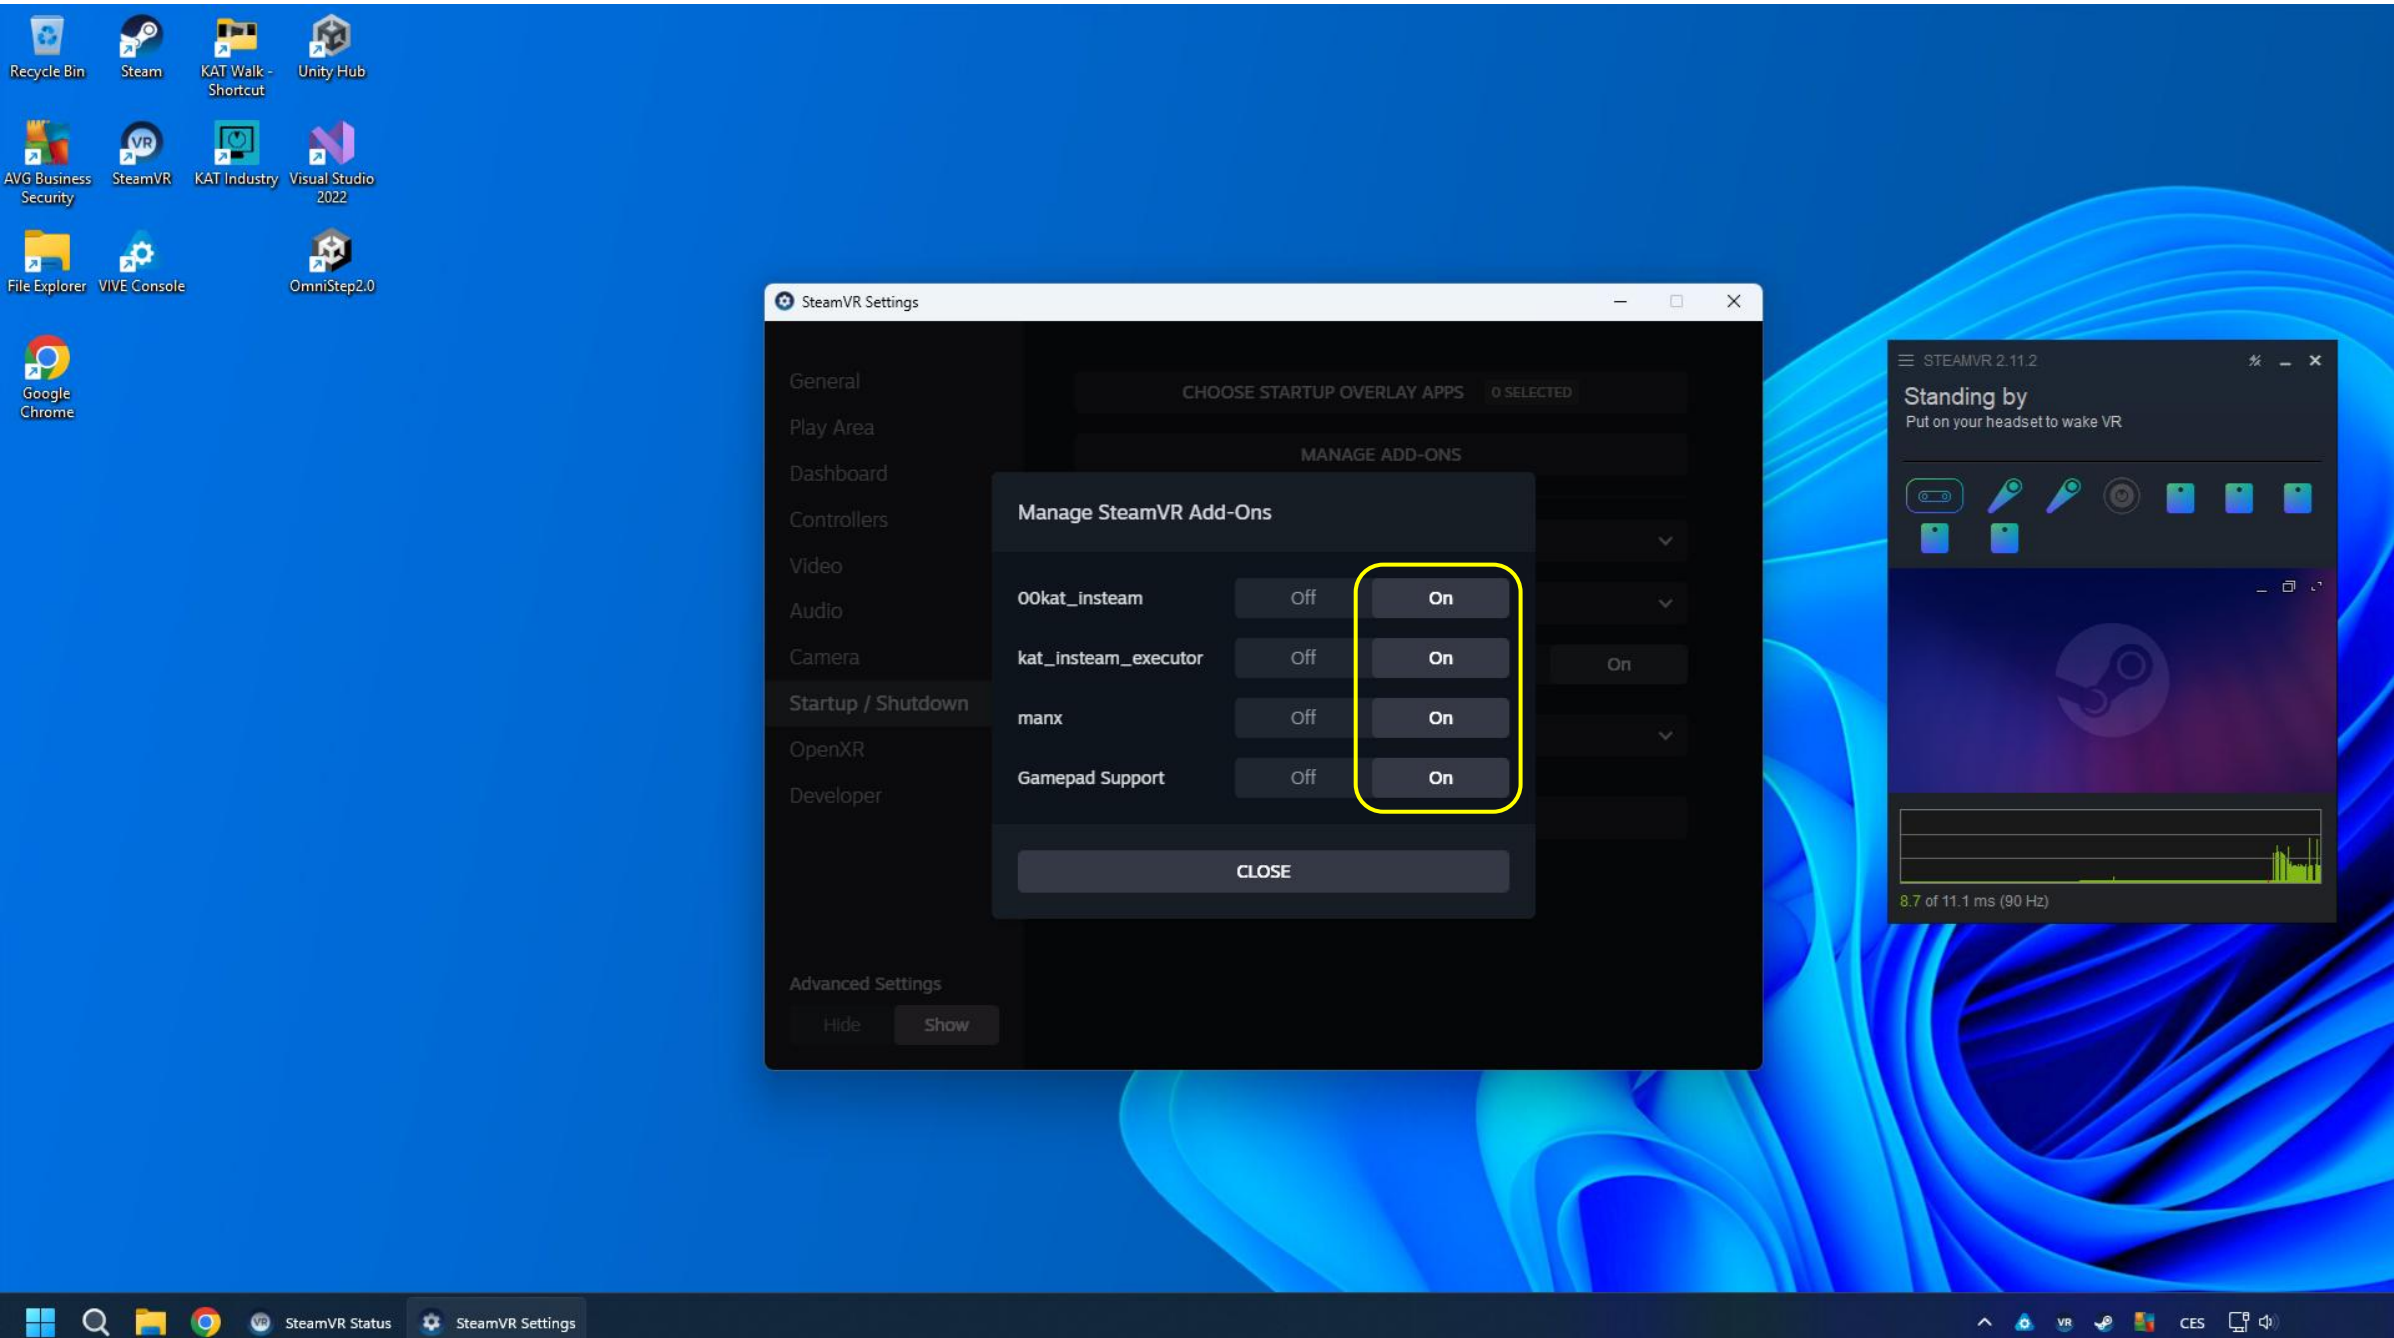

Step B.01 [PC] KAT Industry 2.0.8

Recycle Bin

Steam

KAT Walk - Shortcut

Unity Hub

AVG Business Security

SteamVR

KAT Industry

1

Visual Studio 2022

File Explorer

VIVE Console

OmniStep2.0

Google Chrome

KAT Industry

Library

Controller

2

?

⚙

—

×

Connection Status

Steam VR Connected

Walk mini S Connected

Device Initialized

Real-Time Data

HMD Angle: 1°

Body Angle: 99°

Game Angle: 99°

Walking Speed: 0

Movement Detected: FALSE

Moving Forward: FALSE

Calibration

Parameter Setting

Speed —

10

 + Default

Sensitivity —

10

 + Default

Backward Movement ON OFF

Lateral Movement ON OFF

Cruise Movement ON OFF

Walk on Spot Mode ON OFF

Vibration Settings

Walk mini S (This product is a commercial product)

Version 2.0.8

STEAMVR 2.11.2

Standing by

Put on your headset to wake VR

Sensor Initialization

Every time after powering on the device, initialize the inner sensor by rotating the upper structure once.



8.3 of 11.1 ms (90 Hz)

Windows Taskbar


Taskbar Icons: SteamVR Status, KAT Industry

System Tray: Network, VR, CES, Volume

Step B.02 [PC] KAT Industry 2.0.8

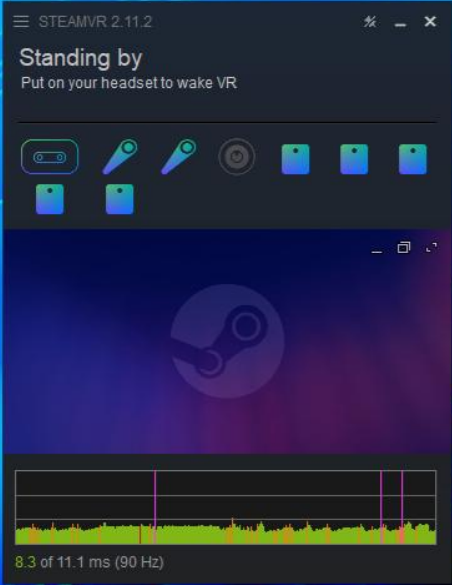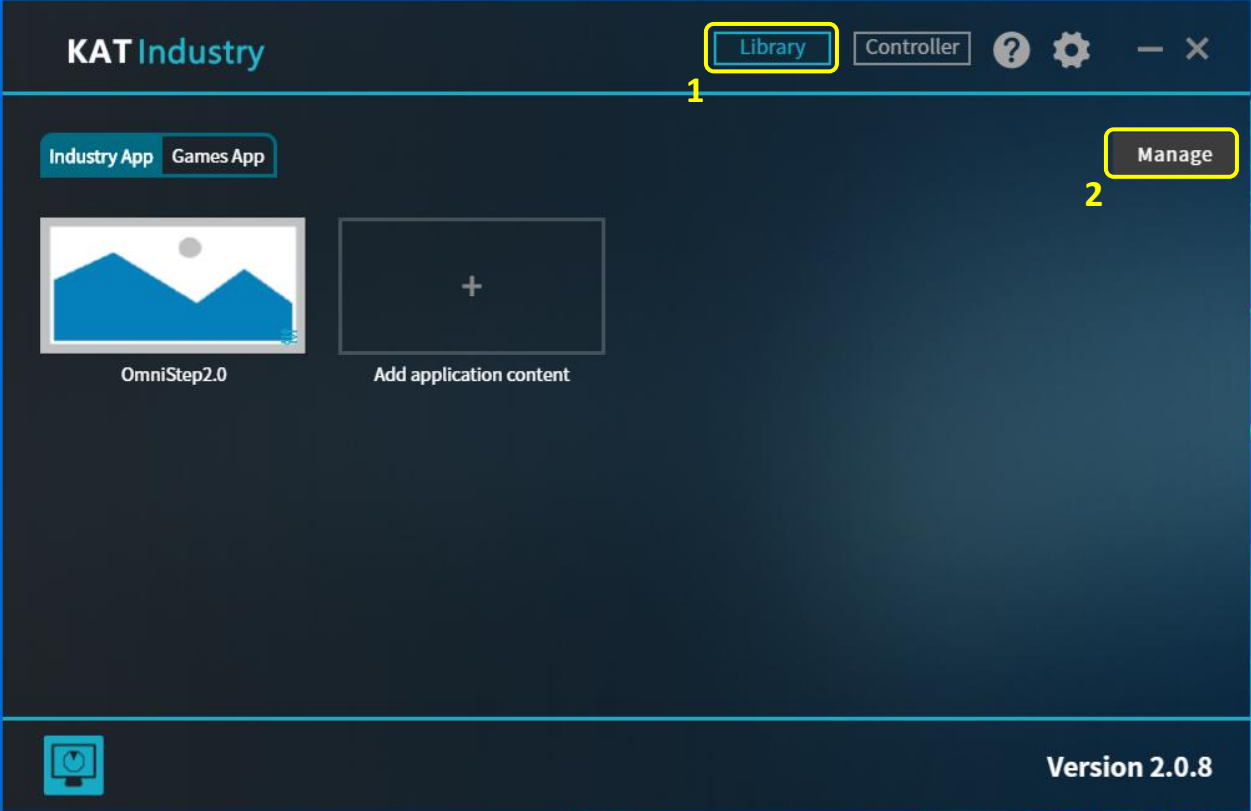

Step B.03 [PC] KAT Industry 2.0.8

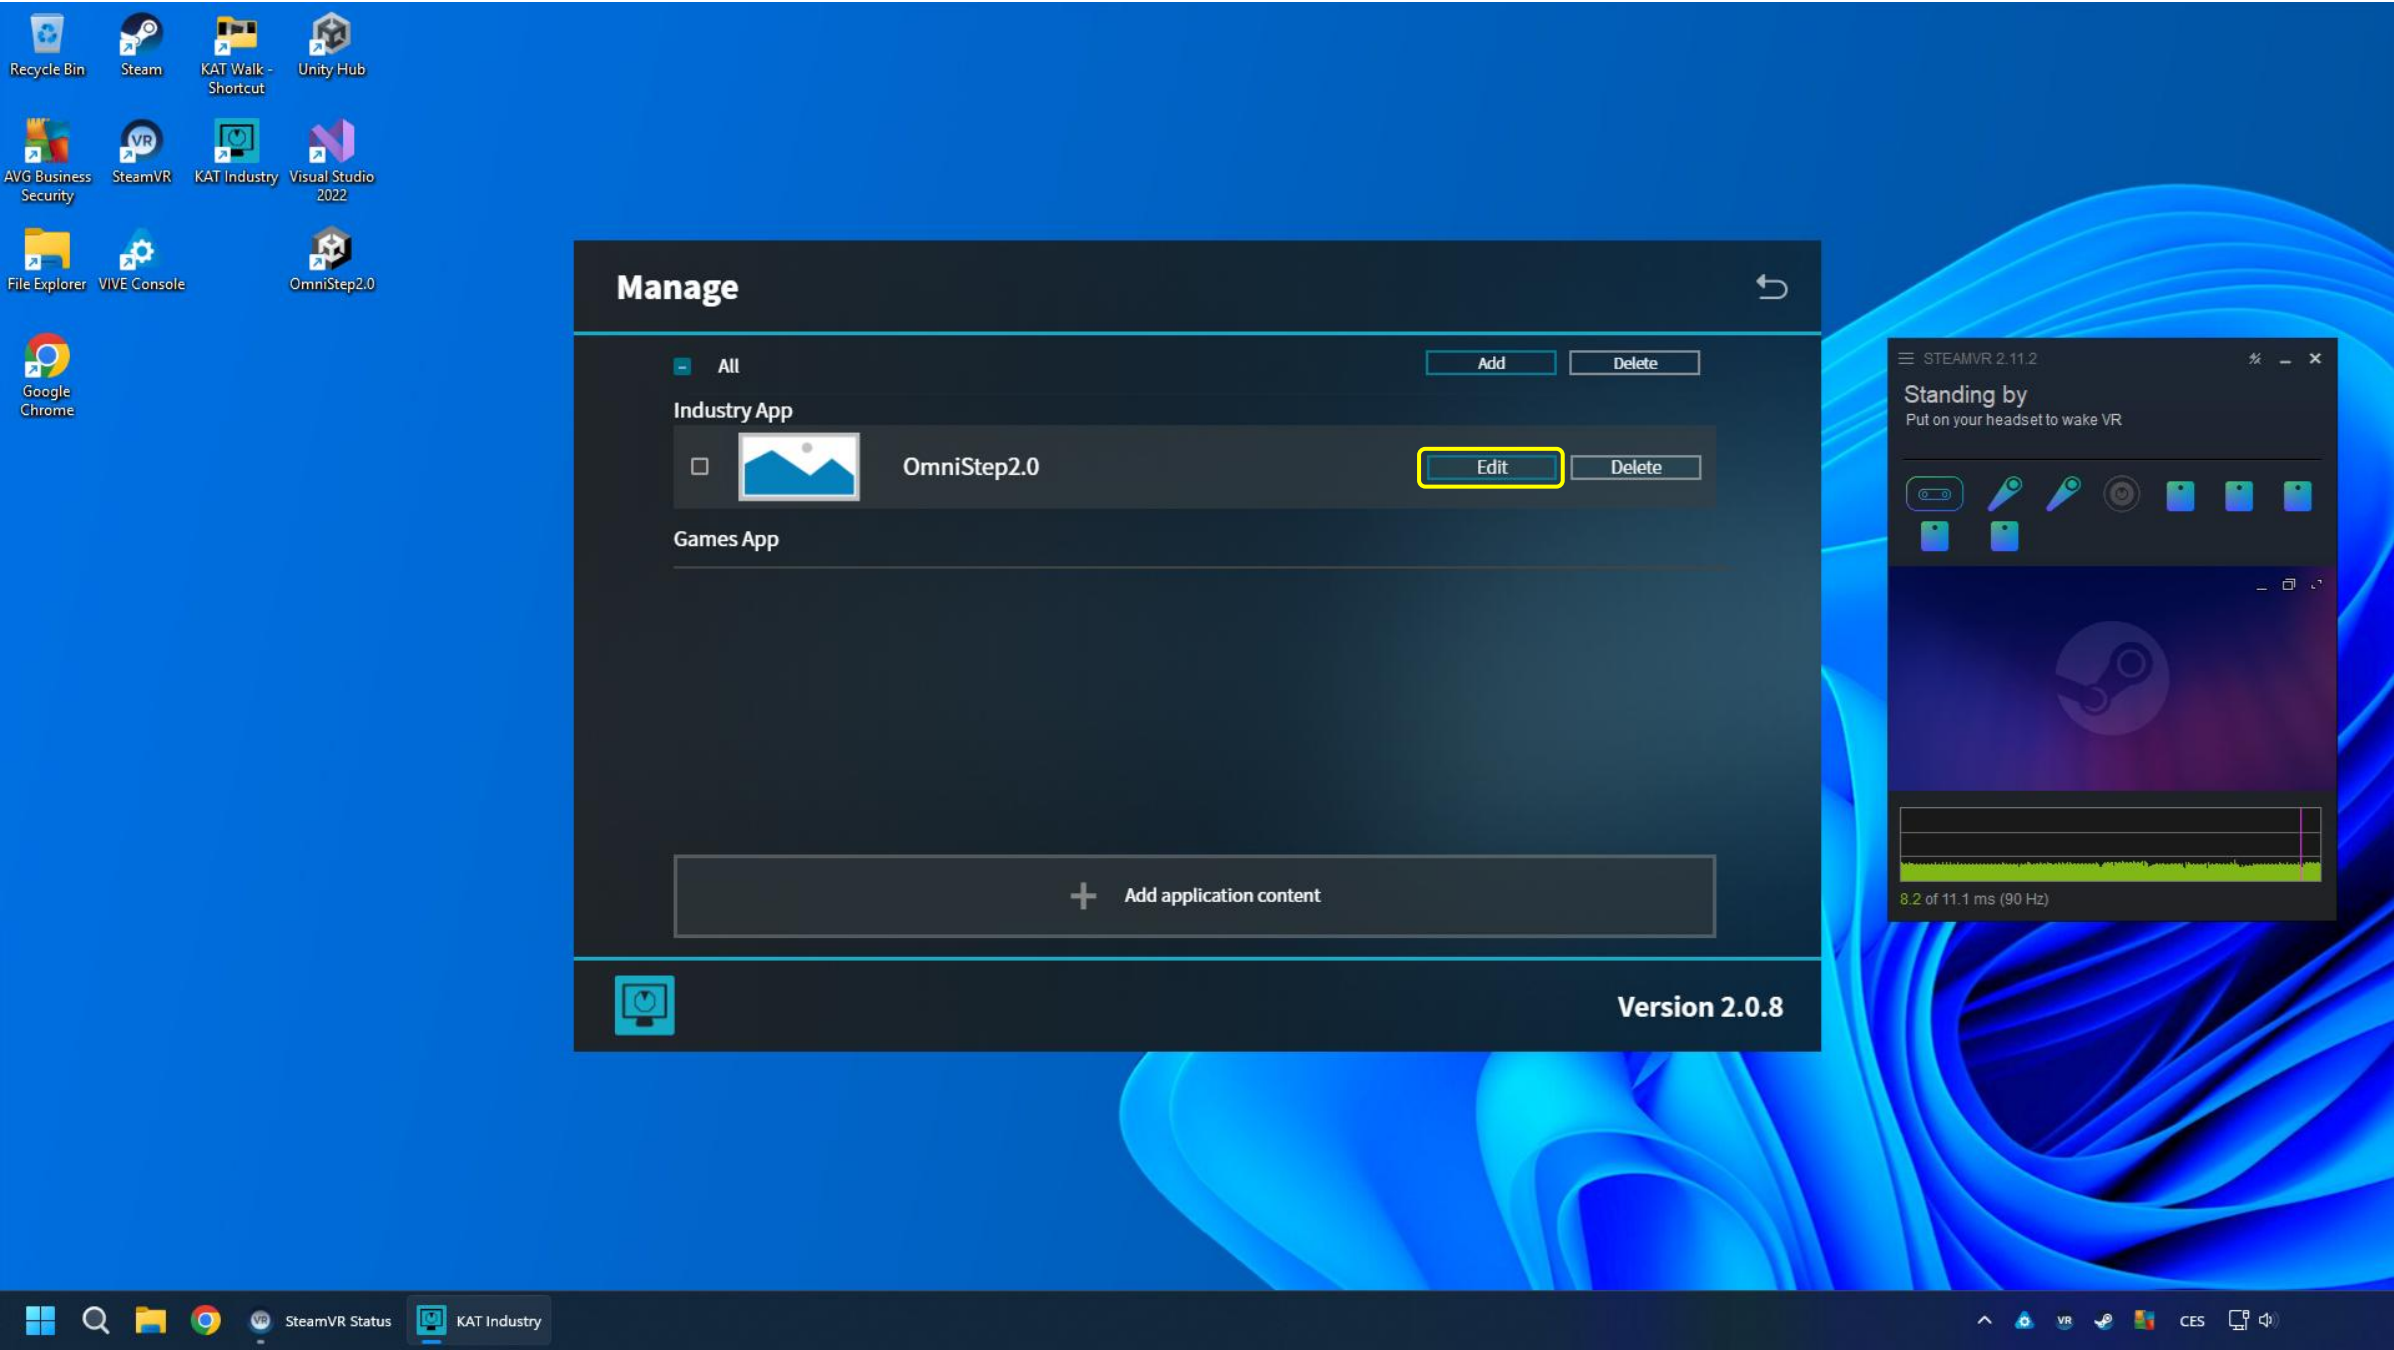

Step B.04 [PC] KAT Industry 2.0.8



Manage

Edit



Edit cover

The cover is the content list display picture



Edit detailed picture

Big picture in app details

Name:

OmniStep2.0

11/12

Introduction:

Please enter the introduction...

0/180

Path:

C:\SW\OmniStep\OmniStep_2.

Select

Mode:

☐ Custo...

☐ Native...

☒ InStea...

Type:

☒ Indust...

☐ Game...


Save




Version 2.0.8



Step B.05 [PC] KAT Industry 2.0.8

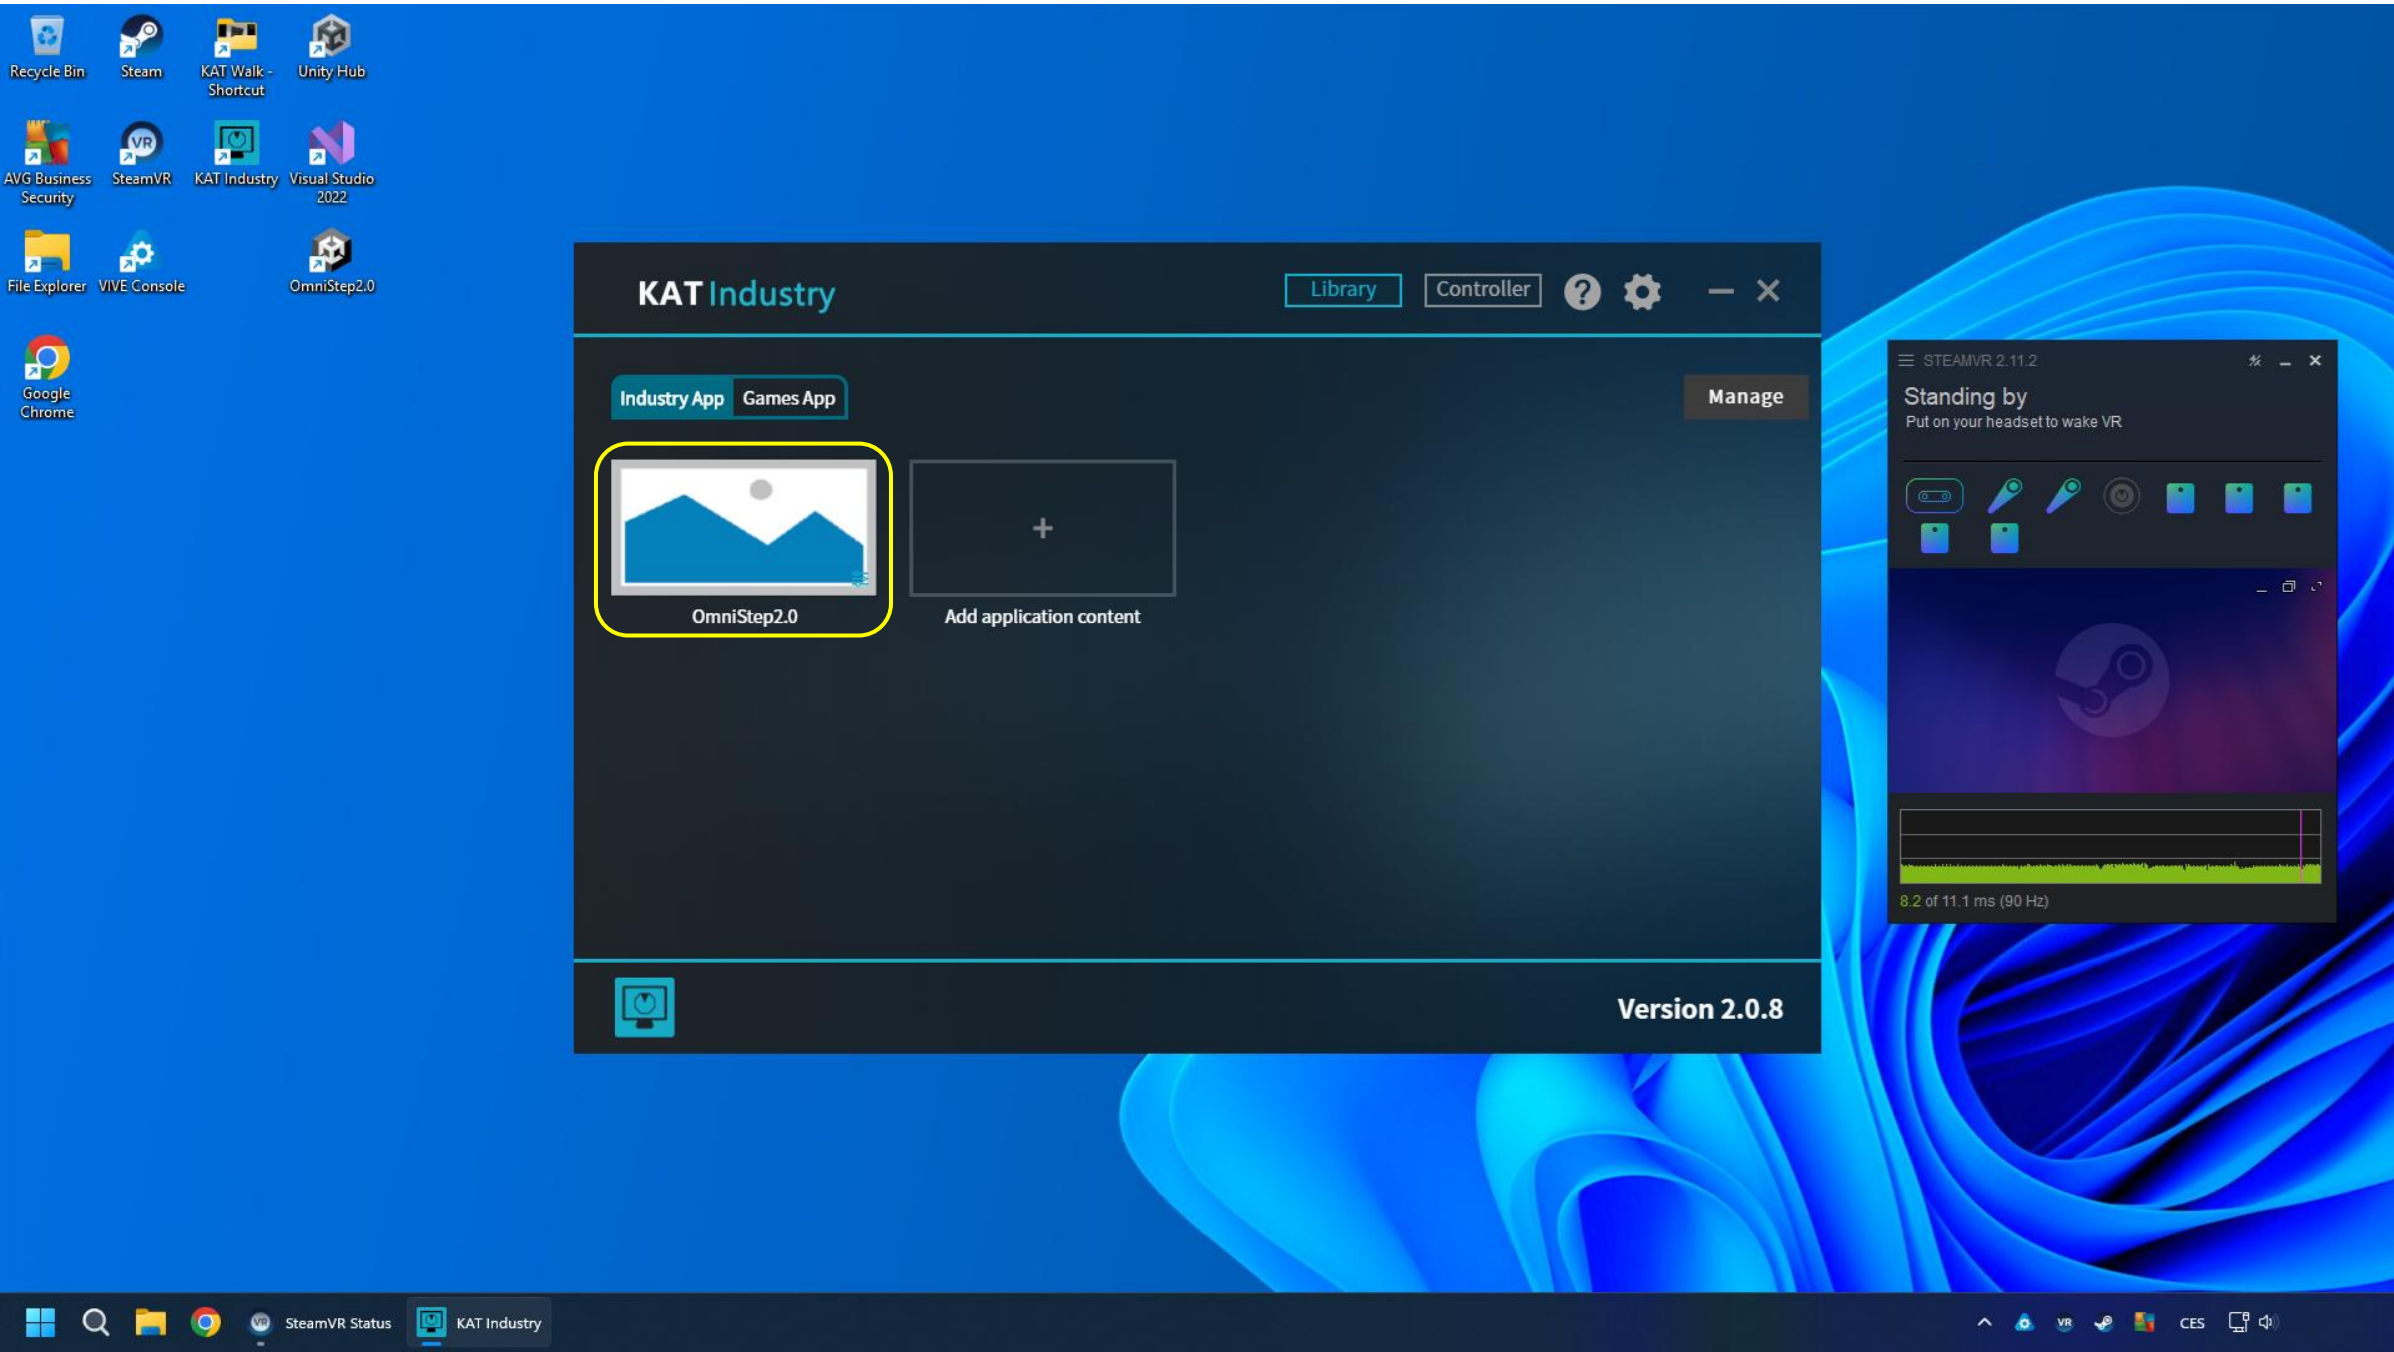

Step B.06 [PC] KAT Industry 2.0.8

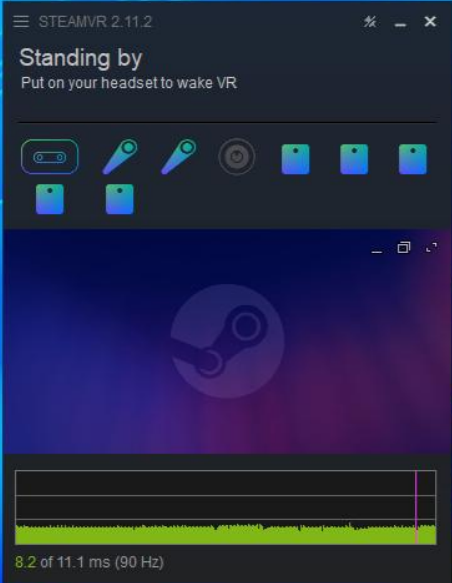



[OmniStep2.0] Controller

Connection Status

Steam VR Connected

Walk mini S Connected

Device Initialized

Real-Time Data

HMD Angle:355°

Body Angle:93°

Game Angle:93°

Walking Speed:0

Movement Detected:FALSE

Moving Forward:TRUE

Calibration

Parameter Setting

InSteam Setting

Speed9

Sensitivity7

Backward MovementONOFF

Lateral MovementONOFF

Cruise MovementONOFF

Walk on Spot ModeONOFF

VibrationSettings


Walk mini S (This product is a commercial product)

Version 2.0.8


A screenshot of the SteamVR 2.11.2 interface. It shows a 'Standing by' status with the instruction 'Put on your headset to wake VR'. Below this, there are icons for various VR controllers and a large Steam logo. At the bottom, a performance overlay shows '8.2 of 11.1 ms (90 Hz)'.

Windows taskbar showing icons for Start, Search, File Explorer, Chrome, SteamVR Status, KAT Industry, and system tray icons including volume and network.


Step B.08 [PC] KAT Industry 2.0.8

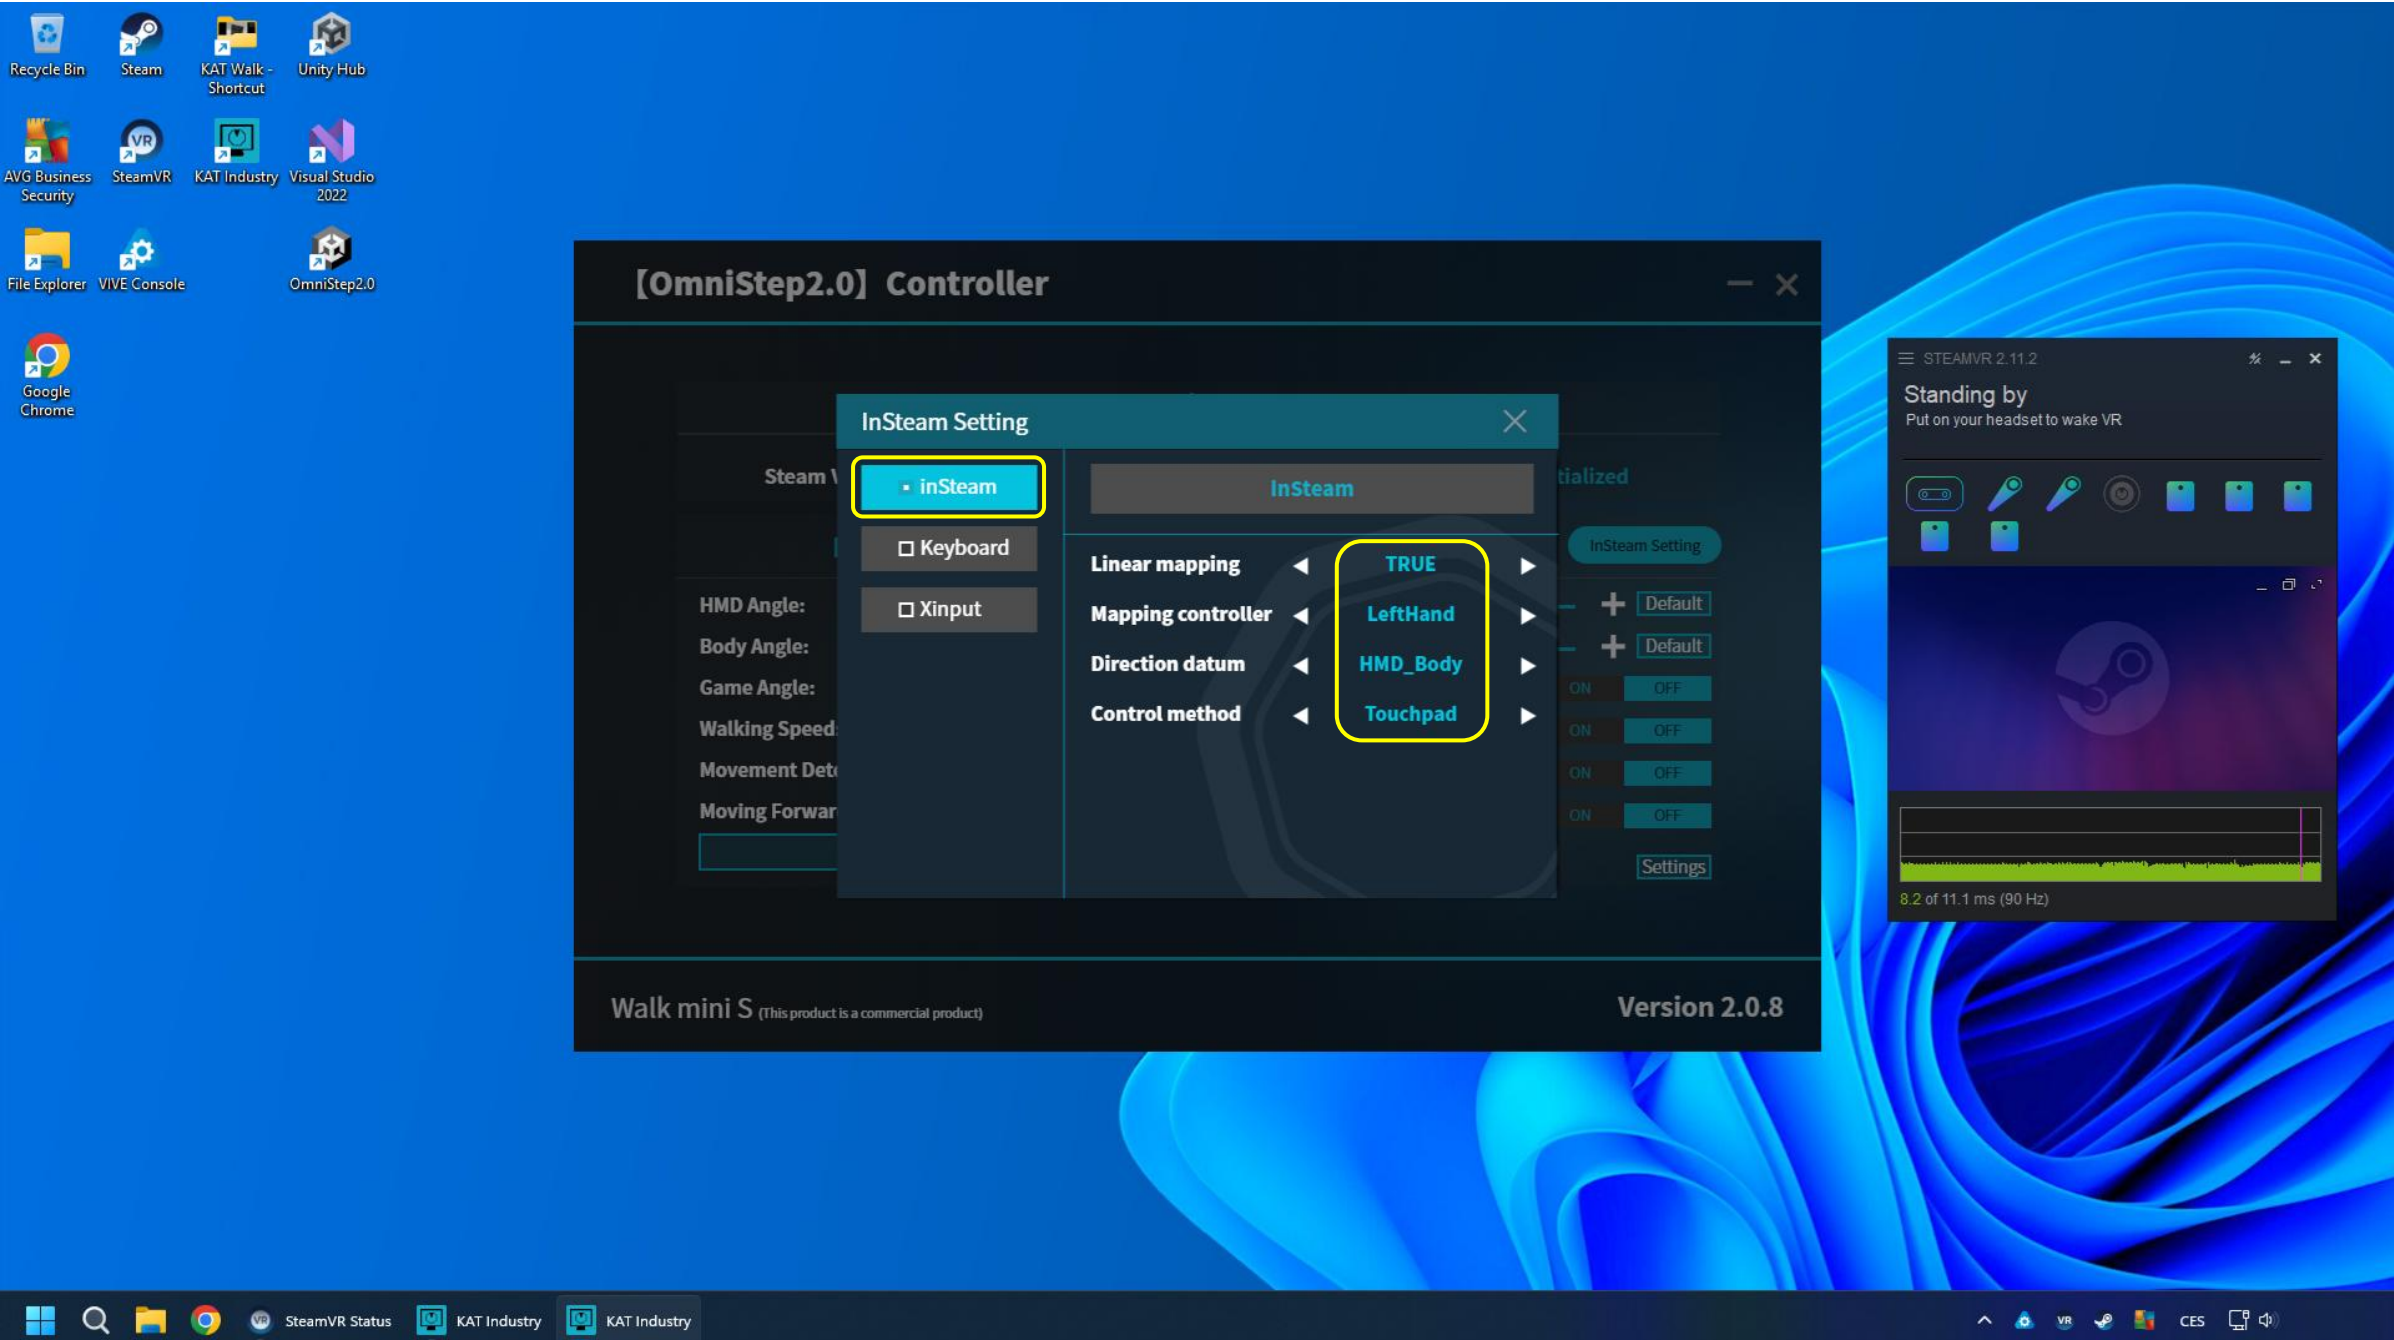


Step B.09 [PC] KAT Industry 2.0.8

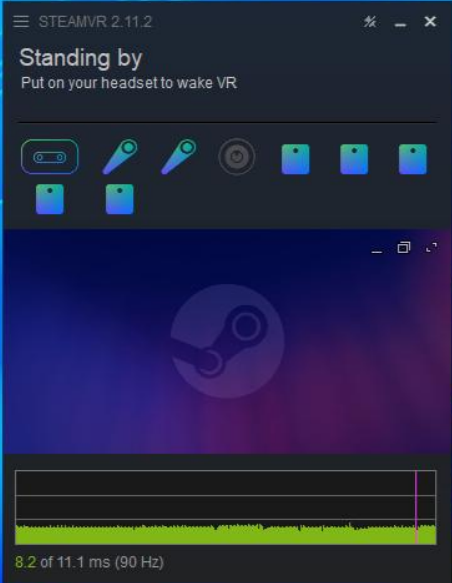

Step C.01 [PC] OmniStep 2.0 admin menu on PC monitor

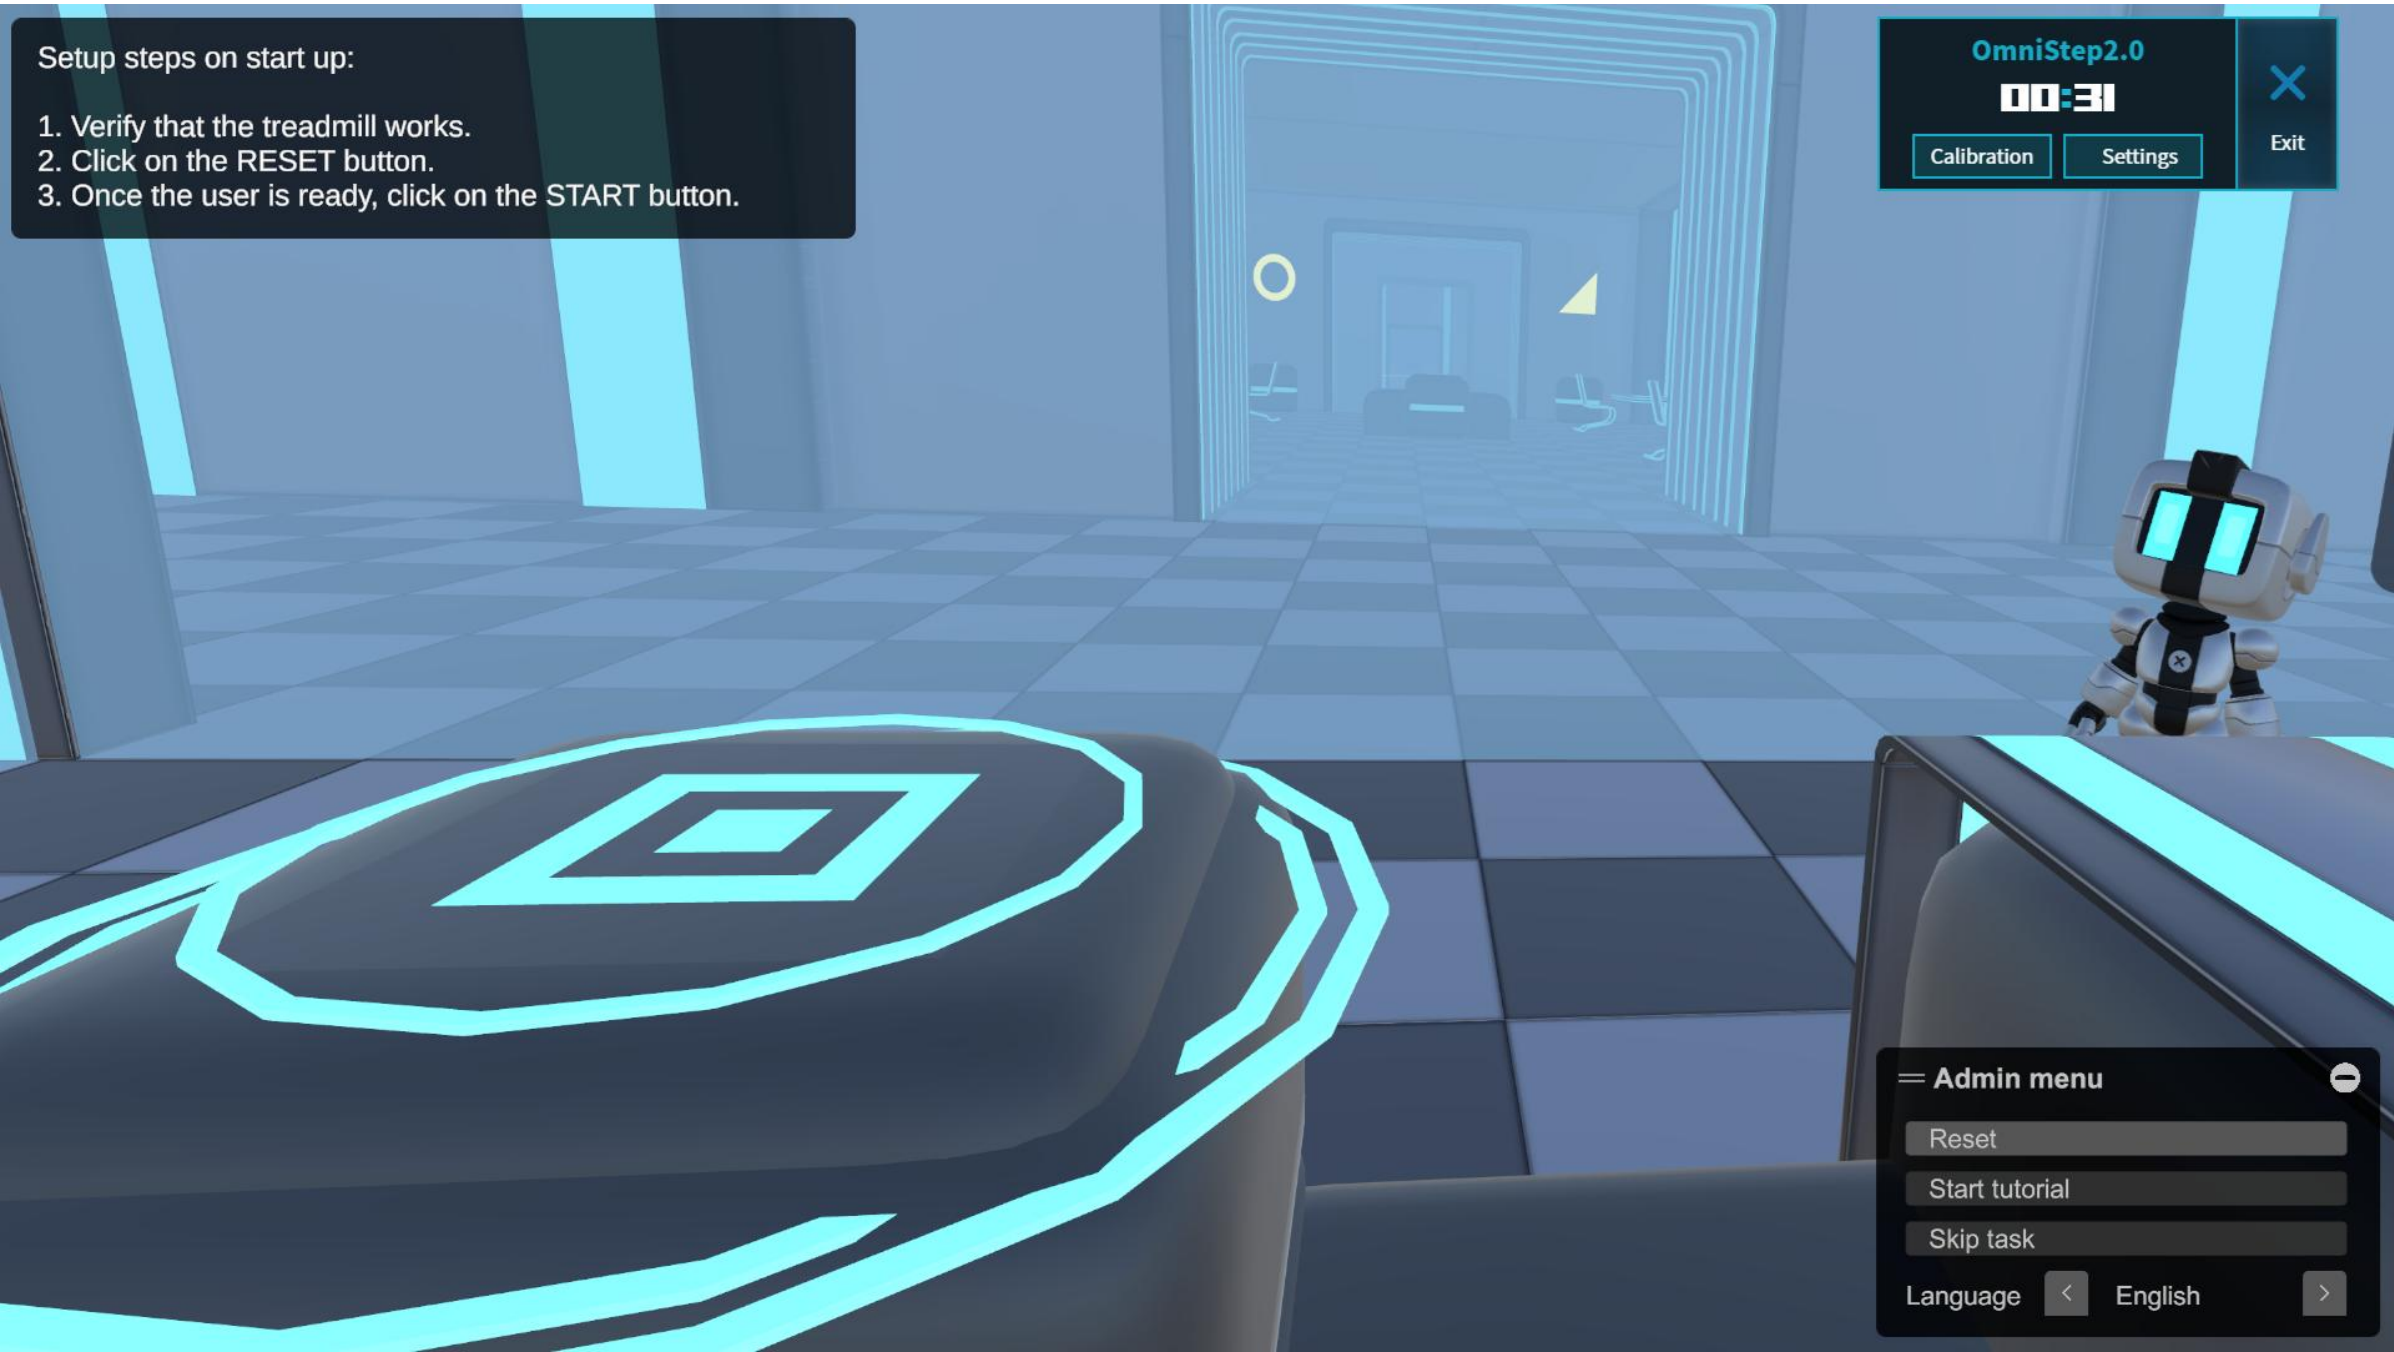

Step C.02 [HMD] OmniStep 2.0 admin menu in VR headset (after pressing 'Menu button' above Trackpad)

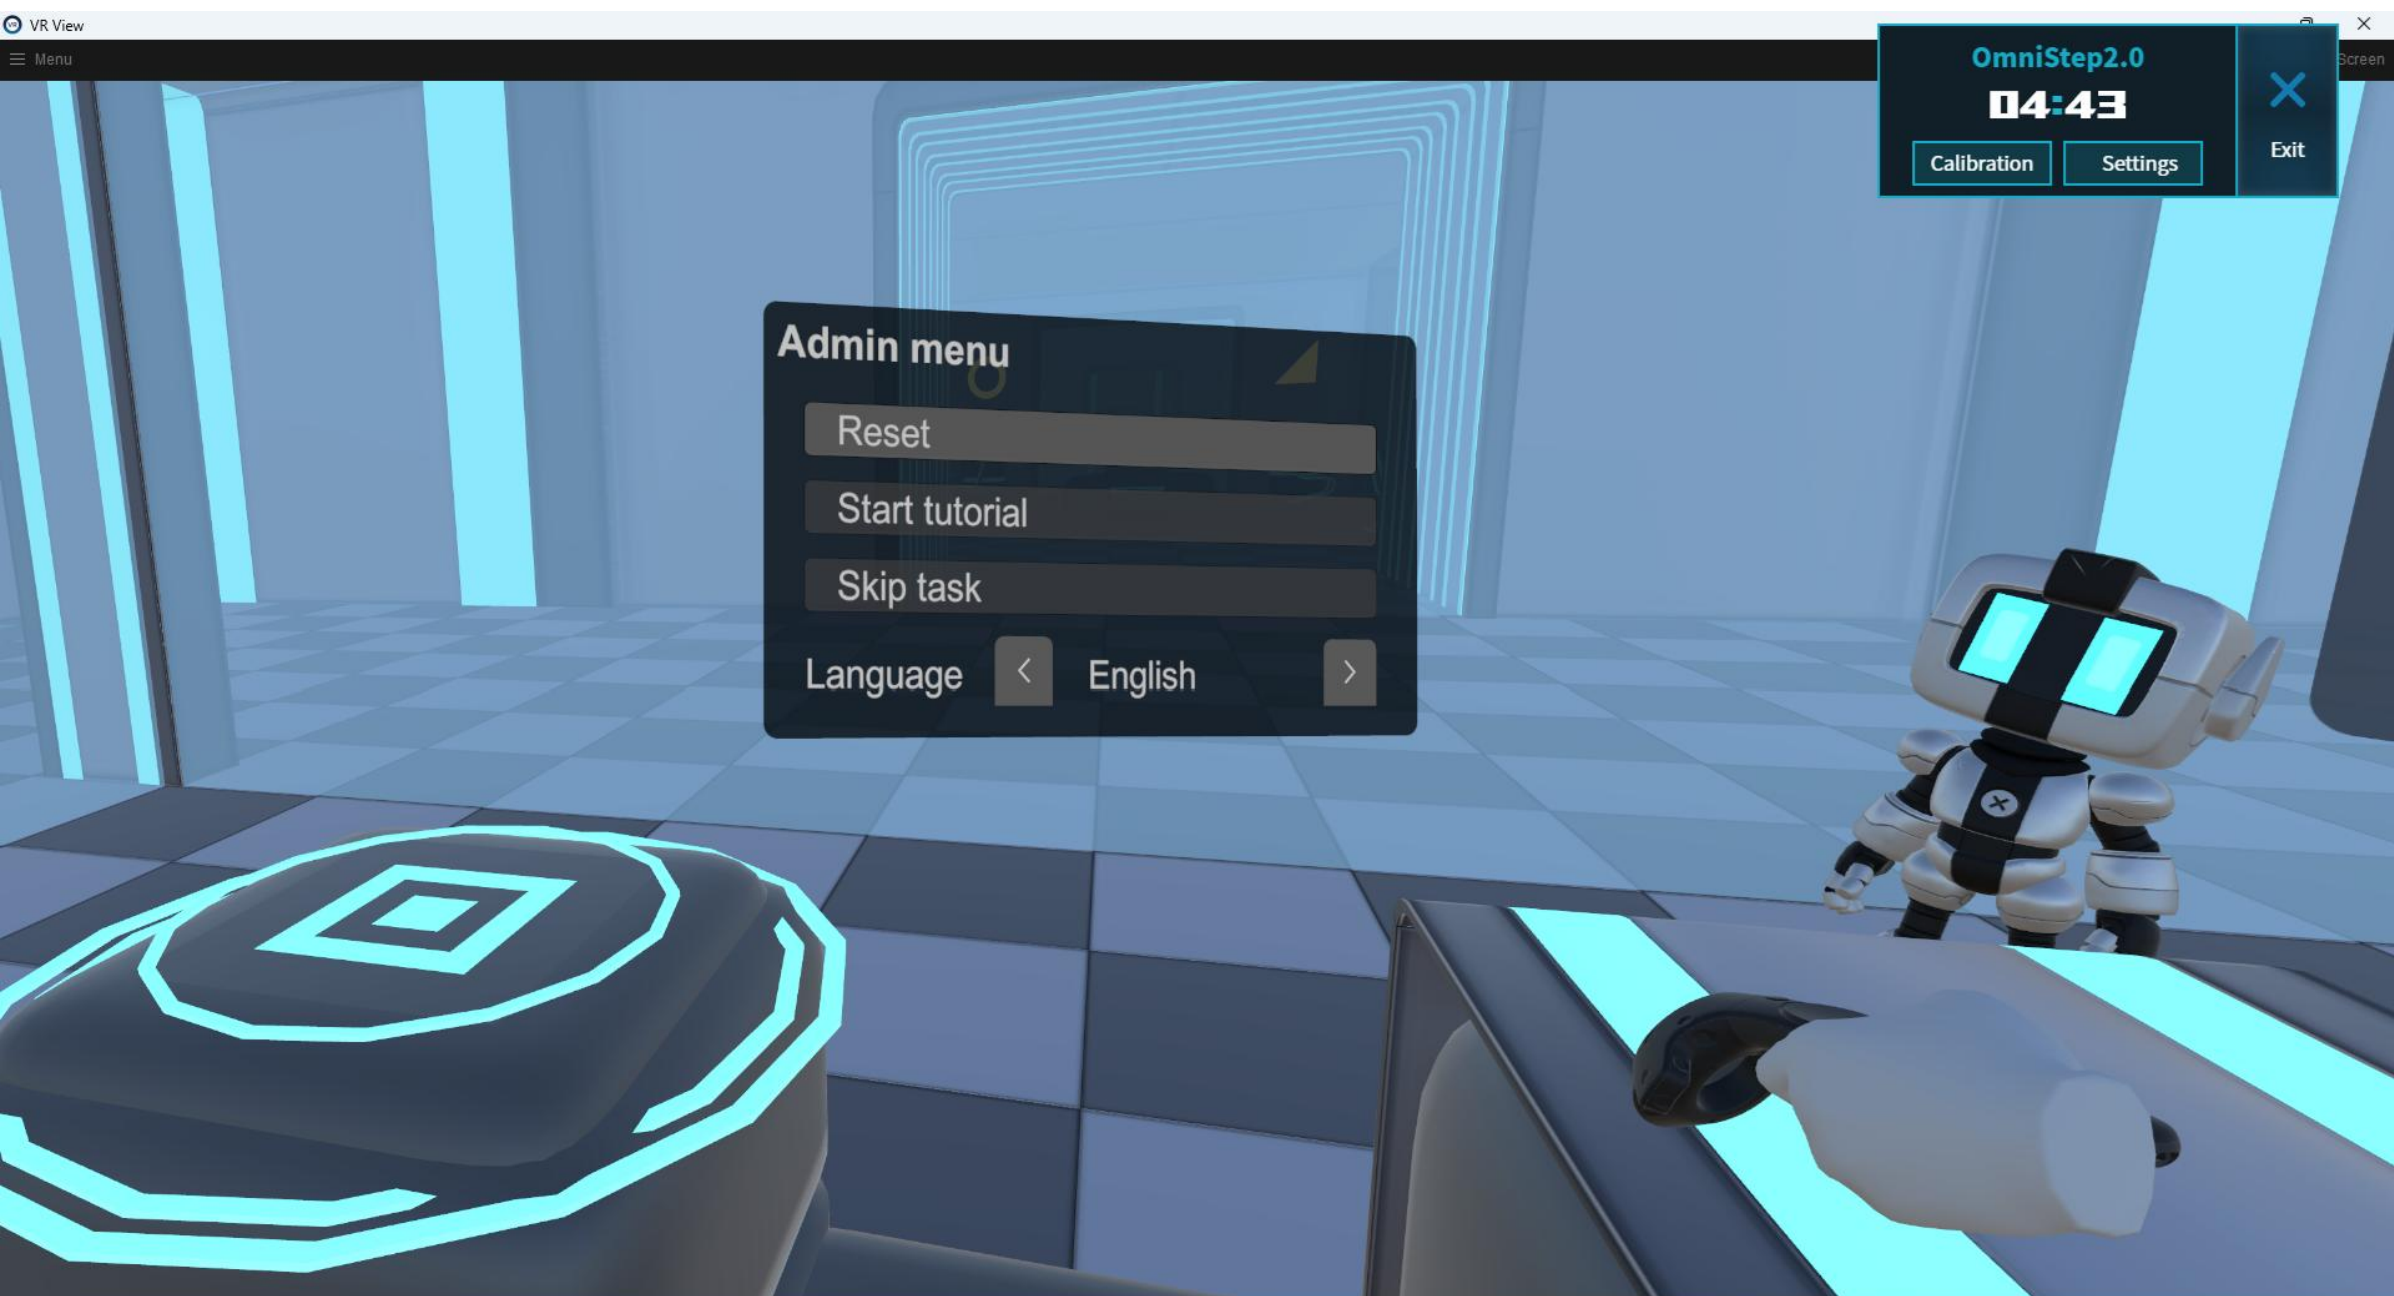

Step C.03 [HMD] KAT Industry 2.0.8 **calibration menu** (after pressing 'System button' below Trackpad)

