


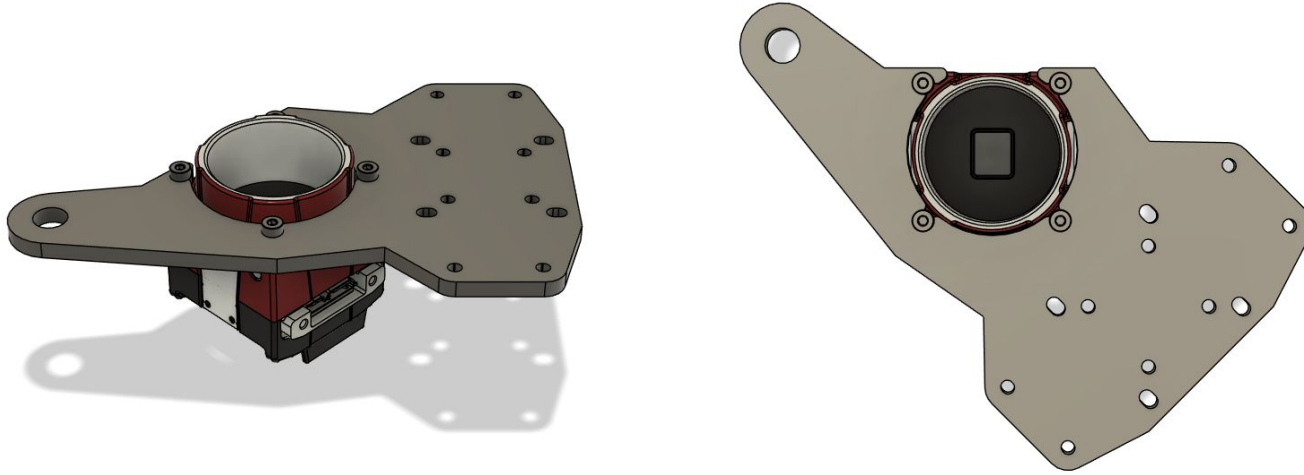


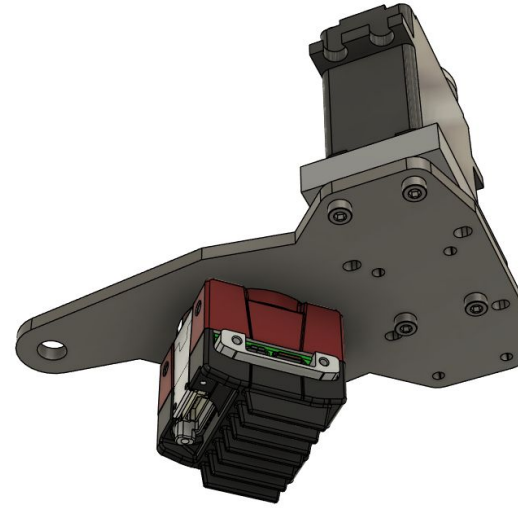


Mount the camera servo mount to the screw holes on the top of the camera in the orientation as shown in the images.

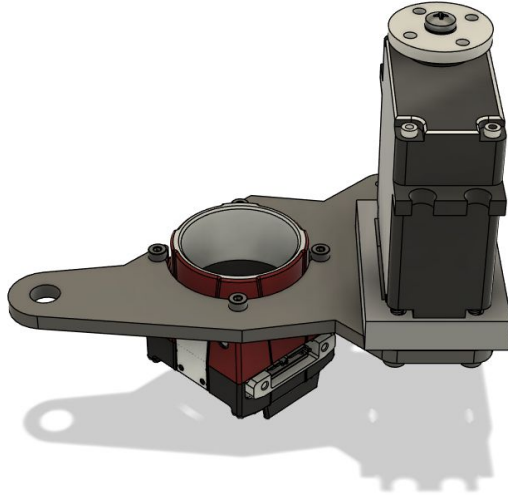


Mount the servo in place using the servo booster seat and 4x M2x?? screws in the arrangement shown in the pictures. Use the servo horn shown in the photo, it comes in the box with the servo.

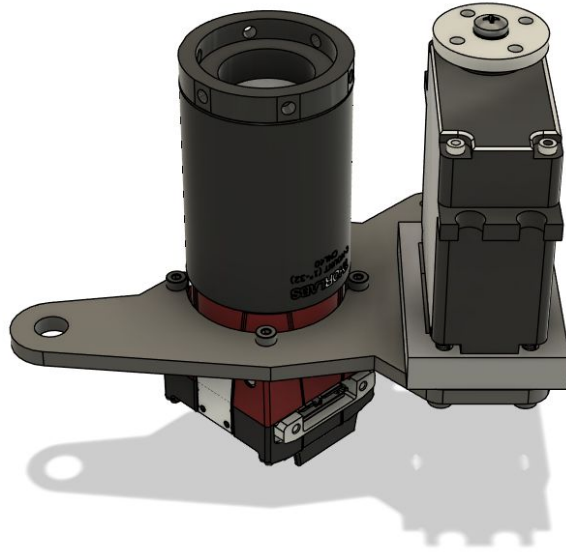


Mount the 40mm lens barrel to the camera, and the C-Mount to turner turret adapter above that.

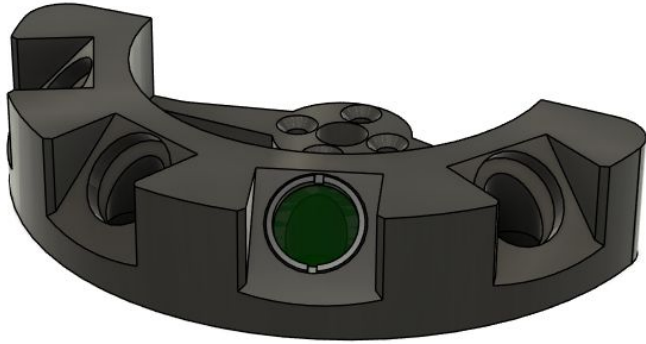



Use SM05 retaining rings to mount a dichroic mirror and an emission filter in place. Use the indicators on the side of the filter so show which way the filter should face, consider the direction light will travel. The dichroic mirror should be in the upper slot.

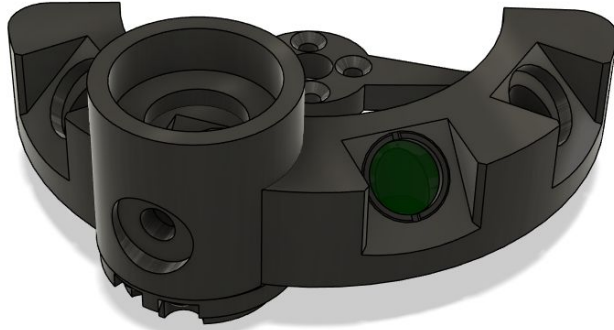


Mount the turret turner top and bottom in place using 3x M3x4 button cap screws as shown in the images.

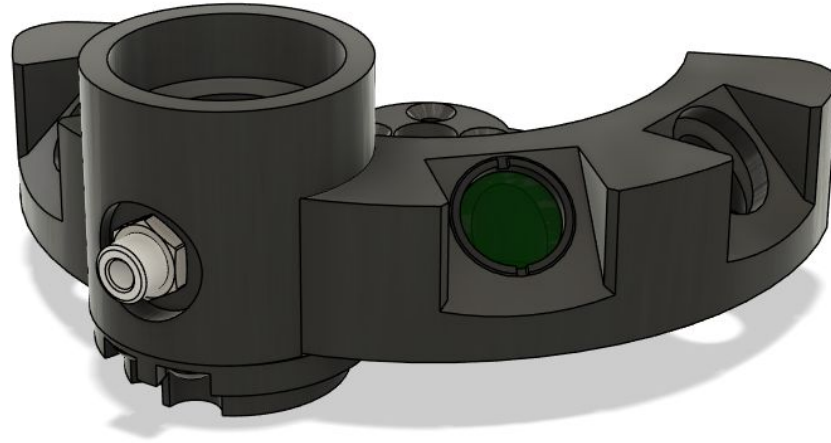

Add the HASMA SMA adapter to the front of the turner turret top, using the jam nut to secure it in place.

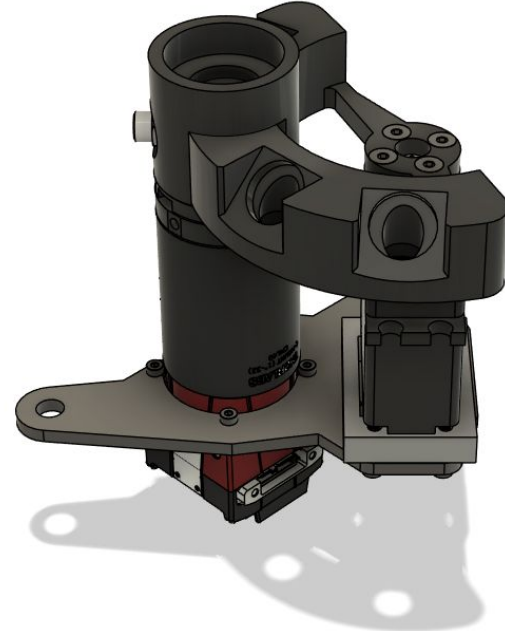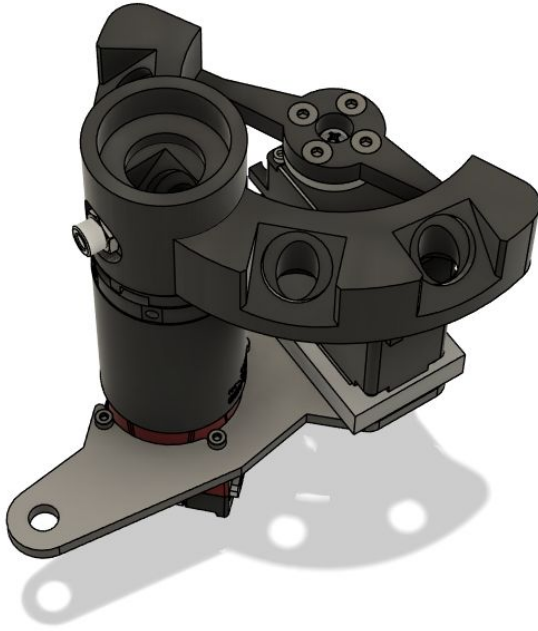


Align the turning assembly to the servo motor horn and 4x M3x6 flathead screws. The bottom of the turner assembly should sit flush with the part below it.


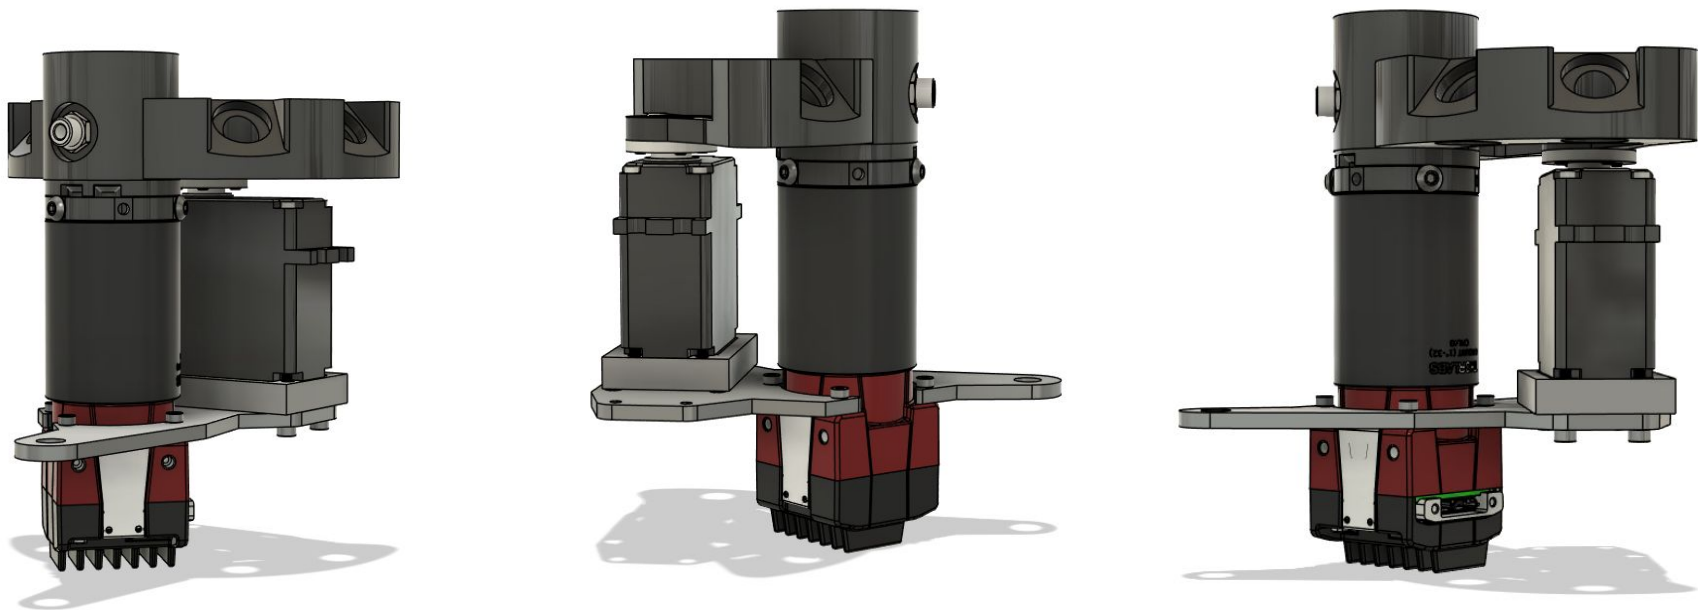


Secure the turning assembly in place using 3x M3x6 set screws on the sides of the turner assembly as shown in the pictures.



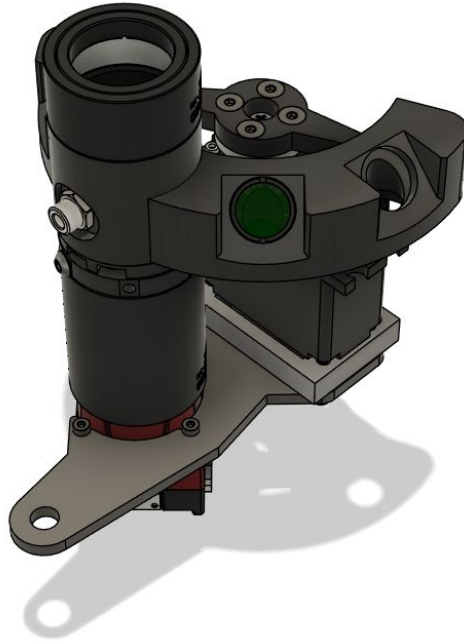

Add the 15mm C-Mount barrel above the turning assembly. Insert the C-Mount to RMS adapter to the top of that lens barrel as shown in the picture.

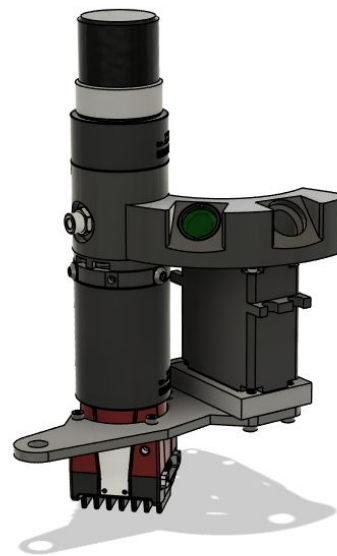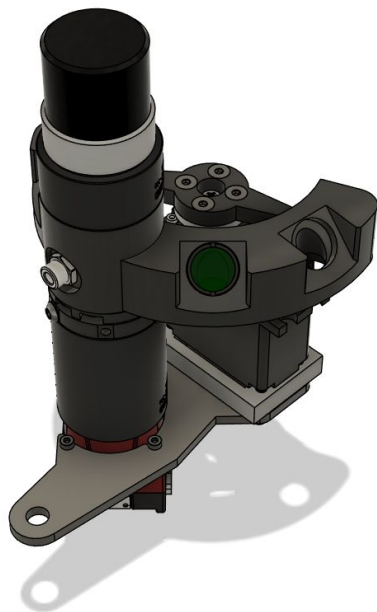

Add the objective to the top of the assembly.