



Mount the C-Mount lens barrel onto the camera, and then the rotating double sided C-Mount adapter on top of that. Complete this step with the camera pointing down to prevent particles from falling onto the sensor while you attach the parts.

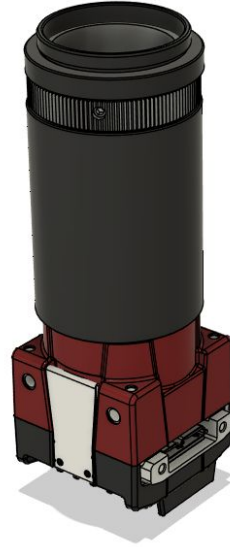

Screw on the SM1A10 C-Mount to SM1 Adapter to the top of the rotating double sided C-Mount adapter. Complete this step with the camera pointing down to prevent particles from falling onto the sensor while you attach the parts.



Open the filter cube and insert the dichroic mirror, taking note of the orientation marker supplied by the manufacturer on one of the sides of the mirror. Once assembly is done, make sure the marker is pointing the same direction as incoming excitatory light. The springloaded jaws of the cube will hold the mirror in place. Reassemble the cube and use the screws you used to open it to close it.

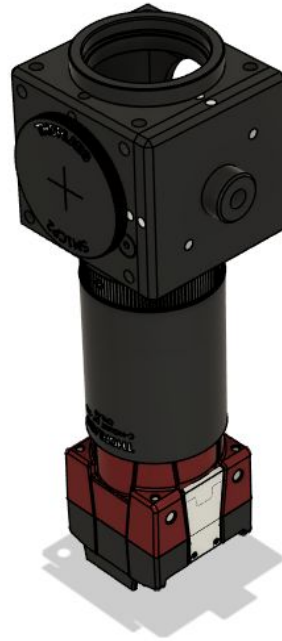


Mount the assembled filter cube on top of the C-Mount to SM1 adapter. Attach the SM1 cap to the face of the cube shown in the picture. Attach the SM1A9 SM1 to C-Mount adapter to the top of the cube


Use the set screw on the rotating double sided C-Mount adapter to loosen the rotating element and rotate it until it appears as show in the image.




Take the SM1L20 lens barrel and thread a SM1 retaining ring all the way to the bottom. Then, add the collimator as shown in the left image. Finally, secure the assembly with another retaining ring as shown in the right image. Align the collimator such that the lens is in the middle of the barrel.

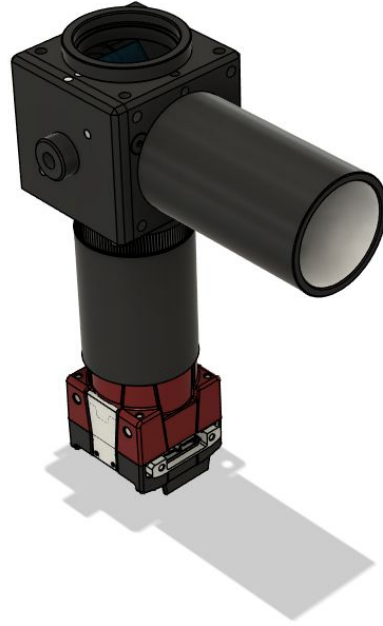

Mount the collimator assembly to the side of the cube shown in the picture. It should point directly at face of the dichroic mirror.

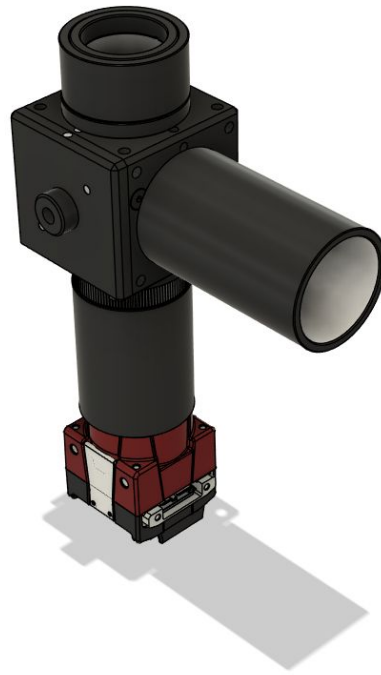

Mount the 15mm lens tube above the SM1 to C-Mount adapter, and then the C-Mount to RMS adapter to the top of that barrel.

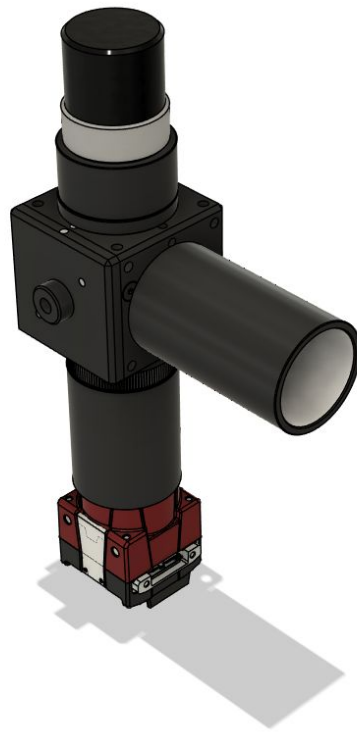

Add the objective to the top of the assembly.