


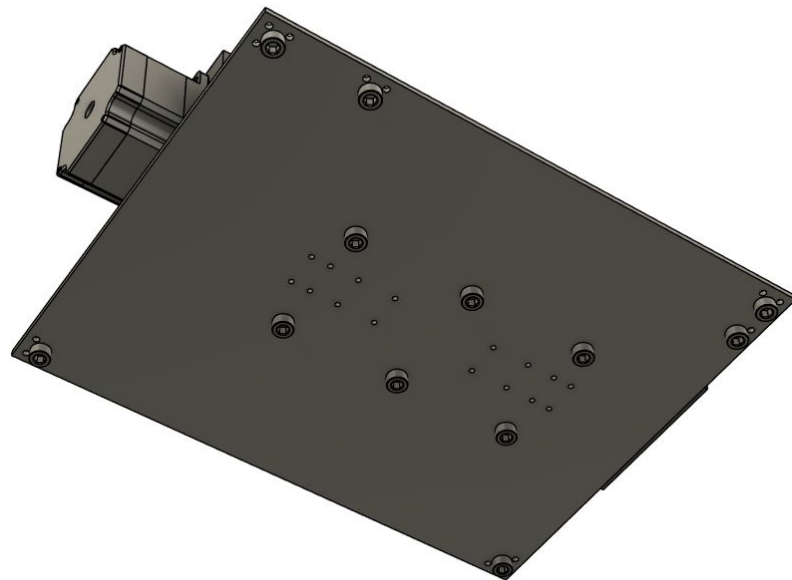


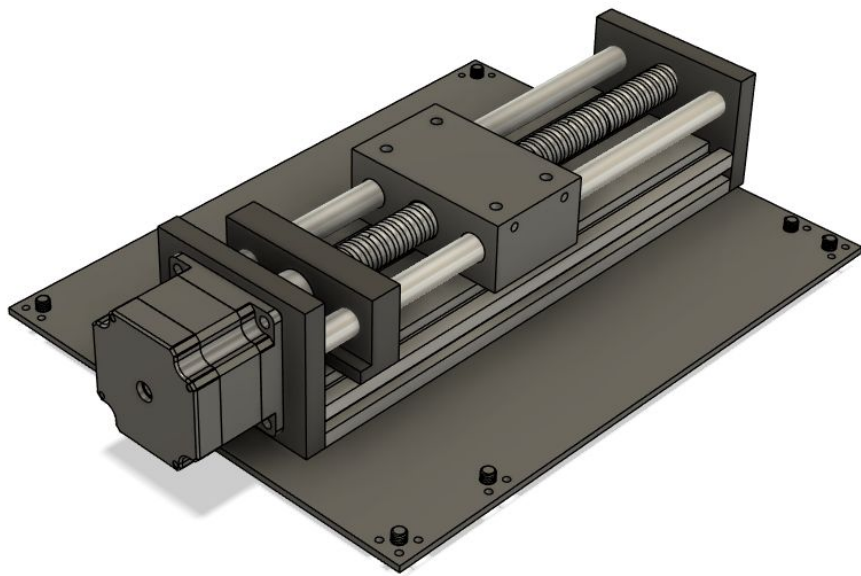


Secure the 150mm travel linear rail to the base using 6x M6x8 screws. Use the slot covers found in the bill of material to create spacers that align the sliding carriage nuts at the base of the motor to the holes on the sheet metal.

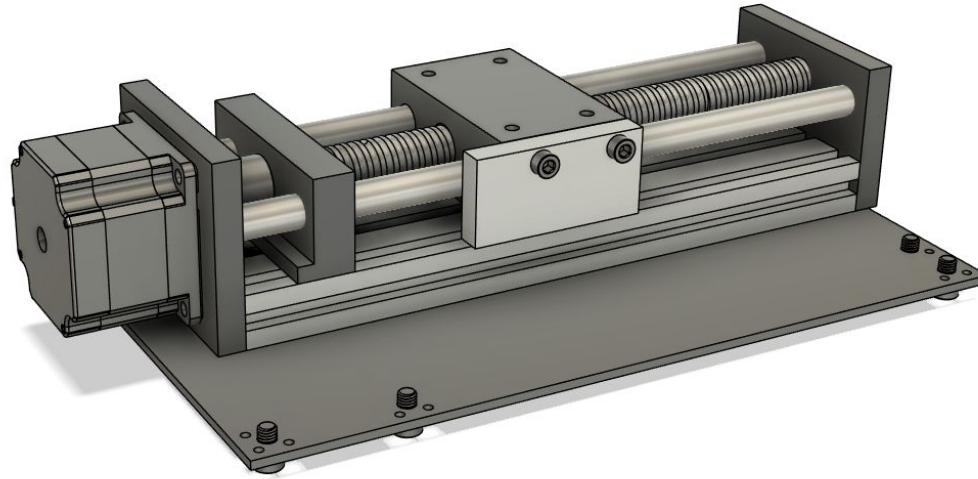



Mount the endstop hitter for the bottom axis in place using 2x M4x10 screws.

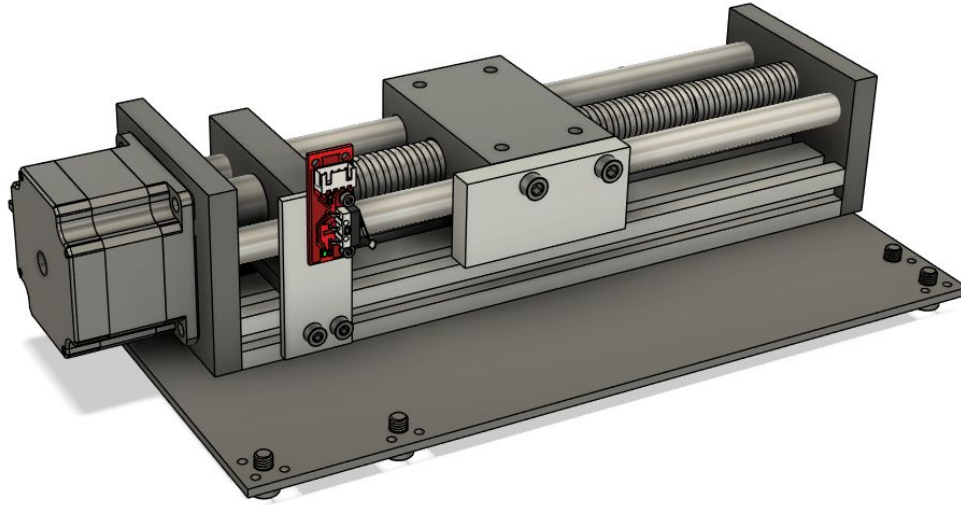


Mount the endstop assembly for the bottom axis in place using 2x M4x10 screws. To secure the limit switch, use 2x M2.5x4 screws.

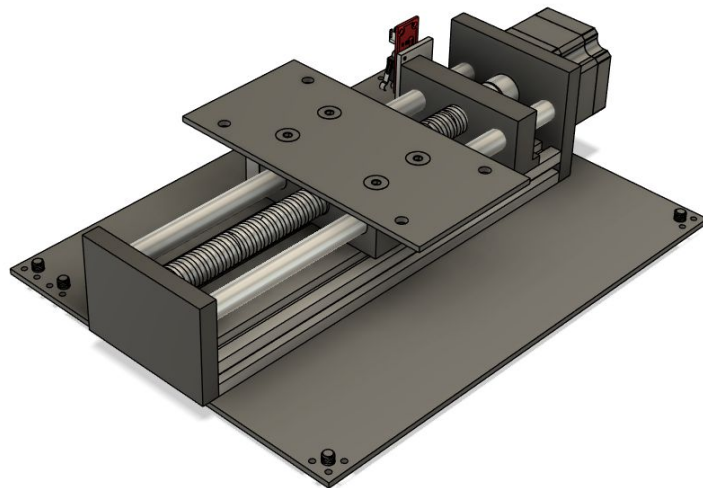


Mount the bottom to middle rail adapter plate in place using 4x M5x8 flathead screws.

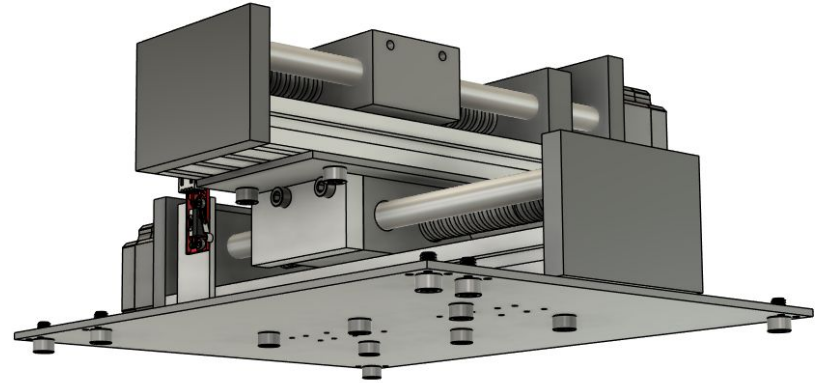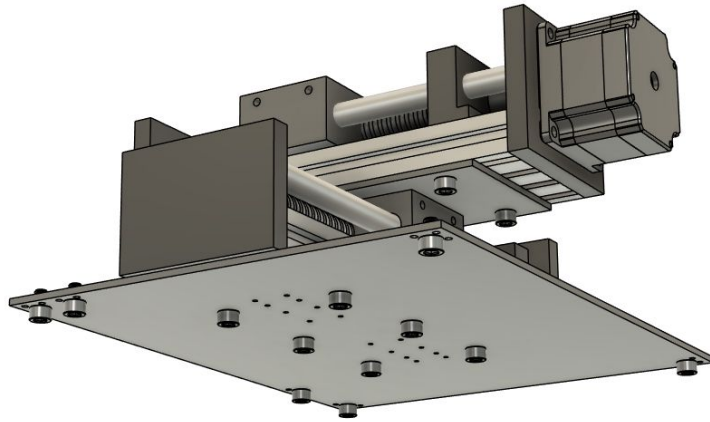



Secure the 100mm travel linear rail in place using 4x M6x8 screws. Use the slot covers found in the bill of material to create spacers that align the sliding carriage nuts at the base of the motor to the holes on the sheet metal.

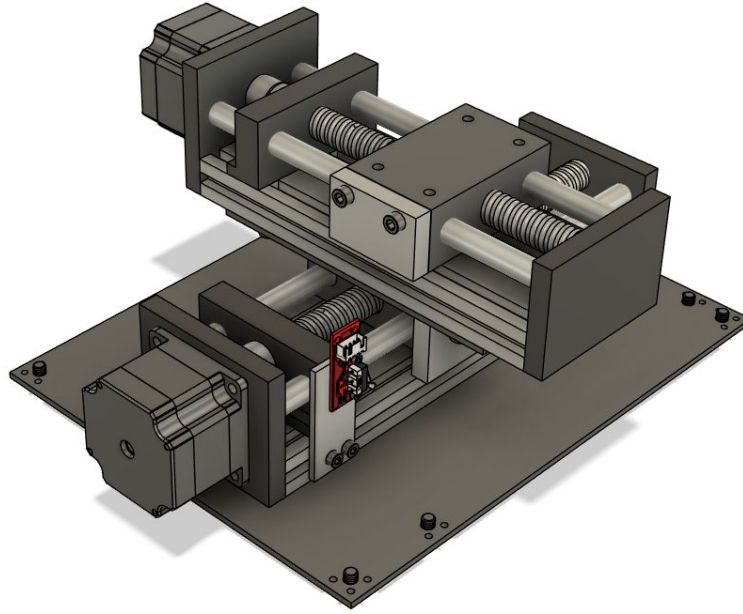

Mount the endstop hitter for the top axis in place using 2x M4x10 screws.

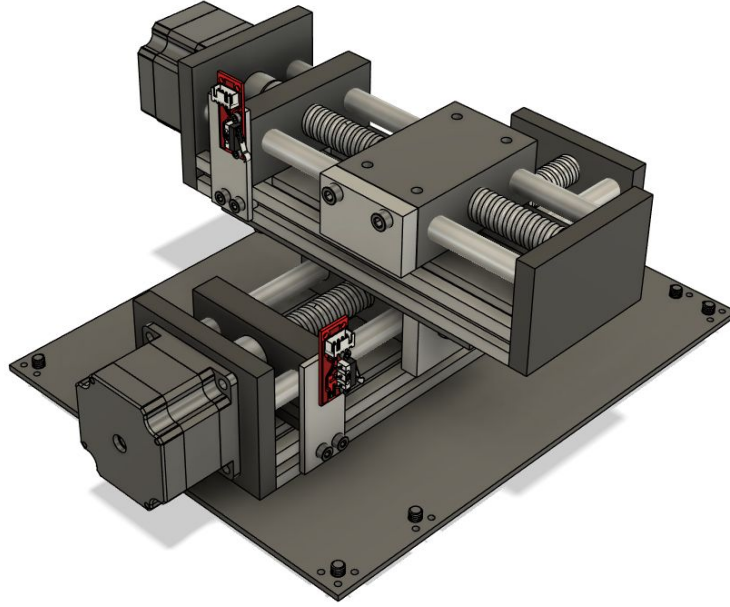

Mount the endstop assembly for the bottom axis in place using 2x M4x10 screws. To secure the limit switch, use 2x M2.5x4 screws.

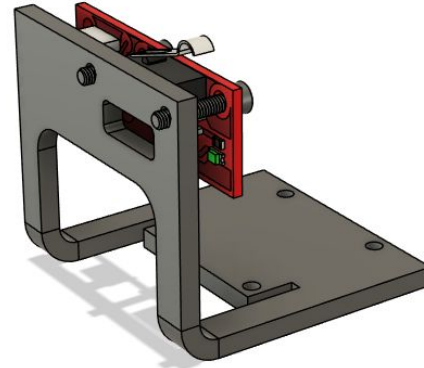
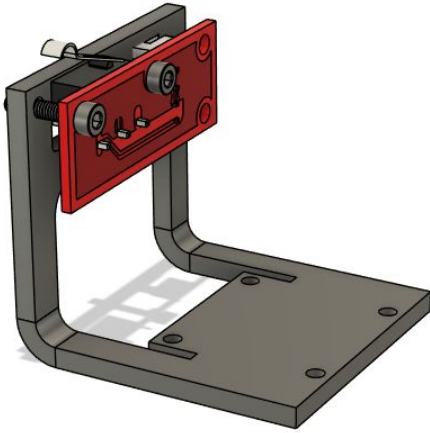


Secure the endstop to the bent endstop holder using 2x M2.5x10 screws.








Secure the middle rail to top rail adapter to the base of the black linear rail using 4x M2.5x32 screws , pinning the endstop holder in place as shown in the images.

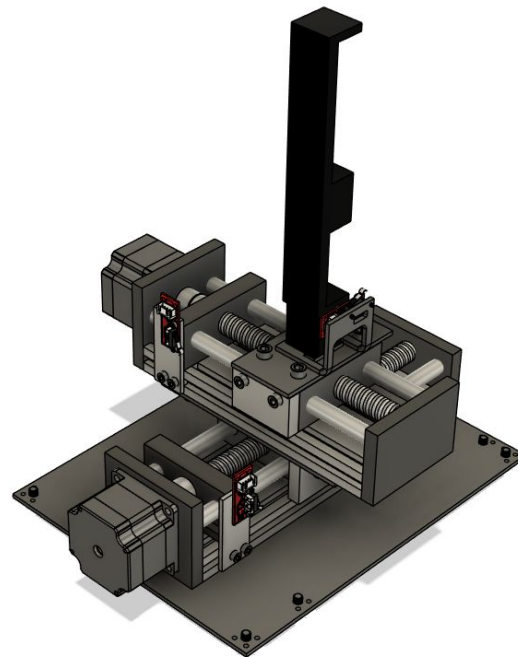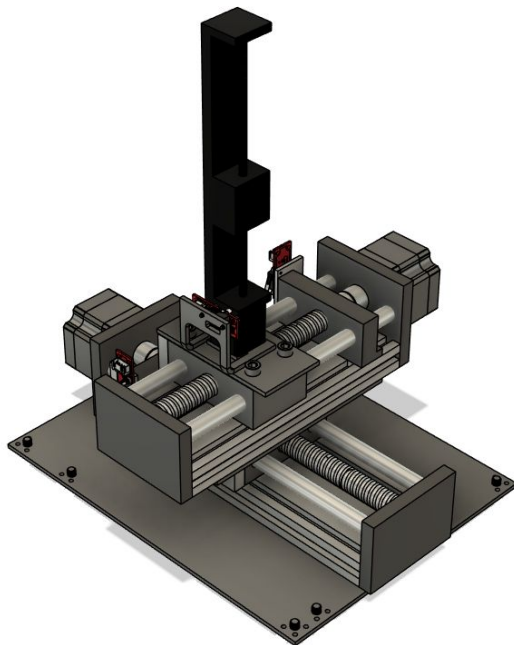


Secure the Z rail assembly from the previous steps to the middle linear rail using 4x M6x8 screws.

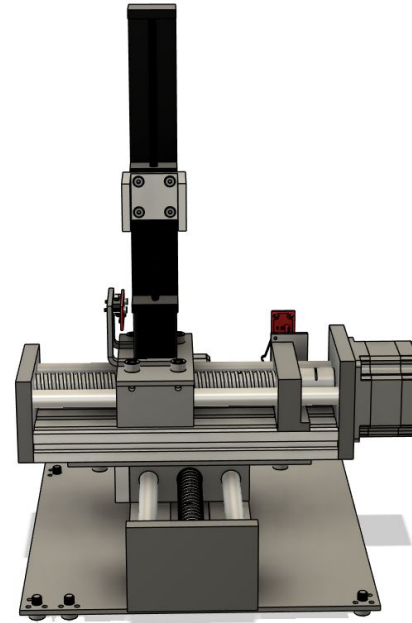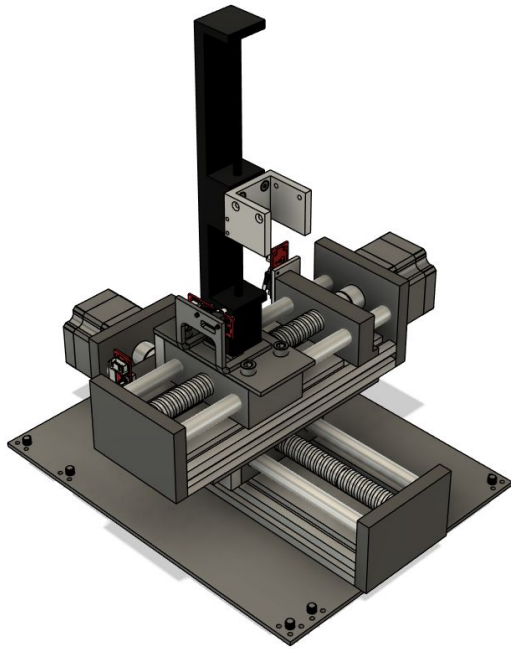


Mount the camera holder to the linear rail using 4x M3x6 flat head screws.

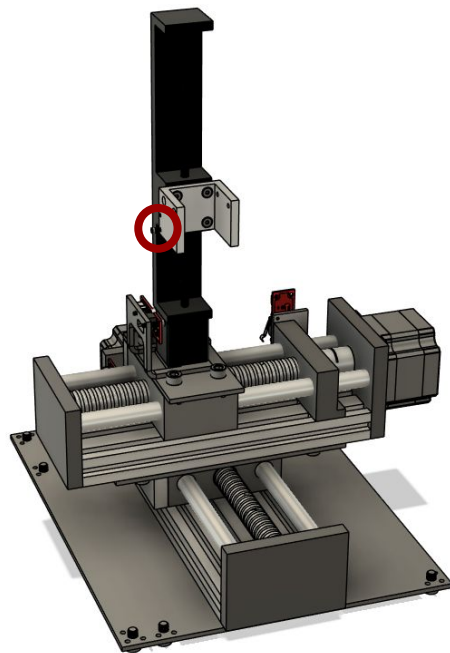

Add the endstop hitting M3x8 socket head screw to the side of the camera holder as shown in the images.

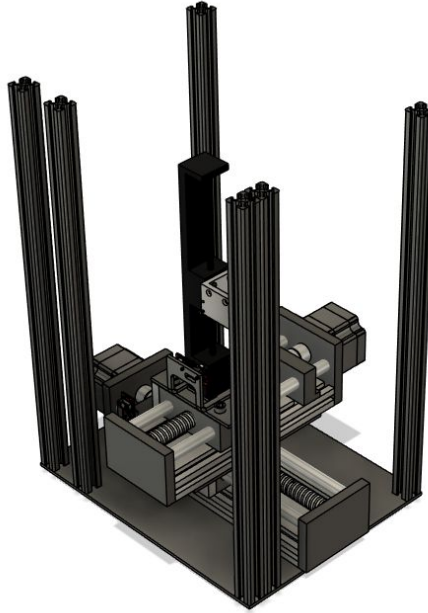

Secure the 400mm aluminum extrusions into place using 6 M6x8 screws as shown in the picture.

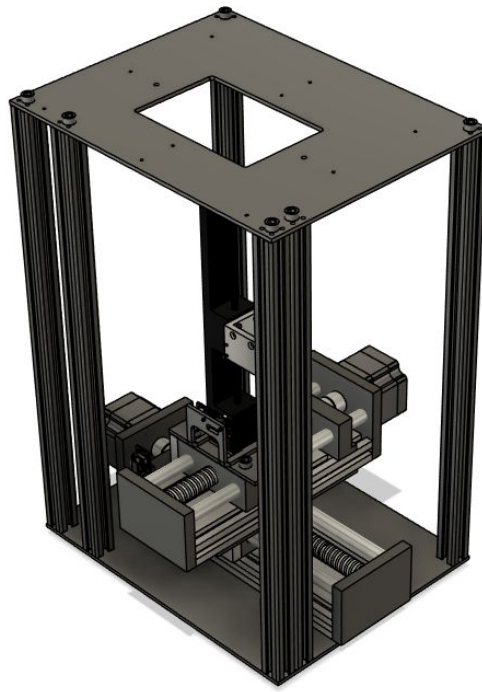

Secure lid of the system using 6x M6x8 screws as shown in the picture.