


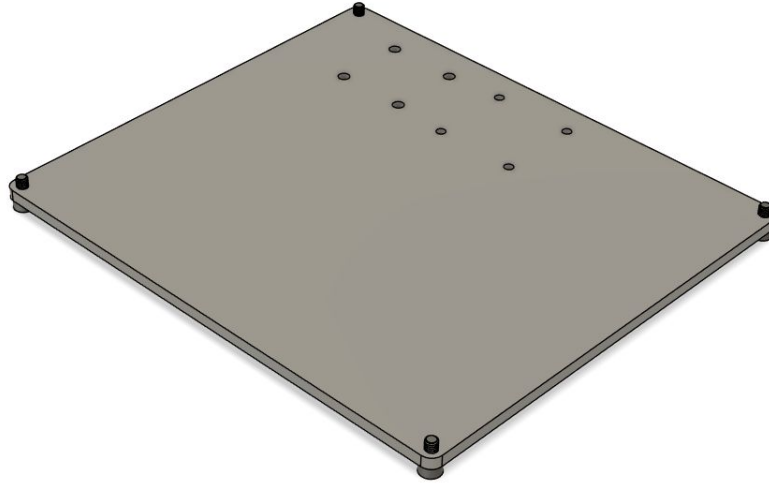


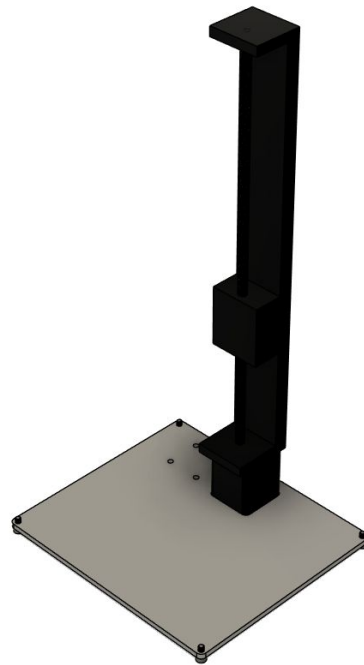



Thread in 4x M3x6 socket head screws into the corners of the base plate.

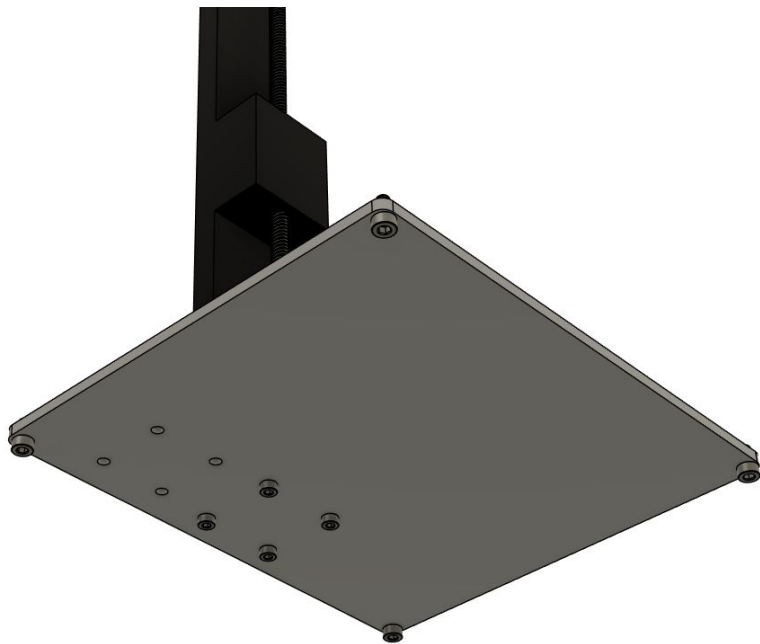



Remove the 4 M2.5 screws from the bottom of the linear rail. Using 4x M2.5x25 socket head screws, pin the base plate between the screw heads and the motor as shown in the right image.

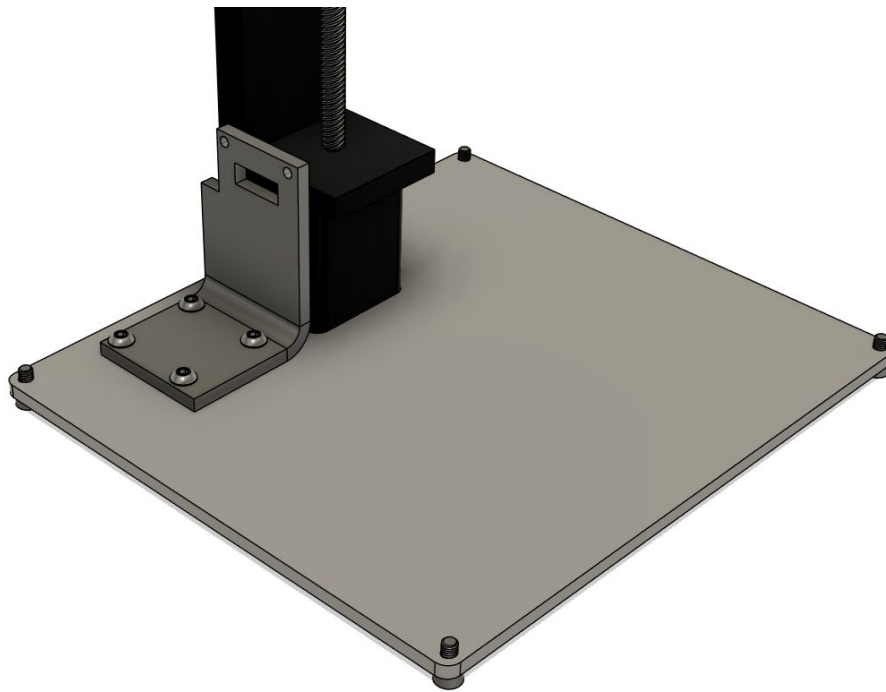


Mount the endstop holder using 4x M3x6 screws as shown in the picture.

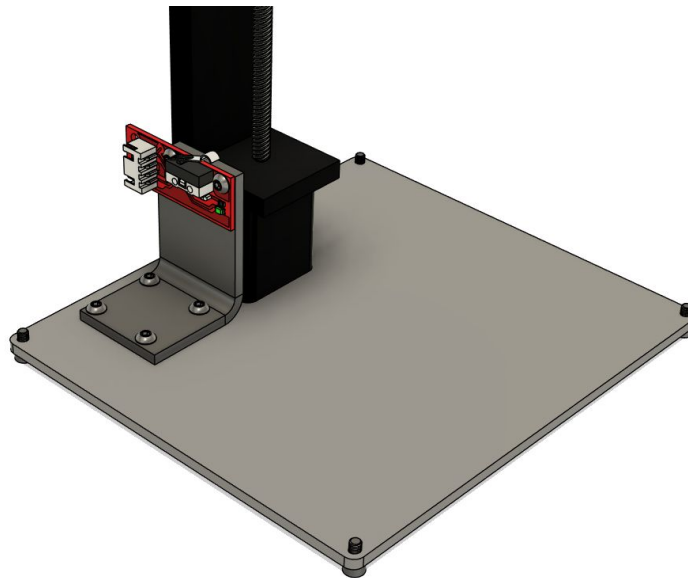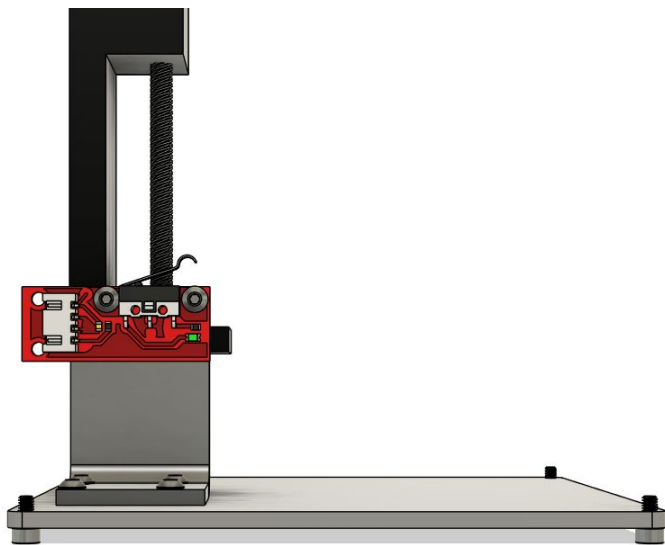

Mount the limit switch using 2x M2.5x4 screws as shown in the picture.

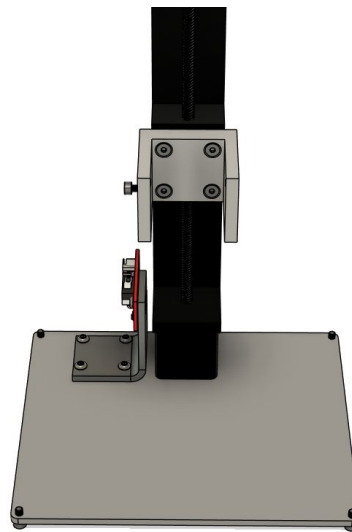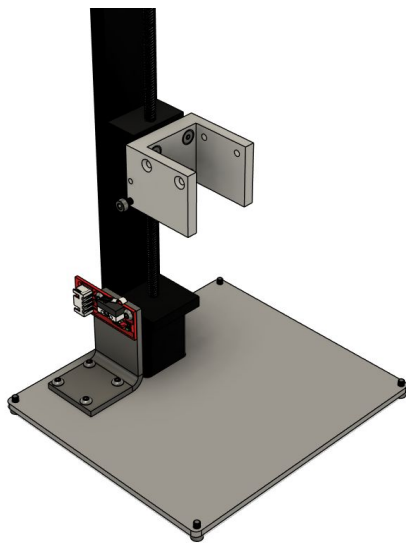

Mount the camera holder to the linear rail using 4x M3x6 flat head screws. Add the endstop hitting M3x8 socket head screw to the side of the camera holder as shown in the images.

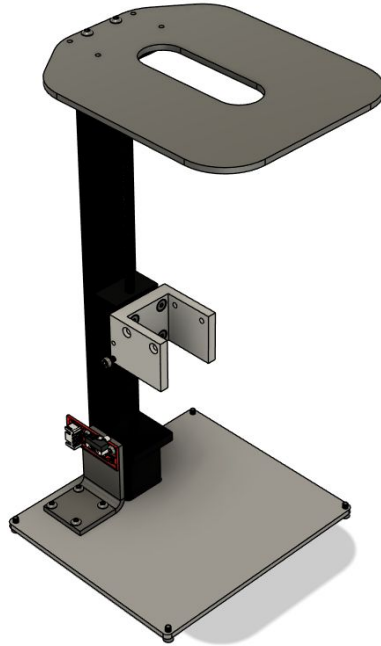

Remove the two M3 screws from the top of the linear rail and replace them with M3x10 screws, using them to secure the microscope sample plate in place.