
14 cm

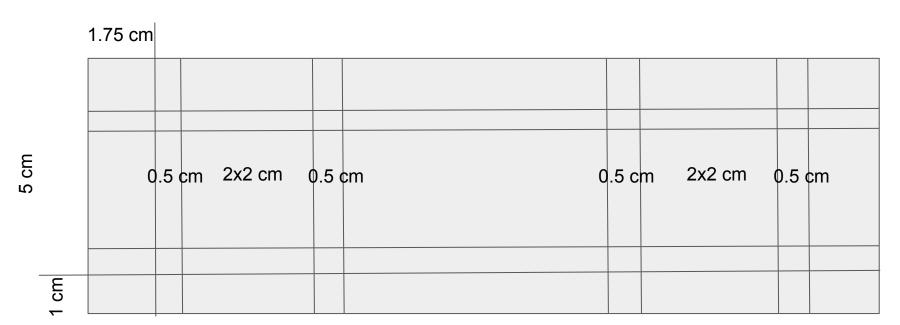

Directions

- 1. Cut 5x14 cm swatch
- 2. Draw lines as shown
- 3. Cut out the two 2x2 cm squares
- 4. Cut corner slits for the two squares
- 5. Fit one side onto unused PMT and put unused PMT through collar
- Tape one side down, pull unused PMT out of collar/swatch, tape rest of swatch to the collar
- 7. Put used PMT through collar/swatch and insert/screw in brace with minimal ripping to the swatch
- 8. Clean PMT pixel surface with alcohol soaked tissue
- 9. Install PMT/collar