
USER MANUAL · V6 FLUSH

FLUSH MOUNT

In-wall PoE mount for iPad Pro 12.9″ (3rd gen), iPad Pro 13″ and 11″ (M5) and iPad mini (A17 Pro)

A 3 mm 6061 trim (or printed) on magnets over a printed in-wall box. The glass sits 1.2 mm off the wall.

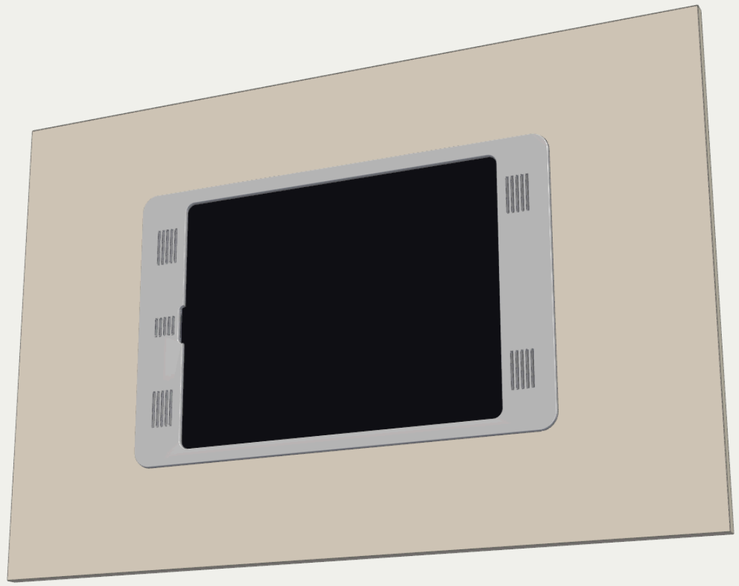

Designed for Brendan · October 2026 · Read the whole manual before you cut the wall

CONTENTS


WHAT'S IN THIS MANUAL

Which iPad, and what's new in v6	3
General data and sizes by model	5
Exploded view, section and clamp	8
Button reliefs and cable loop	11
Equipment, hardware and tools	13
Print settings, parts list and files	17
Parts orientation and printed trim	20
Machining the trim	24
Bench assembly (10 steps)	26
Wall installation (7 steps)	37
Removing the iPad	45
iPad setup	46
Finishing checklist	47
Hardware modelled in the STEP file	15

Colour code used in every step: **orange** = the part you are working on now, **blue** = screws, inserts, magnets and other hardware, grey = parts already fitted. The steps are drawn on the 12.9″; the other iPads build the same way, and every difference is called out in a **BY MODEL** box.


START HERE

CHOOSE YOUR iPAD

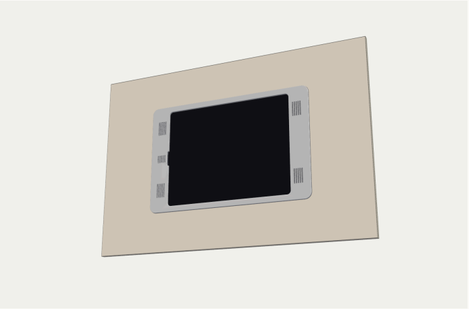


PRO 12.9″ (3RD GEN)

A1876 · A1895 · A2014 · A1983
ipad_pro_12_9_gen3
Button positions are estimated: measure yours first (page 11).

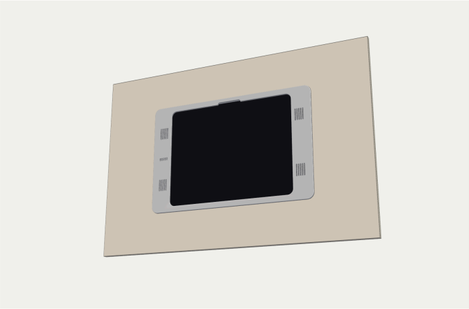


PRO 13″ (M5)

2025, from Apple’s drawings
ipad_pro_13_m5
Camera notch in the top of the trim.

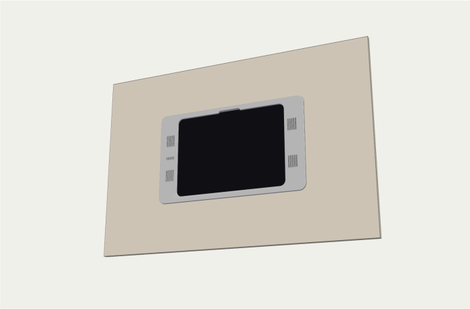

PRO 11″ (M5)

2025, from Apple’s drawings
ipad_pro_11_m5
Camera notch in the top; 4 magnet pairs.

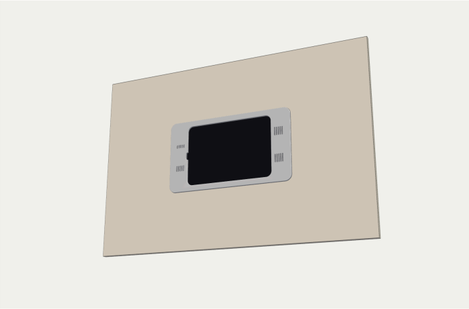

MINI (A17 PRO)

2024, from Apple’s drawings
ipad_mini_a17_pro
4 magnet pairs; the most room between studs.

Each iPad has its own folder in the repository’s v6/ directory, with the machined and the fully printed build kept apart. The steps in this manual are the same for all four.

OVERVIEW

WHAT'S NEW IN V6

BUTTONS LEFT ALONE

A 1.2 mm relief in the sleeve wall and deck ribs at every button, with a 45° roof so it prints.

ROOM FOR THE LOOP

Each box end is 2 mm longer, so the cable bends back round the plug. The cut-out grows 4 mm.

FOUR iPADS

tablets.py holds each iPad's size, camera, speakers, mics and buttons. One source builds them all.

EVERYTHING PLACED

Magnets, pins and clamp arms move to clear each iPad's speaker and mic openings.

A TEMPLATE EACH

Every iPad has its own full-size A3 cut-out template with a 100 mm check bar.

EVERY PART IN THE STEP

Magnets, pins, screws and inserts are all in the assembly STEP, each where it goes.

OVERVIEW

GENERAL DATA

Item (mm)	Pro 12.9″ (3rd gen)	Pro 13″ (M5)	Pro 11″ (M5)	mini (A17 Pro)
Trim size (3 mm)	359.1 × 233.6	360.1 × 234.2	328.2 × 196.2	273.9 × 153.4
Trim mass (6061)	196 g	199 g	169 g	135 g
Wall cut-out (R7)	347.1 × 221.6	348.1 × 222.2	316.2 × 184.2	261.9 × 141.4
Max off-centre in the bay	19	19	35	62
Magnet pairs	8	8	4	4
Front camera notch	left end	top edge	top edge	left end

Same on every model: trim 4.5 mm proud, glass 1.2 mm off the wall · trim ends 36.5 mm, top and bottom 9.3 mm · 57.5 mm deep from the wall face · 10 mm plasterboard, studs at 450 c/c · PoE+ over one Cat6 · 4 dog-ear arms clamp the board · prints on a 256 mm bed.

OVERVIEW

SIZES BY MODEL




Trim, front view. Orange dashed = plasterboard cut-out 347.1 × 221.6 mm (hidden). Proud of the wall 4.5 mm.



Trim, front view. Orange dashed = plasterboard cut-out 348.1 × 222.2 mm (hidden). Proud of the wall 4.5 mm.




Trim, front view. Orange dashed = plasterboard cut-out 316.2 × 184.2 mm (hidden). Proud of the wall 4.5 mm.

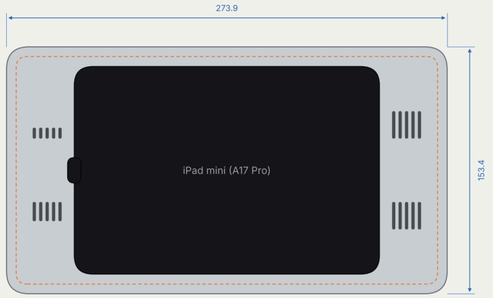

Trim, front view. Orange dashed = plasterboard cut-out 261.9 × 141.4 mm (hidden). Proud of the wall 4.5 mm.

OVERVIEW

DESIGN FEATURES

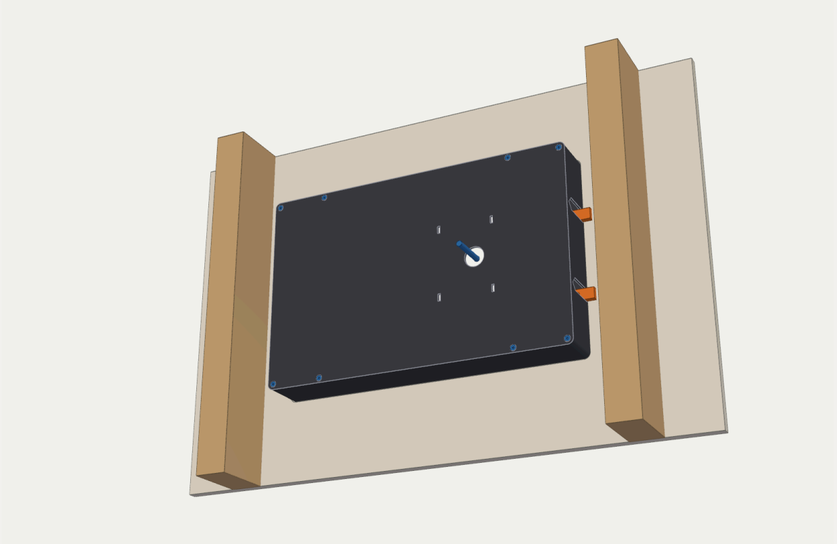

FLUSH GLASS

Only the 3 mm trim stands proud. The glass is 1.2 mm off the wall.

NO STUD WORK

Fits between studs in existing plasterboard. No noggings, no patching.

MAGNETIC TRIM

Magnet pairs and 2 pins. No screws on the face at all.

DOG-EAR CLAMP

4 arms swing out behind the board. The screws also lock the deck.

PoE IN THE BOX


The adapter rides on the back plate. One Cat6 in, nothing else.

NO SUPPORTS

Every printed part prints flat, with 45° ledges and roofs instead of overhangs.

OVERVIEW


EXPLODED VIEW

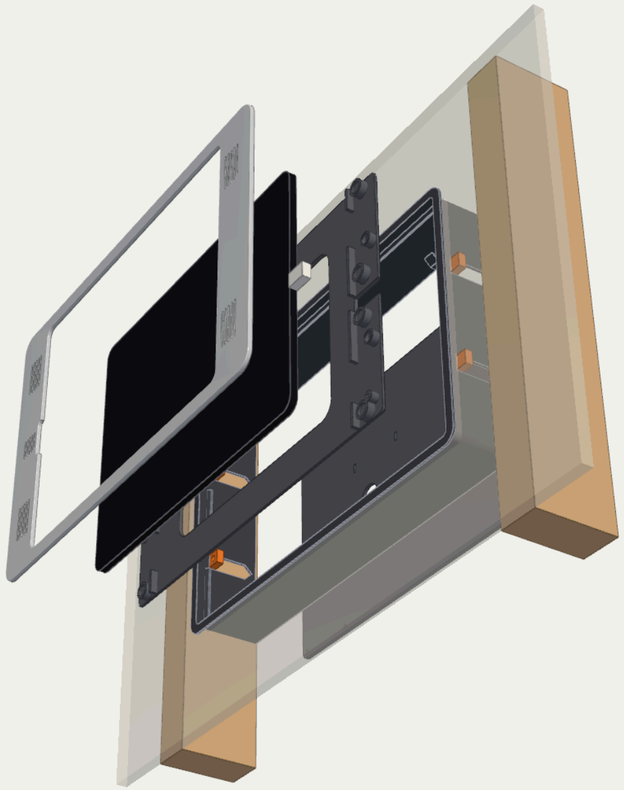

1. **TRIM** · 6061 or printed, magnets + pins
2. **iPAD** + straight USB-C
3. **DECK** L + R · carries the iPad
4. **SLEEVE** L + R · box and flange
5. **DOG-EAR ARMS** × 4
6. **BACK PLATE** L + R, carrying the PoE adapter

OVERVIEW


HOW IT SITS IN THE WALL

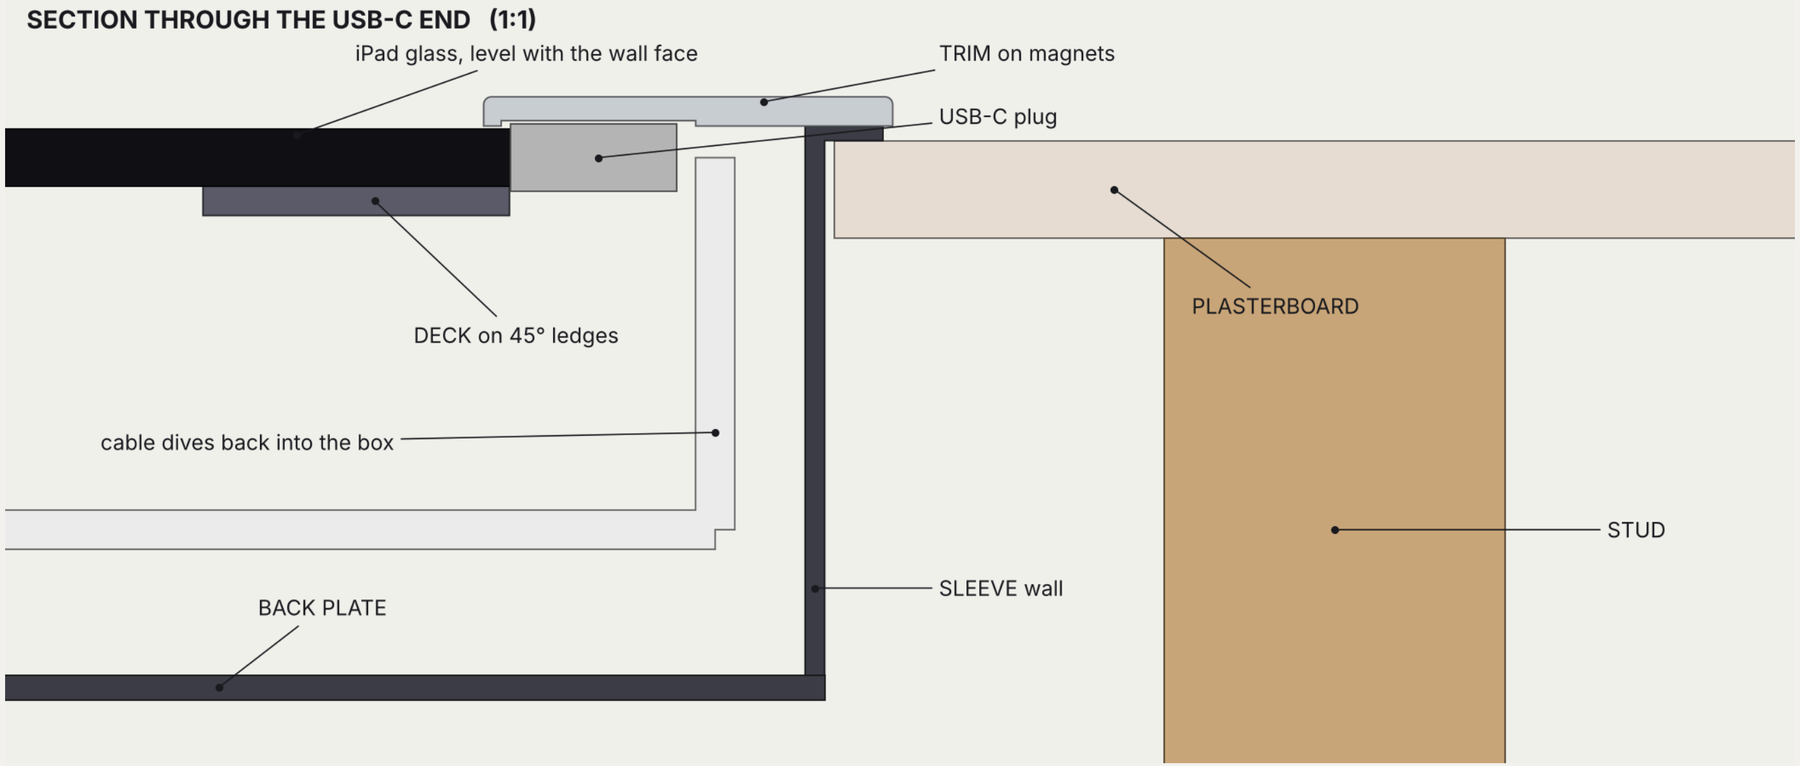

A true 1:1 cut through the USB-C end. The trim lip holds the glass through 0.3 mm PORON tape. The plug and its loop live inside the box end, under the wide part of the trim, and the cable drops to the PoE adapter on the back plate.


OVERVIEW

HOW IT CLAMPS

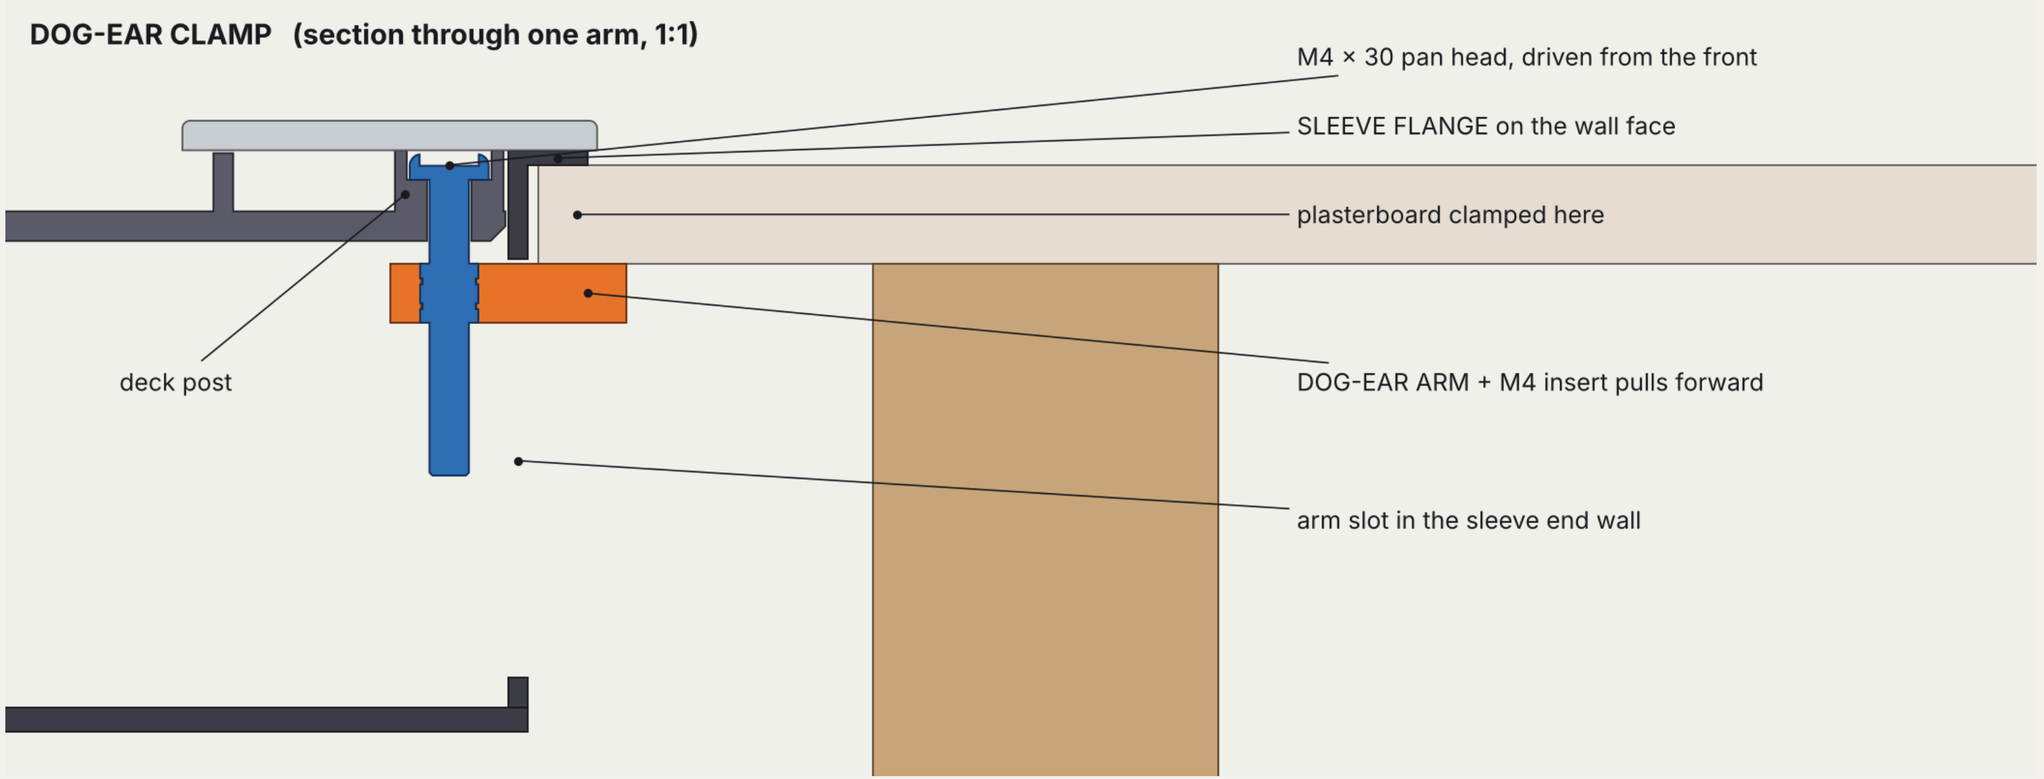

Each **M4 × 30** runs from the DECK POST down the inside of the sleeve wall into an insert in a DOG-EAR ARM, which reaches out through a slot in the wall. Tighten it and the arm pulls up behind the plasterboard, squeezing the board between the arm and the 6 mm FLANGE. The screw head also holds the deck down on its ledges.

BUTTON RELIEFS

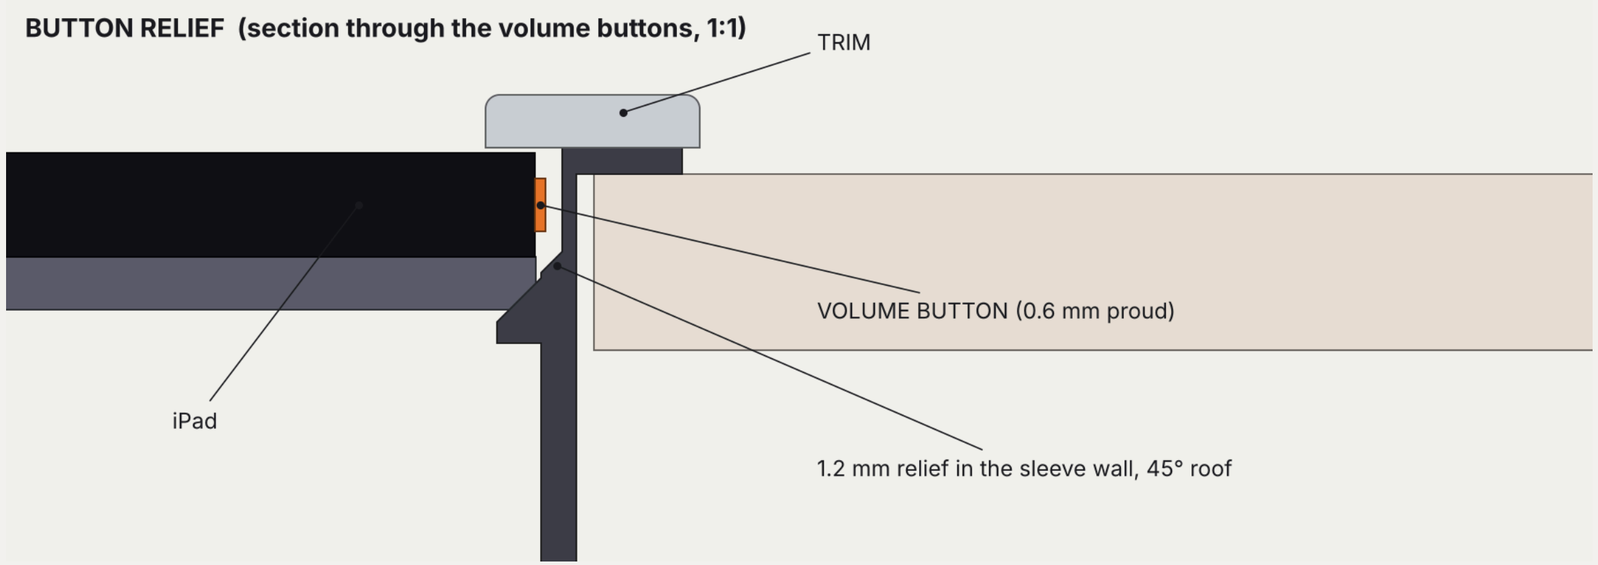


Buttons on the top edge get a **1.2 mm pocket** in the sleeve wall, with a 45° roof so it prints without support. Buttons on the end get a gap in the deck's end rib. Nothing presses them.

Use AssistiveTouch for the buttons once it's in the wall (page 46).

BY MODEL (from the top-left corner, USB-C on the right)

12.9″: volume 8–48 mm along the top edge, top button 8–36 mm down the left end. Estimated: measure yours first.
13″ / 11″ M5: volume 12–39 mm along the top, top button 12–28 mm down the left end.
mini: both on the left end: volume 11–37 mm from the top, top button 11–31.5 mm from the bottom.

ROOM FOR THE CABLE LOOP

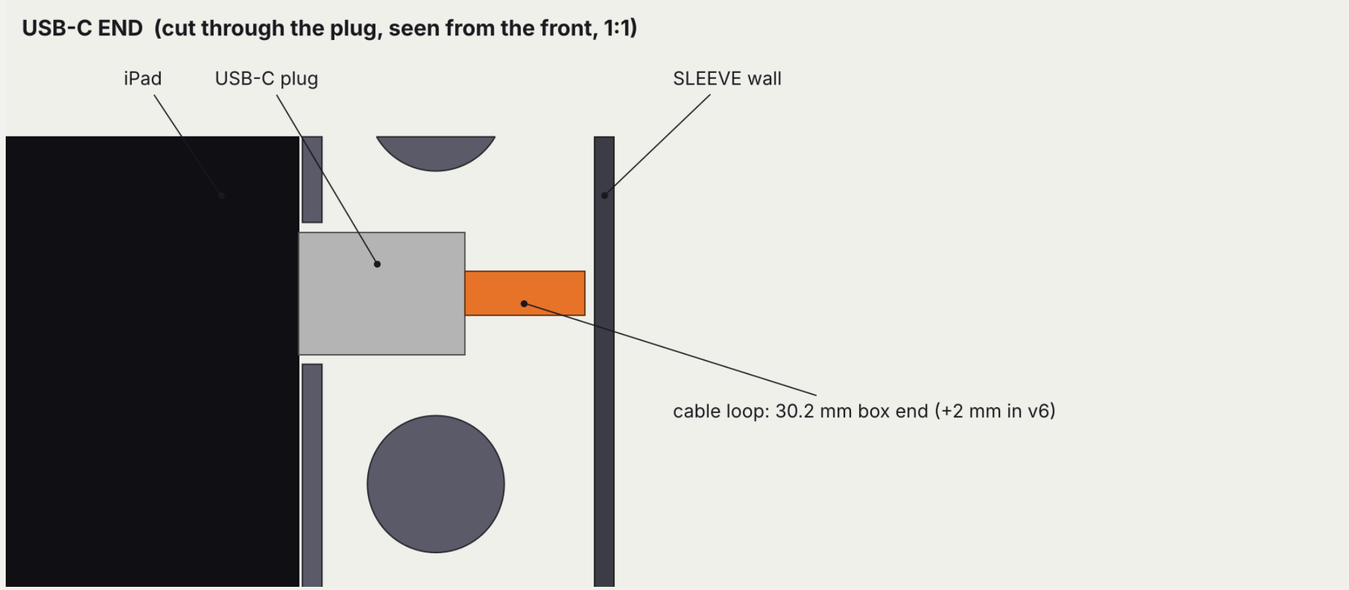

The box end is **2 mm longer** than in v5.1: 30.2 mm from the iPad edge to the sleeve wall. The cable has room to loop back round the plug and drop into the box.

Both ends grow so the trim stays symmetric. The cut-out is 4 mm longer than v5.1's: 347.1 mm on the 12.9″.

> Building a 12.9″ in a hole cut for v5.1? Widen the hole by 2 mm at each end first, using the v6 template.

BEFORE YOU START

RECOMMENDED EQUIPMENT

Item	Notes
PoE+ switch port	802.3at (PoE+). One port per panel.
PoE+ to USB-C adapter	PoE Texas / Heckler T515, 25 W. Lives inside the box.
USB-C cable	Standard straight plug, short. Box end sized for a 17 × 12.5 × 7 mm overmold.
Cat6 cable	From the switch into the stud bay, with about 300 mm spare at the hole
Filament	PETG or ASA. Not PLA: the iPad warms a closed box.
Aluminium	6061 plate, 3 mm (or 4 mm faced down). At least 375 × 250 (12.9″, 13″), 344 × 212 (11″), 290 × 170 mm (mini).
Magnets	N52 discs, 10 × 1.5 mm: 16 for the 12.9″ and 13″, 8 for the 11″ and mini
PORON tape	0.3 mm thick, about 1 m, for the trim lip that touches the glass

BEFORE YOU START

REQUIRED HARDWARE


Item	Qty	Where it goes
N52 magnet 10 × 1.5 mm	16 / 8	Half in the trim pockets, half in the deck posts
Dowel pin Ø3 × 6 mm (ISO 8734)	2	Pressed into the trim, locate in the deck
M4 × 30 pan-head screw	4	Deck posts down to the dog-ear arms
M4 heat-set insert (Ø5.6 hole)	4	One in each dog-ear arm
M3 × 8 countersunk (ISO 10642)	8	Back plate to the sleeve
M3 heat-set insert, short (5.7 mm)	8	Bosses on the sleeve’s back edge
2-part epoxy	1	Sleeve seam, deck seam and magnets
Zip ties, small	2	PoE adapter to the back plate
PORON tape 0.3 mm	1 m	Underside of the trim lip

BY MODEL

16 magnets (8 pairs) on the 12.9″ and 13″. **8 magnets** (4 pairs) on the 11″ and mini, whose speakers leave room for one pair near each corner. Everything else is the same.

BEFORE YOU START

HARDWARE IN THE STEP FILE

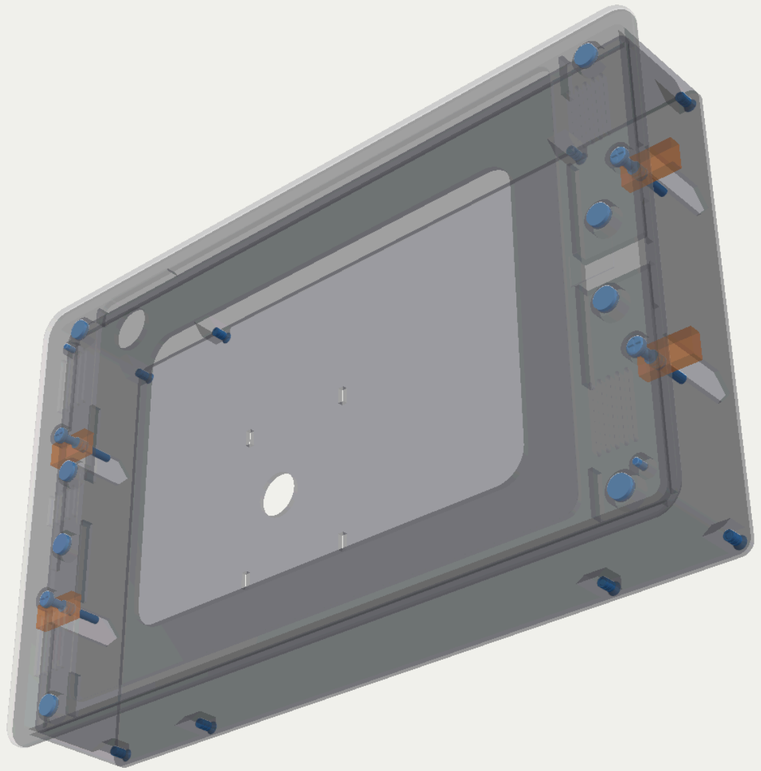

Every assembly STEP carries **all the hardware**, each in its place: magnets, dowel pins, the M4 clamp screws and their inserts, and the back-plate screws and inserts. 42 parts on the 12.9″ and 13″, 34 on the 11″ and mini.

- Named by size and standard, e.g. **hw_M4x30_pan_ISO7045_2**
- assembly_flush6.step (machined) and assembly_flush6_printed.step
- hardware.txt beside each one is the bill of materials

> The model checks itself: no magnet, pin or head touches a part it shouldn’t, and every insert bites into its own part.

BEFORE YOU START

TOOLS

BENCH

- Soldering iron + M3/M4 heat-set tips
- Flat surface (glass or MDF)
- Spring clamps, masking tape
- Screwdriver for the M4 pan heads
- 2 mm hex key (M3 countersunk)
- Isopropyl alcohol + cloth

MACHINING

- CNC router (StrongHold)
- 6 mm and 2 mm end mills
- 3 mm drill
- Vacuum table or double-sided tape on a spoilboard
- Deburring tool

WALL

- Stud finder + spirit level
- Your iPad’s A3 cut-out template
- 14 mm drill bit
- Plasterboard saw
- Torch + inspection mirror
- Draw wire for the Cat6

PRINTING

PRINT SETTINGS

Setting	Value
Material	PETG or ASA
Layer height	0.2 mm (0.4 mm nozzle)
Walls	4 (6 on the dog-ear arms)
Infill: sleeve	15% gyroid
Infill: deck, back plate	20% gyroid
Infill: dog-ear arms	100%
Infill: printed trim	20% gyroid, 4 bottom layers
Supports	None needed
Bed	Textured PEI

No supports. Every v6 part, for every iPad, was checked for overhangs in its print orientation. The few square millimetres left are first-layer countersink edges.

The arms take the clamp load. Print them solid.

Bambu Studio? Each iPad’s flush/printed folder has a 3MF with every plate and setting ready.

PRINTING

PARTS LIST

Part (size in mm)	Qty	12.9″	13″ M5	11″ M5	mini
SLEEVE L / R (56.5 deep)	1 each	178.6 × 231.6	179.0 × 232.2	163.1 × 194.2	136.0 × 151.5
DECK L / R	1 each	170.3 × 215.0	170.8 × 215.7	154.8 × 177.6	127.7 × 134.9
BACK PLATE L	1	232.6 × 219.6	233.0 × 220.2	217.1 × 182.2	190.0 × 139.5
BACK PLATE R	1	112.6 × 219.6	113.0 × 220.2	97.1 × 182.2	70.0 × 139.5
DOG-EAR ARM	4	24 × 12 × 6	24 × 12 × 6	24 × 12 × 6	24 × 12 × 6
TRIM, 6061 (3 mm)	1	359.1 × 233.6	360.1 × 234.2	328.2 × 196.2	273.9 × 153.4
TRIM, PRINTED L / R	1 each	184.6 / 179.6	214.3 / 150.8	196.8 / 136.4	142.0 / 137.0
One-piece sleeve / deck	option	357.1 / 340.5	358.1 / 341.5	326.2 / 309.6	271.9 / 255.4

The back plate is split off-centre on purpose: its joint sits 60 mm from the sleeve seam, so the plate bridges and stiffens that seam. One-piece versions of the sleeve, deck, back plate and trim are in print/one_piece/; the mini’s deck fits a 256 mm bed in one piece.

PRINTING

FILES

‹iPad›/flush/machined/

- machine/trim_6061.step for CAM
- print/ sleeve, deck, back plate halves and dog_ear_arm_x4
- print/one_piece/
- CUTOUT_TEMPLATE_A3.pdf
- assembly_flush6.step · hardware.txt

‹iPad›/flush/printed/

- Float_Mount_v6_‹iPad›_Flush_Printed.3mf
- print/ trim_print_L · _R and every hidden part
- print/one_piece/
- CUTOUT_TEMPLATE_A3.pdf
- assembly_flush6_printed.step · hardware.txt


v6/ (the sources)

- tablets.py: the four iPads
- flush6.py · template6.py
- printed6.py · make3mf6.py
- hardware6.py: magnets, pins, screws, inserts

‹iPad› is **ipad_pro_12_9_gen3**, **ipad_pro_13_m5**, **ipad_pro_11_m5** or **ipad_mini_a17_pro**. Every size comes from flush6.py and tablets.py. If you change one that moves the cut-out, print a new template with template6.py.

PARTS ORIENTATION · 1 OF 4

SLEEVE HALVES

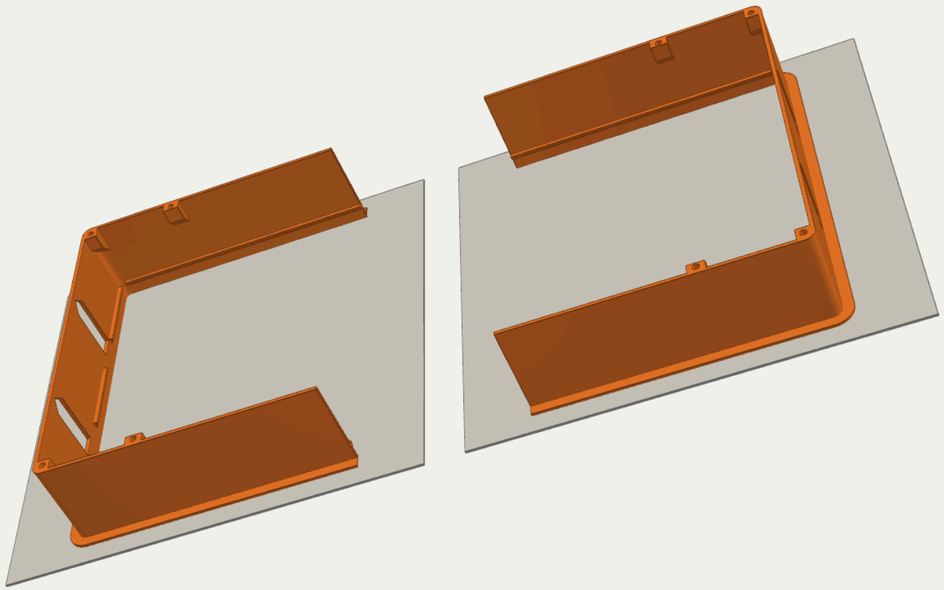

Face down, as exported. One half per plate.


The flange face goes on the bed, so the surface that sits against the wall comes out dead flat.

The ledges inside are 45°, and the arm slots and button pockets have 45° roofs, so nothing needs support.

> 15% gyroid · 4 walls. The largest half (13″) is 179.0 × 232.2 mm: a 256 mm bed with room for a brim.

PARTS ORIENTATION · 2 OF 4

DECK HALVES

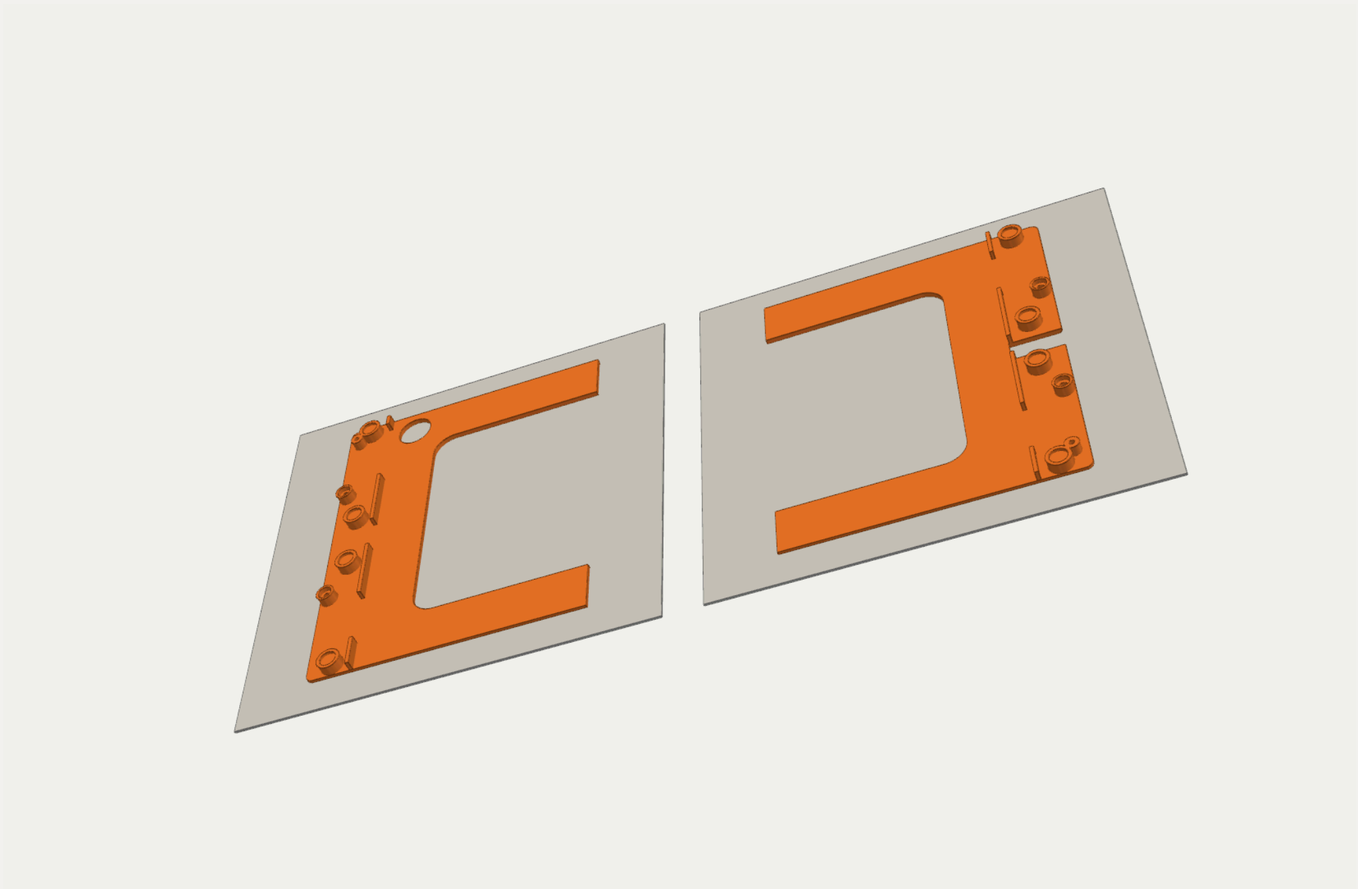


Bottom down, as exported. 20% gyroid · 4 walls.


The bevelled back edges print as 45° chamfers. Those are what seat on the sleeve ledges and centre the deck.

> Keep elephant’s foot down on these edges. A fat first layer stops the deck seating fully.

BACK PLATE AND DOG-EAR ARMS

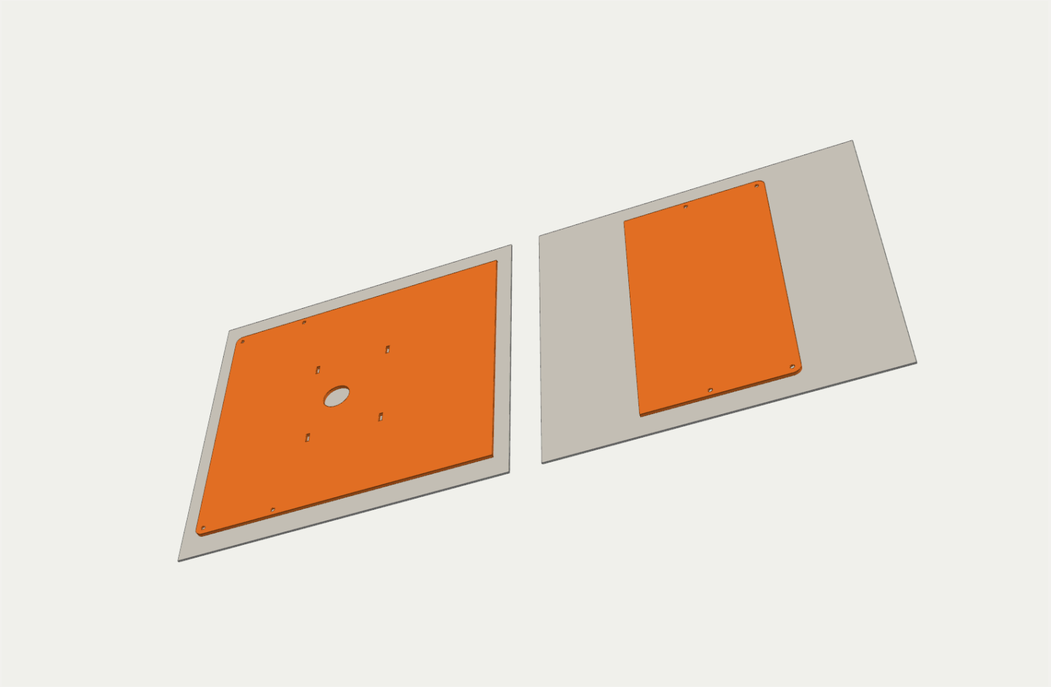


BACK PLATE L + R: flat, countersinks down. 20% gyroid.

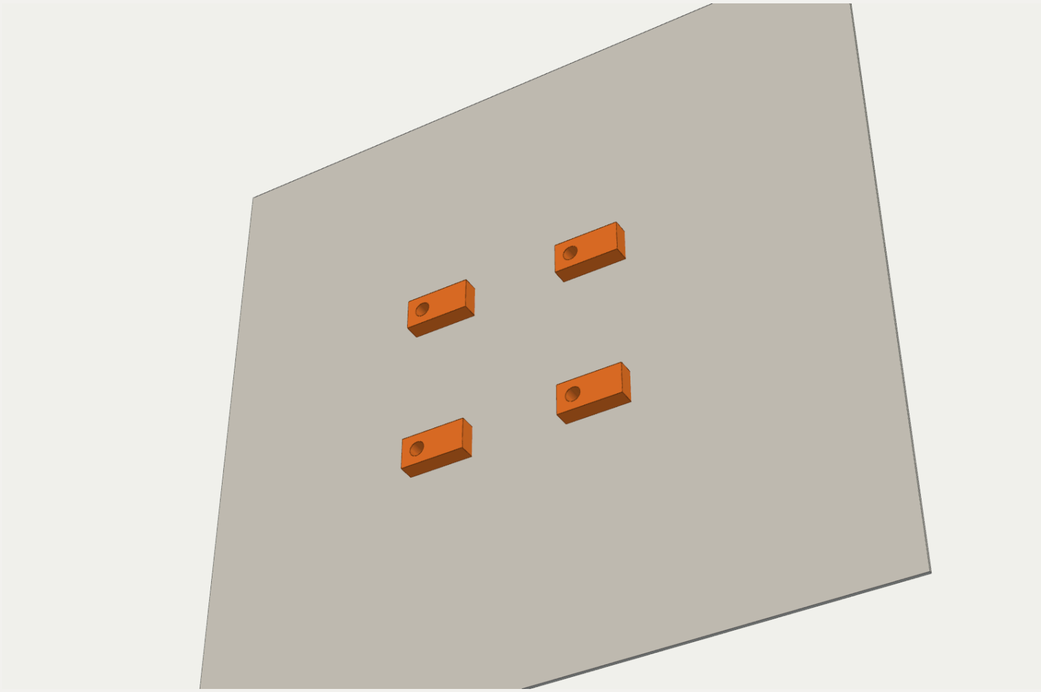

DOG-EAR ARMS × 4: flat. Solid infill, 6 walls. The same arms for every iPad.

PRINTED TRIM

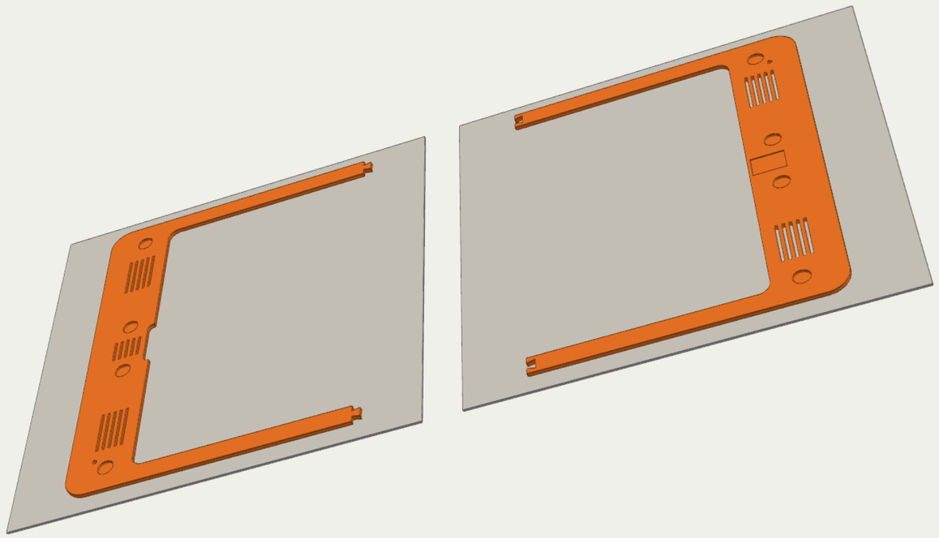

No CNC? Print the trim instead, in the colour you like.

- **Two halves** on 256 mm beds: glue the dovetails with CA or epoxy.
- **One piece** (print/one_piece/trim_print_full) on a big bed.
- Always **face down** on textured PEI: the bed gives the face its finish.


> The magnet pockets and pin holes are printed in. The 0.8 mm front round becomes a 0.8 mm chamfer.

BY MODEL

12.9″ and mini: seam on the centreline. 13″ and 11″ M5: seam 3 mm right of the camera notch.

MACHINING · OP 1 OF 2

TRIM: BACK SIDE UP

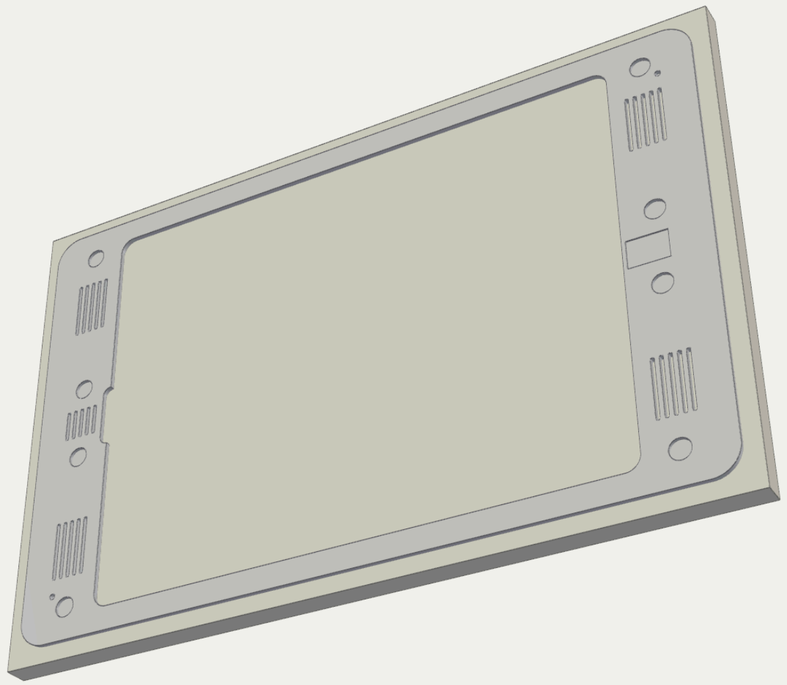


1. Hold 3 mm 6061 flat on a vacuum table or double-sided tape on a spoilboard.
2. Pocket the Ø10.2 magnet seats, 1.6 mm deep, with a 6 mm end mill.
3. Drill 2 × Ø3 pin holes, 2 mm deep.
4. Cut the plug relief at the USB-C end.

By model	12.9″	13″	11″	mini
Magnet seats	8	8	4	4
Plug relief	0.55	0.94	0.86	0.34

> **1.6 mm is the limit.** It leaves a 1.4 mm skin under the front face.

MACHINING · OP 2 OF 2

TRIM: FRONT SIDE UP

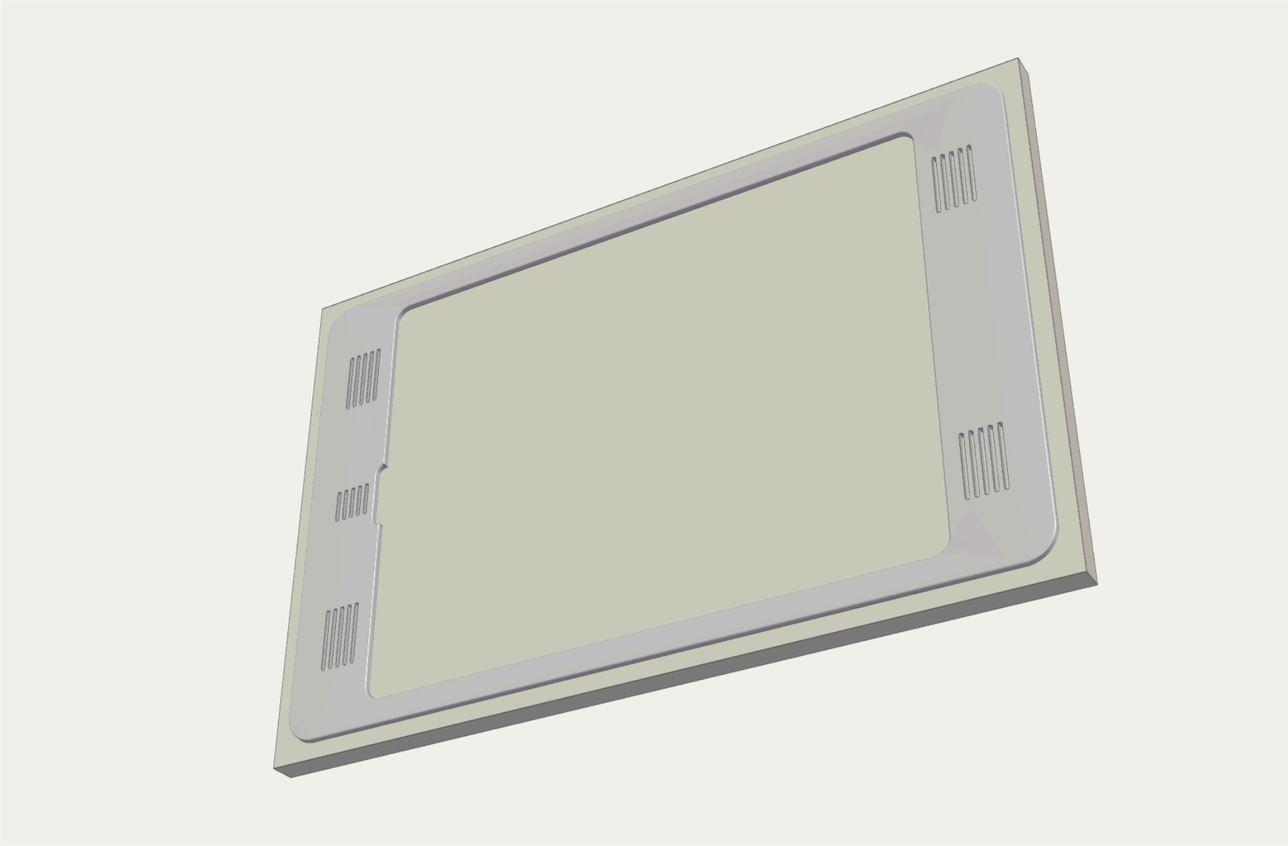

1. Flip it onto two Ø3 pins set in the spoilboard, using the pin holes from op 1.
2. Cut the window and camera slot through (6 mm end mill).
3. Cut the grille slots with a 2 mm end mill: climb, light passes.
4. Profile the outside with tabs, then a 0.8 mm radius on the front outer edge.

BY MODEL: WINDOW, SLOT, GRILLES

12.9″: R7.5 corners, slot 32 × 8.4 on the left end. **13″ / 11″:** R11.7, slot 52.5 / 49.5 × 8.4 in the top edge. **mini:** R11.7, slot 16 × 8.4 on the left end. Grilles sit over each model’s own speakers and mics.

Finish: fine glass bead blast, then clear or black anodise. Press in the 2 dowel pins after anodising.


01

BENCH ASSEMBLY

Ten steps on the bench, the same for every iPad. You finish with a complete in-wall unit (sleeve, deck, back plate, PoE adapter and arms) and a trim ready to fit.

BENCH ASSEMBLY · STEP 1 OF 10

ARM INSERTS

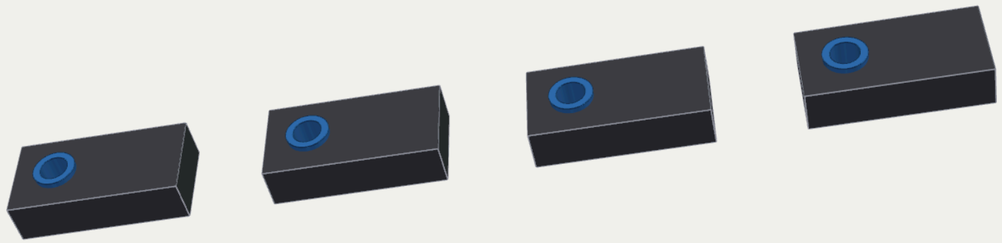

Press one M4 insert into each DOG-EAR ARM, from the top face.

Lay the arm flat on the bench so it can’t tilt. Push straight down and stop when flush.

> A crooked insert makes the arm swing out at an angle. Check each with a screw before it cools.

YOU NEED

4 × M4 heat-set inserts · iron with M4 tip

SLEEVE INSERTS



Press 8 M3 inserts into the bosses on the back edge of the SLEEVE halves: 4 in each.


Do this before gluing. Each half sits flat on its flange, so you can press straight down.

> Stop each insert flush or 0.1 mm below. Proud inserts hold the back plate off its seat.

YOU NEED

8 × M3 heat-set inserts · iron with M3 tip

GLUE THE SLEEVE

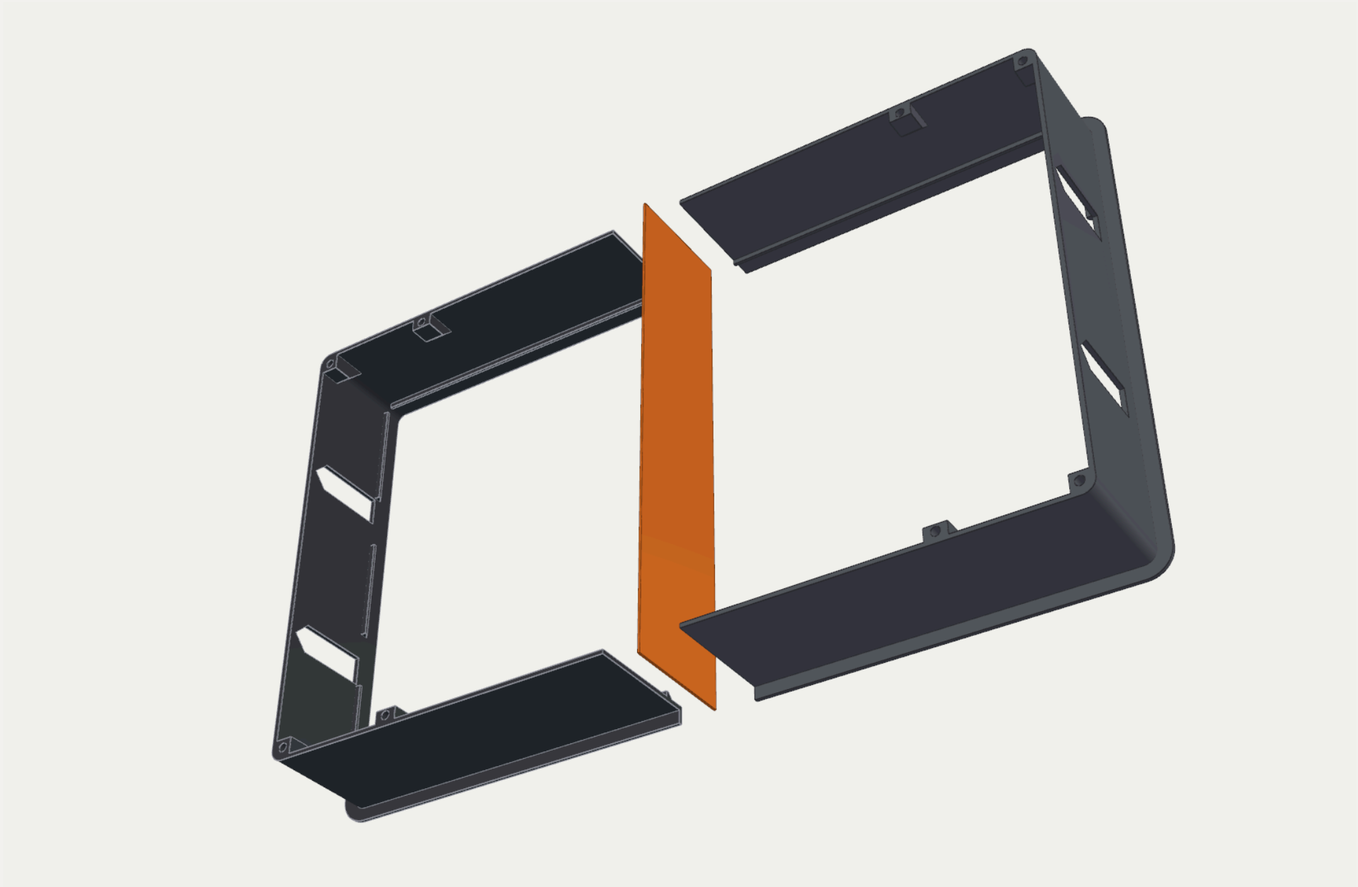

Lay both SLEEVE halves face down on a flat surface. Epoxy the centre seam and push them together.


Keep the flanges pressed flat while it cures. Tape across the seam, inside and out, holds it closed.

> Wipe squeeze-out off the ledges. A blob there stops the deck seating.

YOU NEED

2-part epoxy · flat surface · masking tape

GLUE THE DECK

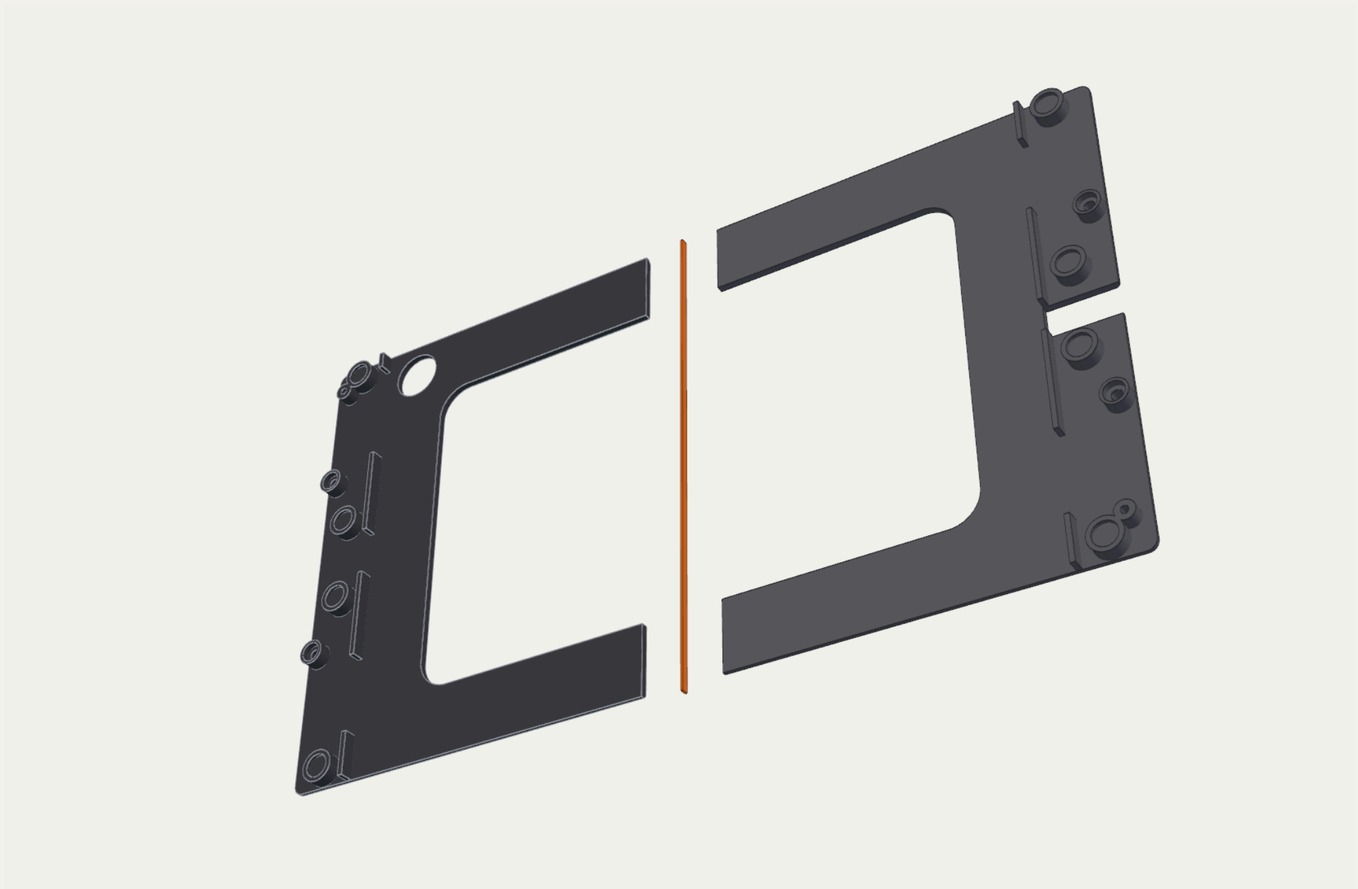

Epoxy the centre seam of the two DECK halves, flat on the same surface, and push them together.


Once the sleeve and deck have both cured, dry-fit: the deck should drop onto the sleeve ledges and sit level with the flange.

> The iPad lies on this face. Sand any ridge at the seam flat, or it will press on the iPad’s back.

YOU NEED

2-part epoxy · flat surface · fine sandpaper

SORT THE MAGNET POLARITY

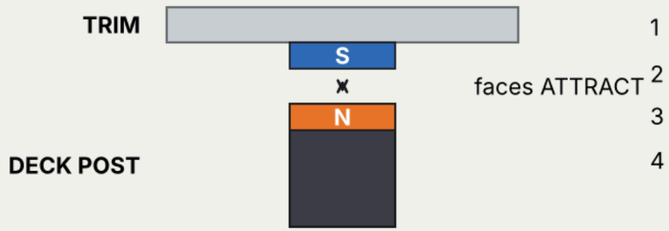


1 Stack all the magnets into one column.
2 Slide each off and dot its TOP face with a marker.
3 TRIM: dot face UP, into the pocket (toward the room).
4 DECK: dot face UP, exposed (toward the room).
All face the same way, so each pair attracts.
5 Test each pair before the glue sets: the trim must snap on.

Get this right before any glue comes out. One reversed magnet and the trim pushes off on that corner. Every magnet goes in dot face toward the room.

By model: 16 magnets on the 12.9″ and 13″, 8 on the 11″ and mini. The rule is the same.

DECK MAGNETS

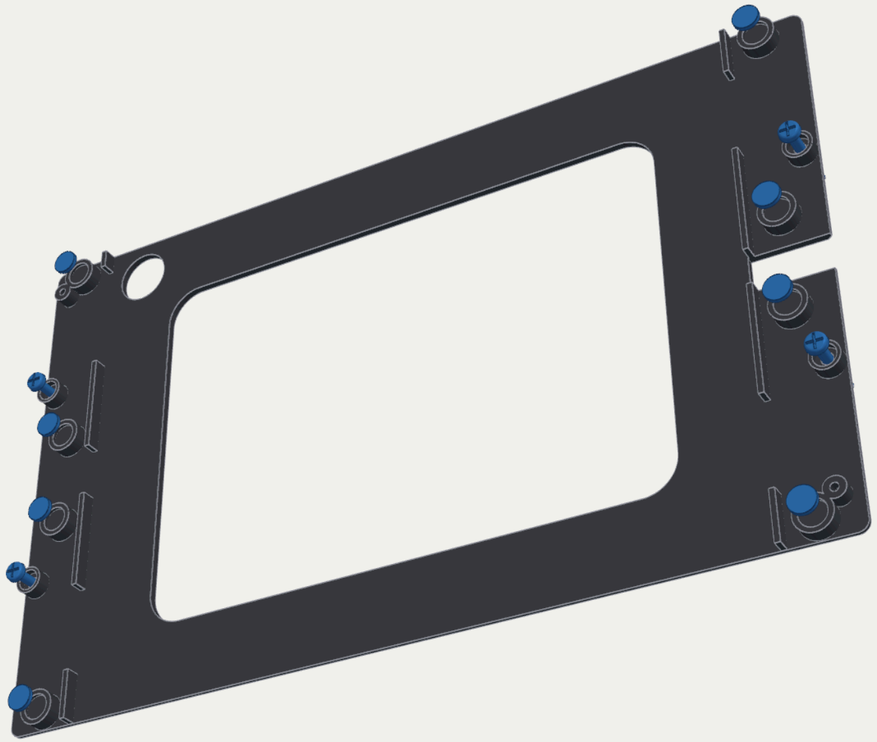

Glue a magnet into each MAGNET POST at the deck ends, **dot face up**.


A small dab of epoxy in each seat. Press each magnet flush with a flat stick, then wipe off any excess.

> Fit them one at a time, well apart. Loose magnets jump to each other and to your tools.

YOU NEED

8 N52 magnets 10 × 1.5 mm (4 on the 11″ and mini) · epoxy

TRIM MAGNETS, PINS AND TAPE

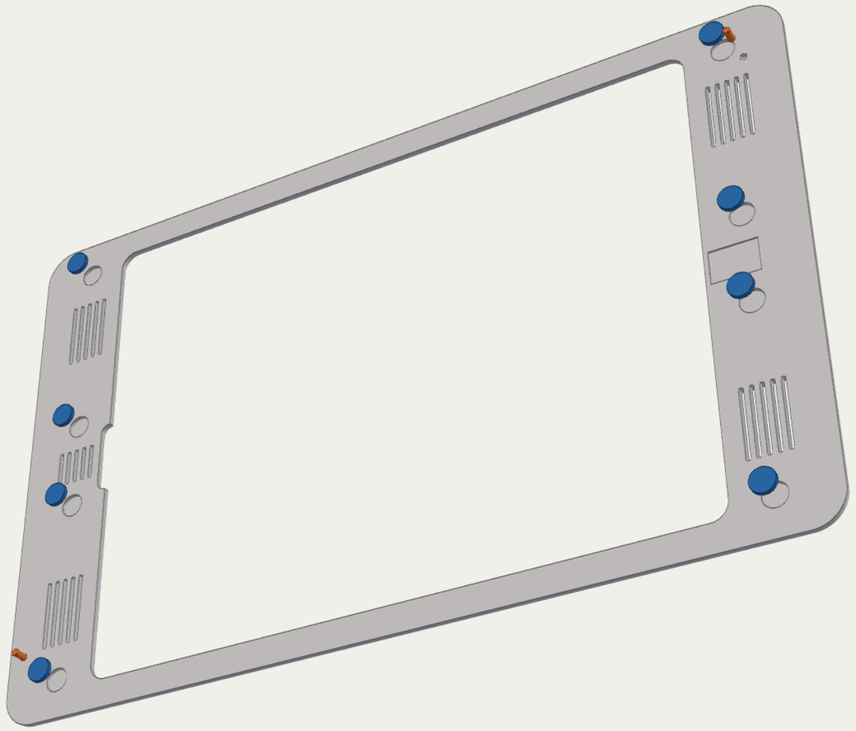

Trim face down on a towel. Glue a magnet into each pocket, **dot face into the pocket**. Press in the 2 dowel pins.


Then run PORON tape around the underside of the lip, where it will touch the glass.

> Before the glue sets, hold the trim over the deck. Every corner must pull in, not push away.

YOU NEED

8 magnets (4 on the 11″ and mini) · 2 × Ø3 × 6 pins · epoxy · PORON tape

PoE ADAPTER ON THE BACK PLATE

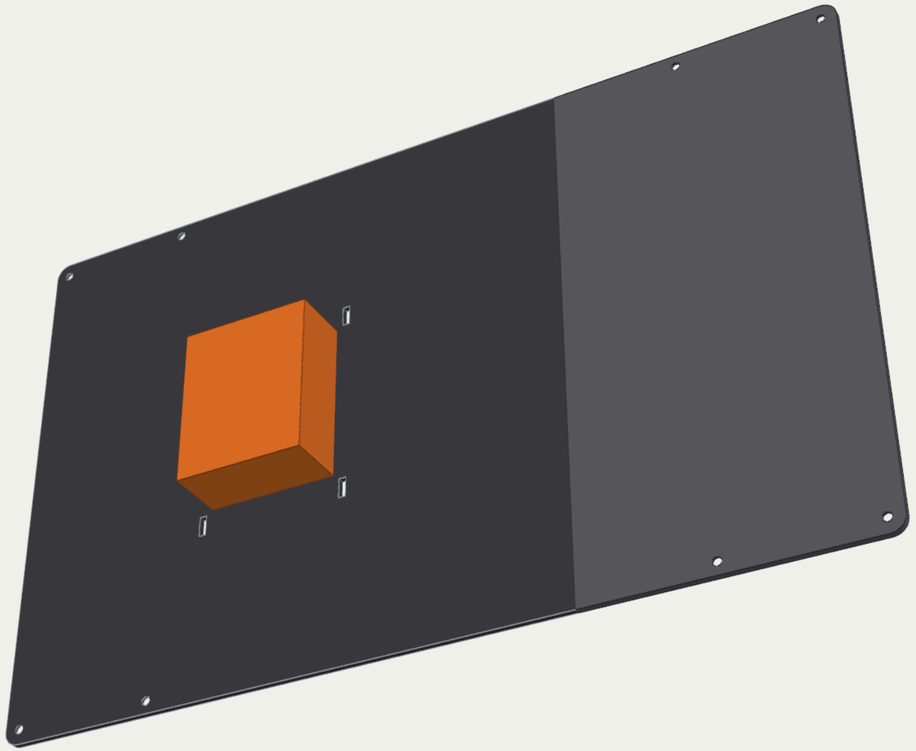

Zip-tie the PoE ADAPTER to the inside face of the BACK PLATE through the slots. Plug in the USB-C cable.


Point the adapter’s Ethernet socket at the Cat6 entry hole. Leave the USB-C cable loose for now.

> Snip the zip-tie tails flush so they don’t foul the deck.

YOU NEED

PoE adapter · 2 zip ties · USB-C cable

FIT THE BACK PLATE

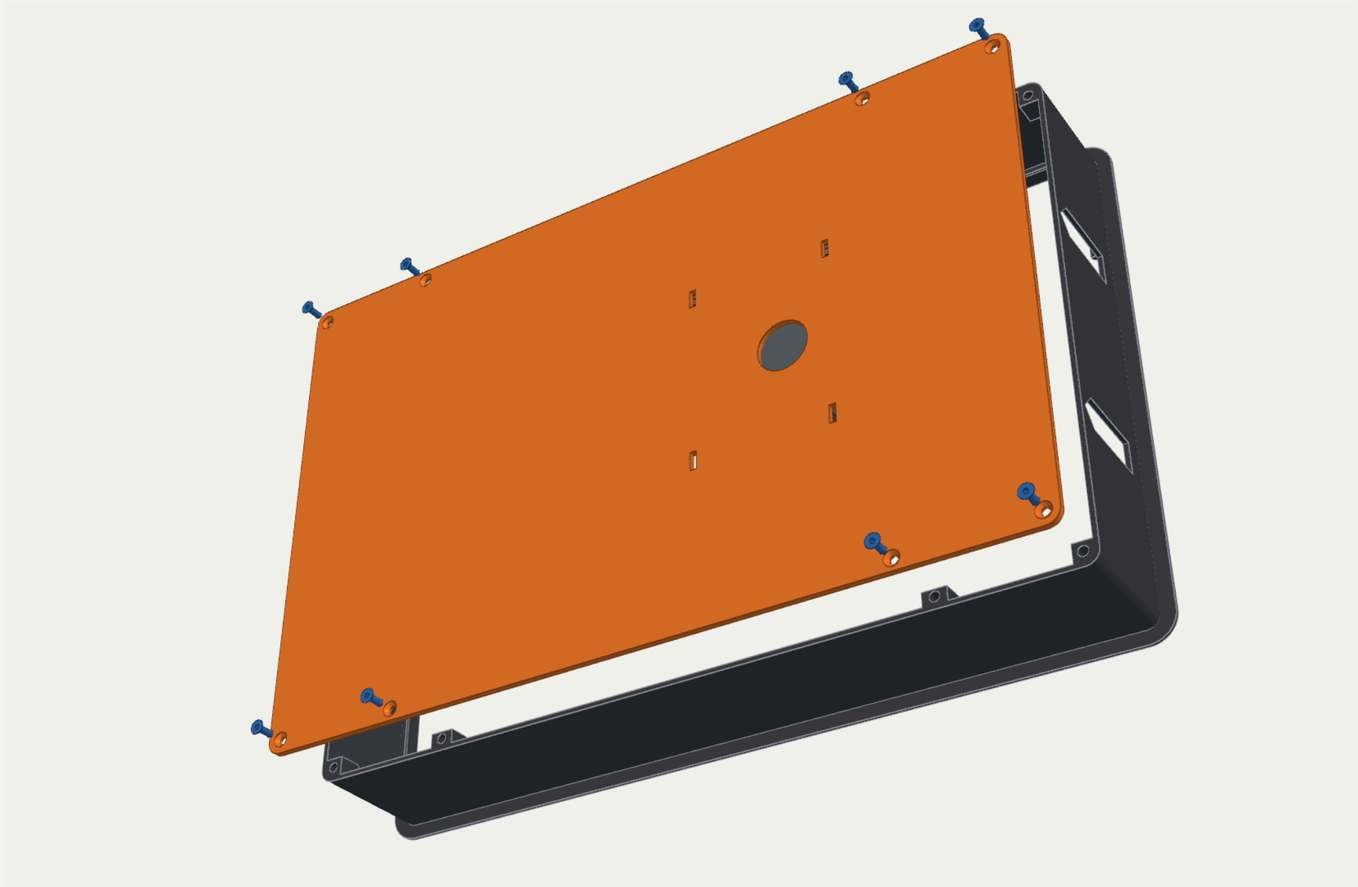

Set both BACK PLATE pieces onto the sleeve’s back edge, adapter inside. Fit 8 × M3 × 8 countersunk screws into the inserts.

Feed the USB-C plug up to the front of the box first, at the USB-C end.


> The long piece crosses the sleeve seam. Snug the screws either side of the seam first.

YOU NEED

8 × M3 × 8 countersunk · 2 mm hex key

BENCH ASSEMBLY · STEP 10 OF 10

DECK AND ARMS IN

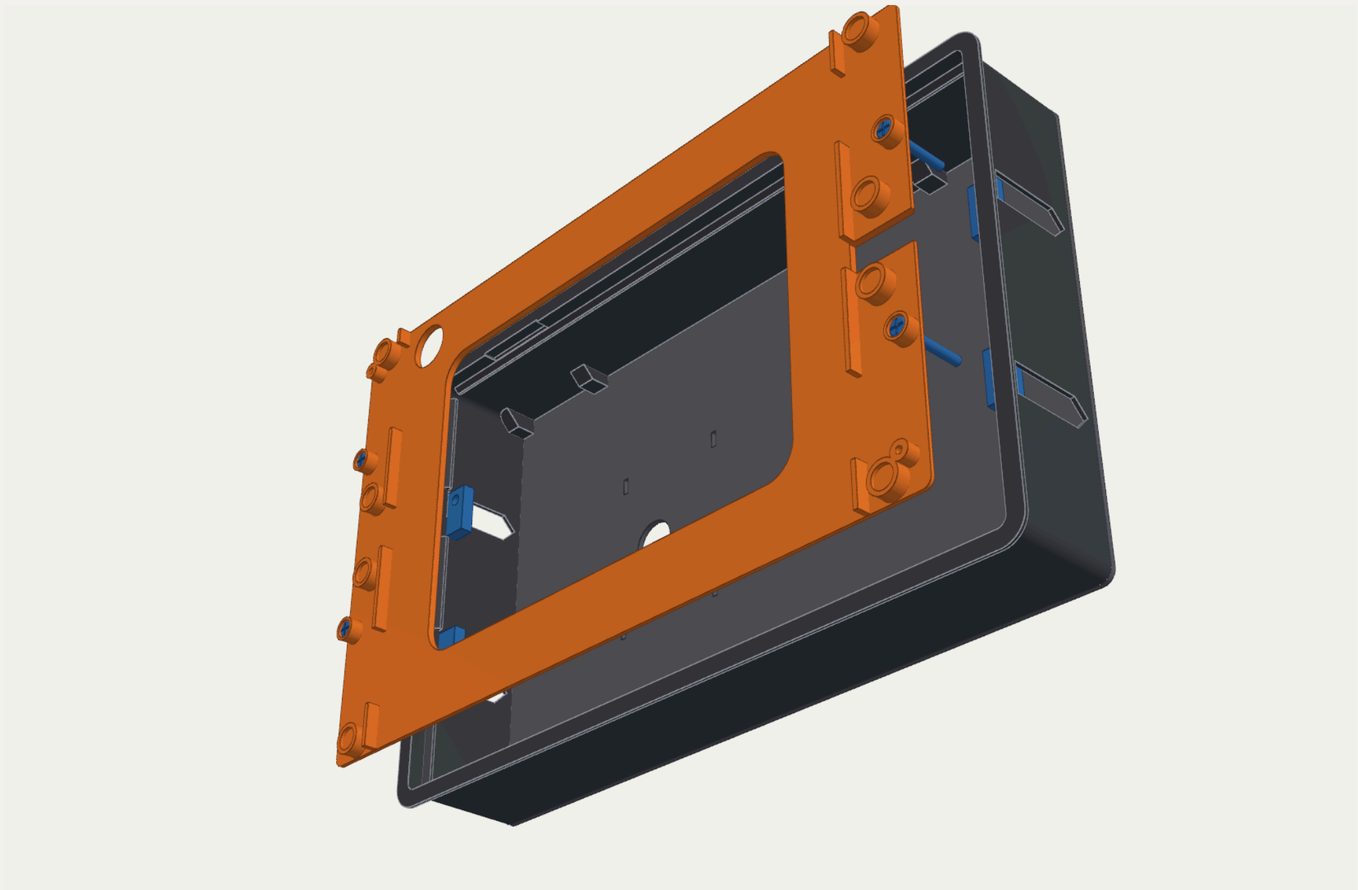

Bring the USB-C plug up through the gap in the ledge at the USB-C end, then drop the DECK onto its ledges.

Drive an M4 × 30 down through each deck post and thread an ARM onto it inside its slot. Then back each screw out about 5 mm so the arms hang low.

> This is a trial fit. At the wall you lift the deck out once more to plug in the Cat6 (wall step 3).

YOU NEED


4 × M4 × 30 pan-head · 4 arms · screwdriver

02

WALL INSTALLATION

Seven steps at the wall. Measure twice: the cut-out is the only step you can’t undo.

FIND THE STUDS, PLACE THE TEMPLATE

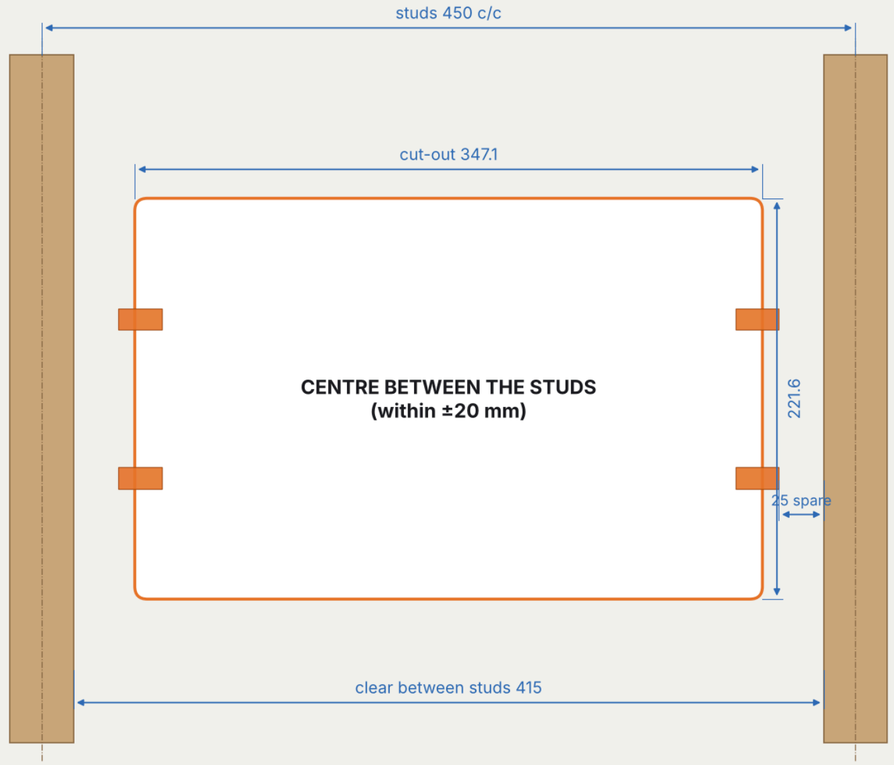

iPad Pro 12.9″ (3rd gen). Orange bars = dog-ear arms swung out (reach ±182.6 mm). Drawn with 35 mm studs; allow 20 mm for 45 mm studs.

Mark both studs. Tape your iPad's **A3 TEMPLATE** up, level, **centred between them**. TOP ↑ goes up.


The arms swing out sideways, so stay close to the bay's centre.

Max off-centre	45 mm studs
12.9″ · 13″	19 mm
11″	35 mm
mini	62 mm

Drill a small test hole in the middle first and look inside with a torch: cables, pipes, noggings.

Print the template at 100% on A3. Its scale bar must measure exactly 100 mm.

CUT THE HOLE

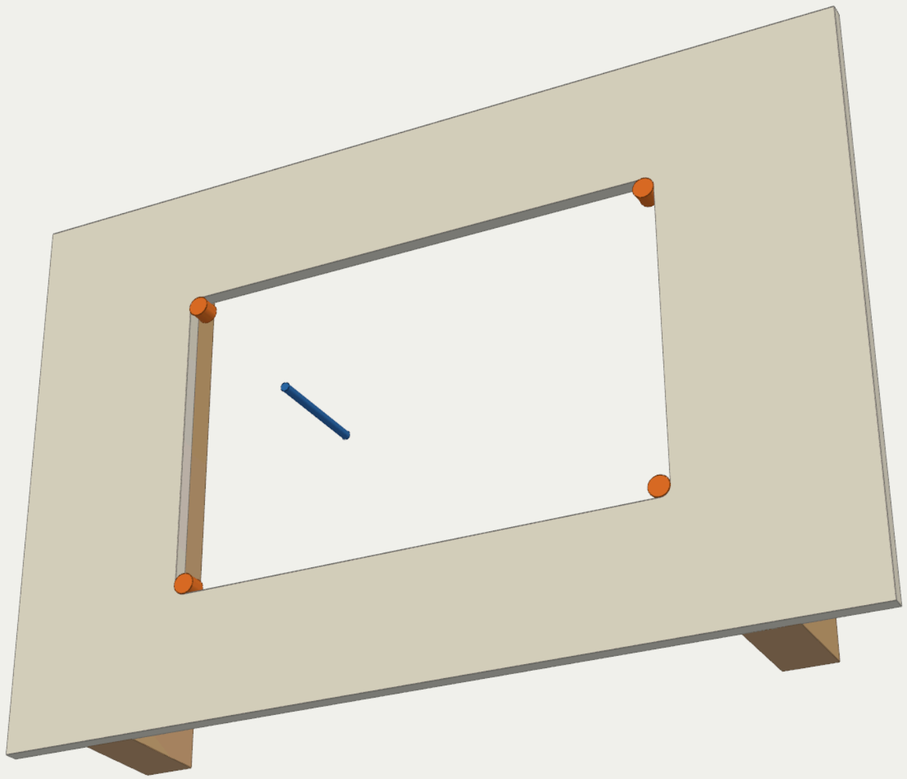

Drill Ø14 at the 4 corner crosses. That gives the R7 corners.


Saw the straight edges from hole to hole, on the solid line. Keep the saw square to the wall face.

> Err on the small side. The trim covers the cut edge by about 6 mm, so you can shave to fit but can’t add back.

YOU NEED

14 mm bit · plasterboard saw · dust mask

CONNECT THE CAT6

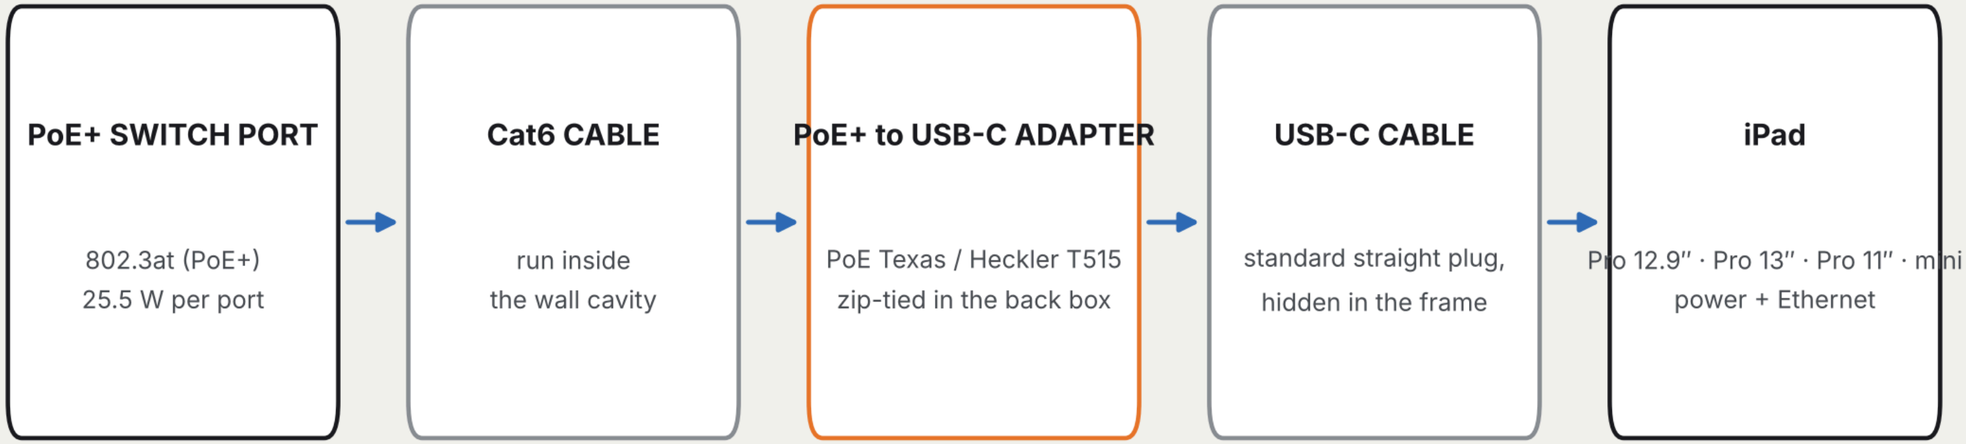


Fish the Cat6 out through the hole. Lift the DECK out: undo the 4 M4s and catch the ARMS as they come free.

Push the Cat6 in through the back plate’s entry hole and plug it into the PoE ADAPTER. Refit the deck, screws and arms as in bench step 10.

Test now. Plug the iPad into the USB-C lead: it should charge and show Ethernet before the unit goes in the wall.

Use a PoE+ (802.3at) port. Plain 802.3af PoE can’t supply the 25 W adapter.

PUT THE UNIT IN THE WALL

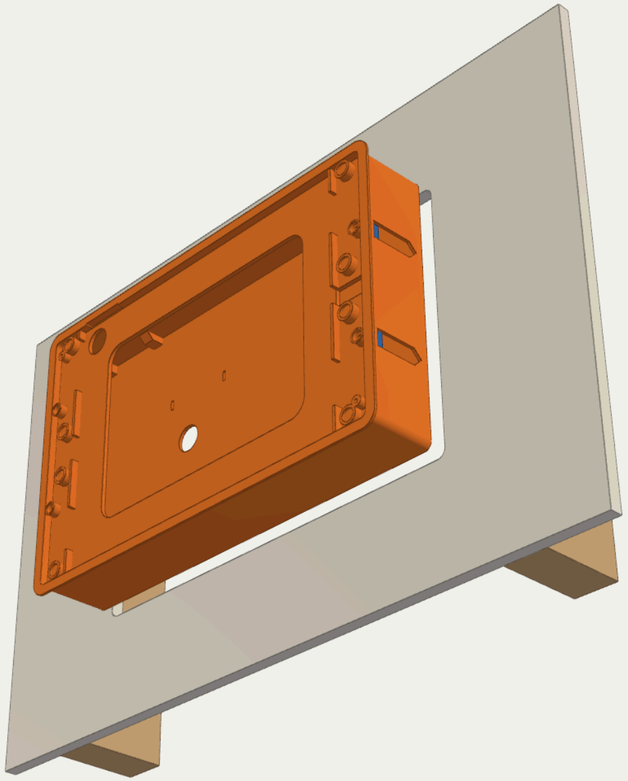


Turn all 4 ARMS to point into the box. Feed the Cat6 slack back into the wall, then push the unit straight in **until the flange sits on the wall**.

Keep the Cat6 entry on the side the template marks. The sleeve has 1 mm of clearance each side.

> Don’t force it. If it binds, shave the cut edge where it rubs.

CLAMP IT

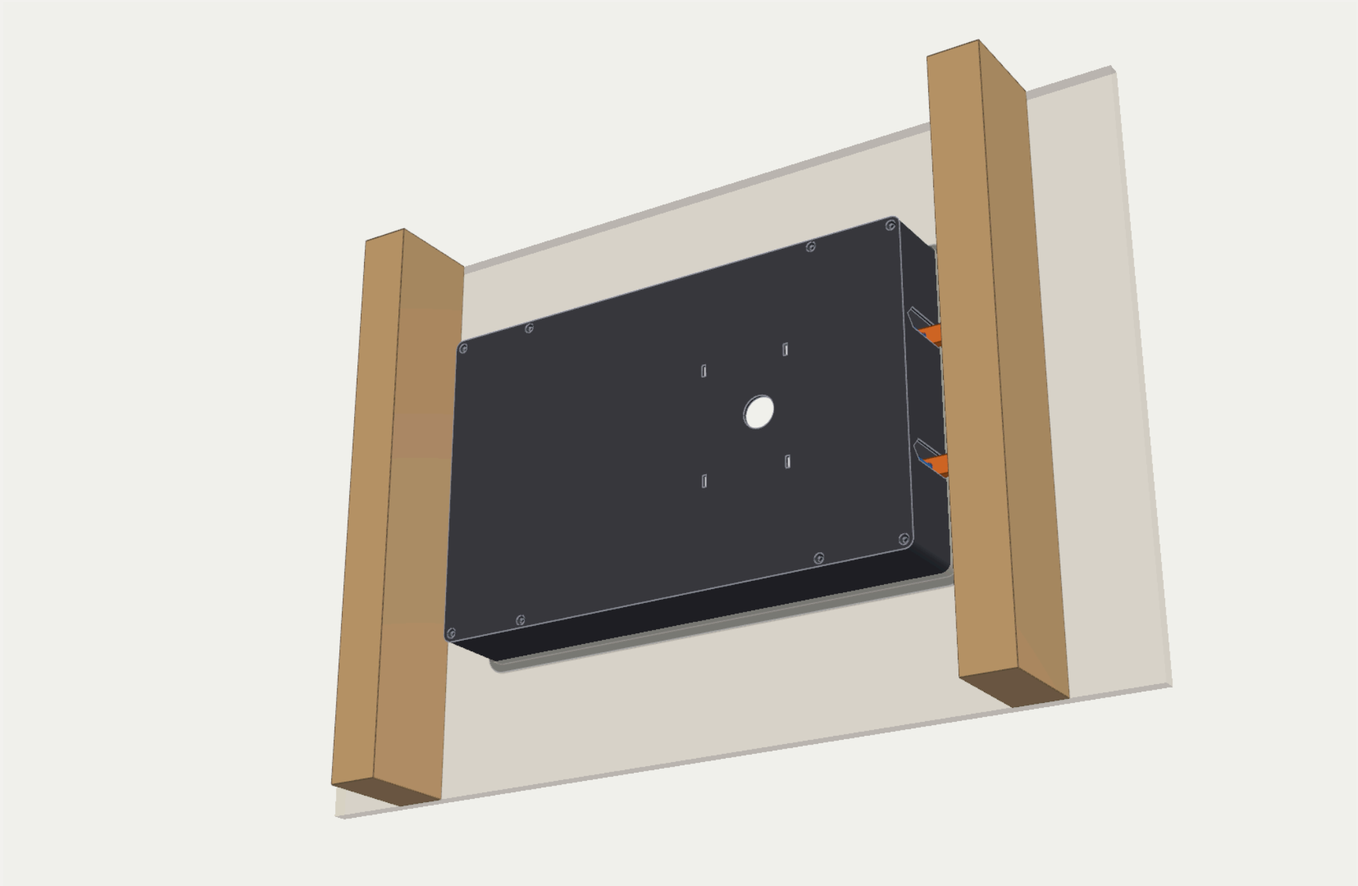

Hold the flange flat on the wall and turn each M4 clockwise. The ARM swings out through its slot, stops, then pulls up behind the board.


Tighten in diagonal pairs, a turn at a time, until the flange is snug all round.

> Hand tight only. Plasterboard crushes. Stop when the unit no longer moves.

YOU NEED

Hand screwdriver, not a drill

FIT THE iPAD

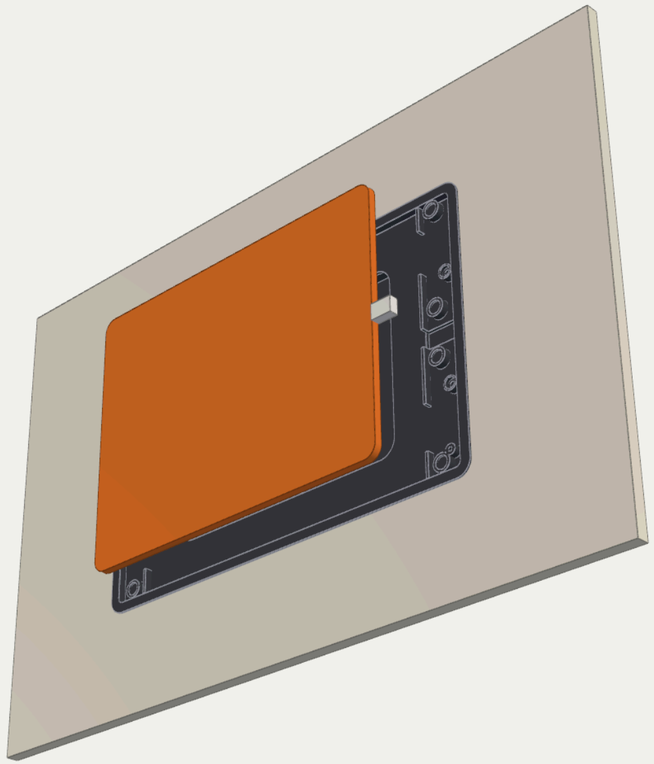


Plug the USB-C into the iPad. Lay it **screen out** on the DECK, USB-C to the right.

The end ribs locate it side to side. Tuck the cable loop down into the box end.

> Clean the glass now. Once the trim is on, the edges are hard to reach.

FIT THE TRIM

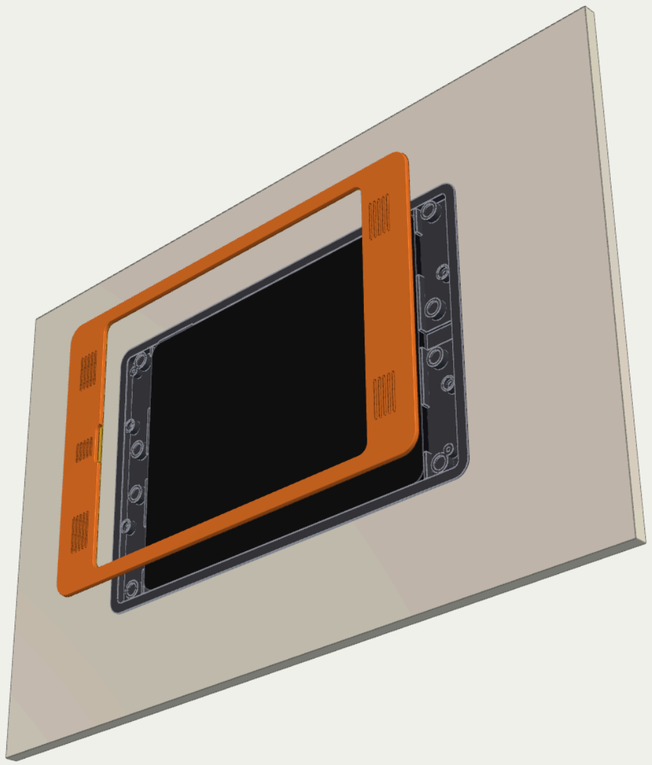


Line up the 2 PINS with their holes and offer the TRIM up. **The magnets pull it home.**

The pins also fit with the trim upside down, so check the camera notch sits over the camera first. The PORON lip rests on the glass edge.

> Keep fingers clear of the edges as it snaps on. N52 pairs close hard.

SERVICE

REMOVING THE iPAD

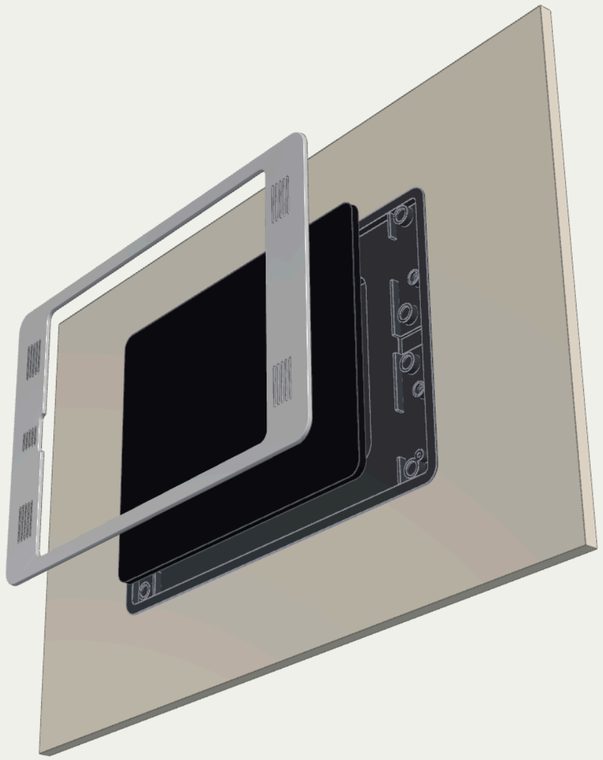

Grip the TRIM by its wide ends and **pull straight out**. Lift the iPad off the deck and unplug it.

The deck stays put: the M4 screw heads hold it down.

> **Taking the unit out?** Back each M4 out a few turns until its arm swings in. Don’t remove the screws fully, or the arm drops into the wall.

SETUP

iPAD SETUP FOR A WALL PANEL

KEEP THE SCREEN ON

Settings › Display & Brightness › Auto-Lock › Never. Dim it at night with a Shortcut or Home Assistant automation.

LOCK TO ONE APP

Settings › Accessibility › Guided Access. Start it in Home or your dashboard app.

BUTTONS ARE COVERED

Turn on Settings › Accessibility › Touch › AssistiveTouch for lock, volume and restart. On the mini the Touch ID button is covered too: use the passcode.

MIND THE HEAT

The iPad vents into a closed box. Panel duty is fine; hours of video or games are not.

FINISHING BUILD

FINAL CHECKLIST

- [x] Flange tight to the wall; unit doesn’t move
- [x] Trim sits flat, no gap at any corner
- [x] Volume doesn’t change by itself
- [x] Face ID unlocks first time (Pro)
- [x] Cable loop not pressing the iPad
- [x] iPad shows it is charging
- [x] Ethernet appears in Settings
- [x] No cracked plaster round the cut-out
- [x] Speakers clear through the grilles
- [x] Guided Access and Auto-Lock set

> **Something off?** Every size lives in flush6.py and tablets.py. Measure the problem, change the parameter, re-run it, and reprint only the part that changed.

ENJOY YOUR FLUSH MOUNT

The M5 and mini features come from Apple’s drawings; the 12.9″’s are close estimates. Fit the printed parts and the iPad before you cut the wall or machine the trim.

Also available: Float Mount v6, the surface-mounted version, for the same four iPads.

